

Plum Buzz T200

User Manual

CONTENT

1.WARNINGS	ERROR! BOOKMARK NOT DEFINED.
2.GETTING STARTED	- 2 -
3.YOUR PHONE	- 3 -
4.FUNCTION MENU	- 4 -
1. CONTACTS	- 4 -
2. CALL LOGS	- 4 -
3. FILE MANAGER	- 5 -
4.MULTIMEDIA....	ERROR! BOOKMARK NOT DEFINED.
5.MESSAGE.....	ERROR! BOOKMARK NOT DEFINED.
6. TOOLS.....	- 7 -
7. APPLICATION.....	- 8 -
8. USER PROFILES	- 8 -
9. SETTINGS	- 8 -
10.ENTRY MODE	- 11 -
11. CARE AND MAINTENANCE.....	- 11 -
12. TECHNICAL INFORMATION.....	- 13 -

1. Warnings

Not following these simple guidelines may be dangerous or illegal. Read the complete user guide for further information.

TURN ON SAFELY

Do not turn on the phone when wireless phone is prohibited or when it may cause interference or danger.

ROAD SAFETY

Obey all road safety laws. Always use both of your hands to operate the vehicle while driving.

INTERFERENCE

All wireless phones may be sensitive to interference, which may affect performance.

TURN OFF IN HOSPITALS

Follow all restrictions. Turn off the phone near medical equipment.

TURN OFF ON AIRCRAFTS

Follow all restrictions. Wireless devices can cause interference on aircrafts.

TURN OFF WHEN REFUELING

Do not use the phone at/near refueling stations. Do not use near fuel or chemicals.

USE SENSIBLY

Only qualified personnel may install or repair this product.

ENHANCEMENTS AND BATTERIES

Use only appropriate enhancements and batteries. Do not connect incompatible products.

WATER-RESISTANCE

Your phone is not water-resistant. Keep it dry.

BACKUP COPIES

Remember to make back-up copies or keep a written record of all important information stored in your phone.

CONNECTING TO OTHER DEVICES

When connecting to any external device, read its user guide for detailed safety instructions. Do not connect with incompatible products.

2. Getting Started

2.1 SIM Card Installation

When you subscribe to a cellular network, you will receive a plug-in SIM card complete with your subscription details, such as your PIN, and available optional services.

Caution: Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.

Tips: Face the gold color contact point of SIM card towards the cell phone and push the SIM card into the slot.

2.2 Battery Installation

Caution: Install according to the illustration above to avoid breaking the battery connectors.

2.3 Charging the Battery

Insert the charger; the flash symbol on the charger plug must face upwards.

Connect the charger to a standard wall outlet and the battery power icon in the up-right corner of the screen will start scrolling. When the battery bar stops scrolling, the battery charge is complete. Press the two sides of the charger plug and disconnect the charger from the phone.

2.4 T-flash Card

Insert the T-Flash card into phone. This will expand the Flash memory of the phone. Tap Multimedia menu, you can browse MP3, MP4, picture, etc.

2.5 USB Cable

You can transfer and store files, such as MP3, MP4 and

pictures from PC, through USB cable, to the U-disk in phone or identified SD card that is inserted.

3. Your Phone

3.1 Making a Call

In standby mode, press numerical keys to input phone number to dial phone number. When you finish inputting phone number, press the dial key、SIM2 key to make a call. If you're making a long distance call, add the area code preceding the telephone number. During a call, you can press up/down keys to adjust volume. Press left soft key to access Options.

3.2 Emergency Service

You can dial an emergency call without the SIM card. Contact your service provider to get the emergency call number.

3.3 Answering a Call

When you receive a call, the phone will ring or vibrate and will display an incoming call indicator. Press the dial key, SIM2 key or left soft key to answer. Press left soft key to access options.

3.4 Rejecting/Ending a Call

Press end key to reject an incoming call or end current call.

3.5 Key function

1. Direction key, in editing interface:

- (1) Right key: Move the cursor with the direction of right.
- (2) Left key: Move the cursor with the direction of left.
- (3) Up key: Move the cursor with the direction of up.
- (4) Down key: Move the cursor with the direction of

down.

2. OK key: To the main menu
3. Right soft key: To perform the function of the prompt displayed in lower right corner of the screen.
4. Left soft key: Enter main menu or to perform the function of the prompt displayed in lower left corner of the screen. Click the left soft key then * lock the phone
5. Send key: To dial and pickup calls; on standby mode, to see the record of all calls made.
6. End key: To end a call or reject incoming calls. Under most circumstances pressing this key will put the mobile phone into standby mode. Hold down this key to power On/Off.
7. Number keys: To enter numbers and letters; the number keys from 2-9 can be set for one-key dialing.
8. * key: cycle according to * keys to switch and input *, +, P, W, display symbols list in edit mode;
9. # key: long press # key scene mode switch
10. One key multimedia: A key into the multimedia list

4. Function menu

1. Contacts

You can store contacts' personal information and numbers while also search for previously stored contacts. Press left soft key to access Options.

2. Call Logs

In the call history menu, you can check dialed calls, received calls, missed calls, rejected calls, delete all, call timers, call cost, and GPRS counter.

3. File Manager

Enter this menu; you can check the files store on T-flash card or phone. Press left soft key, you can do options.

4. Multimedia

4.1 Camera

Press left soft key or OK key to select the function. The photo can be previewed in the screen; press OK key to shoot and right soft key to back, left soft key to access Options. Use navigation keys, you can choose and enter the functions list on screen.

4.2 Audio player

This function menu is used to store and play the multimedia file. Press the left soft key or OK key to enter and use the Navigation keys, OK key, or Music Control Keys to operate. Press up key and down key to adjust volume. Press left soft key to access Options.

4.3 Video Player

Preview the videos. Press up key and down key to adjust volume. Press navigation keys to select and then press OK key confirm to enter. Press left soft key to access to "List", then press right soft key to return.

4.4 FM Radio

Enter FM radio (insert earphone). Press left/right key to change frequency, press "*" key and "#" key to adjust volume. Press the left soft key to access Options.

4.5 Recorder

You can take a recorder in this function. In the play mode, use up key and down key to adjust the volume. Press OK button to record. After record, access Options. After entering the file list, select one file, access to Options.

4.6 Image browser

Enter the “Image viewer” submenu.

5. Message

After entering Messages, in: Templates, Voice Mail Server, Broadcast Message, SMS Settings, MMS Settings, and Message capacity.

5.1 Write Message

5.1.1 New SMS

This function can begin a new SMS. After completing the SMS, press left soft key to access to options.

5.2 Inbox

To check received messages in inbox.

5.3 Outbox

Checks the information of unsuccessfully sent message in outbox.

5.4 Drafts

You can save unsent and edit incomplete messages in drafts box.

5.5 Sent box

Check the sent messages in sent box.

5.6 Options

5.6.1 Templates

Press up/down navigation key to select a template. You can edit, send, or turn back to upper menu.

5.6.2 Voice mail server

This function needs a network supply. Please contact with your service provider for more information.

5.6.3 Broadcast Message

—Read: Read broadcast

5.6.4 Settings

- SMS

To set parameters of SMS

- Broadcast message
 - Broadcast launch: Set the broadcast launch on/off.
 - Channel settings: Add Channel/ List Channel
 - Languages: Select language: All language/ English etc.

6. Tools

6.1 BT

This mobile phone support BT wireless connection. You can establish wireless connection between mobile phone and device to realize voice communication, data exchange and synchronization. Press left soft key to do options

6.2 Calendar

You can use this feature to view the year, date and solar term easily. Use navigation keys to navigate other date. Press left soft key, you can enter to sub-menu to do options.

6.3 Calculator

This feature can use your phone as a calculator for simple calculations. Press corresponding keys to enter the numbers.

6.4 Alarm

The alarm clock feature sounds an alert or makes a vibration alert at a time you specify. There are 3 alarm clocks can be edit and set.

6.5 STK

If your SIM card supports STK function, the phone can display different first level menu according to different STK card. This function needs the network provider support. If user finds STK function can't operate normally, please contact the network provider. If the network provider does not support this function, we do not claim any responsibility whatsoever.

7. Application

Your phone supplies built-in game, you can play it whenever or wherever you want.

8. User profiles

This phone provides several profiles, by pressing left soft key, you can enter to set: Active, Customize, Rename, and Enhance Sound.

9. Settings

9.1 Call Settings

9.1.1 Dual -SIM

- Standby mode: Only SIM1 enable/Only SIM2 enable
- Reply by original SIM: Reply call/ Reply SMS/Reply MMS
- Set SIM Name

9.1.2 Network Selection

Select SIM1/SIM2 to select Auto Select or Manual Select.

9.1.3 Call Divert

When the call divert is activated, incoming calls will be diverted to voice mail or other phone numbers according to the call divert settings.

9.1.4 Call Barred

When the call barring is activated, some of the calls will be barred according to the call barring setting condition. Contact your service provider to sign up for call barring.

9.1.5 Call Waiting

Set the mode of call waiting, this function need to be activated.

9.1.6 Hide ID

To set whether hide your ID.

9.1.7 Select line

To select the line for your phone

9.1.8 Flight Mode

You can do the settings: Active or Select When Power On.

9.1.9 Others

You can choose more functions to set: IP shortcut key, 50 secs warning, Vibration when connected, Answer/Reject Mode, and Auto Redial.

9.2 Phone Settings

9.2.1 Time & Date

You can set Time, Date, Time Display Type, and Date Display Type.

9.2.2 Select language

You can choose several languages under this function.

9.2.3 Shortcut settings

Here you can set the shortcut. You can add, edit, delete, delete all, disable, change order.

9.2.4 Auto power on/off

You can set Auto Power On and Auto Power Off of: Time, Mode (Once/Daily/ Weekly).

9.2.5 Power Management

To check battery capacity

9.2.6 Restore factory settings

Input default password 1234 to restore factory settings.

9.3 Display settings

9.3.1 Wallpaper Settings

Select pictures as wallpaper.

9.3.2 Idle display settings

Time & date, service provider, Today's schedule, Customized world settings

9.3.3 Contrast

On the screen backlight interface you can set different lightness of your phone by pressing the left/right direction key

9.3.4 Backlight

Set Backlight's Time here

9.3.5 Keypad backlight time

Set Backlight's Time here

9.3.6 Animation effect

Switch machine animation and special effects settings

9.4 Security settings

9.4.1 PIN

PIN number setting can avoid unauthorized usage of SIM card

- If PIN number has been wrongly inputted for 3 times, the SIM card will be locked. PUK number is needed to unlock the SIM card. Please contact the network provider if you don't know the PUK number

- The default setting PIN number is 1234, please set your own PIN number as soon as you receive the phone.

9.4.2 PIN2

You can modify the PIN2 number here

9.4.3 Privacy

Set a password for your phone to protect some functions. The default password is 1234

9.4.4 Auto keypad lock

Select Auto lock time

9.4.5 Lock screen by end-key

Idle red key lock.

9.4.6 Power-on password

Activate/Modify/Deactivate Startup password (the length of the password is 4-8 digital numbers). If you activate the "Startup password", you need to enter the password each time

you turn on the phone “Startup password”, enter Modify/Deactivate option to set. The default password is 1234

10.Entry mode

You can use several methods for entering text and numbers. By selecting a Text Entry Mode, the phone provides a few Text Entry Mode for new adding, editing contact records, finding contacts, editing SMS and writing memos.

Select Text Entry Mode:

10.1 Letter entry mode

Editing interface, click on the appropriate soft keyboard subtitles.

10.2 Number entry mode

Click the top left corner of the input image to switch to digital input, through the point of the soft keyboard to enter the corresponding number.

11. Care and maintenance

Battery care

- Your device is powered by a rechargeable battery. When the power is weak, please charge the battery. In order to extend the lifespan of the battery, use all the battery's power before recharging.
- Unplug the charger from the electrical plug and the device when not in use. Do not leave the battery connected to a charger more than a week. Overcharging may shorten its lifespan.
- Extreme temperatures can affect the ability of your battery to charge. Battery needs the fit temperature. If the surrounding temperature is over 40°C, the battery cannot be charged.
- Use the battery only for its intended purpose. Never use any

charger or battery that is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) Short-circuiting the terminals may damage the battery or the connecting object.

- Leaving the battery in hot or cold places, such as in a closed car in summer or a freezer in winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 59°F and 77°F (15°C and 25°C). A hot or cold battery may not function temporarily, even when the battery is fully charged.

- Battery performance is particularly limited in temperatures below freezing.

- Do not dispose of batteries in a fire! Dispose of batteries according to local regulations. Please recycle when possible. Cellphones are not considered household waste.

Mobile phone maintenance

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery and allow the device to dry completely before replacing it.

- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.

- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.

- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the

device and damage electronic circuit boards.

- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.

All of the above suggestions apply to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service.

12. Technical Information

Weight

Size Length × Width × Depth

Battery

Networks:

Battery work times refer to the list below (Will not announce if the capacity is changed):

The operation time of the battery depends on conditions such as:

- Transmitting power level
- Signal (distance between the phone and the base station)
- Network parameters defined by the operator
- Phone use (WAP, games, SMS)
- Charging procedure used

Exclusions:

Subject to the exclusions contained below:

1. Damage due to the improper use.
2. User does not follow the manual.

Explanation:

The company has the final right of the explanation for this document.

Software upgrades will not be announced.

All pictures are for reference only in the instruction book; please refer to the actual phone.