

# i130 User Manual

**Thank you for purchasing the i130 mobile phone**

features and services to facilitate your work and leisure activities. The Company reserves the right to make any amendment on the technical specifications without any advance notice.

### **Reading Statement for the Manual**

In manual, different typesetting styles are used to interpret different operating details, and the specific interpretation is as follows:

Operation	Description of Contents	Example
Showing contents	Show with normal characters	0-9
General key	All the keys except functional keys are shown by normal characters with frames	0-9
Functional key	Functional key is shown with bold and frame	<b>OK</b>
Menu item	Show in bold	<b>Edit</b>

#### **Note:**

The pictures shown in the manual are only used as function hint which may be different from the phone, and the ones in your phone shall prevail.

---

# **CONTENT**

<b>INTRODUCTION.....</b>	<b>3</b>
--------------------------	----------

<b>SECURITY AND PERFORMANCE.....</b>	<b>5</b>
--------------------------------------	----------

<b>1START USING.....</b>	<b>6</b>
--------------------------	----------

1.1BATTERY.....	6
-----------------	---

1.2SIM CARD.....	6
------------------	---

1.3PLUG IN THE MEMORY CARD.....	6
---------------------------------	---

1.4PLUG THE EARPHONE.....	6
---------------------------	---

1.5STATUS BAR AND CONTENT.....	6
--------------------------------	---

1.6KEYS.....	8
--------------	---

<b>1DIAL AND ANSWER THE CALL.....</b>	<b>9</b>
---------------------------------------	----------

1.7MAKING A CALL.....	9
-----------------------	---

1.8ANSWERING A CALL.....	9
--------------------------	---

1.9EMERGENCY CALL.....	9
------------------------	---

<b>2MAIN MENU STRUCTURE.....</b>	<b>9</b>
----------------------------------	----------

<b>2CALL CENTER.....</b>	<b>10</b>
--------------------------	-----------

1.10CALL HISTORY.....	10
-----------------------	----

---

1.11	CALL SETTINGS.....	10
1.12	SIM1/SIM2 CALL SETTINGS.....	10
<b>3</b>	<b>PHONEBOOK.....</b>	<b>10</b>
<b>4</b>	<b>MESSAGING.....</b>	<b>10</b>
<b>5</b>	<b>EXTRA.....</b>	<b>11</b>
1.13	SETTINGS.....	11
7.1.3	User profiles.....	11
7.1.4	Phone settings.....	11
7.1.5	Network settings:.....	12
7.1.6	Security settings.....	12
7.1.7	Connectivity.....	12
7.1.8	Restore factory settings.....	12
1.14	APPLICATIONS.....	13
1.15	MULTIMEDIA.....	13
<b>6</b>	<b>OTHER FUNCTIONS.....</b>	<b>13</b>
<b>7</b>	<b>COMMON QUESTIONS.....</b>	<b>13</b>
<b>8</b>	<b>MAINTENANCE GUIDELINE.....</b>	<b>14</b>

---

## Security and performance

◆ In thunder raining days, please do not use the mobile phone when charge it or outdoor, so as to avoid being struck by thunder or other injuries.

◆ Please do not put the battery in high-temperature environment (high temperature will lead to heat of the battery upgrading), and keep the phone being charged and the charger away from people or other flammable and explosive articles in order to avoid fire, explosion or other dangers!

◆ Please strictly adhered to the rules and do shut down the mobile phone on occasions which use of mobile phone is prohibited!

◆ Please do not arbitrarily refit or teardown the phone and accessories. Only the authorized organizations can repair the phone.

◆ Please do not use batteries, charger or accessories of non-standard original models.

◆ Please do not join the two poles of the battery, so as not to result in battery short-circuit.

◆ Please do not use the mobile phone when driving. In case of emergency, please use hand-free devices (which may be bought separately).

◆ Please do not put the phone on car insurance airbag or region reachable by the airbag after spreading. Otherwise when the airbag expands or ruptures, the mobile phone is likely to cause serious damage to the people in the car due to strong external force.

◆ In order to comply with provisions of RF leakage, when you wear a phone or use the data functions, please maintain the distance between the antenna and the body at least 1 inch (2.5 centimeters).

◆ Do not use chemical lotion, scrubbing cleanser to wipe the mobile phone or the charger, otherwise it may damage the components or cause fire. Slightly wet and anti-static soft clean cloth can be used.

---

◆ Please do not throw the old and abandoned lithium batteries into trash can, send them to the designated locations.

◆ Please do not use the phone to make bold to camera, video and recording that may infract the rights of the copyright owners. The company will not be responsible for any losses caused by not recording, deleting, destructing or damage of the photos, video and recordings caused by its accessories or software on the use of the functions including camera, video and audio.

◆ In the use of network function, if the users download a file with virus, which make the mobile phone cannot be used normally; the company does not undertake any responsibility arising therefore.

**Warning:** The original manufacturer will not take on any responsibility for the users who are not in compliance with the above advices or improperly use the mobile phone.

**Note:** The application of value-added services of the mobile phone is provided by relevant service providers. Please refer to the relevant help or providers' notes for detailed information.

**Statement:** The Company reserves the right to improve the product without making any advance notice, and keeps final interpreting rights on the product performance. Such changes are not notified additionally, your understanding is appreciated.

---

## 1 Start Using

### 1.1 Battery

Battery is attached with the phone. Please recharge it for use after completely using up the battery for the first three times, which makes this battery easier to achieve the best using state.

In actual use, the standby time and talk time of the phone varies with the network status, working environment and different using manners.

For install the battery, you should put the back of the phone upward, uncover the rear cover from the bottom with your fingernail ahead, and then take off the rear cover. Then insert the battery in place.

### 1.2 SIM card

The SIM card is the key for accessing to the digital GSM network.

**Prior to using the phone, you need to insert effective SIM card in the phone.**

In order to prevent illegal use, SIM card adopts PIN code (personal identification code) encryption protection.

If this function is selected, PIN code should be input correctly each time when you power on the phone, thus to unlock the SIM card for normal use. Users can disarm the SIM card protection but illegal use of the SIM card cannot be prevented.

If the PIN code input is error for three consecutive times, your SIM card will be locked by the network. There will enquire the PUK code which provided by your network operator. If the PUK code input is wrong for 10 times, the SIM card will be permanently barred.

**Note:**

**Your network operator will set a standard PIN code and you should change it to private password.**

### 1.3 Plug in the memory card

Open the rear cover and you will find the memory card slot at the

---

left side above the battery. Insert the memory card into the card slot from left to right.

## **1.4 Plug the earphone**

Insert the connector of the earphone to the earphone jack at the bottom of the mobile phone. Gently pull out the earphone to remove it.

## **1.5 Status bar and content**

In standby screen you can get the information that you need from the indication icons on the screen.

☐ Indicating the current signal strength of SIM1

☐ Indicating missed call of SIM1

☐ Indicating there is text message not read of SIM1

☐ Indicating there is MMS not read of SIM1

☐ Indicating that the SIM1 is connecting network currently

☐ Divert all voice calls has been set of SIM1

☐ The current alert type is ring only

☐ The current alert type is vib. Only

☐ The current alert type is vib. And ring

☐ The current alert type is vib. Then ring

☐ Indicating that silent mode activated



---

The mobile phone is locked



Indicating that earphone has been inserted



Indicating that the Bluetooth has been activated



Indicating that alarm has been set



 
T-flash card is inserted and recognized



Indicating current battery capacity

## **1.6 Keys**

Functions of the keys are described as following:



SN	Keys	Function description
1	Left soft key (LSK)	OK; pop-up menu; short press in standby screen to enter main menu.
2	Right soft key (RSK)	Clear; back; short press in the standby screen to enter the Phonebook.
3	Send key (Snd)	Making a call; in the standby screen press the <b>Snd</b> key to enter call history; in dual SIM mode, press <b>Snd</b> key to select SIM for dialing out.
4	End key	Hang up a call; go back to the standby screen; in standby screen, short press to light on/off the phone and long press to power on/off the phone.
5	Navigation key	Use the navigation key to move left/right/upward/downward; short press in the standby screen to enter dedicated function.
6	OK key	OK; in the standby screen, press <b>OK</b> key to make a call quickly.
7	Keypad	Input; in the main menu screen short press the number key to enter corresponding menu; in standby screen, long press 2-9 key to speed dial (need set); long press # key to active Silent mode; press <b>LSK</b> and * key to lock/unlock the keypad.
8	Receiver	Listen to the voice of the other side when calling.
9	MIC	During the calling process, please do not cover the microphone with hand.

10	USB jack	Connecting USB cable, earphone or charger.
11	Camera	For finding a view with the camera.
12	Flashlight/ Torch	Choose to light flashlight when taking pictures or use it as a torch.
13	Speaker	Listen audio or calls in hands-free mode.

## 1 Dial and answer the call

### 1.7 Making a call

When the network operator's logo appears on the screen, the mobile phone enters into the normal standby state in which you can dial or answer a call. The call quality is relatively largely impacted by obstacles. Therefore, movement in a small range can effectively improve the signal strength.

In the standby screen, input the call numbers or select contact in phonebook, and then press the **Snd** key to make the call.

If the speed dial function is activated, in standby screen, long press the number keys 2-9 to dial the number that has been set up automatically. If speed dial has not been set for the number key you long pressed, the mobile phone will hint you "No speed dial number". In addition to that, you can also press **OK** in standby screen to select contact that you have added and then press **OK** again to make a speed dial.

### 1.8 Answering a call

If there is a new incoming call when in call progress, the phone will pop up caller screen (call waiting is activated). When you answer the new call, the original call will enter holding status. At this time, you can activate **Options** to select **Swap** to active the original call, and the new call will enter holding status.

**Note:**

**When you are in call progress, the new call to another SIM**

---

## card can't be dialed in.

If two calls are connected, activate **Options**, and you can operate as follows:

**Conference:** when making conference call, you can have a talk separately with designated conference participant. In conference call mode, all the others can hear your voice.

**Transfer** (network support is required): transfer the current call to your designated phone number.

### 1.9 Emergency call

If you are in the network coverage area (you can check the network signal strength at the top of standby screen), even without the SIM card, you are also able to make an emergency call.

#### Note:

**The emergency call numbers in different countries or regions are different. Please refer to the local numbers for specific emergency service numbers.**

## 2 Main menu structure

In the standby screen, press **LSK** to enter the main menu, you can press navigation key or corresponding number key to select the function you want to enter.

Call center	Phonebook
Messaging	Extra

## 2 Call Center

### 1.10 Call history

Enter call history, you can press left/right navigation key to switch to other sheet, activate **Options**, you can operate as follow: view, call, send message, save to phonebook, edit before call, delete, delete all and advanced.

---

## 1.11 Call settings

### 1.12 SIM1/SIM2 call settings

**Call waiting:** If the function is activated, when a new call incoming in calling process, your phone will display the new call screen. If the function is deactivated, new incoming calls cannot be reached.

**Call divert:** this function is used to transfer the call to your designated number. The function is related with the network and SIM card. The system will give appropriate setting tips.

**Note:**

**If the transfer call you set is a fixed phone, please add the area code.**

**Call barring:** this function needs network support. Network provider will provide the corresponding network password for you activate call barring service.

**Line witching:** switch the phone current line. Advanced settings  
You can set the function such as auto redial, call time reminder, reject by SMS, answer mode and so on.

## 3 Phonebook

In phonebook list, input the first letter of name, you can search the accordant records. When the record is not empty, activate **Options** you can conduct the following operations: send message, edit, delete, send business card, mark several and phonebook settings. In phonebook settings screen, you can set preferred storage, caller groups, speed dial, my number, extra numbers, import contacts, delete duplicated contacts, caller picture dial and you can also view memory status.

## 4 Messaging

Enter messaging and you can do many operations such as:

**Write message:** write a new message.

**Inbox:** text messages to view and edit detail interface can be.

**Drafts:** store the messages that confirm to save.

---

**Outbox:** store the messages that are being sent or sent unsuccessfully.

**Sent messages:** store the messages that were sent successfully.

**Delete messages:** you can choose to delete messages in defined folders.

**Broadcast messages:** store the broadcast messages.

**Templates:** you can edit or remove the templates in text message; you can also write message from the templates.

**Message settings:** set the correlative parameter of text message, multimedia message and service message.

## 5 Extra

### 1.13 Settings

You can modify parameters of the time and date, personalized settings, user profiles, phone settings, network settings, security settings, connectivity and restore factory settings.

#### 7.1.1 Time and date

Modify the current time, date and the format.

#### 7.1.2 Personalized settings

You can set the function such as wallpaper, screen saver, show date and time, LCD backlight.

#### 7.1.3 User profiles

User profiles are a group of preset characteristic definition. You can also change and save other definitions in the profiles according to your own preferences. The phone provides a set of default profiles including the General, Meeting, Outdoor, Indoor, Silent, Vibration, Headset and Bluetooth. In standby screen, long pressing # key can active Silent mode quickly. Only when the earphone is inserted the headset profile can be automatically activated, while all other profiles will be automatically disabled. After selecting the other profiles except the headset and Bluetooth profile, press **OK** key to active the lighted profile. Then the working styles of the mobile

---

phone are set according to the selected profile. When the earphone is inserted, the headset profile will be automatically activated. Active **LSK** to enter the customize settings; you can set the parameters under different profile such as tone setup, volume, alert type, ring type, SIM message tone, keypad tone and so on.

#### **7.1.4 Phone settings**

**Language:** you can set the language of the mobile phone.

**Preferred writing language:** there are multiple writing languages to be selected. You can choose one as the default original input language for text editing.

**Dedicated key:** set shortcut functions on each navigation key.

**Schedule power on/off:** after setting and activating this function, the mobile phone will be automatically powered on/off at the corresponding setting time.

#### **7.1.5 Network settings:**

In SIM1/SIM2 network settings, you can select appropriate network.

**Note:**

**Please do not register networks inconsistent with the SIM card, so as to prevent unavailability of normal use. For details, please consult your service provider.**

#### **7.1.6 Security settings**

**SIM1/SIM2 security:** this function can prevent others from using your SIM card without your permission.

**Phone security:** this function is to lock and prevent other people from using the phone without permission (default password is 0000). You can change the phone lock password through the system prompts.

**Auto keypad lock:** activate this function, when the phone without any operation in standby screen, the keypad will be locked automatically after the set time. If you need to unlock the keypad,

---

you can press any key except end key, and then operate according to relevant screen prompts.

### **7.1.7 Connectivity**

**Bluetooth:** enter Bluetooth screen, when powering on the Bluetooth, in my device you can select Search new device to search and compare with other Bluetooth device. You can select Search audio device to search the hands-free device. If the Visibility state is off, the others will not find the phone via Bluetooth.

**Note:**

**The received file that transmitted by Bluetooth are stored in Received folder automatically.**

**Data account:** with valid SIM card with GPRS function inserted, there will show the available accounts of GSM data and GPRS. Data account can be edited or delete.

### **7.1.8 Restore factory settings**

You can carry on corresponding operation after inputting the correct password (default password is 0000).

After running the Restore factory settings, the environment setup (e.g. user profiles) restore to factory default setting.

After running the Restore settings and data, the phone clear up the messages saved in phone while the environment setup (e.g. contact person and messages that saved in phone) restore to factory default setting.

## **1.14 Applications**

**Calendar:** enter calendar screen, you can check the date.

**Tasks:** this function is used for adding and viewing task items.

**Alarm:** there are 5 alarms in your mobile phone. The functions and using methods of the 5 alarms are completely same. You can set to turn on/off respectively.

**Calculator:** the calculator performs four operations as addition, subtraction, multiplication and division. Enter calculator screen, you



---

can input numbers directly and press navigation key to switch the operation which you need, then start calculation.

**Services:** enter Internet service; you can normally use the WAP internet service under the premise of correctly setting the network. This function is provided by the network operator. Please contact with your network operator or service provider.

**Electric Torch:** choose to use the flashlight as a torch.

## **1.15 Multimedia**

**File manager:** enter into file manager, at the top of the screen; the capacity and surplus capacity of the phone or memory card are displayed. You can open, format, rename or view the details by the options.

**Camera:** in preview interface, press up/down navigation keys to switch function between camera and video recorder. Press **LSK** then using left/right navigation key to view or set the parameters.

**Image viewer:** enter the pictures list screen, if the list is empty activate Options, you can Select folder to set the path of folder to display.

**Media player:** enter the media player screen, choose My playlists, add new playlist through Options, and then add music files from storage.

**FM radio:** enter FM radio, you can listen to the channel program by Auto search or Manual input. You also can Record the program for your favor.

## **6 Other Functions**

**Mass storage:** this function is used to read and write files from PC to the storage.

**COM port:** you can synchronize your phone with PC. Details about the related tools, please consult with Customer Service Center.

## **7 Common Questions**

**Unable to make some calls**

---

Call barring has been set and barred utilization of the mobile phone. Please check and cancel call barring.

**Other person is answering my call**

The mobile phone has been set into divert your calls to another phone number. Please check and cancel call divert.

**The mobile phone cannot search for the network**

The mobile phone is outside of the network coverage area (or there are physical obstructions between the mobile phone and the transmitter), and calls cannot be made or answered. If you are in one room, please move close to the window.

In the operation process, the mobile phone may display the following operating tips:

**“Emergency”**

You are outside the network coverage area of the service provider. But another network area where you locate allows you to make emergency call according to the signal strength.

**“Invalid SIM”**

The SIM card of the mobile phone is locked and the inserted SIM card is unable to be accepted. Please insert the correct SIM card or contact with the vendor.

**“Please Enter PUK”**

The SIM card has been locked since the wrong PIN code has been inputted for three times. You must consult your network provider for special PUK code with eight numbers to unlock the SIM card (The PUK code may have been provided with your PIN code at the same time).

**Warning:**

**The SIM card will be permanently locked if you input the wrong PUK code for ten consecutive times and you must apply for a new SIM card from your network provider.**

## **8 Maintenance Guideline**

Welcome to use i130. If there is a problem when you using the

---

phone, please contact with the vender or consult the local maintenance center. If your mobile phone is in need of repair, you can take your phone to local maintenance center, if there is no local maintenance center, please pass your phone and the purchasing invoice to the vendor.

---

## **FCC RF Exposure Information and Statement**

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types i130 (FCC ID: WA61130) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.69W/kg and when properly worn on the body is 1.51W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

### **FCC WARNING**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

### **Note 1:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the

---

equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Note 2:**

Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note 3:**

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.