

Gsmart

S1200

User Manual

## Copyright

---

All mobile products by GIGA-BYTE COMMUNICATIONS INC. mentioned in this document, including the device, accessories, software, text, music, and pictures, are owned by, or authorized by original manufacturers to GIGA-BYTE COMMUNICATIONS INC. Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of GIGA-BYTE COMMUNICATIONS INC. is prohibited.

# Safety Information

---

This chapter contains important information on safe and efficient operation. Please read this information before using the device.

## **Exposure to Radio Frequency (RF) Energy**

The device contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. Please use the device appropriately.

### **Specific Absorption Rate Data**

The Max SAR value for this device when tested for use at the ear -

NCC Max. SAR measurement

GSM 900 MHz: 0.422 W/kg °

DCS 1800 MHz: 0.286 W/kg °

UMTS 2100 MHz: 0.131 W/kg °

## **Road Safety**

Check the laws and regulations on the use of phones in the area where you drive. Do NOT use this device unless you use hands-free operation while driving or riding.

## **Potentially Explosive Atmospheres**

Turn off your phone prior to entering any area with a potentially explosive atmosphere such as gas stations, explosive chemicals, or flammable objects.

## **Aircraft Safety**

While in flight, turn off the functions of Wi-Fi, Bluetooth, Phone, and GPRS. When instructed to do so, turn off your phone when on board an aircraft.

## **Facilities**

Turn off the device in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

## **Approved Accessories and Batteries**

Use only original or manufacturer approved accessories, batteries and chargers.

# Regulatory Agency Identifications

---

For regulatory identification purposes, your product is assigned a model number of S1200.

To ensure continued reliable and safe operation of your device, use only the accessories listed below with your device.

The Battery Pack has been assigned a model number of GPS-H01.

**Note:**

This product is intended for use with a certified Class 2 or Class 3 Limited Power Source, rated 5 Volts DC, maximum 1 Amp power supply unit.

## European Union Notice

Products with CE marking comply with the R&TTE Directive (99/5/EC), the EMC Directive (89/336/EEC), and the Low Voltage Directive (73/23/EEC) & (2006/95/EC) issued by the Commission of the European Community.

Compliance with these directives implies conformity to the following European Norms (in parentheses are the equivalent international standards)

- **EN 60950-1 (IEC 60950-1)**

Safety of Information Technology Equipment.

- **ETSI EN 301 511**

Global system for mobile communications (GSM); Harmonized EN for mobile stations in the GSM 900 and GSM 1800 bands, covering essential requirements of article 3.2 of the R&TTE directive (1995/5/EC).

- **ETSI EN 301 489-1**

Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements.

- **ETSI EN 301 489-7**

Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 7: Specific conditions for mobile and portable radio and ancillary equipment of digital cellular radio telecommunications systems (GSM and DCS).

- **ETSI EN 301 489-17**

Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 17: Specific conditions for 2.4 GHz wideband transmission systems and 5 GHz high performance RLAN equipment.

- **ETSI EN 300 328**

Electromagnetic compatibility and Radio spectrum Matters (ERM); Wideband Transmission systems; data transmission equipment operating in the 2.4 GHz ISM band and using spread spectrum modulation techniques.

**Safety precautions for RF exposure**

- Use only original manufacturer-approved accessories, or accessories that do not contain any metal.
- Use of non-original manufacturer-approved accessories may violate your local RF exposure guidelines and should be avoided.

**Exposure to Radio Frequency (RF) Signals**

Your device contains a radio transmitter and receiver. The radiated output power is far below the international radio frequency exposure limits. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on the safety standards previously set by international standards bodies:

- American National Standards Institute (ANSI) IEEE. C95.1-1992
- National Council on Radiation Protection and Measurement (NCRP). Report 86. 1986
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1996
- Ministry of Health (Canada), Safety Code 6. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in usage.

As with other mobile radio transmitting equipment, users are advised that for satisfactory operation of the equipment and for the safety of personnel, it is recommended that no part of the human body be allowed to come too close to the antenna during operation of the equipment.

Your device has an internal antenna. Use only the supplied integral antenna. Use of unauthorized or modified antennas may impair call quality and damage the phone, causing loss of performance and SAR levels exceeding the recommended limits as well as result in non-compliance with local regulatory requirements in your country.

To assure optimal phone performance and ensure human exposure to RF energy is within the guidelines set forth in the relevant standards; always use your device only in its normal-use position. Do not touch or hold the antenna area unnecessarily when placing or receiving a phone call. Contact with the antenna area may impair call quality and cause your device to operate at a higher power level than needed. Avoiding contact with the

antenna area when the phone is IN USE optimizes the antenna performance and the battery life.

### **Telecommunications & Internet Association (TIA) safety information**

#### **Pacemakers**

The Health Industry Manufacturers Association recommends that a minimum separation of six inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers:

- Should ALWAYS keep the phone more than six inches from their pacemaker when the phone is turned ON.
- Should not carry the phone in a breast pocket.
- Should use the ear opposite the pacemaker to minimize the potential for interference. If you have any reason to suspect that interference is taking place, turn the phone OFF immediately

#### **Hearing Aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider, or call the customer service line to discuss alternatives.

#### **Other Medical Devices**

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn the phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

#### **WEEE Notice**

The Directive on Waste Electrical and Electronic Equipment (WEEE), which entered into force as European law on 13th February 2003, resulted in a major change in the treatment of electrical equipment at end-of-life.

The purpose of this Directive is, as a first priority, the prevention of WEEE, and in addition, to promote the reuse, recycling and other forms of recovery of such wastes so as to reduce disposal.

The WEEE logo (shown at the left) on the product or on its box indicates that this product must not be disposed of or dumped with your other household waste. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste. Isolated collection and proper recovery of your electronic and electrical waste equipment at the time of disposal will allow us to help conserving natural resources. Moreover, proper recycling of the electronic and electrical waste equipment will ensure safety of human health and environment. For more information about electronic and electrical waste equipment disposal, recovery, and collection points, please contact your local city center,

household waste disposal service, shop from where you purchased the equipment, or manufacturer of the equipment.

**RoHS Compliance**

 
This product is in compliance with Directive 2002/95/EC of the European Parliament and of the Council of 27 January 2003, on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS) and its amendments.

## General Information

---

This chapter contains important information on safe and efficient operation. Please read this information before using the device. Ignorance of the following notices may lead to violations of the law.

- Before using the device, please make sure you have fully charged the battery.
- Do NOT remove the battery from the device during charging.
- Before inserting SIM card into the device, make sure that the device is switched off.
- Do NOT attempt to disassemble the device on your own. This should be done by an authorized person.
- Use the device in accordance to instructions when in public facilities.
- In some countries, it is a violation against the law to record phone conversations. Always ask permission of the other party when you are going to record a conversation.
- To protect your ears, turn down the volume before you use stereo headsets or other audio devices.
- To avoid damaging the touch screen and the device, do NOT apply excessive pressure on them, and remove the device from your pants' pocket before you sit down. It is also recommended that you only use the stylus or your finger to interact with the touch screen. It is not covered by the warranty that you crack the touch screen because of the improper usage.
- When you use the device for a long time, such as talking on the phone, browsing online, or charging the battery, the device may become warm. In most cases, this condition is normal.
- Refer servicing to the provider, or an authorized technician under the following conditions: 1. The device has been damaged. 2. When you follow the instructions to use your device, it does not operate normally. 3. The device has been exposed to water. 4. Liquid has been spilled or an object has fallen onto the device.
- Do Not push unauthorized objects into slots and openings in your device.
- The device should be placed away from heat sources such as stoves, radiators, heat registers, or other products that produce heat.
- Condensation may form on or within your device, when you move your device between environments with very different temperature and/or humidity ranges. To avoid damaging your device, make the moisture to evaporate before you use the device.
- To avoid damaging your device, do Not put your device on an unstable table, stand, bracket, or other places.
- Before you clean your device, unplug it, please. Use a damp cloth for cleaning, but do Not use water, liquid cleaners, or aerosol cleaners to clean the touch screen.





# Table of Contents

---

Copyright .....	0-1
Safety Information .....	0-2
Regulatory Agency Identifications .....	0-3
General Information .....	0-7
<b>Chapter 1 Getting Started .....</b>	<b>1-1</b>
1.1 Device Information .....	1-1
1.2 Battery .....	1-3
1.3 SIM Card .....	1-3
1.4 Lock/Unlock .....	1-4
1.5 Screen Orientation .....	1-4
1.6 Display Information .....	1-5
<b>Chapter 2 Phone Functions .....</b>	<b>2-1</b>
2.1 Use Your Phone .....	2-1
2.2 Receive/Ignore a Call .....	2-2
2.3 Call History .....	2-2
2.4 Video Telephony .....	2-2
2.5 Other Information .....	2-4
<b>Chapter 3 Input .....</b>	<b>3-1</b>
3.1 Input Method .....	3-1
3.2 Draw on the Screen .....	3-1
3.3 Record a Message .....	3-2
<b>Chapter 4 Settings .....</b>	<b>4-1</b>
4.1 Personal .....	4-1
4.2 System .....	4-2
<b>Chapter 5 Synchronization .....</b>	<b>5-1</b>
5.1 About ActiveSync .....	5-1
5.2 Install and Use ActiveSync .....	5-1
5.3 Synchronize via Bluetooth .....	5-2
<b>Chapter 6 Getting Connected .....</b>	<b>6-1</b>
6.1 Internet Access .....	6-1
6.2 GPRS Connection Settings .....	6-1
6.3 Bluetooth Wireless Transmissions .....	6-2
6.4 Internet Sharing .....	6-2
6.5 Wi-Fi .....	6-3
6.6 USB .....	6-3

 
<b>Chapter 7 Messaging .....</b>	<b>7-1</b>
7.1 SMS\IMMS .....	7-1
7.2 Establish an E-mail Account.....	7-2
7.3 Use E-mail.....	7-2
7.4 Synchronously Process E-mail.....	7-2
7.5 Use Push E-mail.....	7-3
7.6 Messenger.....	7-4
<b>Chapter 8 Multimedia .....</b>	<b>8-1</b>
8.1 Camera.....	8-1
8.2 Video Mode .....	8-3
8.3 Recorder.....	8-5
8.4 Pictures & Videos .....	8-5
8.5 JAVA .....	8-6
8.6 FM Radio.....	8-6
8.7 Photo Viewer .....	8-7
8.8 Streaming Player.....	8-7
<b>Chapter 9 Applications .....</b>	<b>9-1</b>
9.1 Calendar.....	9-1
9.2 Contacts .....	9-1
9.3 Tasks.....	9-2
9.4 Microsoft Office Mobile .....	9-2
9.5 Windows Media Player .....	9-3
9.6 Internet Explore .....	9-4
9.7 Calculator .....	9-5
9.8 Advanced Calculator .....	9-5
9.9 Games.....	9-5
9.10 Stopwatch.....	9-5
9.11 NF Browser .....	9-5
<b>Chapter 10 Programs .....</b>	<b>10-1</b>
10.1 Zip .....	10-1
10.2 Quick GPS.....	10-1
10.3 GPS Tracking.....	10-1
10.4 Location Message .....	10-3
10.5 SIM Manager .....	10-4
10.6 Spb Backup .....	10-4
10.7 Search Phone.....	10-5
10.8 Remote Desktop Mobile .....	10-5
10.9 Voice Commander.....	10-5

10.10 MSN Weather .....	10-5
10.11 MSN Money .....	10-6
<b>Chapter 11 Specifications.....</b>	<b>11-1</b>
<b>Chapter 12 FAQ .....</b>	<b>12-1</b>

# 1. Getting Started


## 1.1 Device Information

This section introduces you to the hardware of the device.

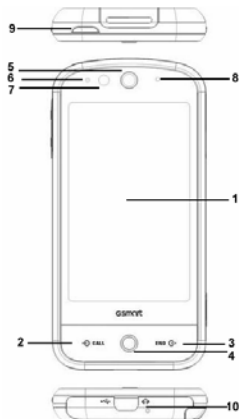


No.	Items	Functions
1	<b>Touch Screen</b>	Display screen. Use stylus to select items on screen.
2	<b>Call Key</b>	Press this key to make or answer a call.
3	<b>End Key</b>	Press this key to end a call or to return to Today screen from any screen.

4	<b>Confirm Key</b>	Select an icon on screen, and then, press this key to activate the function of that icon.
5	<b>Receiver/Speaker</b>	The source of music and voice.
6	<b>Light Sensor</b>	Help you change the backlight automatically.
7	<b>Front Camera Lens</b>	Use when making video calls.
8	<b>LED Indicator</b>	The LED indicator indicates the status of your device by showing different colors. <b>Green:</b> Mobile network is detected. <b>Red:</b> Charging is activated. <b>Blue:</b> Bluetooth is activated. <b>Orange:</b> Wi-Fi is activated. <b>Purple:</b> GPS signal is detected
9	<b>Power Key</b>	Hold down this key for a few seconds to turn on/off your device.
10	<b>Mini USB slot</b>	Use USB connector to synchronize data with your desktop PC, and transmit data or charge the battery. It is also a handset plug.

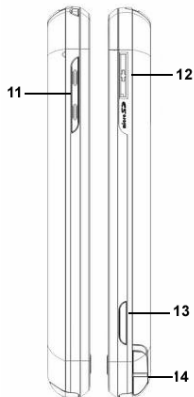 

11	<b>Side Key</b>	Press this key to choose items, to adjust volume, or to adjust a focal distance of the camera.
12	<b>Micro SD card slot</b>	You can insert your Micro SD card here.
13	<b>Camera Key</b>	Press this key to launch camera.
14	<b>Stylus</b>	There are 2 ways to use your stylus: <ul style="list-style-type: none"> <li>• Tap : Tap a desired item by your stylus, and then, lift the stylus from the screen.</li> <li>• Press : Use your stylus to hold down on</li> </ul>

	a desired item until the pop-up menu appears.
--	---

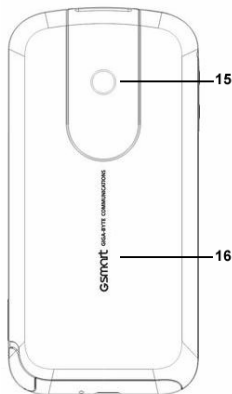 

No.	Items	Functions
15	<b>Camera Lens</b>	The CMOS Camera on the back of the device supports 3-mega-pixel photo and high-quality video.
16	<b>Battery Cover</b>	Remove the battery cover, and then, install the battery and insert your SIM card into the carrier.  Remove the battery cover and the stylus.

	Then you can find the reset button. Press it to reset your phone.
--	---

## 1.2 Battery

Your device comes with a removable and rechargeable Lithium Polymer battery. The standby time and talk time will vary depending on the local network and individual usage.

**Note:** Using any battery pack or AC adapter (charger) not specified/endorsed by GSsmart on this phone may be dangerous and may invalidate any warranty and approval given to the device. Unplug the charger from the power supply when it is not in use.

### Open Battery Cover

Push the battery cover upwards, and then, remove it.

### Charging the Battery

Please make sure that the battery is installed and fully charged when use your device for the first time. You may charge the battery in the following ways:

1. Universal AC Adapter: Plug your AC adapter into a suitable main power socket, and plug the connector to the charging slot of your device. The phone will start charging automatically.
2. USB Cable: Connect your device and your PC with the USB cable supplied in your package.

### Power on

Hold down Power Key for a few seconds to turn on the device.

### Power off

Hold down Power Key for a few seconds to turn off the device.

To reduce the power consumption of your device, you may change the backlight duration and brightness level.

Tap Start > Settings > Power > Advanced tab, and then, select the duration of the backlight. This function helps you save power.

### Battery Power

Tap Start > Settings > Power > Battery tab. The bar indicates the remaining power of the battery.

### Sleep Mode

1. Sleep Mode is a power-saving mode designed to reserve the power of the battery. After idling for a period of time, the device enters Sleep Mode automatically. You may also manually enter Sleep mode by pressing Power Key. The backlight of the screen will turn off and the device will activate Sleep Mode. When your device is in Sleep Mode, it will not respond to any operation or touches on screen and on the keypad.
2. Press Power Key again to exit Sleep mode.
3. You may adjust time to activate Sleep Mode. The device will enter Sleep Mode automatically, when no operation is done within a period of time.
  - Tap Start > Settings > Power > Advanced tab.
  - Select your desired time period on "On battery power" or "On external power".
  - Tap OK to complete this setting.

## 1.3 SIM Card

Before inserting/removing a SIM card, please make sure that the device is turned off and is not connected to any power supply.

1. Push the battery cover upwards, and then remove it.
2. Find the carrier of the SIM card on the upper-right corner of your phone.
3. Insert the SIM card into the carrier. The metal

contacts on the SIM face down.

4. Return the battery back to the battery slot, and then, return the battery cover back onto the device.
5. Push the battery cover back, and then, you will hear "click".

## 1.4 Lock/Unlock

1. Lock the device:  
Tap Start > Lock to lock the device. The device will not respond to touches on screen nor react to any input on the keypad, when it is locked.
2. Unlock the device:  
Slide a Lock icon on screen, and then, the device is unlocked.

**Note:** The Lock/Unlock procedure is based on the lock display of Windows Default.

### Advanced Lock Settings

You can create a personal password to lock your device.

A strong password must have at least 7 characters that are a combination of uppercase and lower case letters, numerals, and punctuations.

1. Tap Start > Settings > Lock
2. To enable this function, select how long your device must be turned off before the password is required for using the device. Tap "Prompt if phone unused for".
3. Select the type of password you would like to use: Strong alphanumeric or Simple PIN.
4. Enter the password, and type it again in Confirm field.
5. On Hint tab, the system provides a hint for the password in case you forget your password. This hint may be visible by others.
6. On Display tab, you can change the unlock display.

7. Tap OK to save the settings.

- If your device is configured to connect to a network, use a strong password to help protect network security.
- If you forget your password, you must reset the device before you can access your device. The reset will erase all files, data, and programs.
- If you have used ActiveSync to create a backup file, all of your program data can be restored.

## 1.5 Screen Orientation

You can change the display of the screen. The Portrait mode allows you to get a better view or a better operation of certain programs on your device, while Landscape may be optimal for viewing longer text files.

Tap Start > Settings > System > Screen > General tab.

1. On General tab, select your desired orientation: Portrait, Landscape (right-handed), or Landscape (left-handed).
2. Tap OK, and the screen will be changed accordingly.



Portrait



Landscape

## 1.6 Display Information

The main screen displays the following information:

### 1. Start Menu

Tap "Start" to open Start Menu. To return to Today screen at any time, tap Start > Today.

### 2. Status & Icon Area

Display icons of notifications and the status of the system. You can tap the icons to get the details of the functions.

### 3. Today Screen

On Today screen, this area contains shortcuts to certain programs and important information of today. To change the settings of Today screen, tap Start > Settings > Today.

### 4. Command Area

Depending on different mode, this area contains different features such as menu options, Input Method and commands to create or edit a file.








### 5. Pop-up Window

It allows you to access an item quickly. Tap the selected item to perform an action. To cancel this pop-up window, tap other areas of this screen.



















## Start Menu

Icons	Programs	Descriptions
	<b>Today</b>	Switch to Today Screen.
	<b>Settings</b>	Help you adjust your device.
	<b>GPS Utility</b>	GPS Tracking, Location Message, Quick GPS.
	<b>Multimedia</b>	JAVA, Camera, Recorder, Pictures & Videos, FM Radio, Photo Viewer, Streaming Player.
	<b>Phone Manager</b>	Internet Sharing, SIM Manager.
	<b>Tools</b>	Calculator, Zip, Spb Backup, Stopwatch, Advanced Calculator.
	<b>Phone</b>	Phone functions.
	<b>Text</b>	SMS\MMS.
	<b>E-mail</b>	SMS\MMS, Setup E-mail.

	<b>Contacts</b>	Your contacts in your device.
	<b>Internet Explorer</b>	Help you Browse online.
	<b>Calendar</b>	You can check your schedule in your device.
	<b>Getting Started</b>	A quick guide for some functions you may use frequently.
	<b>Windows Media</b>	Play sound and video files with this device.
	<b>Marketplace</b>	Help you get more applications.
	<b>Messenger</b>	Perform MSN.
	<b>Microsoft My Phone</b>	My Phone service synchronize your data in your device with you're my Phone account.
	<b>MSN Weather</b>	Help you check the information of weather.
	<b>Windows Live</b>	A search engine of Microsoft.

	<b>MSN Money</b>	Help you check the information of stocks.
	<b>Games</b>	Bubble Breaker, Solitaire.
	<b>Notes</b>	Write notes, memos, or draw on notes.
	<b>Tasks</b>	Help you track unfinished tasks.
	<b>Office Mobile</b>	Word Mobile, Excel Mobile, PowerPoint Mobile, and OneNote Mobile.
	<b>File Explorer</b>	Manage the files in your device and storage card (if you have).
	<b>ActiveSync</b>	Transmit data from your computer to the device and vice versa.
	<b>Search Phone</b>	Search for all data, programs, and files.
	<b>Help</b>	Help you use the applications.

	<b>NF Browser</b>	Help you Browse online.
	<b>Remote Desktop Mobile</b>	Connect, and control your desktop computer from your device.
	<b>Search Widget</b>	Live Search.
	<b>Voice Commander</b>	Start programs and functions with voice.
	<b>Adobe Reader LE</b>	Help you read Adobe files.

### Settings

Tap Start > Settings

<b>Programs</b>	<b>Descriptions</b>
Bluetooth	Settings for Bluetooth functions.
Clock & Alarms	Settings for time and alarms.
Lock	You can create a personal password for the device.
Power	Help you examine power status and wireless signals.
Sounds & Notifications	Settings for sounds, notifications, and vibrations.
Today	Settings for the items which are displayed on Today screen.
Connections	More Connections Settings.
Personal	More Personal Settings.

System	More System Settings.
Microsoft My Phone	My Phone service synchronize your data in your device with you're my Phone account.

#### Tap Start > Settings > Connections

Programs	Descriptions
Band Switch	Select band system.
Beam	You can choose to receive all incoming beams.
Cell Broadcast	Receive the information and news of broadcast channel from your service provider.
Connections	Settings and management for modem connections.
Domain Enroll	Enrolling in a domain will connect your device with company resources.
GPRS Wizard	Basic settings for the connections of GPRS.
SMS Settings	Settings about sending text messages.
USB	Use ActiveSync or SD-Card Reader.
Wi-Fi	Configurations for Wi-Fi.
Wireless Manager	Turn on/off Wi-Fi, Bluetooth, Phone, GPRS, Push E-mail, and Flight Mode.

#### Tap Start > Settings > Personal

Programs	Descriptions
Buttons	You may assign programs to hard keys.
Call Settings	You can adjust call settings.
Input	You can adjust your preferred input method.

Owner Information	You may input your personal information.
Phone	Settings for functions of your phone.

#### Tap Start > Settings > System

Programs	Descriptions
About	Contain information of the device.
Backlight	Settings for the backlight.
Certificates	Identify the device to others to prevent from unauthorized access.
CPU Profile	Power Management for CPU.
Customer Feedback	Customer Experience Improvement Program.
Device Information	You can check the information of your device.
Encryption	Encrypt data in your Micro SD card.
Error Reporting	Report the errors which exist in the system operation.
Managed Programs	Help you examine the installed programs.
Memory	Help you examine memory status and running programs.
Quick Menu Setting	You can activate Quick Menu Setting to help you adjust the frequently used settings.
Regional Settings	Settings for region, number, currency, time, and date.
Remove Programs	Remove programs from your device.
Restore to Default	Restore the default settings in this device.
Screen	Help you adjust screen orientation, screen alignment, and text size.
Task	Help you examine the

Manager	applications which are using. You can examine their amount of memory and their CPU consumption.
Voice Commander Settings	Settings about activating programs and functions with voice.

### Status & Icon Area

This area shows status and alerts of the system. You can tap the icons to get the details and the settings.

Status Types	Icons	Descriptions
Battery		The power of the battery is full.
		The power of the battery is low. Please recharge.
		Battery is charging.
Calls		Call forward.
		Call on hold.
		Data call.
		You have missed calls.
Connections		Voice call is active.
		No connections.
		HSDPA network is connected.
		3G network is connected.
		GPRS is in range.
		GPRS is connected.
		Building connection to GPRS.

Signal		Bluetooth is activated.
		Wi-Fi is activated; a Wi-Fi network is in range; Wi-Fi network is connected.
		Strong signal.
		No signal.
		Roaming.
		Trying to connect GPS; GPS is connected.
		GPS Tracking is trying to connect.
		GPS Tracking is connected.
		Trying to detect the GPS signal of Location Message.
		The GPS signal of Location Message is detected.
Message		You have one or more new message(s).
		You have one or more new voice mail(s).
		You have one or more instant message(s).
Volume		System volume.
		Phone volume.
		Ringer is on.
		Ringer is off.
Quick Menu Setting		Help you adjust the frequently used settings.

 
## 2. Phone Functions

### 2.1 Use Your Phone

Press Call Key to enter Phone functions. Please insert a SIM card before using these functions.

#### Phone Dial Screen


1. The name of the network provider
2. The number you entered
3. Call History
4. Clear numbers
5. Make a voice call
6. Make a video call
7. Contacts
8. Keypad
9. Hide keypad
10. Menu

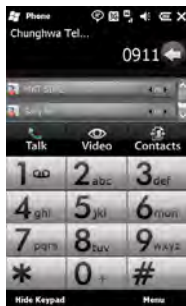

#### Incoming Call Screen

1. The photo, name, and number of the caller.
2. Receive a call
3. Mute

 
4. End a call

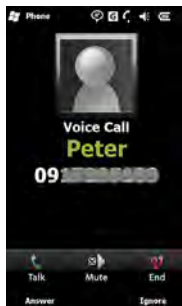

When a call is answered, the screen displays the following items:

 1. The photo, name, and number of the caller.
2. Elapsed time
3. Speaker on/off
4. Mute/Un-mute
5. Hold/Un-hold a call
6. Note
7. Contacts
8. End the call
9. Keypad
10. Menu

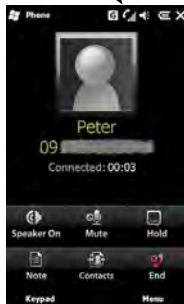

## 2 Phone Functions



### Make a Call from Contacts

On Today screen, you can tap Contacts to enter Contacts.

Enter the contact or phone number you intend to search in the search field, the phone will search for the contacts that match this condition. Besides, tapping the letters of alphabet located at the left side of the screen helps you find your contacts quickly.

Tap  to hide Search Menu, and then, tap  to show it.

1. Slide the bar upwards or downwards to browse contacts by initial letters in Contacts.
2. You can select a contact to make a call to him or her.
3. Tap "Menu" for more options.

### Create a New Contact

On Contacts screen, tap "New" first. Then, you can select "Outlook Contact" or "SIM Contact". After you select one of them, you can edit the contact's information.

1. You can create a photo for an incoming call, and it will be displayed as a Photo ID.
2. You may also tap Ring tone field to adjust the ring tones for your contacts.
3. Tap OK to save the new contact, and then, exit the screen.

### 2.2 Receive/Ignore a Call

When you receive a phone call, a message of notification will appear. To answer the incoming call, tap "Answer" or "Talk". To ignore or reject a call, tap "Ignore" or "End". This behavior may divert the call to your voice mail depending on your network operator.

### 2.3 Call History

Call History contains all outgoing calls, incoming calls, and missed calls. You may choose to display all or only display the highlighted items.

1. On Today screen, tap Call Key.
2. Then tap Menu to select "Call History".
3. Tap Menu to select a desired function to perform. You may change the display method of Call History by selecting "Filter"; You can also select "Call Timers" to check numbers of incoming calls and calling time.
4. On Call History screen, select a contact to redial the number.
5. On Call History screen, hold down on a phone number to open a menu for more options.

### 2.4 Video Telephony

 
The 3G Video Telephony Application/Phone Canvas allows you to make a video call in addition to making an audio call. To make a video call, perform the steps below.

#### To make a video call

1. On Phone Dialer screen, type the required phone number.

2. Tap  to make a video call.

When the video call is connected successfully, the 3G Video Telephony Application appears as:

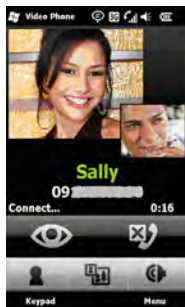

### Preview Window

The window plays the video from the local camera.

### Remote Window

The window plays the video from the remote side.

### Video Display



: Normal video photo.



: Video photo is showed as another photo.

### Deliver the Image



: Deliver the image.



: Stop delivering the image.

### End a call

You can end an active call by tapping



### Switch Windows

Tap the buttons below to switch the positions of Preview Window and Remote Window:



: Preview Window is located at the left side of the screen, and Remote Window is located at the right side of the screen.



: Remote Window is located at the left side of the screen and Preview Window is located at the right side of the screen.



: The screen only shows Preview Window.



: The screen only shows Remote Window.

### Mute

Tap this button to mute/un-mute a call.



: Mute a call.



: Un-mute a call.

### Call Failed

If a video call is failed, the system will ask you whether a voice call should be dialed or whether the video call should be retried with the same phone number.

### Making a Video Call from Outlook Contacts

The 3G Video Telephony Application allows you to make a call to your Outlook contacts.

To make a call to an Outlook contact

1. Tap Contacts of Today screen to open Outlook Contacts page.
2. Do one of the following to display a menu.  
Tap "Menu" or hold down on a contact.
3. Select Video Call to create an outgoing video call to the selected contact.

### Making a Video Call from Call History

The Call History feature of the 3G Video Telephony Application is used to remember previous calls. This feature allows you to easily redial the number of a call you made earlier. In the Call History page, you can distinguish audio calls from video calls by their icons.

To redial a number from Call History

1. In the Call History page, hold down on a record.
2. To make a video call, tap "Video call" in Menu.

## 2.5 Other Information

### Phone Settings

Setting for Phone functions.

You can easily view, and change settings, such as Ring type, Ring tone, and Keypad. You can also protect your device from the unauthorized use.

- Tap Start > Settings > Personal > Phone.

#### Phone tab

On Phone tab, you can adjust the following items:

#### Ring type

You can change the way that you are notified when a call is incoming. For example, you can choose to be notified by a ring, a vibration, or a combination of both. Tap the list of Ring type, and select an item.

#### Ring tone

Display the list of Ring tone, and then, select an item.

1. To use .wav or .midi files as ring tones, use ActiveSync on your PC to copy the files to the Rings folder on your device. Then, select an item in the list of Ring tone.
2. To download ring tones, you can make a connection to the Internet, and then, download ring tones that are compatible with the formats of .wav or .midi.

#### Keypad

You can use this function to change the tones of the keys.

If you select Long tones, the tones of the keys will be continuous, when you input a phone number. If you select Short tones, the tones of the keys will be only continued one or two seconds, when you input a phone number. If you select Off, the tones of the keys will be cancelled, when you input a phone number.

#### Security tab

You can check "Require PIN when phone is used" to enhance the security of your phone. Tap "Change PIN" or "Change PIN2" to change the PIN number of your SIM.

#### Services tab

Settings include Call Barring, Caller ID, Call Forwarding, Call Waiting, Voice Mail and Text Messages, and Fixed Dialing.

1. Tap Start > Settings > Personal > Phone > Services tab.
2. Select an item, and then, tap Get Settings.
3. Tap OK to save settings.

Options	Descriptions
Call Barring	Block incoming and/or outgoing calls.



Caller ID	Display your name and/or phone number for outgoing calls.
Call Forwarding	Forward all or selected incoming calls to a different phone number.
Call Waiting	Notify you an incoming call while you are on the line.
Voice Mail and Text Messages	Settings about voice mail and SMS service center.
Fixed Dialing	You can only dial some phone number.

**Note:** All services in Services tab are provided by operators. Please contact your operator for more information.

#### *Network tab*

Tap Start > Settings > Personal > Phone > Network tab.

- Under Current network, tap "Find Network" to search for the network automatically.
- Under Network selection, select "Automatic" or "Manual" to select a network automatically or manually.
- Under Preferred networks, tap "Set Networks" to adjust the preferred order of networks.

#### **Make an International Call**

When you make an international call, you need to insert an international access code before the dialed phone number. If you enter "+" as a prefix, then you do not need to enter the international access code.

The "+" can be reached by holding down the "0" key until it turns into a "+".

1. Enter the full phone number you want to dial. It should include the country code, area code (without the leading zero), and phone number.
2. Tap Talk, or press Call Key.

#### **Make an Emergency Call**

 
Enter the international emergency number 112, and then, tap "Talk" or press Call Key. Additional emergency numbers may be included in your SIM card. Contact your network operator for more information.

If your device has entered Device Lock Mode, you have to unlock the device before you make an emergency call.

## 3. Input

### 3.1 Input Method

1. Start a program such as Word Mobile and Notes.
2. Input Method at the lower center of the screen. Tap the arrow beside Input Method to select an input method.

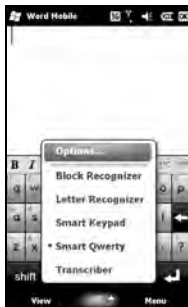

#### Block Recognizer

1. Tap the arrow beside Input Method to select Block Recognizer.
2. Write letters and numbers in a corresponding field, the system will display the letters/numbers identified from your handwriting.
3. Do not write letters outside of the input fields.

#### Letter Recognizer

1. Tap the arrow beside Input Method to select Letter Recognizer.
2. Write letters and numbers in a corresponding field.

#### Smart Keypad and Smart Qwerty

1. Tap the arrow beside Input Method to select Smart Keypad or Smart Qwerty.
2. Tap "Mode" to switch the input method.
3. Tap "Menu" to choose different input methods, Symbol Table, and Option.
4. Tap "Shift" to input capital letters. Tap "Shift" twice to input capital letters continually. Tap "Shift" again to input a small letter.

#### Transcriber

Transcriber is a program of handwriting recognition that allows you to write in cursive, print, or a combination of both. Transcriber works transparently in the background of programs, recognizing words with its integrated dictionary. When Transcriber is turned on, it interprets stylus movement anywhere on the screen as handwriting input.

1. Tap the arrow beside Input Method to select Transcriber.
2. Position the cursor where you want texts to appear.
3. Use the stylus to write anywhere on the screen. The handwriting will be converted to texts after you lift the stylus from the screen.

 
### 3.2 Draw on the Screen

You can draw on the screen in the same way that you write on the screen. The difference between writing and drawing on the screen is how you select items and how they can be edited. For example, the selected drawings can be resized, while writing cannot. Tap Start > Notes. Then, tap "New" to create a new note.

#### Create a Drawing

Cross three ruled lines on your first stroke. A drawing box appears. Subsequent strokes in the drawing box

will become parts of the drawing. Drawings that do not cross three ruled lines will be treated as writing.

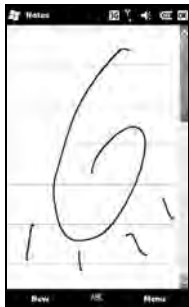

### Select a Drawing

 
To edit a drawing, select it first.






1. Use the stylus to hold down on a drawing until a "+" appears. Drag this "+" to select the drawing you want, and then, lift the stylus.
2. You can cut, copy, and paste the selected drawings by selecting those items in Menu.

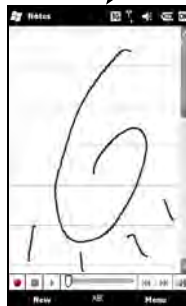

## 3.3 Record a Message

### Create a Recording

1. To add a recording to a note, open a note before recording. Tap Start > Notes. Then, tap "New" to create a new note.
2. If there is no Recording Toolbar, tap Menu > View Recording Toolbar.
3. Move your device's microphone near your mouth or other sources of sounds.



4. To start recording, tap .
5. To stop recording, tap   will be added in the note.
6. To play a recording, tap  in a note, or tap  in the list of Notes.

The recording can be saved in the list of Notes. Tap Menu > View Recording Toolbar. Tap , and then, tap .

## 4. Settings

### Clock & Alarms

Adjust time and alarms. Tap Start > Settings > Clock & Alarms.

1. On Time tab, adjust Time Zone, Date, and Time.
2. Tap OK, and then, the pop-up window will ask whether you will save the changes.
3. Tap "Yes" to save the changes and exit.

- On Alarms tab, you can adjust the settings of alarms.
- On More tab, you can adjust more settings.
- Tap Start > Settings > System > Regional Settings to change the format of the time or the date.

### Sounds & Notifications

Adjust sounds of alarms, notifications, and vibrations.

Turning off sounds and notifications helps conserve the power of the battery.

1. Tap Start > Settings > Sounds & Notifications.
2. On Sounds tab, you can check the items you want.
3. On Notifications tab, you can customize how you are notified. Select an event, and then, select the type of the reminder.
4. On Vibrations tab, you can enable vibrations.

### Today

Change screen appearance and items displayed on Today screen.

To change the theme of Today screen:

1. Tap Start > Settings > Today.
2. On Appearance tab, select the desired theme. To use your own background, check "Use this picture as the background", and then, tap

"Browse" to locate the desired file.

3. Choose a folder, and then, tap the file you want.
4. Tap OK to save it.

**Note:** The recommended picture size for the background is 480 x 800 pixels in jpeg file format. To beam a favorite theme to a friend, select the desired theme, and then, tap "Beam" on Appearance tab.

To customize the displayed information:

1. Tap Start > Settings > Today > Items tab.
2. Select the items you want. Then they will be displayed on Today screen.
3. To customize further, select an item, and then, tap "Options" (not available for all items).

### Microsoft My Phone

My Phone service synchronize your phone's contacts, calendar, tasks, text messages, music, photos, videos, and other documents with your My Phone account at <http://myphone.microsoft.com>.

1. Tap Start > Settings > Microsoft My Phone.
2. Sign with your Windows Live ID and password. Then tap "Sign in."
3. Select a synchronization method. Then, tap Next.
4. Select the data types to sync.
5. Follow the instructions, and then, tap Finish.
6. Tap Sync to begin the synchronization.

## 4.1 Personal

### Buttons

You may assign programs to a hardware button. Tap Start > Settings > Personal > Buttons.

## Owner Information

You can input your personal information in Owner Information to help you identify your phone.

1. Tap Start > Settings > Personal > Owner Information.
2. On Identification tab, enter your personal information.

## Call Settings

You can adjust Call settings. Tap Start > Settings > Personal > Call Settings.

## 4.2 System

### About

This function contains the information of your device. Tap Start > Settings > System > About.

### Backlight

Adjust the settings of the backlight, and adjust the level of the brightness to save power. Tap Start > Settings > System > Backlight.

- On Battery Power tab, you can turn ON/OFF the backlight, when you use the power of the battery.
- On External Power tab, you can turn ON/OFF the backlight, when you use the external power.
- On Extended tab, you can adjust the level of the brightness.
- Tap "Power" to adjust the settings of the power.

### Certificates

Tap Certificates to view the name of the certificate issuer and the expiration date. Tap Start > Settings > System > Certificates.

### CPU Profile

Power Management for CPU. Tap Start > Settings > System > CPU Profile.

You can select one of two modes:

1. Standard mode
2. Performance mode

## Customer Feedback

It is Customer Experience Improvement Program designed by Microsoft®. You can check "Send Feedback" to participate or "Don't Send Feedback" to reject. Tap Start > Settings > System > Customer Feedback.

## Device Information

Check the information of your phone. Tap Start > Settings > System > Device Information.

## Encryption

You can encrypt files stored on the Micro SD card by simply checking "Encrypt files when placed on a storage card". Once encrypted, such files are only readable by this device. Tap Start > Settings > System > Encryption.

## Error Reporting

To help Microsoft improve the products you use, your device can collect information on software operation for later reporting in the event of a serious error. Reporting the information is completely voluntary and confidential. Tap Start > Settings > System > Error Reporting.

## Managed Programs

Examine the installed programs. Tap Start > Settings > System > Managed Programs.

## Memory

Display memories of programs that are currently running. You may need to stop a program, if it becomes unstable. Tap Start > Settings > System > Memory.

- Main tab displays the amount of the memory. This tab shows storage's and program's memories. You can examine the total, in-use, and free memories.
- Storage Card tab displays how much memory is available on the storage card.

## 4 Settings

### Quick Menu Setting

Help you adjust the frequently used settings. Tap Start > Settings > System > Quick Menu Setting.

### Regional Settings

Adjust the formats of region, number, currency, time, and date.

This function allows you to customize the unit and format for the region you are in. Tap Start > Settings > System > Regional Settings.

### Remove Programs

This function allows you to uninstall programs that are saved in your device's storage memory. It also shows the total available storage memory. Select a program that you would like to remove from the program box, and then, tap "Remove". Tap Start > Settings > System > Remove Programs.

### Restore to Default

Tap Start > Settings > System > Restore to Default. Input the 4-digit password in the blank, and then, tap "Restore" to restore to the default setting.

### Screen

Adjust screen's orientation, screen alignment, and text size. Tap Start > Settings > System > Screen.

 
### Task Manager






Examine the applications that you are using. You can examine the amount of the memory and the consumption of CPU. Tap Start > Settings > System > Task Manager.


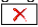
### Voice Commander Settings

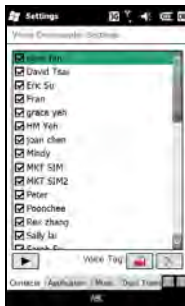- Voice Commander: You can go to "Voice Commander" in Start to start what you record.
- Voice Commander Settings: You may record voice tags under "Voice Commander Settings", or train you the way of digit speaking under digit training.

Tap Start > Settings > System > Voice Commander Settings.



- On Contacts tab, select a contact in the list of contacts.
- Select a contact, and then, tap  to create a voice tag.
- If the selected contact has different phone numbers, select one of them, please.
- After you tap , the system will record your voice.
- When the voice tag is built,  will be showed beside the contact.
- You can tap  to re-build a voice tag.
- Tap  to delete a voice tag.
- On Application tab, you can record a voice tag of an application.

- On Music tab: If you have MP3 files in the device or in Micro SD card, you may record voice tags for those MP3 files.
- On Digit Training tab, you can practice your pronunciations. You can press  to record the following digits in "Digit model adaptation". You can press  to delete the recorded pronunciations.
- On Digit Settings tab, you can adjust the length of phone number showed in Voice Commander.
- On Advanced Settings tab, you can change the recording sensitivity.
- On About tab, you can get the details of Voice Commander.

## 5. Synchronization

### 5.1 About ActiveSync

You may use Microsoft ActiveSync to synchronize data in this device with your personal computer.

- You can update Outlook data in this device and in your personal computer synchronously.
- You can synchronize Microsoft Word and Microsoft Excel files in this device and in your personal computer. The files will convert to the compatible version automatically.

The default of ActiveSync is not to synchronize all data automatically. If you would like to change the default, you may activate or disable the function of the synchronization for specific data in ActiveSync Option.

ActiveSync may also be used for the following purposes:

- Back up or restore the saved data in this device.
- Copy files between this device and personal computer.
- Synchronize while connecting to your personal computer or selecting synchronization command.
- Synchronize specific types and range of files. For example, you may choose to synchronize appointments of the past few weeks.

### 5.2 Install and Use ActiveSync

**Note:** Before installing ActiveSync, do not connect your device to the computer. You can connect your device to the computer with a USB cable after installing ActiveSync.

#### ActiveSync on Windows XP

##### 1. ActiveSync Installation:


Use the enclosed CD to install Microsoft ActiveSync in your personal computer. This device has the built-in ActiveSync already.

##### 2. Hardware Connection:

Connect your Windows Mobile-based device to your personal computer with a USB cable.

##### 3. Use ActiveSync Program:

The ActiveSync wizard will give you step-by-step instructions for synchronizing files and loading programs onto your device. Follow the instructions to complete the settings, please.

- After you connect this device to your personal computer with a USB cable, the screen of the computer will display "Connected" upon successful connection. A green icon  representing "connected" will appear on the task bar of your computer screen.
- Select the Explore button of ActiveSync program to view the files in your device. You may manage several files in the device simultaneously.





### ActiveSync on Windows Vista

Install Windows Mobile Device Center in CD, please. Microsoft Windows Mobile Device Center is the replacement for Microsoft ActiveSync on Windows Vista.

A Windows Mobile partnership needs to be created, when you connect your phone to your PC and start Windows Mobile Device Center for the first time. The steps are below:

1. Connect your phone to your computer. Windows Mobile Device Center configures itself, and then, it will open.
2. Follow the instructions to complete the settings, please.
3. Select the items to synchronize, tap "Next".
4. After you complete the settings, Microsoft Windows Mobile Device Center will synchronize your phone automatically.

## 5.3 Synchronize via Bluetooth

You can synchronize data via Bluetooth. Tap Start > ActiveSync > Menu, and then, select "Connect via Bluetooth" and tap "Sync" in this device to process synchronization.

**Note:** If you want to synchronize your phone and your computer via Bluetooth, your computer needs to have a Bluetooth receiver, a host adapter, or a built-in Bluetooth.

## 6. Getting Connected

 
### 6.1 Internet Access

Before you use GPRS to connect to the Internet, please make sure your system operator provide this service. It is convenient to work at home or travel by using GPRS. You can use this device to browse online, read or send E-mail, and MSN messages through a wireless network.

### 6.2 GPRS Connection Settings




#### GPRS Settings

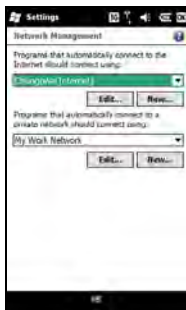1. Tap Start > Settings > Connections > Connections > Advanced tab.
2. Tap "Select Networks" to open Network Management Screen.



3. Select a desired network from the list; tap "New" to add an available network to list; tap "Edit" to modify the settings of the original network.
4. Tap OK to save and exit.

#### Activate GPRS Connections

1. Tap Start > Internet Explorer.
2. Input an URL address in the address field, and then, tap  to connect to that website.
3. After completing a connection,  will become .
4. Or you may select Start > Settings > Connections > Connections > Tasks tab. Tap "Manage existing connections," and then, go to Modem tab. Hold down on a connection to activate the pop-up menu, and then, select "Connect".



#### GPRS Wizard

When you are connected to GPRS network, you may surf on the Internet or send and receive e-mail. GPRS Wizard selects your GPRS network automatically.


1. Tap Start > Settings > Connections > GPRS Wizard.

2. Choose a region and a network.
3. Tap OK to save.

### 6.3 Bluetooth Wireless Transmissions

When you want to form a connection through Bluetooth, please make sure the device you would like to make connections which is also equipped with Bluetooth.

#### Bluetooth Connection Settings

When Bluetooth is activated, tap **H**, **3G**, or **G** on the upper side of Today screen. You will find  on the pop-up window.



Bluetooth is a short distance wireless communication technology. Before you use Bluetooth, you need to finish settings of connections.

1. Select Start > Settings > Bluetooth > Mode tab.
2. Check "Turn on Bluetooth".

3. If you want this device to be detected by other devices with Bluetooth, please check "Make this device visible to other devices". (Without checking this item, other devices with Bluetooth are unable to detect your device.)
4. Tap Devices tab to check the formed connections.
5. On Devices tab, tap "Add new device" to search for other devices with Bluetooth within an effective area.
6. Select a device, and then, tap "Next". The system will ask you to input your password. After you input the password, tap "Next".
7. If the entered password is correct, the connection will be formed.

**Note:** Optional accessories of Bluetooth are available. Please contact with your local dealer for more information.

#### COM Ports

For example, when you purchase Bluetooth GPS, you can register this device as an effective serial port by following the instructions:  
Select Start > Settings > Bluetooth > COM Ports tab.

#### Register a New Serial Port:

1. Connect your device and Bluetooth GPS via Bluetooth, first. Then, select "New Incoming Port" to enter Setup Screen.
2. Select a port.
3. Select "Finish".

### 6.4 Internet Sharing

You can use the device as a wireless modem. Internet Sharing allows your PC/Notebook to be connected to a wireless network. If you would like to connect to PC with a USB cable, you will need to install ActiveSync 4.5 or later version in your PC. Please find the drivers in the ActiveSync and

Application Software CD.

1. Tap Start > Phone Manager > Internet Sharing.
2. Select "USB" or "Bluetooth PAN" in PC Connection.
3. Connect your phone to a PC/Notebook with a USB cable or Bluetooth, and then, tap "Connect".

**Note:** Before you tap "Connect", you need to make sure:

1. You have inserted a SIM card which supports GPRS.
2. You have connected this phone to your PC/Notebook with a USB cable or Bluetooth.
3. You have disabled ActiveSync.

1. Tap Start > Settings > Connections > USB.
2. Tap "SD-Card Reader", and then, tap "Change".
3. Connect the device to the computer with a USB cable.
4. Your computer will detect the new hardware automatically.

## 6.5 Wi-Fi

Your device can connect to the detected network through Wi-Fi.

1. Select Start > Settings > Connections > Wireless Manager.
2. Tap "Wi-Fi".
3. Tap OK to activate wireless network and exit.

When you activate Wi-Fi, a new window, "New Network Detected", will appear. Select "Connect" and input your password to the local network. Tap "Connect" to connect to this device via local network.

**Note:** Reboot is required when you change the IP address in Start > Settings > Connections > Wi-Fi > Network Adapters tab > Edit > IP Address tab.

## 6.6 USB


You may use your device as a mass storage device or a reader of Micro SD card.

## 7. Messaging

Messaging includes text messages (SMS), multimedia messages (MMS), and E-mail. Before receiving and sending your e-mail, please make sure this device has connected to a network. When your device is connected to a network, you may go to "Messaging" to receive, and send your e-mail.

You may:

1. Use this device to connect with e-mail server, and receive, or send letter directly.
2. Update the Microsoft Outlook or e-mail in Microsoft Exchange Server in this device and in your computer synchronously.

For receiving and sending SMS\MMS, you only need to ensure that Phone function is activated and the satellite icon on the top of status bar shows . It is not necessary to activate the connection or establish a new e-mail account in Messaging.

### 7.1 SMS\MMS

Select Start > Text

1. Tap "Inbox" to choose a folder.
2. Tap "Received" to choose SMS\MMS arrangement.
3. Hold down on a SMS\MMS to activate the pop-up menu.
4. Tap Menu > New to create a new SMS\MMS.
5. Tap Input Method at the lower center of the screen to activate the input methods, and then, edit this SMS or MMS.

#### When Read a SMS\MMS, You can:

Tap Start > Text, and then, read and reply a SMS\MMS.

1. Tap the phone number which is showed on the screen to save this contact as a new contact.

2. Tap "Reply" to reply a SMS\MMS.
3. Tap Input Method on the lower center of the screen to activate the input methods.
4. Tap "Menu" for more information.
5. Hold down on the text area in SMS\MMS to activate the pop-up menu.

**Note:** Make sure the MMS you send is within the limits of size allowed by your wireless service provider.

#### Compose, and send a SMS:

1. Tap Start > Text > Menu > New > SMS to write a new SMS.
2. Tap "To" field to input receivers' phone numbers, or tap Menu > Add Recipient to add recipients.
3. You can input contents on the text area. Tap Input Method at the lower center of the screen to switch the input methods.
4. Hold down on the text area to activate the pop-up menu.
5. Select "Send" to send this SMS.

#### Copy a SMS to the SIM Card:

1. In the inbox of SMS\MMS, select the message that you want to copy to the SIM card.
2. Tap Menu > Copy to SIM.

**Note:** You cannot copy a sent SMS to the SIM card.

#### Reply a SMS with the Function of MMS:

1. In the inbox of SMS\MMS, you select a message, and then, open it.
2. Tap Reply.

3. Tap Menu > Insert, and then, insert the wanted item (Picture/Video, Audio, vCard, vCalendar, or Attachment.) into the SMS.
4. Tap "Send" to send this MMS.

#### **Compose, and Send a MMS:**

1. Tap Start > Text > Menu > New > MMS to write a new MMS.
2. Choose a MMS.
3. Tap the fields of "To", "Cc", or "Bcc" to input receivers' phone numbers, or tap Menu > Add Recipient > "From Contacts" or "From Call History" to add recipients.
4. Tap the field of "Subject" to input a subject for your new message.
5. You can input contents on the text area. Tap Input Method at the lower center of the screen to switch the input methods.
6. Hold down on the text area to activate the pop-up menu.
7. Tap "Send" to send this MMS.

## **7.2 Establish an E-mail Account**

If you have e-mail accounts already, you may use "E-mail" to receive or send your e-mail. Follow the instructions below to create a new e-mail account.

Please acquire the following information from the Internet Server Provider (ISP) or the administrator of your company network:

1. E-mail address, account name, password, and domain name.
2. POP3 or IMAP4.
3. SMTP.

#### **Establish an E-mail Account:**

1. Tap Start > E-mail > Menu > Options > Accounts tab, and then, tap "New Account", or simply select "Setup E-mail" in E-mail. Input your e-mail address and your password, and then, follow the instructions to create a new e-mail account.

2. See "Chapter 6" to connect this device to a network and begin to receive and send your e-mail.

## **7.3 Use E-mail**

#### **When you Read an E-mail, You can:**

Tap Start > E-mail > "the established e-mail account" > Menu, and then, tap "Send/Receive" to send, and receive new e-mails. Tap "Inbox" to view Inbox. Tap any unread e-mail to view its content.

1. Tap Input Method to activate the Input methods.
2. Tap "Menu" for more information.
3. Hold down on an e-mail to activate the pop-up menu.

#### **Compose, and Send an E-mail:**

Tap Start > E-mail > "the established e-mail account" > Menu > New to write a new e-mail. After writing a new e-mail, tap "Send" to send this e-mail.

#### **When you Compose an E-mail, You can:**

1. Tap the fields of "To", "Cc", or "Bcc" to input receivers' e-mail addresses, or tap Menu > Add Recipient to add recipients.
2. Tap the field of "Subject" to input a subject for your new e-mail.
3. You can input contents in the text area.
4. Tap "Send" to send this e-mail.
5. Tap Input Method on the lower center of the screen to activate the input methods.
6. Tap "Menu" for more information.
7. Hold down on the text area to activate the pop-up menu.

## **7.4 Synchronously Process E-mail**

If you want to manage your e-mail synchronously, you must activate the synchronization of "Inbox" via ActiveSync. For more information about the synchronization of "Inbox", please read the online Help of ActiveSync in your computer.

Rules about the synchronization of "Inbox":

 
1. Please read the units related to ActiveSync.
2. If you do not want to transmit data via ActiveSync, you can copy or move e-mails between this device and your computer manually.
3. Only the e-mails in "Inbox" of your computer will be synchronized.
4. Only the e-mails in Microsoft Exchange Server or Microsoft Outlook can be synchronized.
5. The e-mails from "Outbox" in this device will be sent to your computer first, and then, they will be delivered through Microsoft Exchange Server or Microsoft Outlook.
6. If an e-mail is deleted in this device, then it will also be deleted in your computer when you process the synchronization.
7. SMS/MMS in this device will not be synchronized.
8. You may directly receive new e-mails from the e-mail server without connecting to a computer.
9. You can work online or offline. If it is online, you may read and reply an e-mail directly when this device is connected to the e-mail server.

## 7.5 Use Push E-mail

To use push e-mail, please turn on Wi-Fi or GPRS to connect to Microsoft Exchange Server.

### Use Push E-mail in Your PC:


1. Install Microsoft ActiveSync which is in our CD in your computer.
2. Connect your device to the PC with a USB cable.
3. Follow the instructions on the pop-up window of ActiveSync, and then, click "NEXT".
4. Input your server address, user name, password, and domain. If your server requires SSL Encryption, please check "This server requires an encrypted (SSL) connection." Then, Click "NEXT".

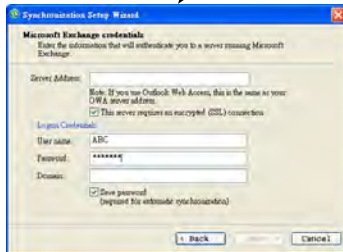

5. Check the items you would like to synchronize, for example, you may check E-mail, Calendar, Contacts, and Tasks.

### Use Push E-mail in Your Device:

 
1. Tap Start > ActiveSync > Menu > Add Server Source.

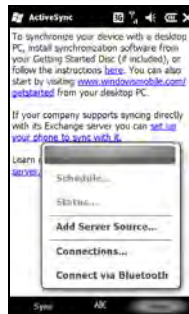

2. Input your e-mail address, and then, tap "Next".
3. Input your user name, password, and domain, and then, tap "Next".
4. Tap "Skip" to skip automatic configuration or wait for its procession.
5. Input your server address, and then, tap "Next".
6. Select the desired items to synchronize, and then, tap "Finish".

Now you have established a cooperative relationship for the device and the Exchange Server. When you tap Start > ActiveSync > Sync, you may synchronize with Microsoft Exchange Server via Wi-Fi or GPRS.

 **Note:** To use push e-mail, you need to make sure Wi-Fi or GPRS is active and make sure your server is Microsoft Exchange Server. To find out more information about Microsoft Exchange Server, please visit Microsoft's website, <http://www.microsoft.com>.

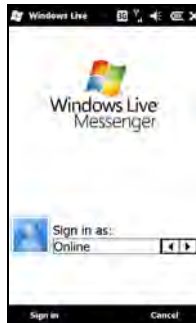

## 7.6 Messenger

Messenger helps you use Windows Live Messenger when you use your device. To use Messenger, you need to turn on Wi-Fi or GPRS.

Windows Live Messenger:

1. Tap Start > Messenger.
2. Select your status, and then, tap "Sign in".
3. Input your account of MSN and password. Then, follow the instructions to finish the settings.



## 8. Multimedia

 
### 8.1 Camera

You may use camera in this device to capture important moments.

Tap Start > Multimedia > Camera or press Camera Key to launch camera.



Camera Settings (click the bottom of the screen)

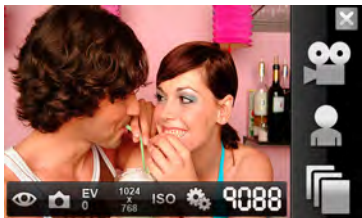

#### The Descriptions of Settings Icons on the Bar



: Video Mode



: Switch to the front camera lens



: Pictures & Videos

After photo shooting :



: Return to Camera Mode



: SMS/MMS and E-mail



: Delete



















#### The Descriptions of Menu Settings on the Bar





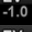





##### White Balance

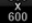Auto		
Incandescent		
Fluorescent		
Daylight		
Cloudy		
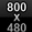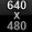
##### Color Effects

Normal		
Black/White		
Negative		

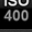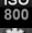Sepia		
Reddish		
Bluish		
Greenish		
<b>EV</b>		
EV +2.0		
EV +1.5		
EV +1.0		
EV +0.5		
EV 0		
EV -0.5		
EV -1.0		
EV -1.5		
EV -2.0		
<b>Photo Size</b>		
2048 x 1536		
1600 x 1200		
1280 x 960		
1024 x 768		
800 x 600		

800 x 480		
640 x 480		
320 x 240		
<b>ISO</b>		
ISO : Auto		
ISO : 100		
ISO : 200		
ISO : 400		
ISO : 800		
<b>Settings</b>		
<b>The left Photo Number</b>		

**Menu Settings:**

- White Balance:** Auto, Incandescent, Fluorescent, Daylight, Cloudy.
- Color Effects:** Normal, Black/White, Negative, Sepia, Reddish, Bluish, Greenish
- Photo Size:** 2048 x 1536, 1600 x 1200, 1280 x 960, 1024 x 768, 800 x 600, 800 x 480, 640 x 480, 320 x 240
- EV:** +2.0, +1.5, +1.0, +0.5, 0, -0.5, -1.0, -1.5, -2.0
- ISO:** Auto, 100, 200, 400, 800.
- Shutter Sound:** On, Off
- Confirmation:** 3 sec, 10 sec, No Time Limit, Off.
- Storage:** Phone, Memory Card. (The storage location will change to Micro SD card automatically, if the Micro SD card is plugged in before launching camera).
- Flicker Frequency:** 60Hz, 50Hz. (Adjust Flicker

Frequency to maintain the quality of photos)

#### 10. Menu Display Settings: 5 sec, 10 sec, Always

#### The Descriptions of Front Camera Lens Settings:

1. **Photo Size:** 640 x 480 · 320 x 240 · 160 x 120

2. **Shutter Sound:** On  Off 

3. **Confirmation:** 3 sec  10 sec  No

Time Limit  Off 

4. **Storage:** Phone  Memory Card 

5. **Switch to Rear Camera Lens:** 

## 8.2 Video Mode

Tap Start > Multimedia > Camera, and then, tap



#### Recording:

Target the object you want to record, and then, press Camera Key to record. Press Camera Key again or



tap  to finish the recording.

#### The Descriptions of Settings Icons on the Bar:



: Camera Mode



: Switch to the front camera lens



: Pictures & Videos

After recording:



: Return to Video Mode




























: SMS/MMS and E-mail





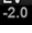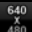

: Delete

#### The Descriptions of Menu Settings on the Bar:

White Balance	
Auto	
Incandescent	
Fluorescent	
Daylight	
Cloudy	
Color Effects	
Normal	
Black/White	
Negative	
Sepia	







Reddish		
Bluish		
Greenish		
<b>EV</b>		
EV +2.0		
EV +1.5		
EV +1.0		
EV +0.5		
EV 0		
EV -0.5		
EV -1.0		
EV -1.5		
EV -2.0		
<b>Video Size</b> (If the format of the video is MPEG4, the size has the four types below. If the format of the video is 3GP, the size only has 352 x 288 and 176 x 144.		
640 x 480		
352 x 288		
320 x 240		
176 x 144		

<b>Video Format</b>	
MPEG4	
3GP	
Settings	
Roll Film	

**Menu Settings:**

- White Balance:** Auto, Incandescent, Fluorescent, Daylight, Cloudy.
- Color Effects:** Normal, Black/White, Negative, Sepia, Reddish, Bluish, Greenish
- MMS Video:** On, Off.
- Video Size:** 640 x 480, 352 x 288, 320 x 240, 176 x 144
- Video Format:** MPEG4, 3GP
- EV:** +2.0, +1.5, +1.0, +0.5, 0, -0.5, -1.0, -1.5, -2.0
- Shutter Sound:** On, Off
- Confirmation:** 3 sec, 10 sec, No Time Limit, Off.
- Storage:** Phone, Memory Card. (The storage location will switch to Micro SD card automatically, if the Micro SD card is plugged in before launching camera).
- Flicker Frequency:** 60Hz, 50Hz. (Adjust Flicker Frequency to maintain the quality of films)
- Menu Display Settings:** 5 sec, 10 sec, Always

**The Descriptions of Front Camera Lens Settings:**

- Video Format:** MPEG4, 3GP
- Video Size:** 640 x 480, 352 x 288, 320 x 240, 176 x 144
- MMS Video:** On , Off 
- Shutter Sound:** On , Off 
- Confirmation:** 3 sec , 10 sec , No

Time Limit

Off





6. Storage: Phone Memory Card


7. Switch to Rear Camera Lens:

### 8.3 Recorder

Use Recorder to record the memo of your voice.



1. Tap Start > Multimedia > Recorder.
2. Tap  to start to record sounds.
3. Tap  to stop recording sounds after you activate the recording function.
4. Before you record, you may adjust the recording duration in "Duration" .
5. Tap Menu > Save To to select the location of storage.
6. Tap  to view all records. Tap the recorded file to play it.

7. Tap  to close the recording screen but Recorder is still recording. Tap "Exit" to stop recording, and exit.

**Note:** When you answer an incoming call during the recording process, the recording process will be stopped. If you still want to record, you need to finish your phone call. The recording duration depends on the memory of your phone.

 
### 8.4 Pictures & Videos

You may use "Pictures & Videos" to manage your photos and videos. Tap Start > Multimedia > Pictures & Videos > Menu > Tools > Options > General tab, you may resize pictures.

In "Pictures & Videos", you can

1. Tap "My Pictures" to open different folders.
2. Tap "Date" to select the arrangements of the photos.
3. View the selected picture.
4. Tap "Menu" for more options.

## 8 Multimedia

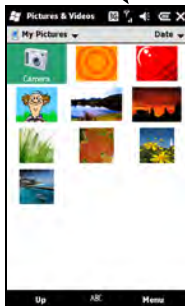











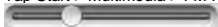

### 8.5 JAVA

This device supports JAVA, and therefore, you can use applications of JAVA.
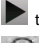
### 8.6 FM Radio

Insert the stereo headset to listen to radio. (You can only activate FM Radio, when you insert your stereo headset.)



 
1. Tap Start > Multimedia > FM Radio.
2.  indicates a frequency channel.
3. Use Volume Control  to adjust the volume of FM Radio.
4. Tap  to decrease the frequency by 0.05MHz.
5. Tap  to search for the last channel.
6. Tap  to search for the next channel.
7. Tap  to increase the frequency by 0.05MHz.
8. Tap  or  to switch Voice Source.  
: Your stereo headset. : The speaker.
9. Tap  to select an alternative frequency.
10. Tap  to get the details of Radio Data

System.






Hold down on a channel to activate the pop-up menu. In that menu, you can select "Edit," "Insert," "Delete," "Delete All," "Program Guide." Tap "Insert" to create a new channel. Tap "Program Guide" to launch the website of that channel.

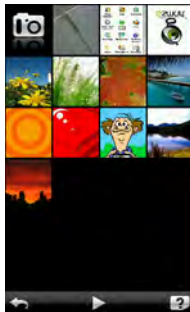
## 8.7 Photo Viewer

You can view photos in Photo Viewer.  
Tap Start > Multimedia > Photo Viewer.



You can :


1. Tap  to leave Photo Viewer. Tap  to play photos. Tap  to check the version of Photo Viewer. Tap  to activate the camera.
2. Tap a photo to enlarge it. Tap  to leave the

selected photo. Tap  to play the photo. Tap  to send the photo. Tap  to check the information of the photo. Tap  to delete the photo. Tap a photo, and then, tap  or  to enlarge or shrink it.

## 8.8 Streaming Player

 You can use Streaming Player to watch TV, or watch the streaming video on the Internet, or access to the operator WAP portal. This function supports all streaming files. The streaming contents are provided by your operator.

Tap Start > Multimedia > Streaming Player to use Streaming Player.

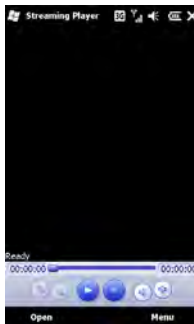

## 9. Applications

### 9.1 Calendar

#### Appointments and Meetings:

You may use "Calendar" to arrange appointments, meetings, and other events. Tap Start > Calendar to activate Calendar.

You may select the preferred display by tapping "Day, Week, Month, Year, and Agenda."

1. Select the desired date.
2. Select an appointment on the list to view or edit the details of the appointment.
3. Tap "Menu" for more information.

Tap Start > Calendar > Menu > Tools > Options to adjust the display of Calendar and the settings of reminders.

#### Create an Appointment:

1. Tap Start > Calendar. Select the date and the time of appointment.
2. Tap Menu > New Appointment > Appointment tab.
3. Select the field of "Subject" to edit the field.
4. Select the field of "Location" to edit the field.
5. Select the field of "Starts" to adjust Start Time.
6. Select the field of "Ends" to adjust End Time.
7. You can add your personal notes in Notes tab.
8. Tap OK to save the appointment, and return to Calendar.

If you select "Remind me" in the field of "Reminder", then the device will remind you by an alert sound according to the settings in Start > Settings > Sounds & Notifications.

#### View and Update Calendar:

Select an appointment to view the summary of the

appointment. If you want to change the details of an appointment, tap Menu > Edit.

#### Send Meeting Notice:

You may use "Calendar" to create a meeting notice by combining with the information on Outlook or Pocket Outlook. When you synchronize messages or connect this device with e-mail server, meeting reminders will be generated automatically. Tap Start > Calendar > Menu > Tools > Options > Appointments tab, and select the desired meeting sending method in "Send meeting requests via".

### 9.2 Contacts

"Contacts" on Today screen. It is your storage of friends' information. It stores phone numbers, e-mail addresses, home addresses, and other information that relates to contacts. You can also add a picture or assign a ring tone to a contact.

#### Phone Book:

"Contacts" helps you manage your phone book.

1. Tap the field of "Enter a name..." to input part of name or phone number to search for that contact in the list of contacts.
2. Tap the field of "Enter a name..." and input a letter search for that contact that starts with that letter.
3. Tap a contact's name or a phone number to view or edit the details.
4. Hold down on a contact to activate the pop-up menu.
5. Tap "New" to add new contacts.
6. Tap "Menu" for more options.

#### Add Contacts:

1. Tap "New" in Contacts. Then select Contact Type.
2. Move the scroll bar on the right side of the screen



to adjust the display of the screen.

3. Select the field of "Ring tone" to choose a special ring tone for that contact.
4. If you want to add notes, select Note tab to input the desired contents.
5. Tap OK to save and return to Contacts.

### Search for Contacts:

Searching methods are below.

- Input the contact's name or phone number in the field of "Enter a name", and then, the list of contacts will show the information of this contact.
- Tap Menu > Filter and select the way to display contacts, by which your list of Contacts will only display contacts in this category.
- If you want to view the contacts by the companies, tap Menu > View By > Company, and then, the list of Contacts will display in the order of the companies.
- To search for a contact, Tap Start > Search Phone. Enter the name of the contact in the field of "Search for" and select "Contacts" in the field of "Type". Tap "Search" to start searching.

### View and Update New Contacts:

Select a contact in the list of Contacts to view the summaries of the contacts. To edit a contact's details, tap Menu > Edit.

## 9.3 Tasks

You may use "Tasks" in Start to help you track unfinished tasks.

1. To add a new task, tap the field of "Tap here to add a new task".
2. "!" represents the first priority.
3. You can check the information of tasks in the list of Tasks.
4. Hold down on a task to activate the pop-up menu.
5. Tap Menu > New Task to add tasks.

6. You may change the arrangement of the list of Tasks. Tap Menu > Sort By.
7. You may display a specific category of the task in the list of Tasks. Tap Menu > Filter.

### Add a New Task:

1. Tap Menu > New Task in Tasks.
2. Select a field to input data.
3. Select the field of "Starts" and "Due" to adjust the first and last day of task.
4. You may select "Occurs" to select the periodicity of the task.
5. You may select "Reminder" to adjust the time to remind you or select "None" (unnecessary to alert).
6. Tap "Categories" to categorize a task.
7. To add notes, tap Notes tab, and then, input the contents.
8. Tap OK to save the task, and return to "Tasks".

### Check and Update Tasks:

You may select a task from the list of Tasks to view the summary of the task. Tap the selected task, and then, select "Edit" to edit this task.

## 9.4 Microsoft Office Mobile

### Word Mobile

You may use Word Mobile to edit files. Through the synchronization, you may keep the updated contents in both of this device and your computer.

You may use your Word Mobile to generate documents like letters, meeting minutes, and reports. If you want to generate a new file, tap Start > Office Mobile > Word Mobile > New. Your Word Mobile can only open one document at one time.

After you open a Word file, you can

1. Add / Delete folders in "All Folders".
2. Tap "Name" (Date, Size, or Type) to change the

arrangement of the list.

3. Tap a file, and then, open it.
4. Hold down on a file to activate the open pop-up menu.
5. Tap "New" to create a new document.
6. Tap Input Method to activate the input methods.
7. Tap "Menu" for more options.

**Note:** When you are synchronizing or copying files from the device to PC, Word Mobile files will be transformed into Word files. While most of the texts and paragraphs will be kept during this transformation, some of the format and properties may be lost.

### Excel Mobile

You may use Excel Mobile to edit files. Through the synchronization, you can keep the updated content in both of this device and your computer. You may use Excel Mobile to create documents like Statement of Income and Expenditure.

If you want to create a new Excel file, tap Start > Office Mobile > Excel Mobile > New. Your Excel Mobile can only open one document at one time.

The saved Excel Mobile file will be saved in the list of "Excel Mobile". To delete, copy, or send a file, hold down on the desired file to activate the pop-up menu. Your Excel Mobile provides basic worksheet tools, for example, formula, function, sorting, and filtering.

**Note:** When you are synchronizing or copying files from the device to PC, Excel Mobile files will be transformed into Excel files. While most of the settings will be kept during this transformation, some of the format and properties may be lost.

### PowerPoint Mobile

You may use PowerPoint Mobile to edit files. Through the synchronization, you may keep the updated content in both of this device and your computer.

You may use PowerPoint Mobile to browse or play PowerPoint file. If you want to open a PowerPoint file, tap Start > Office Mobile > PowerPoint Mobile.

 
1. Add / Delete folders in "All Folders".
2. Tap "Name" ("Date", "Size", or "Type") to change the arrangement of the list.
3. Tap a file, and then, open it.
4. Hold down on a file to activate the pop-up menu.
5. Tap "Open" to open a file.
6. Tap "Menu" for more options.







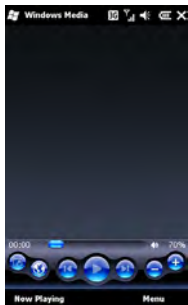

### OneNote Mobile

OneNote Mobile allows you to edit notes. Tap Start > Office Mobile > OneNote Mobile > New to create a new note. After editing, you may select "Done" to end editing.

## 9.5 Windows Media Player

Your Windows Media Player allows you to play audio and video. Tap Start > Windows Media to activate Windows Media Player.



1. Tap  to view in full screen.
2. Tap  to display the wanted website, from which find the wanted music and image to play.
3. Tap  to return to the previous file.
4. Tap  or  to play or pause.
5. Tap  to skip to the next file.
6. Tap  or  to adjust the volume.

Tap Menu > Library, and then select the location of storage to open files.

1. Tap Menu > Open File to open files. Tap Menu > Update Library to update files in your phone and files in Micro SD card to the libraries in phone and in Micro SD card.
2. In order to play music or video, select a file you want in Library, and then, tap "Play."

You may use the synchronization to copy the files from your computer to this device. Windows Media

Player in this device can play Windows Media and MP3 files.

## 9.6 Internet Explorer











You may use the following methods to browse websites. Tap Start > Internet Explorer to activate Internet Explorer.


### You may:

Synchronize your favorite URL links from your PC to the device. These URL links are saved in "My Favorite" in Internet Explorer in your computer.

Connect to an Internet Server Provider (ISP) or network, and browse websites. You can download files and programs from the Internet or business Intranet.

### Browsing Internet:

1. Connect this device with the Internet via GPRS or Wi-Fi.
2. Tap Start > Internet Explorer
3. Tap  to get more settings.
4. Tap  to return to the previous page. Tap  to launch Favorites. Tap  to activate Input Method. Tap  to enlarge or shrink the contents of the webpage. Tap  to launch Menu.
5. In Favorites, tap  to return to the previous page, tap  to add your favorite webpage, tap  to add a new folder, tap  to edit

the webpage and folders, tap  to delete webpage and folders.

6. Input a website in the URL field. Tap the icon beside the URL field to browse the website. Hold down on any area of the webpage to activate the pop-up menu.

## 9.7 Calculator

Calculator helps you run simple operations in this device. Tap Start > Tools > Calculator to use your calculator.

## 9.8 Advanced Calculator

Advanced Calculator helps you run advanced operations in this device. Tap Start > Tools > Advanced Calculator.

## 9.9 Games








You can select games you like in this device for entertainments.

1. Tap Start > Games
2. Then select a game.

## 9.10 Stopwatch

You can use the stopwatch to count time. Tap Start > Tools > Stopwatch.



Tap  to count time. Tap  to pause the time-counting function. Tap  to add records. Tap  to stop the time-counting function. Tap  to save records. To adjust the countdown clock, slide Time icon, and then, tap . Tap  to start the countdown.

## 9.11 NF Browser

Use NF Browser to browse online. Tap Start > NF Browser.

Tap Menu > Input URL to input a website, and then, browse it.

When you launch a webpage, you can tap Menu > Add Bookmark to add it in Bookmark. You can find it in Menu > Bookmark.

Tap Menu > Search, and then, input keywords to search for websites online.

Tap Menu > View Setting to adjust the viewing modes.

## 10. Programs

### 10.1 Zip

You can save the space of storage and increase the efficiency of the device by compressing some of your files with Zip.

#### Zippping Files:

1. To zip a file, tap Start > File Explorer.
2. Hold down on a file you would like to zip to activate the pop-up menu.
3. Select "Add to Zip file" on the pop-up menu.

Then, you may:

 
- Select a compressing method according to your need.
- Encrypt a file. When you unzip the file, the system will ask you to input the password.
- Tap "Start" to compress the file.

#### Unzipping Files:

1. To unzip a file, tap Start > Tools > Zip.
2. You may select a different folder for more Zip files. In the list of files, tap the file you would like to unzip.
3. Tap "Yes", and then, input the password (if required) to decompress the file.

### 10.2 Quick GPS

In order to speed up the locating time of GPS, Quick GPS enables you to download the latest data of satellite. Tap Start > GPS Utility > Quick GPS.

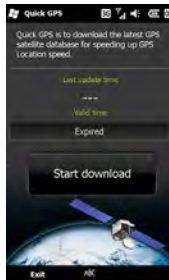

Tap "Start download" to download the latest data of satellite.

**Note:** When the system finds unusual situations, the pop-up window will remind you of the situations. Tap "Confirm", and then, return to the page of download.

### 10.3 GPS Tracking

GPS Tracking helps you record your traveling routes. You can use any mapping software which supports .kmz file, such as Google Earth, to display the routes.

**Note:** Before you activate GPS Tracking, you are suggested to activate Quick GPS first. You can download the latest data of satellite, and then, speed up the locating time of GPS.

1. Tap Start > GPS Utility > GPS Tracking. Tap "Hide" to return to Today, and GPS Tracking is still connected. Tap "Close" to return to Today, and GPS Tracking is not connected.



2. After you activate GPS Tracking, the device will activate GPS, and search for the coordinates automatically. Tap "Information" to show the current connecting information.



3. When GPS is connected, tap to activate the route-recording function. During the recording process, tap to pause the route-recording function. Tap to clean up the unsaved records. indicates Walking Mode. indicates Bicycle Mode. indicates Driving Mode.

**Note:**




: GPS Tracking is trying to connect.

: GPS Tracking is connected.

4. When GPS is connected; tap to create your own landmark. Tap to save it. Tap to delete it.




# 10 Programs



5. Tap  to take a photo as your landmark. Tap  to save it. Tap  to delete it.





**Note:** The shot photo with a coordinate of GPS will be saved as Photo\_0001(GPS). The file is saved in Start > File Explorer > My Documents > GPS Tracking.

6. Tap  to stop the route-recording function.  
Tap  to save the records. Tap  to delete the records.

## 10.4 Location Message

Location Message helps you send your current location through SMS automatically.



1. Tap Start > GPS Utility > Location Message.
2. In the fields of "From" and "To", input information of a point of departure and destination or tap  to insert the saved locations directly.
3. In the fields of "Send To", input phone numbers or tap  to add a contact from your phonebook directly.



4. In the field of "Note", you can add extra words you would like to show in SMS.
5. Tap "GPS Start" to execute Location Message. If you want to execute "Auto Send", adjust the frequency, first. Then tap "GPS Start".
6. Tap "Stop" in the pop-up warning window to stop "Auto Send".

**Note:** When the device has a bad signal reception of GPS or GSM, a warning window will pop up.

**Note:**



: Trying to detect the GPS signal of Location Message.



: The GPS signal of Location Message is detected.

## 10.5 SIM Manager

Help you manage your SIM card.

To copy SIM Contacts to your device:

 
1. Tap Start > Phone Manager > SIM Manager.
2. Select a contact, or select all SIM contacts by tapping Menu > Select All.
3. Tap Menu > Save to Device Contacts.

To copy Device Contacts to the SIM card:

1. Tap Start > Phone Manager > SIM Manager.
2. Tap Menu > Add to SIM.
3. Select the contacts, and then, tap "Save" to save it.
4. Tap "Return" to return to SIM Manager.

## 10.6 Spb Backup

Tap Start > Tools > Spb Backup.

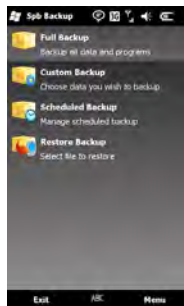

### Full Backup

1. On the initial screen, select Full Backup.
2. On the next screen, you should provide the name of the file and the location of the storage. If you select "Custom" in Location, you will be able to select any folder in your device. Tap "Next" to continue.
3. On the final screen, make sure the specified preferences are correct, and tap "Next" to start the process or tap "Back" to customize your preferences again.

### Custom Backup

1. On the initial screen, select Custom Backup.
2. On the next screen, you are asked to select the items you would like to save in the backup. Tap "Next" to continue.
3. On the next screen, you should provide the name of the file and the location of the storage. If you select "Custom" in Location, you will be able to select any folder in your device. Tap "Next" to continue.

4. On the next screen, if you want to encrypt your data, provide the password, and confirm it. If you choose to compress your data, Spb Backup will use Zip to do that. Tap "Next" to continue.
5. On the final screen, make sure the specified preferences are correct, and tap "Next" to start the process or tap "Back" to customize your preferences again.

## Scheduled Backup

1. On the initial screen, select Scheduled Backup.
2. On the next screen, you can customize the scheduled backup. Enable scheduled backup: If you select this checkbox, you will allow the program to create backup copies automatically in accordance with options you customize here. Tap "Next" to continue.
3. On the next screen, specify the location of the scheduled backup. Tap "Next" to continue.
4. On the next screen, you are asked to select the items you would like to save in the backup. Tap "Next" to continue.
5. On the next screen, if you want to encrypt your data, provide the password, and confirm it. If you choose to compress your data, Spb Backup will use Zip to do that. Tap "Next" to continue.
6. On the final screen, make sure all the specified preferences are correct, and tap "Finish" to save the settings, and quit the program, or tap "Back" to customize your preferences again.

## Restore Backup

You can select a file to restore.

**Note:** Before you upgrade the system of your device, you can tap "Full Backup" to backup the files you want to save. After you upgrade the system of your device, you can tap "Restore Backup" to restore the saved files to your device. However, when you do that, the system of your device will go back to the original version before you upgrade. If you want to keep the upgraded version, you can un-mark "System Data" in "Custom Backup".

## 10.7 Search Phone

Tap Start > Search Phone.

You can get the files or data by the keyword-searching function. Input the keyword in the field of "Search for" and choose the type of data in the field of "Type". Then tap "Search".

## 10.8 Remote Desktop Mobile

Tap Start > Remote Desktop Mobile.

You can connect your device to your computer, and then, you can use your device to control your computer via Active Sync. Input your IP address in the field of "Computer", user name in the field of "User name", password in the field of "Password", domain in the field of "Domain", and then, tap "Connect."

## 10.9 Voice Commander



Record voice commands for activating Contacts and Applications. Tap Start > Voice Commander.

## 10.10 MSN Weather

Help you check the information of weather. Tap Start > MSN Weather.

### Add new cities

Tap Menu > Settings. Tap  or Add city, and then, enter the name of the city in the field of search.


Tap  or Search to search for the city. Then, tap  to add the city to the main list of weather. Tap Done to return to the main list of weather. Tap Refresh to refresh the information of weather.

## 10.11 MSN Money

Help you check the information of stocks. Tap Start > MSN Money.

### Add new stocks

Tap Menu > Settings. Tap  or Add stock, and then, enter the name of the stock in the field of search. Tap  or Search to search for the stock.

Then, tap  to add the stocks to the main list of stocks. Tap Back to return to the previous page. Tap Refresh to refresh the information of stocks.

**Note:** Prefix each quote symbol with the country in which it's traded. For example: US:MSFT or GB:MKS. Valid country codes are AU, BE, CA, DE, ES, FR, GB, IT, JP, NL, SE, US.

## 11. Specifications

Items	Specifications
<b>System Information</b>	
Operating System	Microsoft Windows Mobile 6.5 Professional
Processor	Qualcomm 7200A at 528 MHz
Memory	ROM 512 MB, RAM 288 MB
<b>Size</b>	
Dimensions (L x W x T)	106 x 52 x 11.4 mm
Weight	102.5 g (including Battery)
<b>Battery</b>	
Battery Capacity	Li-Poly pack 1010 mAh
Standby time	Up to 150 hours (It may vary depending on the availability of local networks and individual usage.)
Talk time	Up to 4 hours (It may vary depending on the availability of local networks and individual usage.)
<b>Display Characteristics</b>	
Type	3.1", 65, 536 WVGA TFT LCD touch panel
Resolution	480 x 800 pixels
<b>Band</b>	
Band	*HSUPA/HSDPA 900/2100
	*GSM/GPRS/EDGE 850/900/1800/1900
<b>Connectivity</b>	
Bluetooth	Bluetooth 2.0
Wi-Fi	IEEE 802.11b/g
WAP	WAP 2.0
CSD	Y
Modem dial-up	Y
USB	Mini USB 2.0
<b>Image</b>	

<b>Format</b>	JPEG, GIF, PNG, BMP
<b>Max Size (per)</b>	Depends on available RAM
<b>Audio</b>	
<b>Format</b>	MP3, WAV, WMA, AMR, AAC, MIDI
<b>Max Size</b>	Depends on available RAM
<b>Video</b>	
<b>Format</b>	3GP, MPEG4
<b>Max Size</b>	Depends on available RAM
<b>Phonebook</b>	
<b>Size</b>	Depends on available RAM
<b>Ringtone</b>	
<b>Type</b>	MP3, WMA, AMR
<b>Polyphone</b>	128 polyphonic MIDI file
<b>Digital Camera</b>	
<b>Type</b>	JPEG/3GP, MPEG4
<b>Rear Camera</b>	3.0 mega pixels
<b>Front Camera</b>	0.3 mega pixels
<b>Auto Focus</b>	Y
<b>(Rear Camera)</b>	Y
<b>Macro Mode</b>	Y
<b>Video Recording</b>	Y
<b>Message</b>	
<b>Windows Live Messenger</b>	Y
<b>SMS</b>	Y
<b>MMS</b>	Y
<b>E-mail</b>	Y
<b>External Memory</b>	
<b>Type</b>	Micro SD Card
<b>Max Size</b>	Maximum to 8 GB
<b>Operating Temperature</b>	
<b>Temperature</b>	-10°C ~45°C

**Note:** Specifications may vary in some regions.


## 12. FAQ

### **Why can't I turn on the device?**

Please make sure that the device has sufficient power, and that the battery is secured in the device.

Plug the device to an outlet by the AC charger. Check whether the LED light on the device has turned on, and then, press Power Key on the device to turn on the device.

### **Why can't my device make any sound alerts?**

Tap the speaker icon  on the upper-right corner of the screen, and then, adjust the volume.

### **When I open a file or activate a program, an "Insufficient Memory" message pops up. How should I do?**

The memory of the device is shared by both of the storage and programs. You can follow the steps below to release memory.

1. Remove the rarely used programs.
2. Remove the rarely used files.

### **Why doesn't the screen respond to my touch accurately?**

Tap Start > Settings > System > Screen > General tab. Select "Align Screen" to align the screen.

### **My device cannot form a successful connection with ActiveSync. How should I do?**

Please make sure you have installed ActiveSync 4.5 or later version in your computer. You can find ActiveSync in the CD, or you can download the latest version from Microsoft's website.

Please make sure you have connected the device to the computer with a USB cable.

Make sure that you are not running another program that is using the same serial port.

If the connection still fails, remove ActiveSync in your computer, and reinstall it.

### **How do I take out the Micro SD card from the SD adapter?**

The card slot on this device is designed for the Micro SD card. To remove the Micro SD card from the SD card adapter, please press the card, and then, take out it.

### **Can I synchronize information with PC and Microsoft Exchange Server at the same time?**


No. You can only synchronize information either with PC or with Exchange Server at one time.

### **How do I connect a Bluetooth headset to my device?**

1. Tap Start > Settings > Bluetooth > Devices tab, and then, tap "Add new device".
2. Tap the name of the Bluetooth headset, and then, tap "Next". The device will pair the device with the Bluetooth headset automatically.
3. Windows Mobile will try one of the preconfigured password (0000, 1234...) to pair the Bluetooth headset with the device automatically.

### **How do I make a video call?**

Do one of the following steps:

- On the Phone keypad, input the phone number, and then, tap .
- In "Contacts", hold down on a contact, and then, tap "Video call" on the pop-up menu.
- In Call History, hold down on a phone number, and then, tap "Video call" on the pop-up menu.

**Note:** When you are connected to the 3G network and the person you are calling has the phone which supports 3G, you can make a video call.

#### **How do I create a sound alert for incoming text messages in my device?**

1. Tap Start > Settings > Sounds & Notifications.
2. In Notifications tab, select "Messaging: New text message" in the Event menu.
3. Check "Play sound", and then, choose a sound.

#### **How do I process Restore to Default by using hard keys?**

Press Power Key, and then, your device will be turned on. When the boot screen with GSmart appears, press Side Key (Volume Up) and Call Key immediately. When you press Side Key (Volume Up) and Call Key to process Restore to Default, LED Indicator will turn different colors.

**Note:** When the power of the battery is low, you may not process Restore to Default.

#### **How can I get a hard copy of the user manual?**

You may download the user manual in the Product page of GSmart's official website ([www.gigabytecm.com](http://www.gigabytecm.com)).

If this document is modified, please download the latest version on GSmart's official website.

GIGA-BYTE COMMUNICATIONS INC.  
B2, No. 207, Sec. 3, Beixin Road,  
Xindian, Taipei, 231, Taiwan  
+886-2-89132220  
[www.gigabytecm.com](http://www.gigabytecm.com)