

---

Thank you for purchasing this mobile. For the best performance, we recommend that you read the manual carefully.

1. MOBILE PHONE EXTERIOR.....	3
2. PREPARATORY WORK BEFORE USE.....	3
3. THE BRIEF INTRODUCTION OF THE MOBILE....	5
4. BASIC OPERATION OF THE MOBILE.....	5
5. MEUN .....	7
PHONEBOOK .....	8
CALL CENTER .....	8
MULTIMEDIA .....	10
USER PROFILES.....	11
MESSAGING .....	11
FILE MANAGER.....	13
FUN&GAMES .....	13
ORGANIZER.....	13

---

SETTINGS .....	13
----------------	----

**tatement:** Our company reserves the right, in customer's interest, to improve and alter its products without prior notice, and reserves the final right to the technical specification of its products. We are devoted to the production improvement and put forward the updating version time after time. The content of this manual may be slightly different in the actual function, size or design from your mobile. Please refer to your purchased mobile, and accept our apology for updating without prior notice.

---

## 1. Mobile phone exterior

The multimedia mobile phone, dual card dual flip phone to be. Phone with 23 front press-keys, color screen display, built-in vibration motor, and one charging/earphone jack respectively. **The icons in the user manual are used for descriptions of functions so they are for reference only and there is slight difference between the icons in the user manual and that in the actual conditions, so it is subjected to the actual cell phone. Some of the menus mentioned in the user manual, because that the conditions cannot be met, may be hidden automatically in the cell phone.**

## 2. Preparatory work before use

### What is SIM?

This phone can support two SIM cards and two stand-by, there are two slots to place the two SIM cards (SIM1 & SIM2). When you register your mobile number, you will get the SIM cards (Subscriber Identity Module). And you put the SIM cards into the slots then you'll get the functions, including communication data, mobile number, PIN code (for identity verification), phonebook, message, as well as other additional system service. **Note: please take care usage of the SIM card, friction or bend may damage it. If it is lost, please contact the network operator. The SIM card is pretty small, do not allow children to touch it to avoid swallowing it by mistake!**

### Insert your SIM cards

Switch off the mobile before inserting the SIM card. The SIM card is at the back of the mobile. Please follow the steps as below:

Turn to the back, press the cover button then slide the back cover along the phone body, unclip the battery from the slot and remove it. Refer to the picture below.

Place the SIM card with the chip facing downwards and slide it into its housing by aligning the SIM card's nick and the slot's one, push the SIM card as deep as possible. Refer to the picture below.

**Note: This mobile has two slots for Sim1 and Sim2, the phone reads the SIM1 under factory setting (you can exchange SIM1 and SIM2 by "settings/Dual SIM settings"), or enter menu/settings/Dual SIM settings" to exchange or choose the Dual SIM settings" without SIM card, it's no need to execute switch on/off.**

Insert and engage the battery into the fixing slot, press the battery downwards, and then slide the back cover upwards along the phone body until it is locked. Refer to the picture below.

### IN1 Code

The PIN1 Code is the Personal Identification Number for entering a SIM card. 'Input PIN' is requested each time the phone is switched on if this PIN1 code is activated.

You can get this code with the SIM card by your network operator. It usually has 4 digits. When you inputting the PIN1 code, '\*' will display on the main screen instead of the digits.

### IN2 Code

The PIN2 Code is the Personal Identification Number for certain network features (Cost information, etc.) requested during their use when this code is activated.

**Warning>: If you enter 3 incorrect PIN1 Codes, the SIM card will be locked. You have to contact your network vendor for decoding. Unauthorized decoding may cause the SIM card**

be invalid forever.

#### Charging your battery

- The battery of this mobile is the rechargeable lithium battery.

**Note:** New batteries are partially charged, we recommend you to charge the battery before using our phone. It will take 4 hours to fully charge. The battery has no memory effect, so discharge it before charging is not necessary, and charging a battery that is not empty does not affect the lifetime of the battery also. We suggest that you charge the battery when its power is low to avoid the drained status.

- It is normal for batteries with slightly heat during charging. Your mobile will activate automatic protection when the temperature is rising in order to control the temperature.

■ When battery power is low, the alarm rings and a low battery message displays. If battery power is completely drained, the mobile turns off automatically.

- Turn off your phone before removing the battery, otherwise the data stored in the mobile will be lost and the lifetime of the mobile will be affected.

Battery Type	Standby Time	Communication Time
Lithium Battery	200-400Minutes	240-400 Minutes

**Note:** The battery life depends on the operation modes, network, calling status.

#### Battery Charging Steps

- Plug the charger into the electrical outlet, and then plug the charger connector into the socket at the right side of the mobile. The side with the direction signal is upward, the charge direction is correct.

■ When your phone is on during the charging, 'charger connected!' displays if the charger is connected successfully. Then the battery power level indicator in the external display shows how much of the charging modify is complete dynamically.

- When the mobile is off during the charging, an animation displays the charging modify.

■ When the battery is fully charged, the charging modify will stop automatically with a full battery icon displayed. After charging is finished, please disconnect the charger as soon as possible.

#### Note:

When battery power is drained, we suggest you charge it in time.

If the battery has not been charged for 2 days, the mobile will change into slow charging mode without anything displays temporarily when you charge it again. The charging indicator may take about 15 minutes before appearing in the external display.

Do not alter the components and accessories of battery or open it by yourself to ensure the safe usage of the battery.

We suggest that you should use your telephone with the batteries compatible with your model to avoid any damage to your mobile.

Mains powered chargers will operate within the temperature range: 0°C to 40°C, do not charge our phone under higher or lower ambient temperature.

**Warning:** Only use your telephone with qualified batteries, chargers and accessories compatible with your model authorized by our company. Do not pull out the plug but not the

---

able when you cut off the power of any component. Please consult your vendor about the purchase of relative components.

### 3. The brief introduction of the mobile

#### the Communication Control Keys

he Call Key is used to make a call (when the numbers have been input or in the phone book) and pick up a call. In the stand-by status, press this key to accesses call memory (including answered, failed and missed call records.)

he End Key is used to end a call (in dialing or calling status) or exit current menu and return to the stand-by status. Press and hold this key for 2 seconds to switch on or switch off your telephone.

#### Number Keys

ress the Number Keys from 0 to 9, Symbol\* and # Keys to dial and input password, English words, symbols and Chinese characters (Using stroke or spelling Input mode), etc.

ress and hold the '\*' for more than 2 seconds to input the symbol '+', then you can make an international call.

ress and hold the '#' for more than 2 seconds to activate 'Silent Mode'; keep the key pressed for more than another 2 seconds to restore the previous mode.

#### Navigation Keys and Soft Keys

the stand-by screen, you can press the Up/Down/Left/Right Key to enter the different menus (You can also redefine the function of the navigation keys by 'Menu//Setting/Phone Setting/Dedicated key'). Press the OK Key to access the main menu. Press the Right Soft Key to enter the phone book. Send1 is the SIM card and phone records of a dial-up SIM1; SIM2 by Send2 enter the dial-up phone records and SIM2. The menu operation, left and right softkey functions of the two in the bottom of the screen and his party showed that they function and cell phones is closely related to the current status.

#### Phone Numbers Explanations

##### 【Domestic calls】

ial the region number followed by the number you are calling.

##### 【International Calls】

ress and hold the '0' key until '+' appears, then input the country code, region number and phone number.

##### 【Emergent calls】

ial 112 to make an emergency call for help. This works even without a SIM card.

#### IMEI】

international Mobile Equipment Identity. You can see a bar-code label with IMEI number at the back of the mobile if switching off the mobile and removing the battery. The number is also stored in the mobile, when inputting '\*#06#', it displays on the screen if the phone is in the stand-by status. The IMEI, unique globally without any duplication, must be printed on the every phone all over the world, no matter which brand the mobile belongs to.

### 4. Basic Operation of the mobile

#### Switching on your mobile phone

ress and hold on the End Key to switch on (or switch off) the mobile. If the password protection of the SIM card and telephone is not activated, the mobile will search for a network automatically. The name of the network will be displayed on the screen when the mobile is registered on the network,

---

when you can make or answer calls.

Your phone will keep on searching a network if an available network couldn't be found temporarily.

'Insert the SIM card' is displayed after switching on your phone, please press and hold the End Key to switch off and check your SIM card is inserted correctly or not.

If the password or PIN code of the mobile is requested when switching on, please input the correct password. \* will be displayed instead of the digits, and then confirm with the left soft key. The registered network name and signal intensity will be displayed after unlocking.

If you do not know your PIN code, please contact your network operator.

The default password is '1122.'

#### **Switching off your mobile phone**

Press and hold on the End Key to switch off the mobile. The telephone is power off after the power-off animation displayed. Do not switch off the mobile by removing the battery directly, which could result in the loss of the un-stored information in SIM cards.

#### **Installing a T-Flash card**

The mobile supports a T-flash card (maybe needs to be purchased additionally). The T-flash card is multimedia storage card used to extend the memory of your mobile. The card is small, so please be careful when you installing or removing it to avoid damaging it. The phone supports T-Flash cards, in the upper left side of the phone will be T-flash card is inserted into T-flash card slot.

Note: T-flash cards that compatible list as follows: Kingston 128MB, 256MB, 512MB, 1G card; And SanDisk 128MB, 512MB, 1G, 2G card; Lexar 1G card; Especially, please bring your handset when you purchase the T-FLASH card, and please make sure the T-flash card is compatible with your handset

#### **Making a call**

To make an international call, input '+' instead of '00', finish dialing the number and then send the call.

You can delete the last incorrect digit by pressing the right soft key and long pressing will delete all the digits you input. When the call is connected, call timer displays. If the sending call is not answered, the possible reasons are as follows:

- ☐ "Busy" indicates that the called number is busy or no free line can be used. If the automatic redial function is activated, the person you called will be called back automatically.
- ☐ "Rejected" indicates that the call is not allowed for reasons such as that Call Barring function is activated.

The caller's name is displayed if the incoming number has been stored.

Press the End Key or the right soft key to hang up the call.

#### **Receiving a call**

When you have an incoming call, your telephone will prompt with ring, vibration, vibration and ring, vibration then ring or a portrait/an incoming call video.

Press the Call Key to talk

Press the End key to reject

The caller's number is displayed if the Calling Line Identification Presentation is activated. The caller's name is displayed if the incoming number has been stored.

To hang up a call is basically the same as the method mentioned above.

#### **Speed Dial**

---

he mobile offers 8 shortcut keys (2-9) that can be customized to assign corresponding speed dial numbers. You can make a speed dial call by pressing and holding the number keys (2-9) in the stand-by status.

**ote:** You should press and hold the key (2-9) for more than 2 seconds for speed dial. If the shortcut key pressed is not defined in 'phone book/phone book setting/speed dial,' you cannot make the speed dial.

#### **se the earphone**

When insert the earphone, you can receiving and dialing the call. Please operate it as followed item.

Execute	The button of earphone
Receiving the call	Press the button one time
End the call	Press the button when end the calling

#### **Recent Call numbers**

In the standby mode, press the call button to display the recent telephone call records. Through the direction button to select the desired number, press the call button to allocate the number directly.

#### **During the call**

During a call, you can access the "option" menu to choose the different functions (as followed). Press the left software to use "hand-free" function;

- ◆ Hold single call: Keep the current call
- ◆ End single call: End the current call
- ◆ New call: Input the number to make another call.
- ◆ Phonebook: Please refer to the chapter about Phonebook for details.
- ◆ Messages: Please refer to the chapter about Message for details
- ◆ Mute: Hear voice from the other end, but he/she cannot hear yours.
- ◆ DTMF: Set whether an extension number could be called.

#### **Missed calls**

A prompt sound or an icon would display on the main screen if you have missed calls in Sim1 and Sim2. You can view the missed calls by pressing the left soft key.

#### **Cell Broadcast CB**

The main screen displays the warning words or a list. When customers receive the cell broadcast, the user should press the left soft key to access the "list" to read the cell broadcast.

5. MEUN

---

### Phonebook

You have 2 phonebooks in this mobile phone: SIM card and the mobile. The mobile can store 50 phone numbers and the SIM card's capacity depends on its type.

In the stand-by status, you can save the data you have entered by pressing left soft key. Go to the following edit mode after selecting the phonebook.

- ▶ If 'To the SIM 1/2' is selected, users can edit name and phone number.

- ▶ If 'To the phone' is selected, users can edit name, phone number, ring tones, and incoming call group, etc.

In the stand-by status, you can enter the phonebook directly by pressing the right soft key. The mail icon on the left of the phonebook list indicates that the record is stored in the SIM card or the mobile, while the one on the right is the name information and phone number of this record.

In the phonebook list, enter the 1<sup>st</sup> few letters of a contact's name, your phone searches the entire contacts list to display the name.

Press the left soft key to access the phonebook, the icon at the left indicate the record storage in the phone or SIM card. And the right icon is indicate the name and the number. Press the left soft key to access to the "options". You can use the following option by entering the phonebook from pressing the left soft key:

View: View the information of current record

Send text message: send SMS

Call: Make a call of current number.

IP dial: Choose SIM1 or SIM2 to make the IP dial to current record.

Edit: Edit the items of current number.

Delete: Delete the current record

Copy: Provide two ways of copying: from SIM1/SIM2 card to mobile, and from mobile to SIM1/SIM2.

Move: Move the number from phone to SIM1/SIM2, or from SIM1/SIM2 to the phone.

Caller groups: Set up various groups.

You can use the following option by entering the phonebook from the main menu

Phonebook Settings:

Preferred Storage]: Choose the storage position for the phonebook records.

Speed dial]:

- ◆ Status: Switch on or off the function of speed dial

- ◆ Set number: The most you can set up 8 speed numbers list (from 2 to 9)

Extra numbers]: choose the owner number

Memory status]: Check the storage status of the SIM card and phone.

Copy contacts]: Provide two ways of copying: from SIM1/SIM2 card to mobile, and from mobile to SIM1/SIM2 card.

Move contacts]: Provide two ways of moving: from SIM1/SIM2 card to mobile, and from mobile to SIM1/SIM2 card.

Delete all contacts]: Delete all the records in the SIM1/SIM2 card or the mobile.

### Call Center

You can view your recent call situation.

[Call history]



---

View the call log of the current SIM card, press the left softkey, display like follows:  
 [Sim1/Sim2 Missed Calls] Display the missed calls about the latest time and date, caller's number and calling times.  
 [Sim1/Sim2 dialed Calls] Display the dialed calls about the latest time and date, caller's number and calling times.  
 [Sim1/Sim2 Received Calls] Display the answered calls about the latest time and date, caller's number and calling times.  
 Press the left softkey to enter the options menu can be more than the number of call records in the following

- ▶ View: view the record.
- ▶ Call: Call the current number
- ▶ Send text message: send SMS
- ▶ Save to the phone book: the current record can be saved to a mobile phone or SIM card
- ▶ Edit before call: on the current record for editing
- ▶ Delete: choose to delete the current record or the menu all the record

[Delete Sim1/Sim2 call logs]: choose delete the missed call or the dialed call or the received call or all of the calls.

[SIM 1 / 2 call timers]: Last time zero from the start, the last talk time statistics have been allowed to take phone calls total, have to answer the phone total, all the time can also be zero.

[SIM card 1 / 2 call cost]:

- ▶ Last call cost: inquiries last calls
- ▶ Total cost: query all of the charges
- ▶ Reset cost: Clear calls recorded
- ▶ Max cost: the highest rates inquiry.
- ▶ Prices per unit: query and set the charges units.

**OTE: The call is a network billing functions, the need for network operators to support**  
 [Sim1/Sim2 text msg.counter]: Calculate all the sent and received messages since the counter is reset to zero.

#### **[call settings]**

##### **Setup the current SIM card.**

[Sim1/Sim2 call Settings]: Call transfer and call waiting and other functions can be set in the menu.

- ◆ Caller ID: Three kinds of option of system presetting, phone number hiding and phone number sending are selectable. Note: The function of phone number hiding\* needs network support. Otherwise, if the function is open it may lead to failure to dial out.
- ◆ Call Waiting: Select the functions of open, close or inquire call waiting.
- ◆ Call Divert: Choose to open, close or enquire the call forwarding function.
- ◆ Call barring: Select to restrict some talking function. Note: network support is required.
- ◆ Line Switching: select line 1 or line 2. Note: If the line 1 is selected it may lead to failure to dial out and the menu will decide the display because the different categories of the SIM card

---

used.

- ◆ Closed user group: The function belongs to a kind of network service (network support is required) and its group function is organize the users who have applied for the function to be a sole and close communication group, to realize the restriction to make a call for the people out of the group. Communication between members of the group is available, but in general it is subject to the advanced settings]

- ◆ Auto Redial: Choose whether automatic redial will be implemented when the called party is in the busy or have no response.

- ◆ IP Dial: Select to open or close IP dial and edit IP number

Choose to activate or inactivate the SIM1/SIM2 IP dial, and edit the IP numbers

- ◆ Call time display: Choose to activate or inactivate the call time display during the calling.

- ◆ Call time reminder: Choose display the call time or not when calling (a sound reminder )

#### Multimedia

**[Image Viewer]:** View or modify photos saved in the album.

- ◆ View: View the selected images:View: View the selected photos

- ◆ Browse Style: Set the align mode of photos from list files and matrix mode.

- ◆ Use as:Use as wallpaper,screen saver and so on

- ◆ Rename: Rename the current picture. Note: If the picture has set up to the wall paper/screen picture and so on, it will back to the default settings

- ◆ Delete: Delete the picture chosen

- ◆ Sort by: Sort photos according to various modes.

- ◆ Delete all files: Delete the all pictures

**[Audio player] :**

Play audio files and mp3, etc. in the process of playing the audio files and MP3 songs, click the play/pause direction key to adjust the volume, and the left/right direction key to choose the last and next song.

[Play]:play the music.

[Details]: View Details

[Add to ringtones]:add the music to the ringtones

[Refresh list]: Update the items of songs (updating shall be implemented after the name/names of song(s) are changed or some of the songs are deleted)

[Settings]: Set up relevant information of music player.

- ◆ List auto gen.: Choose whether to automatically update the list

- ◆ Repeat: Can be set to "OFF", single song repeat ,or all songs repeat .

- ◆ Shuffle: Songs will be played random when this option set to "ON",otherwise ,songs will be played by order they displayed in the list.

- ◆ Background play: As this option set to "ON",Songs will be played in background when idle screen is displayed,otherwise ,the music is stopped when display idle screen.

**[FM radio] :** This phone support the FM radio function

Press the left soft key to "options", display as following:

[Channel list]: Set up the channel list and frequency

[Manual input]: In put the frequency by manual

---

[Auto search]: choose the "yes" then auto searching the channels  
[Settings]: Activate or inactivate the background and the speaker

#### User profiles

our mobile provides several situation modes: General Mode, Silent Mode, Outdoor Mode, Indoor Mode, Meeting Mode, Headset Mode, Headset mode has its default setting. When you insert an earphone, the mobile will switch to earphone mode automatically. You can enter Option/Customize' to set options below to each mode.

[one settings]:

- ◆ Incoming call: Set ring for incoming calls of SIM.
- ◆ Power on: Set the tone when power on the cell
- ◆ Power off: Set the tone when power off the cell
- ◆ Message: Set up the alert style of new message of SIM
- ◆ Keypad : Set up the keypad tone

[olume]

- ◆ Ring tone: Set the ring volume
- ◆ Key tone: Set the volume for pressing the keys.

[Alert type]: There is ringing prompted calls for you to choose from

[Ring type]: choose single, repeat, ascending.

[Extra tone]:

- ◆ Warning: The cell phone will release the warning tone after it is selected.
- ◆ Error: The cell phone will release the error tone if it is selected.
- ◆ Camp on: The network can be searched successfully.
- ◆ Connect: The cell phone will release the cue tone if the cell phone has searched the network successfully.

[Answer mode]

- ◆ Any key: Select whether to answer the incoming call by pressing any key.

**Note: except for a specific function keys (such as on / off button, etc.).**

- ◆ Automatic: If the option is selected, the incoming call will be answered 2 seconds after the ringing under the condition that the earphone is plugged.

Note: the menu is only for earphone mode.

#### Messaging

The Messaging function is a network service. Sending and receiving Text can only be used if the service is proposed by your network operator.

You can send ordinary Text messages, enhanced Text messages. The SMS is sent to the Text Messages Center in the network firstly, and then to the target user. If the receiver's mobile is power off or cannot receive messages, the network will store the message temporarily and the store duration is determined by the user configuration and the service provider.

The message will be directly stored in the SIM card if the capacity is not full. A blinking icon at the head row of the main screen will be displayed if the capacity is full. Messages unread

A blinking icon will display on the main screen, indicating the residuary capacity for Multimedia

---

essages is low. A dialog window will popup if the residuary capacity is low when a Multimedia essage is coming or edited

**[Write message.]:** Edited the content  
ou have options of Sim1 and Sim2 to send.  
ou have options of Sim1 and Sim2, and also can Finish: The message have finished and you can  
end it to your receiver.

You have options of SIM1 and SIM2, when the message have finished you can send it to  
you receiver by SIM1 or SIM2.

- ◆ Send to: The message have finished and you can send it to certain number.
- ◆ Input method: Choose the input method.
- ◆ Advanced:choose insert number or name
- ◆ Save : Save the message to the outbox

**[Inbox]:** View received Text messages of SIM1 or SIM2.

- ◆ Reply: Reply the message directly.
- ◆ Call sender:give a call to the sender.
- ◆ Forward: Forward the message to others.
- ◆ Delete: Delete the current messages.
- ◆ Delete all: Delete the all SMS in current SIM card.
- ◆ Advanced:choose use number or USSD.

**Outbox]:** Read and modify the messages stored in the Outbox of SIM1 and SIM2.

**Broadcast Message]:** The broadcast is a network service sending information like weather  
roadcast, traffic status, etc to all the GSM users in the zone by the network vendor. You have options  
f SIM1 or SIM2.

**Receive Mode]:** Activate or deactivate the broadcast function.

**Read message]:** Read the received broadcast messages.

**Language]:** Select the display language of broadcast message.

**Channel Setting]:** Set the channel of broadcast message.

**Note: The voice mail function needs support from network**

**SMS Settings]:** Set the relative parameters for messages

- ◆ Profile Setting: Profile 1/2/3/4.

**Note: The menu display changes depend on the SIM card.**

- Folder Name.
- SMSC Address.
- Validity Period.
- Message type

- ◆ Common settings: Activate or inactivate the delivery report or reply path.
- ◆ Memory status: View the memory status of SIM card or the phone.
- ◆ Preferred storage: Choose the location (SIM card or phone) to storage the SMS

---

### File Manager

You can manage and assign several folders in this menu by transferring, copying and moving the files saved in these folders. **Note: Part of the folders in this menu is hidden by default. You just need to save a file with its format to the root folder of the mobile, and then the system will recognize it automatically. You can move the file to its corresponding folder.**

**[Memory]** : Need the T-flash card support.

- ◆ Open: open the file.
- ◆ Format: Format the file system note: You'll lose all information in the file system.
- ◆ Rename: Edit the name of the folder
- ◆ Details: View Details

### Fun&Games

#### [Games]

[Game]: Mobile provides interesting games, please refer to the operation method of the game's instructions.

[Games Settings]: turn on or off the game sound effects

### Organizer

**[Calendar]** : To access the calendar, press the left soft key. The first line shows the year, month, week, the second line shows the middle part shows the date of a month; and the last line of the display of two soft keys. In calendar mode, see the previous week by the navigation key and press the navigation key down next week, see the previous day by the navigation key and press the right navigation key left the next day. The selected date appears in dark colors. u u

► Jump to date: Jump to specified date quickly when you enter a date to search.

**[Alarm]**: You can set 5 alarm times with this mobile. For each of them, you can set the alarm status to be open or not, set the alarm time and alarm frequency ( once, daily or on several self-defined dates).

**[Calculator]**: The cell phone support continuous four mixed arithmetic operation and the operation is simple, practical and convenient.

### Settings

#### [Dual SIM settings]:

[Dual SIM open] : Choose to open the both SIM card

[Only SIM1 open] :Choose to open SIM1 only

[Only SIM2 open] :Choose to open SIM2 only

[Flight mode] : Choose the Flight Mode.

#### [Phone settings]:

[Time and Date]:

- Set home city: Choose the home city.
- Set time/date: Set the display date and time
- Set format: Choose the time and date format

[Scheduled power on/off]: Activate or deactivate scheduled power on and off function. The mobile

---

rovides 4 times for scheduled power on and off, you can set status and time for each scheduled me.

anguage]: Display Language for your mobile. The mobile provides Simple English languages, and on

ref. Input modes]: Define the pref Input method. there several input modes.

isplay Setup]

- › Wall Paper: Set the stand-by wallpaper.
- › Screen Saver: Activate or deactivate the screen savers, set the waiting time and screen saver picture.
- › Show date and time: Activate or deactivate displaying time and date in the stand-by screen.
- › Show owner number: Activate or deactivate displaying number in the stand-by screen.

edicated key]: You can setup function of the four direction keys.

isc.setting]: setting the LCD time.

**[Network Settings]** Choose setup SIM1 or SIM2 network

etwork Selection]: Select automatic or manual method to search the network.

references]: Set prior network.

**[Security setups]**

IM1 or SIM2 Security settings]

- › SIM/SIM2 Lock: Activate or deactivate the SIM or SIM2 lock
- › Fixed Dial: If the function is activated (which needs to input PIN2 code), you can only call the numbers stored in the fixed dialing list, while the phonebook will be out of use.
- › Barred dial: Set barred outgoing calls. This function needs the support from network.
- › Change Password: Set new passwords including PIN1, PIN2 and phone password. Note: Please remember your password firmly in time after changing.

Phone Lock]: Activate or deactivate the keypad lock and lock duration.

Auto keypad lock]: choose open and close the keypad lock.

Change the password]: Setup the new password of the phone. **Note: Please remember your new password after modified it.**

**[Restore factory settings]**: Restore the default setting of the phone. You need to enter the hone lock password, and the default password is '1122'.