

# VeryKool i720 User Guide

The content of this manual is correct at the time of issuance.

However, verykool USA Inc. reserves the right to amend technology specifications without any prior notification.

Some descriptions in this manual may be different from the actual mobile phone, depending on differences in software and network suppliers.

Verykool USA, Inc. 4350  
Executive Dr. #100  
San Diego, CA 92121  
U. S.

<b>Important safety precautions</b>	<b>3</b>
Use and Care	6
Operating Environment	8
Electronic devices	9
Pacemakers	9
Hearing aids	9
Radio frequency (RF) exposure and SAR	9
FCC statement:	10
SIM AT Service	11
Other medical devices	11
Potentially explosive environments	11
Emergency calls	12
Other important safety information	12
Qualified service	13
<b>Special features of your phone</b>	<b>13</b>
Features	13
<b>Your phone</b>	<b>14</b>
<b>Get started</b>	<b>15</b>
<b>Display</b>	<b>17</b>
Layout	17
Icons	18
<b>Enter text</b>	<b>19</b>

Dial Word Numbers .....	20
Overview of menu functions .....	20
1. Messages .....	22
2. Fun & Games .....	25
3. STK .....	26
4. Call center .....	26
5. Browser .....	27
6. Tools .....	28
7. File Manager .....	29
8. Multimedia .....	29
9. Settings .....	33
10. Skype .....	38
11. MSN .....	38
12. Facebook .....	38
13. WiFi .....	39



### **Important safety precautions**

This section contains important information on the safe and efficient operation of your mobile device.

For your safety, please refer to the guideline prior to using the phone.

**Note:** Failure to comply with the following precautions may be dangerous or illegal.

#### **Drive safely at all times**

Do not use a hand-held phone while driving. Park the vehicle first.

#### **Switch off the phone when refueling**

Do not use the phone at a refueling point (service station) or near fuels or chemicals.

#### **Switch off in an aircraft**

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

#### **Switch off the phone near all medical equipment**

Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.

#### **Interference**

All wireless phones may be subject to interference, which could affect their performance.

**Be aware of special regulations**

Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

**Water resistance**

Your phone is not water-resistant. Keep it dry.

**Sensible use**

Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on.

**Keep your phone away from small children**

Keep the phone and all its parts, including accessories, out of the reach of small children.

**Accessories and batteries**

Use only approved batteries and accessories, such as headsets and PC data cables. Use of any unauthorized accessories could damage you and your phone and may be dangerous.

If jewelry, keys, beaded chains, or other conductive materials touch exposed battery terminals, this could complete an electrical circuit (short circuit), become very hot, and could cause damage or injury. Be careful when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.

- Never use a charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power. Talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Battery charging time depends on the remaining battery charge, the type of battery, and the charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only **approved** batteries, and recharge your battery only with approved

chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.

- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.

- Do not leave the battery in hot or cold places because the capacity and lifetime of the battery will be reduced. Try to keep the battery at room temperature. A phone with a hot or cold battery may not work temporarily, even when the battery is fully charged.

- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object like a coin, clip or pen causes a direct connection between the + and – terminals of the battery (metal strips on the battery). For example, do not carry a spare battery in a pocket or bag where the battery may contact metal objects. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.

- Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

- The phone could explode if the battery is replaced with an incorrect type.

- Dispose of used batteries according to the manufacturer's instructions.

- At very high volumes, prolonged listening to a headset can damage your hearing.

- To avoid risk of personal injury, do not dispose of your battery in a fire.

- Do not throw your battery or mobile device in the trash.

#### **Charger Operation**

Please, read this manual before using the charger, for the correct operation of the appliance.

#### Important Safety Instructions

The charger should be used for Li-Ion accumulators charging only.

- Do not charge other types of accumulators with this charger.

- Do not expose the charger to moisture or rain.

- Do not disassemble the charger or the network adapter.

- Unplug the network adapter when not in use.

- Do not connect this charger with the appliances or peripheral devices, which

are not indicated in this booklet.

- It is not recommended to discharge the Li-Ion accumulator before charging.

- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible. **The only way to turn off the charger is to unplug it.**

#### Recycling of accumulators

Accumulators should be disposed in accordance with established rules.

It is forbidden to throw away accumulators along with domestic garbage. If possible, use specialized organizations services for accumulators recycling.

#### **Damaged Products**

If your mobile device or battery has been submerged in water, punctured, or subjected to a severe fall, do not use it until you take it to authorized and/or Qualified Service Center. Do not attempt to dry it with an external heat source, such as a microwave oven.

#### **Choking Hazards**

Your mobile device or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your mobile device and its accessories away from small children.

#### **Road safety**

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold. When driving a car, driving is your first responsibility. When using your wireless phone while driving, follow local regulations in the country or region you are in.

#### **Use and Care**

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children and pets. They accidentally damage these things or choke on small parts.

- Keep the phone dry. Precipitation, humidity, and liquids contain minerals that corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock, or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, stove, or radiator. The phone may explode when overheated.
- When the phone or battery gets wet, phone repairs are no longer guaranteed by the manufacturer's warranty, even if the warranty for your phone has not expired.
- If your phone has a flash or light, do not use it too close to the eyes of people or animals. This may cause damage to their eyes.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- Do not attempt to open the phone's casing. Non-expert handling of the phone may cause damages to your phone.
- If the phone or any of its accessories are not working properly, take them to your nearest qualified service center. The personnel there will assist you, and if necessary, arrange for the phone to be repaired.
- Using the earpieces or stereo headset for extended time can cause a serious damage to your hearing. Exposing sound higher than 100db for a long time, you will get possible ear damage that could results from extensive usage of audio playback.



You are strongly advised to check the volume level to medium before using.

- Do not use the phone while charging the phone. You may be electric-shocked if you use the phone while charging the phone with the USB data cable or the battery charger. Make sure to disconnect the USB data cable or the charger before using the phone.

- Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture.

- Extreme heat or cold ;Avoid temperatures below -10°C/14°F or above 40°C/104°F

- Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.

### **Operating Environment**

- Remember to follow any special regulations in force in the area you are in, and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

- Operation of any radio-transmitting equipment, including cellular phones, may interfere with inadequately protected medical devices. Consult a doctor or the manufacturer of the medical device if you have any questions. Other electronic equipment may also be subject to interference.

- As with other mobile radio-transmitting equipment, you are advised that for satisfactory operations and personal safety, the equipment should only be used in the normal operating position.

- Always switch off the phone when refueling (service station). You are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.

- Switch off your cellular phone when in aircraft. The use of cellular phones in aircraft is illegal and may be dangerous to the operation of the aircraft or disrupt the cellular network. Failure to observe these instructions may lead to the suspension or denial of cellular telephone services to the offender, legal action or both.

■ As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

#### **Electronic devices**

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

#### **Pacemakers**

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research. If you have any reason to suspect that interference is taking place, switch you're your phone immediately.

#### **Hearing aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

#### **Radio frequency (RF) exposure and SAR**

This phone meets the requirements concerning exposure to radio waves. Your mobile phone is a radio transmitter and receiver. It is designed and manufactured to not exceed the limits for exposure to radiofrequency (RF) energy, as recommended by the Council of the European Union. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organizations through the periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health. The exposure standard for mobile phones employs a unit of measurement known as Specific Absorption Rate (SAR).

Specific Absorption Rate (SAR) is the unit of measurement for the amount of

radio frequency energy absorbed by the body when using a mobile phone. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the mobile phone while operating can be well below the value. This is because the mobile phone is designed to use the minimum power required to reach the network.

The SAR limit adopted by the USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when properly worn on the body is 1.140 W/kg and on the head is 0.282 W/kg. The SAR limit adopted by the CNIRP is 2.0W/kg over one gram of tissue. The value guarantees a safe distance to protect mobile phone users and the difference caused by measurement errors. Under different test requirements and frequency, the value varies.

**FCC statement:**

FCC Section 15.19 Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Section 15.21 Information to user

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Section 15.105(b) Information to user

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

#### **SIM AT Service**

SIM Card provides several value-added services.

These functions will only display and work on the menu of the phone when your SIM card is supported. The content and the terms of the function lists will depend on your network service provider.

Please contact your network service provider (a network operator or the service provider) in regards with availability of any services related to the SIM card, application information and the costs.

#### **Other medical devices**

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch off your phone in health care facilities when regulations posted in these areas instruct you to do so.

*Health and safety information*

##### **Vehicles**

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

##### **Posted facilities**

Switch off your phone in any facility where posted notices require you to do so.

#### **Potentially explosive environments**

Switch off your phone when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often but not always clearly marked. They include the areas below decks on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas, such as propane or butane, areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

#### **Emergency calls**

This phone, like any wireless phone, operates using radio signals, wireless, and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications like medical emergencies. To make or receive calls, the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. Key in the emergency number for your present location. Emergency numbers may vary by location.
2. Press the Send Key.
3. Inform your location. Do not end the call until given permission to do so.

Certain features like Call Barring may need to be deactivated before you can make an emergency call. Consult this document and your local cellular service provider.

#### **Other important safety information**

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases, or explosive materials in the

same compartment as the phone, its parts, or accessories.

- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. Improperly installed wireless equipment could result in serious injury if the air bag inflates.

- Switch off your phone before boarding an aircraft. It is dangerous and illegal to use wireless phones in an aircraft because they can interfere with the operation of the aircraft.

- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

#### **Qualified service**

Only qualified service personnel may repair your phone.

It is highly recommended to have a repair service by qualified service personnel. Use only the approved accessories and batteries

## **Special features of your phone**

### **Features**

- **WiFi**

Supports WiFi, you can browse the WEB via available WiFi networks around you.

- **Music player**

Play music on your phone.

- **Bluetooth**

Transfer media files and personal data and connect to other devices using free, wireless Bluetooth technology.

- **Multimedia Message Service (MMS)**

Send and receive MMS messages with a combination of text, images, video, and audio.

- **E-mail**

Send and receive e-mails with image, video, and audio attachments.

- **Java**

Enjoy Java™-based embedded and downloaded games.


- **Alarm**

Use your phone as an alarm clock to wake you up in the morning or notify you of an impending event.

- **Get personal with caller ID**

See who's calling you by assigning custom photos, Ring Tones to your contacts.

## Your phone

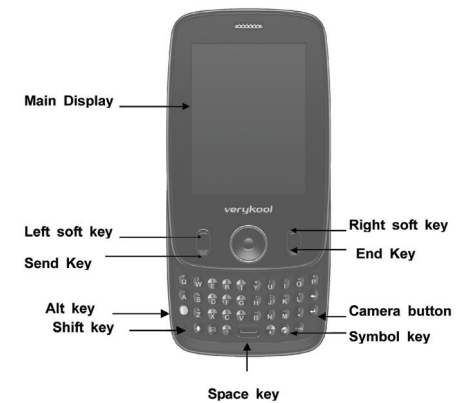

**Note:** All the illustrations, simulated screen and related images used in this manual are for reference only. There may be slight difference between the handset and keys and content of display used in this manual and those of your handset. Please refer to your handset for actuality

## Get started

First steps to operating your phone

### **SIM card information**

When you subscribe to a cellular network, you receive a plug-in SIM (Subscriber Identity Module) card loaded with your subscription details, such as your PIN, and available optional services.

### **Install and charge the phone**

#### **1. Remove the battery cover and the battery.**

If the phone is already on, first turn it off by pressing and holding the on/off key

#### **2. Insert the SIM card.**

Make sure that the gold-colored surface of the card is facing down.

#### **3. Install the battery.**

#### **4. Replace the battery cover.**

#### **5. Plug the charger into the phone.**

#### **6. Plug the charger into a standard AC wall outlet.**

**7. When the phone is completely charged (the battery icon becomes still), unplug the charger from the power outlet.**

#### **8. Remove the charger from the phone.**

#### **9. Switch the Phone On/Off**

#### **10. Enter Your Pin (Access Codes)**

#### **11. Dial the Phone Number Required**



#### **Low battery indicator**

When the battery is low a warning tone sounds, the battery low message displays and the empty battery icon blinks. If the battery level becomes too low, the phone automatically turns off. Recharge your battery.

**Note:** When the battery is discharged completely, and not used for a while, the phone will not display the charging icon for a moment while charging. The phone will display the charging icon after that transition period.

#### **Power On or Off**

Press and hold Power On/Off button to turn it on and off  
Enter your SIM card PIN, if requested.

#### **Access Codes**

There are access codes for your SIM card. These codes help you to protect the phone against unauthorized use.

When requested for any of the code explained below, key-in the appropriate code (displayed as asterisks) and press the **OK** key.

##### **■ PIN**

The **P**ersonal **I**dentification **N**umber or PIN (4-8digits) protects your SIM card against unauthorized use. The PIN comes with the SIM card; see the SIM card instruction provided with your card.

If you enter an incorrect PIN three times in succession, the code will be disabled and cannot be used until you re-enable it by entering the PUK.

##### **■ PUK**

The 8-digit PUK (**P**ersonal **U**nblocking **K**ey) is required to change a disabled PIN. The PUK may be supplied with the SIM card. If not, or in case you have lost it, please contact your service provider.

To re-enable your PIN, proceed as follows.

1. Key-in the PUK and press the **OK** key.


2. Enter a new PIN of your choice and press the **OK** key.
  3. When the **Confirm New PIN** message is displayed, key-in the same code again and press the **OK** key.
- If you enter an incorrect PUK ten times in succession, the SIM card becomes invalid. Please contact your service provider for a new card.

#### ■ Pin Password

The 4 ~ 8 digits of password is required when you use the Call barring function. You can obtain the password from your service provider when you subscribe to this function.


 




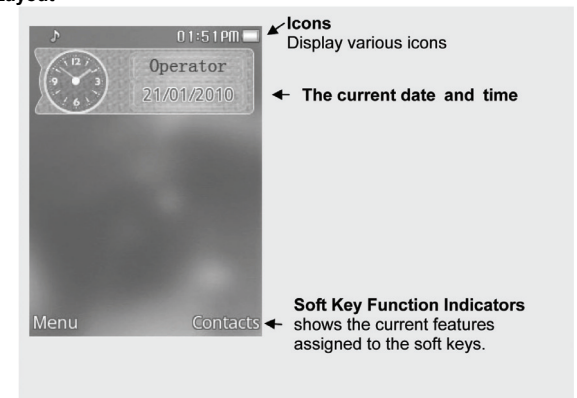






## Display




### Layout



**Note:** All the illustrations, simulated screen and related images used in this manual are for reference only. There may be slight difference between the handset and keys and content of display used in this manual and those of your handset. Please refer to your handset for actuality

#### Icons

	Vertical bars indicate the signal strength of the GSM network signal. Five bars indicate that your current position has the best reception.
	Indicates the battery charge level.
	Indicates that WiFi is activated
	Indicates that WiFi is activated but disconnected
	Indicates that Bluetooth is activated
	Indicates that EDGE is activated
	Indicates your phone is locked.
	Indicates that the alert type of your phone is set as ring.
	Indicates that the alert type of your phone is set as ring and vibrate.
	Indicates that the alert type of your phone is set as vibrate then ring.
	Indicates that the alert type of your phone is set as Silent.
	Indicates that the alert type of your phone is set as vibrate.
	Indicates that the alert type of your phone is set as headset.

	Indicates the alarm clock is set.
	Indicates the phone is roaming.
	Indicates new voice mail message(s).

\* Depending on your country or service provider, the icons shown on the display may vary.

## Enter text

### ABC, Number, and Symbol modes

You can enter text in some features such as Messages, Phonebook, or Calendar, using ABC mode, Number mode, and Symbol mode.

You can enter text by pressing the alphanumeric keys on the phone.

### Text Input Options:

While you are in text editing mode, you will be in several modes.

When you see [Option] and [Clear] in the soft key, press the soft key (left) for option: you can save the entry or change the Text Input Method. To erase a character, press the soft key (right) next to the character you want to erase.

### You change input methods time to time by SHIFT key

If you want to change the text input method temporarily, in the text input mode, press [Option] soft key, and select "Input Method" from the option.

- You can change the text input method with the [SHIFT]+[SPACE ] key; the input methods will swap when you press the [SHIFT]+[SPACE ].
- Press and hold the [SYM] key to select Symbols.
- Press the [SHF] key to toggle select cases of abc, Abc, and ABC.
- Press [SPACE] key to insert a space.

## Dial Word Numbers

To dial a Word number, like 1-800- GOODBYE, you must push the "ALT" key and input the letters "GOODBYE" then select dial. The phone will auto convert the letters into numbers when dialed.

## Overview of menu functions

To access Menu mode, press [Menu] in Idle mode.

### 1. Messages

- 1.1 SMS
- 1.2 MMS
- 1.3 Chat
- 1.4 Email
- 1.5 Broadcast Message
- 1.6 Voice Mail Server

### 2. Fun& Game

- 2.1 Java
- 2.2 Java setting
- 2.3 Java default Security
- 2.4 Games

### 3. STK

- 3.1 SIM Toolkit  
(Depends on SIM)

### 4. Call Center

- 4.1 Recent Calls
- 4.2 General call settings

### 5. Browser

- 5.1 Homepage
- 5.2 Bookmarks

- 5.3 Recent page
- 5.4 Offline pages
- 5.5 Enter Address
- 5.6 Service inbox
- 5.7 Settings

## **6. Tools**

- 6.1 Calendar
- 6.2 To Do List
- 6.3 Alarm
- 6.4 World Clock
- 6.5 Calculator
- 6.6 Currency Converter
- 6.7 Stopwatch
- 6.8 E-Book Reader
- 6.9 Answer Machine

## **7. My Files**

- 7.1 Phone Storage
- 7.2 Memory Card

## **8. Multimedia**

- 8.1 Audio player
- 8.2 Camera
- 8.3 My pictures
- 8.4 Video Recorder
- 8.5 Video Player
- 8.6 Sound recorder
- 8.7 FM Radio
- 8.8 Schedule FM record
- 8.9 Melody Compose
- 8.10 Slide show

## **9. Settings**

- 9.1 Profiles

- 9.2 Phone setup
- 9.3 Network setup
- 9.4 Security setup
- 9.5 Connectivity
- 9.6 Restore factory setting
- 9.7 Sound effect

#### 10. Skype

#### 11. MSN

#### 12. Facebook

#### 13. WiFi

- Some menus are operator-, network- and subscription-dependent

### 1. Messages

Use the Messaging menu to send and receive short messages and multimedia messages, and e-mails. You can also use a voice-mail, and cell broadcast message features. To access this menu, press **[Menu]** in Idle mode and select **Messages**. Message functions are available depending on network services that your service provider supports.

#### 1.1 SMS

The SMS (Short Message Service) function is a network service and your network may or may not support the service. You can send messages in Fax, Page, e-mail and Text format. To send text messages by phone, you must obtain the SMS center number from your service provider, and enter it on the **SC Address** option in Profile Settings menu.

**Note:** • The Message service may not be available on all networks. Some network allows it only within its own network.  
• The maximum number of characters allowed in a short message varies by service provider. If your message exceeds the maximum number of characters,

the phone will split the message.

#### **Write Message**

##### **Text Message**

Use this menu to create and send a message

**Note:** If you receive a call while you are writing a message, the message will be backed-up and after the call finishes, the phone will display [write message] mode. You can finish the message without losing the data

#### **1.2 Multimedia Message**

Use this menu to create and send a multimedia message

Multimedia Message Service (MMS) delivers messages containing a combination of text, image, video, and audio, from phone to phone or from phone to e-mail.

**Note:** • The maximum size allowed for a message can differ, depending on your service provider.  
• Depending on the file type or DRM (Digital Rights Management) system, some files may not be able to be forwarded.

#### **Inbox**

This folder stores all of the messages you have received, except for e-mails.

#### **Outbox**

You can view the messages that the phone has failed to send

You can also view the sent messages you have saved

#### **Drafts**

This folder stores messages you have saved to send at a later time.

#### **Template**

Use this menu to make and use templates of frequently used messages.

#### **Message Settings**

Within the Message Settings sub-menu, you can define default values on common parameters for mobile-originated messages.



### 1.3 CHAT

#### CHAT WITH YOUR FRIENDS

### 1.4 E-MAIL

The E-Mail application allows you to send and receive e-mails. The application supports text and attachments. The e-mail application could be either normal POP3 e-mail client or IMAP4 based e-mail service.

**Note:** If current incoming protocol is set to IMAP4, and the phone is not currently connected to the network, when before entering this screen, shall popup a confirmation screen for the user with message "Do you want to connect to the network?". If the user selects "Yes", then can send list folder request to network; otherwise, directly enter this screen, and all popup hint displays "0 mails."

#### **Send and Receive**

In order to exchange the email, the user has to provide appropriate settings (described in section **Email Profile**).

#### **Write Email**

This menu allows you to write an email.

#### **Inbox**

This folder stores the list of emails you have received.

#### **Outbox**

This folder stores the list of emails you have failed to send.

#### **Sent**

This folder displays the list of sent mails.

#### **Drafts**

This folder displays the list of e-mail Draft you saved.

#### **Delete All Folder**

This helps you to delete all mails in selected folder.

#### **Delete All Mark**

This helps you to delete all mark in selected folder.

#### **Email accounts**

This helps you to configure various servers and Profile related settings.

#### **Template**

Use this menu to make and use templates of frequently used messages.

### 1.5 Broadcast Message

This network service allows you to receive the broadcast messages on various topics such as weather, traffic, local district code, local hospitals, taxis or pharmacy in your area.

For more information about broadcast message topics, please contact your service provider.

**Note:** This service may not be available on all networks. For more information about the available subjects, please contact your network service provider.

### 1.6 VOICE MAIL

Your phone is capable of dialing with voice-mail server number (if provided by your network). If you receive any voice-mail, your phone displays **New Message** in the idle screen.

**Note:** Voice mail is a network feature. Please contact your service provider for more information.

## 2. Fun & Games

Use this menu to access the Java game and embedded game

### 2.1 Java

Your mobile phone features a Java run-time environment, which allows you to run Java applications, such as games downloaded on the Network. You can setup audio, network profile, and free data space.

### 2.2 Java Setting

Use this menu to set the Java setting: Java audio, Backlight, Java vibration and Java network

### 2.3 Java default security

Use this menu to set the Java security settings

#### **2.4 Games**

This phone provides you embedded games.

### **3. STK**

Services described in the following are supported by your service provider. If you cannot connect to either one of those services, you need to contact your service provider for further information.

#### **3.1 SIM TOOL KIT**

In addition to the functions available in the phone, your service provider may offer additional applications such as weather or stock market information via the SIM card. This function is only supported when SIM card inserted.

##### ***To set the STK service***

- In **Service** menu, choose **STK**, press **OK**

### **4. Call center**

#### **4.1 Recent Calls**

Use this menu to view the calls you have dialed, received, or missed, and the length of the calls. You can also check the cost of your calls, if the SIM card supports this function.

#### **4.2 General call settings**

The following Call Setup features are network services. Please contact your network service provider to check availability and subscribe to the feature.

- **Caller ID:** Allows you to either send or hide your ID during calling or sending out the message. Your phone is defaulted in **Set by Network**, which means your ID is determined by your service provider.
- **Call Waiting:** Allows you to enable call waiting function.
- **Call Divert:** Allows you to set the call condition by which calls are diverted to another number.

- **Call Barring:** Allows you to restrict incoming calls and outgoing calls from your phone.
- **Line Switch (Line1/ Line2):** This is a network service to select phone line 1 or 2, which is the subscriber number for making calls within ALS Setting submenu.

**More...**

**Black List**

Activate the blacklist to block calls from the setting number

**Auto Redial**

This option allows you to set redial automatically when the call receiver is busy.

**Background Sound**

This option allows you to set background and playback.

**Call Time Display**

You can set the phone to display the call time.

**Call Time Reminder**

You can set the call time reminder. Options are Off, Single, and Periodic.

**Auto Quick End**

You can enable or disable Quick end, you can also set the time. Call is automatically disconnected if the call duration reaches the set time.

**Reject by SMS**

Send message while the incoming call is rejected.

## 5. Browser

The Wireless Application Protocol (WAP) on your phone allows you to access the wireless web. Using the web browser, you can access up-to-date information and a wide variety of media content, such as wallpapers, ring tones, and music files.

### 5.1 Homepage

The default Homepage is currently set to the website of your operator, which you can change to your preferred website. And for a better mobile internet experience and many other resources, you can visit <http://verykool.net>, where you can register and have access to new applications and updates for your phone.

### 5.2 Bookmarks

You can use this menu to save URL addresses to quick access a website. Your

phone also provides the following selections for your options.

#### **5.3 Recent pages**

You can view the recent pages you have visited. Your phone also provides the following selections for your options.

#### **5.4 Offline pages**

You can view some offline page you have saved

#### **5.5 Enter Address**

You can enter URL addresses directly

#### **5.6 Service inbox**

You can view the received push messages here

#### **5.7 Setting**

If the settings have made by the service provider, you may begin immediately. If the accessed profiles have been assigned by your service provider, select a profile and activate it. Otherwise, you may key in the setting manually. For appropriate settings, contact your network operator or service provider.

you also can browse the web via WiFi accounts.

### **6. Tools**

Use this menu to keep track of your schedule. You can also use convenient features, such as Calendar, to do list, Alarm, World Clock, Calculator, currency Converter, Stopwatch.

To access this menu, press [Menu] in Idle mode and select **Tools**.

#### **E-book reader**

You can read any file in TXT format saved in the memory card. Just copy the file in the folder of [eBook] in the memory card under the directory [File management], and run the ebook feature. If the file is not in the folder, just "open the electronic book" through the options of the file, and the file will be moved to the folder automatically.

#### **Answer machine**

You can use the mobile phone as an answering machine.

### **7. File Manager**

Use this menu to manage stored files in the phone or the micro SD Card.

### **8. Multimedia**

#### **8.1 Audio player**

Your phone provides a user-friendly music player device. You may enter the music player via main menu or use the side short key for quick access. Another way to access

the music player is through the navigation up key. You can listen to music, audio recordings, language lessons, and many more files in MP3 and AAC formats. You can also download music via USB or other connections. Music tracks must be saved in **My Music** folder in **File Manager** in order to be automatically detected and added into the default play list. You may listen to the music through the headset or loudspeaker. The user-friendly interface is specially designed to enable users to control, play, pause, and stop the music with ease of use.

#### **Play the music**

In the **Music Player** menu, you may select **List** to access the following setting. If you are a first-time user, select **Play List** to add music tracks from your memory card. Your music player will automatically detect and add all the music tracks into the default play list. When you use the music player next time, select any music track to access the following options:

- **Now Playing:** Allows you to play the selected song immediately.
- **My Play List:** Allows you to create 5 play lists according to your personal preference, in addition to the default play list. Select one song in any play list, and access the following options:
  - **Artists:** Allows you to sort your music by the name of the **Artist**.
  - **Albums:** Allows you to sort your music by the title of the **Album**.
  - **Genres:** Allows you to sort your music by the title of the **Genres**.
  - **Tracks:** Allows you to sort your music by the track type, such as pop, hip-hop, etc.

- **Settings:** Allows you to turn on auto refresh play list, to change the skin, equalizer, etc. In the **Music Player** menu, choose **Settings**. The setting options include:

**Player Settings**

**Refresh List Auto:** You can choose to refresh play list automatically or not.

**Repeat:** You can choose to repeat all songs, one songs or turn off this function.

**Shuffle:** This function is to mix the music tracks with different order.

**Background Play:** This function allows the phone to play the music continuously if you go back to the idled mode.

**Display Settings**

**Spectrum Display Style:** Allow you to choose Spectrum Display Style1 or style2 or shut off.

**Lyrics Display:** Your phone supports lyrics display in steps during music playing. However, you will need to save lyrics in .lrc format with unicode encoding in **My Music** folder.

**Sound effect**

**Audio effect:** Allows you to change the following settings **Equalizer**, **Reverb effect**, **3D surround**.

**Bass enhancement**

Option for enable or disable base enhancement function.

**Play speed:** Allows you to change the play speed: Normal, Fast, Fastest, Slowest, Slow

## **8.2 Camera**

You can use the camera module embedded in your phone to take photos. Before taking a picture, you can set your camera settings on the screen by using navigation keys or sensitive keys, and [Option] left soft key.

**Taking and Saving a Photo**

1. Choose **[Camera]** menu.

To access this menu, press **[Menu]** in Idle mode and select **[Camera]** menu. Or by the camera button

2. Set your camera by using [Option]. Turn your handset in Landscape position for better usage. 240x320 resolution is used for wall paper portrait position.

3. The [camera] key on the side of the phone has a two-stage action. Pressing half way automatically sets the focus. Pressing fully releases the shutter.

- 4.-To save the picture, press save sensitive key.
5. If you want to send the picture by MMS promptly, select the [OK] key. You can attach the picture automatically. This function is not available if continuous shot is activated.
6. If you want to take more pictures, select the [Cancel] right soft key. The screen will display the camera preview and picture is not saved.
7. If you want to view the image, you can access the Image Viewer menu.

**These settings can be also accessed via menu**

**Video recorder**

Allow you to switch to video recorder.

**Album**

Enables the image viewer.

**Camera setting**

- LED: setting for Flash
- Shutter Sound : You can select a shutter sound or turn off the shutter sound. The sound makes you feel the sense of taking a picture.
- EV (-2/-1.5/-1/-0.5/0/+0.5/+1/+1.5/+2): You can set the EV (Exposure Value) and the preview will look darker in lower EV and brighter in higher EV.
- Contrast: Low/High/Medium.
- Banding (50Hz/60Hz): You can select the sampling bandwidth of the camera sensor. When bandwidth increases, the memory size and the picture quality will increase.
- Delay Timer (Off/5Sec/10Sec/15Sec): It allows you to take a picture with delayed timer. If you set the delay timer at 5 sec, and press the [OK] key, it will take a picture 5 seconds later.
- Cont Shot (Off/ 1shot/3shot/5shot): It allows you to take multiple continuous shots by pressing the camera key.

**Image settings :**

- Image Size (240x320/320x240/ 640x480/ 800x600/ 1600x1200)
- Image quality (Low/Normal/High)

**White Balance :**

Auto / Daylight / Tungsten / Fluorescent / Cloud / Incandescence



**Scene Mode :**

Auto/ Night

**Effect Settings :**

Normal, Grayscale, Sepia, Sepia Green, Sepia Blue, Color Invert,

**Storage (Phone/ Memory Card):**

Allows you to select the storage for saving images.

**Restore Default:**

This menu allows you to restore to the camera's default settings.

**8.3 My Picture**

You can see your photos in your phone by choosing [Photo Album] menu in [Multimedia] menu. It will display the photos with thumbnail, image name, and image size.

**8.4 Video Recorder**

With this phone, you may record a video with the Video Recorder menu.

**Recording and Saving a Video**

1. Choose [Video Recorder] menu.
2. Set your video recorder by using [Option] or alphanumeric keys.
3. After setting the view, start to record a video by pressing the [OK] key or camera key
4. The video will be saved automatically by pressing the [Stop] soft key (right).
5. If you want to view the recorded file, you can access it via the Video Player menu.

**8.5 Video Player**

You can watch videos on your phone with the Video Player menu.

**8.6 Sound Recorder**

You can record sounds in AMR, WAV and AWB format and use it as voice memo, ringtone, MMS attachment, and more.

### **8.7 FM Radio**

The FM Radio application turns the mobile phone into a portable FM Radio device. It primarily provides users the interface to a single-chip electronically tuned stereo FM radio for listening to live-broadcast stations. You must connect the earphone to your phone as it works as an antenna.

#### **To listen to the radio:**

Connect the earphone to your phone. When entering the main screen, a default frequency is selected and it's power off for the first time of entrance.

### **8.8 Schedule FM record**

This menu allows you to set the Schedule to record FM broadcasts. You can save up to 4 channels.

### **8.9 Melody Composer**

You can create an iMelody file. You can use this melody as your Ring Tone, MMS attachment.

### **8.10 Slide show**

This menu allows you to choose one folder and start photo slide shows.

## **9. Settings**

The Settings menu provides you with various setting options to customize the phone to your preferences and needs. You can also reset the settings to their default values.

To access this menu, press **[Menu]** in Idle mode and select **Settings**.

### **9.1 Profiles**

This menu allows you to set the ring tone, alert type, ring volume, answer mode and backlight, etc when you receive an incoming call or a new message so that you can adapt the use of your phone to different types of call environments.

Select

1. General
2. Meeting
3. Outdoor

4. Indoor
5. Silent
6. Headset
7. Bluetooth

and press [Option] soft key (left) to access the following options:

Activate	Activate the selected profile.
Customize	Allows you to set the selected mode

## 9.2 Phone setup

This menu allows you to customize desired phone display items as below.

- **Time and date**
- **Schedule Power On/Off**
- **Language**
- **Default Encoding Type**

GB2312  
GB18030

- **Display Characteristic**

Wallpaper  
Screen saver  
Power on Display  
Power off display  
Calendar idle screen  
Show date and time  
Screen Switch effect  
Clock type

- **Theme**
- **Greeting Text**
- **Shortcuts**
- **Dedicated key**
- **Auto update date and time**
- **Stand Alone mode**
- **Misc settings**
- LCD Backlight

### 9.3 Network setup

Network Setup helps you in Network Selection, selection of Preferred Network, and GPRS connection

#### Network Selection

The Network Selection feature enables you to select automatically or manually the network used when roaming outside of your home network.

**Note:** You can select a network other than your home network only if it has a valid roaming agreement with your home network.

#### Preferred Mode

Set the preferred mode for network

GSM only

WiFi only

GSM preferred

GPRS preferred

#### GPRS Connection

Set the GPRS connection to when needed or always on

### 9.4 Security Settings

Use this menu to protect the phone against unauthorized use by managing the several access codes of your phone and SIM card.

There are six types of security setting categories, and you can optimize security mode by choosing sub menus in "Security Setup" in "Settings" menu. These security settings will help you to keep privacy and to prevent other people from using the phone without your permission.

Your phone provides the following selections for your option:

- **SIM Lock:** This function allows you to lock the phone with a specific SIM card. The feature is designed to prevent the use of your SIM cards by means of another person's phone if your SIM cards lost. You can switch on or off to activate the PIN Lock function.
- **Fixed Dial:** This function dials only the numbers in the fixed dialing number (FDN). To save and edit numbers on the list, you need the PIN2 code.

- **Barred Dial:** Allows you to switch on or off restricted call function. However, you need to check if your SIM supports this function.
- **Change Password:** Allows you to change PIN code and phone lock password.

## 9.5 Connection Setting

### Bluetooth

Your phone is designed to be compliant with Bluetooth technology V1.2. Bluetooth technology enables wireless connections between electronic devices. The Bluetooth connection can be used to listen to stereo music, send images, Video, texts and vCards.

Options	Description
Power On/Off	Turn on/off the Bluetooth feature.
Search new Audio Device	Search the devices that are available.
Remote Control	Select to control your PC by Bluetooth (media player, mouse control, slide show)
My device	Select to connect to devices that you predefined.
Active Device	Activate the selected device.
Settings	Allows you to set the following

Options : Visibility, Change Device Name,,Authentication, Audio path  
Block list ,Storage and FTP Setting

### Making a Bluetooth connection

To make a Bluetooth connection, first make sure you switch on the Bluetooth feature in the option On/Off. Then select My devices.

### Connecting with an audio device

Choose <Inquiry Audio Device>. When the list of device(s) appears, select the one you want to make a connection with. Once you select a device and a connection is made, you are prompted to enter a passkey in order

to pair with the device. This passkey is supplied by the manufacturer of the other Bluetooth device, refer to its documentation for further information. The passkey feature ensures that only legitimate connections are allowed to connect either to your device or the selected device.  
If you do not use the Bluetooth feature for some time, you should deactivate it in order to conserve battery power.

#### **Conn. Management**

##### **Data account**

Default data accounts based on major operators at the time this phone is manufactured are provided. You can access WAP via GSM Data or GPRS. To get the analogue number or ISDN number information, you may need to contact your operator for the service. To get the access point of GPRS, you may need to contact your operator for the service.

##### **WiFi**

Enable WiFi: Enables the WiFi feature

Current Status: Check the WiFi status

Access point Setting: Allows you to set the Access point(s) manually

Search for networks: Search for available WiFi networks.

**Note:** i720 supports WiFi 802.11 b/g and 802.11 b/g/n modems. But connecting to a wireless N router that supports dual-band (300 Mbps) may cause rapid battery drainage of your phone.

#### **9.6 Restore Factory Settings**

This feature resets the phone to the same settings as those configured at the factory. In this case, it does not delete the downloaded objects and phonebook records.

You will need to input password to restore factory settings. The initial password is 0000.

**Note:** Depending on the software installed or your service provider or country, some of the descriptions in this guide may not match your phone exactly.  
Depending on your country, your phone and accessories may appear different from the illustrations in this guide.

#### **9.7 Sound effect**

Allows you to include a sound effect to the selected slide show from the three provided audio files.

##### **Audio effect**

Allow you to choose or edit the different audio effect, such as Equalizer, Reverb effect ,3D surround

##### **Bass enhancement**

Option for enable or disable the bass enhancements.

#### **10. Skype**

A Skype mobile phone embedded version, allows you to register, logon Skype and add, chat with friends , manage the personal profile.

It supports the following different Skype status: Online, Do Not Disturb, Invisible and offline. And support the group chat.

#### **11. MSN**

An MSN mobile phone embedded version, it allows you to register, logon MSN. Also can edit MSN personal information, send message via this MSN version.

It supports different status: Online, Do Not Disturb, Invisible and offline. And it also supports blocking unwanted contacts.

SW upgrade is possible when new version is available.

#### **12. Facebook**

Gives you access to the quick link to Facebook.

### 13. WiFi

See WiFi descriptions under Section 9.8 Connection setting