



**Comeback™**

**P O R T A B L E   Q U A D - B A N D  
M O B I L E   P H O N E**

**User Manual**

**Please read this manual before operating your  
phone, and keep it for future reference.**



## Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

## Samsung Telecommunications America (STA), LLC

Headquarters: Customer Care Center:

1301 E. Lookout Drive 1000 Klein Rd.

Richardson, TX 75082 Plano, TX 75074

Toll Free Tel: 1.888.987.HELP (4357)

Internet Address: <http://www.samsungusa.com>

©2009 Samsung Telecommunications America, LLC is a registered trademark of Samsung Electronics America, Inc. and its related entities.

Do you have questions about your Samsung Mobile Phone?

For 24 hour information and assistance, we offer a new FAQ/ARS System (Automated Response System) at:

[www.samsungtelecom.com/support](http://www.samsungtelecom.com/support)

GH68-22878A

Printed in Korea

T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437; U.S. Pat. 5,953,541; U.S. Pat. 6,011,554 and other patents pending.

The Bluetooth® word mark, figure mark (stylized “B Design”), and combination mark (Bluetooth word mark and “B Design”) are registered trademarks and are wholly owned by the Bluetooth SIG.

microSD™ and the microSD logo are Trademarks of the SD Card Association.

Openwave® is a registered Trademark of Openwave, Inc.

### ***Open Source Software***

Some software components of this product incorporate source code covered under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), OpenSSL License, BSD License and other open source licenses. To obtain the source code covered under the open source licenses, please visit:

<http://www.samsungnetwork.com/Home/opensource>.

### **Disclaimer of Warranties; Exclusion of Liability**

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

# Table of Contents

---

**Section 1: Getting Started ..... 5**

    Activating Your Phone ..... 5

    Switching the Phone On or Off ..... 10

    Setting Up Your Voice Mail ..... 11

    Accessing Your Voice Mail ..... 11

**Section 2: Understanding Your Phone ..... 12**

    Features of Your Phone ..... 12

    Front View of Your Phone ..... 13

    Keys ..... 13

    Open/Landscape View of Your Phone ..... 15

    Camera View of Your Phone ..... 17

    Side View of Your Phone ..... 18

    Display Layout ..... 19

    Missed Call Tab ..... 20

    Backlight ..... 22

**Section 3: Menu Navigation ..... 23**

    Menu Navigation ..... 23

**Section 4: Call Functions ..... 25**

    Making a Call ..... 25

    Adjusting the Call Volume ..... 27

    Answering a Call ..... 27

    Call history ..... 27

    Vibration profile ..... 30

    Selecting Functions and Options ..... 30

**Section 5: Entering Text ..... 35**

    Using the QWERTY Keyboard ..... 35

    Changing the Text Input Mode ..... 37

    Using ABC mode ..... 37

    Using T9 Mode ..... 39

    Using Number Mode ..... 39

    Using Symbol Mode ..... 39

<b>Section 6: Messaging</b>	<b>41</b>
Types of Messages	41
Display Icons for Messages	41
Text Messages	43
Create message	43
Inbox	45
E-mail	49
Audio Postcard	50
Instant Messaging (IM)	51
Sentbox	51
Drafts	52
My Folders	53
Templates	53
Settings	54
<b>Section 7: People</b>	<b>58</b>
Contacts	58
Add a New Contact	59
Groups	60
Speed Dial	62
Management	63
My number	65
Service Number	65
<b>Section 8: Media</b>	<b>66</b>
web2go	66
Photos	66
Music	68
Images	72
Sounds	74
Videos	76
Games and Apps	77
Other files	78
Memory status	78
<b>Section 9: web2go Browsing</b>	<b>79</b>
Browser	79

<b>Section 10: Changing Your Settings .....</b>	<b>83</b>
myFaves Settings .....	83
Personalize .....	83
My Account .....	93
Help .....	93
Bluetooth .....	93
Menu Design .....	95
Manage Cameo Frame .....	95
Call settings .....	96
Advanced .....	100
Software update .....	101
Reset settings .....	101
Self Help .....	102
<b>Section 11: Organizer .....</b>	<b>103</b>
Calendar .....	103
TeleNav GPS Navigator .....	106
Alarm .....	107
Voice recognition .....	108
Tasks .....	114
Memo .....	115
Calculator .....	115
Tip calculator .....	115
World clock .....	116
Converter .....	116
Timer .....	117
Stopwatch .....	117
RSS Reader .....	117
<b>Section 12: Camera .....</b>	<b>119</b>
Using the Camera .....	119
Take and Send .....	119
Photos .....	122
Record video .....	123
Videos .....	125
My Album .....	126

<b>Section 13: Health and Safety Information .....</b>	<b>127</b>
Health and Safety Information .....	127
Samsung Mobile Products and Recycling .....	128
UL Certified Travel Adapter .....	128
Consumer Information on Wireless Phones .....	129
Road Safety .....	134
Responsible Listening .....	136
Operating Environment .....	138
Using Your Phone Near Other Electronic Devices .....	138
Potentially Explosive Environments .....	140
Emergency Calls .....	140
FCC Notice and Cautions .....	141
Other Important Safety Information .....	141
Product Performance .....	142
Availability of Various Features/Ring Tones .....	143
Battery Standby and Talk Time .....	143
Battery Precautions .....	143
Care and Maintenance .....	144
<b>Section 14: Warranty Information .....</b>	<b>146</b>
Standard Limited Warranty .....	146
End User License Agreement for Software .....	148
<b>Index .....</b>	<b>153</b>

## Section 1: Getting Started

---

This section explains how to start using your phone by first configuring your hardware, activating your service, and then setting up your voice mail.

### Activating Your Phone

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, available optional services, and many others features.

### Installing the SIM Card

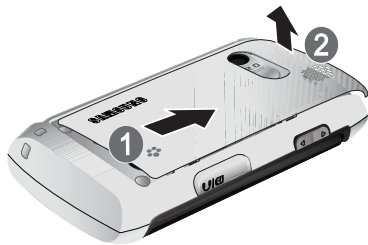 
---

**Important!:** The plug-in SIM card and its contacts information can be easily damaged by scratching or bending, so be careful when handling, inserting, or removing the card. Keep all SIM cards out of reach of small children.

---

If necessary, switch off the phone by holding down the  key until the power-off image displays.

1. Remove the battery cover by sliding the battery cover in the direction indicated.



2. Carefully lift the battery cover up, and away from the bottom of the phone.



3. Use your finger or thumb to lift up the lower edge of the battery (notice the indented slot) and gently lift the battery out of the handset.



4. Carefully slide the SIM card under the metal bracket and into the SIM card socket until the card locks into place. Make sure that the card's gold contacts face into the phone and that the upper-left angled corner of the card is positioned as show.



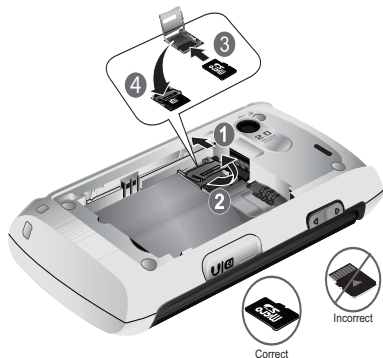 
---

**Note:** If the card is not inserted correctly, the phone does not detect the SIM card. Remove the battery and re-orient the card back into the slot.

---

## Inserting the Memory Card

1. To unlock the memory card cover, use your thumb to slide the memory card cover to the Unlock position (as indicated) until you hear a slight clicking sound.
2. Gently lift upward on the edge of the memory card cover.
3. Place the microSD card into the slot (as shown below). Ensure the microSD's gold contact pins face downward and the card is placed so that the indentations on the card face the same direction as those illustrated.



4. Close and lock the memory card cover:
  - (1) close the memory card cover using your thumb to push the cover down (as shown below).
  - (2) slide the memory card cover back into the Lock position.

---

**Note:** Your phone supports microSD cards of up to 16 GB capacity. Memory cards with over 16GB storage capacity have not been tested with this phone.

---

## Removing the memory card

1. To unlock the memory cover, use your thumb to slide the memory card cover to the Unlock position (as indicated) until you hear a slight clicking sound.
2. Gently lift upward on the edge of the memory card cover.
3. Carefully remove the memory card.
4. Close and lock the memory card cover:
  - (1) close the memory card cover using your thumb to push the cover down (as shown below).
  - (2) slide the memory card cover back into the **Lock** position.

## Installing the battery

1. With the cover removed, verify the SIM card is securely inserted.
2. Slide the battery back into the compartment so that the tabs on the end align with the slots at the bottom of the phone.
3. Press the battery down until it clicks into place.



4. Reinstall the battery cover by sliding it back onto the phone until you hear it securely click. Make sure the battery is properly installed before switching on the phone.



### ***Charging a Battery***

Your phone is powered by a rechargeable Li-ion battery. A travel adapter, which is used for charging the battery, is included with your phone. Use only approved batteries and chargers. Ask your local Samsung dealer for further details.

You can use the phone while the battery is charging, but doing so requires additional charging time.

---

**Note:** You must fully charge the battery before using your phone for the first time. A discharged battery recharges fully in approximately 4 hours.

---

1. With the battery installed, temporarily remove the plastic cover on the right side of the phone and plug in the travel adapter's connector into the jack.



---

**Important!:** Verify that the handset battery is installed prior to connecting the travel adapter. If the battery is not installed and the travel adapter is connected the handset continuously power cycles and prevents proper operation.

---

2. Plug the adapter's power plug into a standard AC wall outlet.

---

**Note:** The previous illustration displays the **incorrect** method for connecting the charger. If attempted, damage to the accessory port occurs therefore voiding the phone's warranty.

---

3. When charging is finished, unplug the adapter's power plug from the AC wall outlet and then disconnect the travel adapter's connector from the phone.
4. Resecure the plastic cover over the interface jack on the phone.

---

**Warning!:** Failure to unplug the travel adapter before you remove the battery can cause damage to the phone.



---

### **Low Battery Indicator**

When the battery is weak and only a few minutes of talk time remain; a warning tone sounds and the "Battery low" message repeats at regular intervals on the display. In this condition, your phone conserves its remaining battery power, not by turning off the backlight, but by entering the dimming mode.

When the battery level becomes too low, the phone automatically turns off.


### **Switching the Phone On or Off**

1. Press and hold the  key until the phone switches on.
2. If the phone asks you to enter the phone password, use the keypad to enter this password and press either the **OK** soft key or .

---

**Note:** For more information, refer to "Change phone password" on page 87.

---


3. If the phone asks for a PIN, use the keypad to enter the PIN and press either the **OK** soft key or . For further details, see "Check PIN code" on page 88.

The phone searches for your network and after finding it, the term "T-Mobile" displays on the upper left half of your screen. Now you can make or receive calls.

---


**Note:** The display language is preset to Automatic at the factory. To change the language, use the **Language** menu. For more information, refer to “*Language*” on page 91.

---

4. When you wish to switch off the phone, press and hold the  key until the power-off image displays.

## Setting Up Your Voice Mail

For new users, follow the instructions below to set up voice mail:


1. In Idle mode, press and hold the  key on the keypad.  
You may be prompted to enter a password.
2. Follow the tutorial to create a password, a greeting, and your name.

---

**Note:** These steps may be different depending on your network.

---

## Accessing Your Voice Mail

1. In Idle mode, press and hold the  key on the keypad Your phone dials the specified voice mail number.
2. When connected, follow the voice prompts from the voice mail center.

## Section 2: Understanding Your Phone

---

This section outlines some key features of your phone. It also displays the screen and the icons that display when the phone is in use.

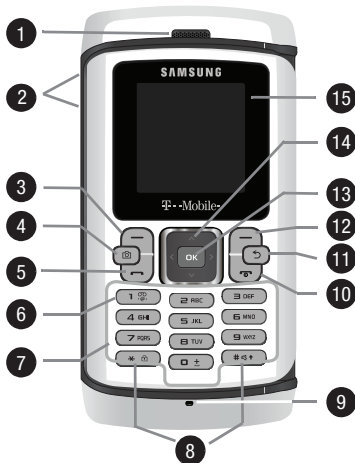 
### Features of Your Phone

Your phone is lightweight, easy-to-use and offers many significant features. The following list outlines a few of the features included in your phone.

- 2.0 Megapixel Camera with 2.5x Digital Zoom
- Bluetooth® Wireless Technology
- User friendly, menu driven access to features and options
- E-mail, Text, Picture, Video, and Instant Messaging capability
- Sound/Image media capability, including support for microSD memory cards of up to 16GB capacity.
- Fun & Apps feature provides files, games, music player, camera, voice recorder, organizer, and image editor.
- Organizer feature provides alarm, calendar, tasks, notes, calculator, tip calculator, world time, unit conversion, timer, and stopwatch.

## Front View of Your Phone

The following illustrations show the main elements of your phone:



## Keys

The following list correlates to the illustrations.

1. **Earpiece** allows you to hear the other caller and the different ring tones or sounds offered by your phone.
2. **Volume keys** allow you to adjust the Ring volume in standby mode (with the phone open) or adjust the Speaker volume during a call. When receiving an incoming call, if you press the volume key, you can mute the ring tone. If you press and hold the volume key, you can reject the call.
3. **Left Soft key** allows you to select soft key actions or menu items corresponding to the bottom left line on the display screen.
4. **Camera key** allows you to take pictures when you are in camera mode. Launches the camera with a press.



5. **Send key** allows you to make or answer a call. In Idle mode, recalls the last number dialed or received when held down.
6. **Voice mail key** allows you to quickly access your voice mail. Press and hold this key for two seconds to automatically dial your voice mail's phone number.
7. **Alphanumeric keys** allow you to enter numbers, letters, and some special characters.
8. **Special Function keys** allow you activate unique features while in Idle mode. In Idle mode, if you press and hold the \* key, the keypad locks. In Idle mode, if you press and hold the # key, you can turn on the Vibration Mode.
9. **Microphone** is used during phone calls and allows other callers to hear you clearly when you are speaking to them. It is also used in making voice note recordings.
10. **Power On/Off (Exit) key** ends a call. Press and hold this key for two seconds to turn your phone on or off. While in the Menu mode, it returns the phone to Idle mode and then cancels your input.
11. **Cancel/Clear key** deletes characters from the display. In Menu mode, this key returns you to the previous menu level.
12. **Right Soft key** allows you to select soft key actions or menu items corresponding to the bottom right line on the display screen. It also provides quick access to your Contacts.
13. **OK (Select) key** allows you to accept the choices offered when navigating through a menu.
14. **Navigation key** scrolls through the phone's menu options and acts as a shortcut key from Idle mode.  
In Idle mode:
  - **Up key:** allows you to directly access the Call history.
  - **Down key:** allows you to directly access the Contacts.
  - **Left key:** displays the New message screen so you can compose a new message.
  - **Right key:** launches the Audio postcard feature.
15. **Display** shows all the information needed to operate your phone, such as the received signal strength, phone battery level, and time.

## Open/Landscape View of Your Phone

The following illustration shows the landscape, open view of the phone.

This phone offers the convenience of a QWERTY keyboard. To open the phone to access the keyboard, rotate the phone 90 degrees to the left, gently lift up the top portion of the phone until the screen is parallel with the handset (as shown).



When you flip the phone open, the display rotates from a vertical viewing mode to a horizontal viewing mode.

1. **Left Soft Key** allows you to select soft key actions or menu items corresponding to the bottom left line of the screen.
2. **Earpiece** allows you to hear the other caller and the different ring tones or sounds offered by your phone.
3. **Shift** converts the alphabetic character into uppercase. Changes the text input mode to Upper/Lower case mode.
4. **Alt** allows you to use characters displayed at the top of the QWERTY keys. Examples: \$, @, #, !
5. **Symbol** displays the Symbols page. Choose from an extensive list of symbols and other character sets.

6. **www./com** inserts the www. or .com when entering a URL in the browser, or when logging in to Instant Messenger.
7. **Space** inserts an empty space.
8. **Return** moves the insertion point to the next line in a message.
9. **Send key** allows you to make or answer a call. In Idle mode, recalls the last number dialed or received when held down.
10. **Cancel/Clear** key deletes characters from the display. In Menu mode, this key returns you to the previous menu level.
11. **Power On/Off (Exit) key** ends a call. Press and hold this key for two seconds to turn your phone on or off. While in the Menu mode, it returns the phone to Idle mode and then cancels your input.
12. **OK (Select) key** allows you to accept the choices offered when navigating through a menu.
13. **Microphone** is used during phone calls and allows other callers to hear you clearly when you are speaking to them. It is also used in making voice note recordings.
14. **Navigation key** scrolls through the phone's menu options and acts as a shortcut key from Idle mode. In Idle mode:
  - **Up key:** allows you to directly access the Call history.
  - **Down key:** allows you to directly access Contacts.
  - **Left key:** scrolls to the left through the onscreen icons.
  - **Right key:** scrolls to the right through the onscreen icons.
15. **Camera key** allows you to take pictures when you are in camera mode. Launches the camera with a press.
16. **Messaging key** allows you to program this key as a shortcut to your favorite messaging tool. You can reprogram the key at any time.
17. **Right Soft key** allows you to select soft key actions or menu items corresponding to the bottom right line on the display screen. It also provides quick access to your Ph.Book when in Idle Mode..

- 18. Display** shows all the information needed to operate your phone, such as the received signal strength, phone battery level, and time.

## Camera View of Your Phone

The following illustration shows the Camera view of the phone.



- 1. Camera lens** allows you to aim and shoot a picture using the camera.
- 2. Speaker** allows you to hear the camera sounds and music played on the phone.

## Side View of Your Phone

The following illustrations show the external elements of your phone



1. **Volume keys** allow you to adjust the Ring volume in standby mode (with the phone open) or adjust the Speaker volume during a call. When receiving an incoming call, if you press the volume key, you can mute the ring tone. If you press and hold the volume key, you can reject the call.
2. **Power/Accessory Interface connector** allows you to connect a power cable or optional accessories, such as a USB/data cable or a hands-free headset for convenient, hands-free conversations.

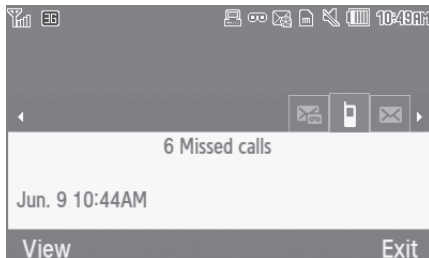 
## Display Layout

Your phone's display screen provides a wealth of information about your phone's status and options. The display has three areas:



## Missed Call Tab

When you receive new messages, icons display in two locations: on the phone's screen, Missed Call Tab, and in the icon bar at the top of the screen.



Missed Call Tab - Landscape

## Icons

This list identifies the symbols you'll see on your phone's display screen:



Shows the received signal strength. The greater the number of bars, the stronger the signal.



Shows the level of your battery. The more bars you see, the more power remains.



Displays when phone is in 3G network coverage



Displays when a call is in progress.



Displays when the phone is not receiving a signal.



Displays when the phone is connected to a computer.



Displays when Bluetooth wireless technology is active.



Displays when you set an alarm to ring at a specified time.  
For more details, see “*Alarm*” on page 107.



Displays when Vibration sound profile is active.



Displays when Normal sound profile is active.



Displays when Driving sound profile is active



Displays when Silent sound profile is active



Displays when Outdoor sound profile is active



Displays when Airplane mode is active



Displays when the Call Forwarding feature is active. For more details, see “*Call forwarding*” on page 97.



Displays when a new voice mail is received.



Displays when a new text message is received.



Displays when a new picture, voice note or audio postcard message is received.


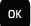


## Backlight

A backlight illuminates the internal display and the keypad. When you press any key, the backlight comes on. It goes off when no keys are pressed within a given period of time, depending on the setting within the **Backlight** menu. The display turns off after one minute to conserve battery power.

The **Backlight time** setting is how long the keypad backlight is on. The **Dim** option is how much longer after the keypad backlight goes off that the display remains lit.

To specify the length of time the backlight is active, access the **Backlight time** menu:

1. Press **Menu** → **Settings** → **Personalize** → **Display settings**, highlight **Backlight time** and press **Select** or .
2. Select the **On** field to set the time the backlight is on and press **OK**. You may choose between **10 seconds**, **15 seconds**, **30 seconds**, or **1 minute**.
3. Press the **Down** Navigation key to highlight the **Dim** field and press . Select the time the Dim mode is on and press **OK**. You may choose between **Off**, **5 seconds**, **15 seconds**, **30 seconds**, or **1 minute**.
4. Press the **Save** soft key to retain your settings.

## Display

Your phone has a display on the front of the phone and on the inside of the phone (landscape). The display indicates when you receive an incoming call or message and also displays any alarms for the specified time. The backlight turns on and the corresponding icon displays on the screen.

The display shows the current time on a digital clock.

## Section 3: Menu Navigation

---

This section explains the menu navigation for your phone. It also includes an outline of all the available menus associated with your phone.

### Menu Navigation

You can tailor the phone's range of functions to your needs using menus and sub-menus. Menus and sub-menus can be accessed by scrolling using the Navigation keys or by using the shortcuts.

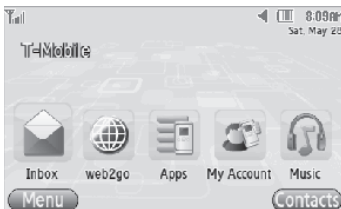 
#### Menu Design

The first time you turn on the phone your main menu displays as a Circle menu. Use this option to configure the display as either Circle or Grid menu format.

- From the **Settings** → **Menu Design** menu, highlight **Circle menu** or **Grid menu** and press **Select** or **OK**.

#### Menu Shortcuts and Landscape Mode

When you open your handset in landscape mode, the Idle screen looks differently than the portrait (front) Idle screen. Five icons display on the lower portion of the screen (as shown). These icons function as shortcuts to the most frequently used menus: Inbox, web2go, Apps, My Account and Music.




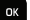
Idle screen - Landscape

These menus function as shortcuts and can be used instead of navigating through the Main menu structure listed in the procedures.




To access the short cuts:

- In Idle mode, press the Left or Right Navigation key until you highlight the shortcut icon then press **OK**.

## Accessing a Menu Function by Scrolling

1. In Idle mode, press **Menu**.
2. Scroll using the Navigation keys to reach a main menu (for example: **Settings**). Press **Select** or  to enter the menu.
3. If the menu contains sub-menus, (for example, **Personalize**), after highlighting the sub menu, press **Select** or .

If the menu you selected contains further options, repeat this step.

4. To scroll through the menus, press the **Up** or **Down** Navigation keys.
5. To confirm the chosen setting, press **Select** or .
6. To return to the previous menu level, press the **Back** soft key, or .
7. To exit the menu without changing the settings, press .





## Using Shortcuts

The menu items, such as menus, sub-menus, and options, are numbered and can be accessed quickly by using their shortcut numbers. For the main menus, press the corresponding number keys (1 to 0) to access any one of the shortcuts.

---

**Example:** Accessing the **Security** menu.

---


1. Press the **Menu** soft key.
2. Press  for **Settings**.
3. Press  for **Personalize**.
4. Press  for **Phone settings**.
5. Press  for **Security**.

## Section 4: Call Functions

---

This section describes how to make or answer a call. It also explains the features and functionality associated with making or answering a call.

### Making a Call

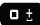

When the idle screen displays, enter the number you wish to dial and press the  key.

---




**Note:** When you activate the **Auto redial** option in the **Auto redial** menu, the phone automatically redials up to 10 times when the person does not answer the call or is already on the phone, provided your call is not sent to voice mail.

---

### Making an International Call

1. Press and hold the  key. The + character displays.
2. Enter the country code, area code, and phone number.
3. Press the  key to make the call.

### Correcting the Number

1. To clear the last digit displayed, press .
2. To clear any other digit in the number, press the **Left** or **Right** Navigation key until the cursor is immediately to the right of the digit to clear and then press . You can also enter a missing digit.
3. To clear the entire display, press and hold .


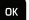
### Ending a Call

- Briefly press **End**  when you want to end your call.


## Redialing the Last Number

The phone stores the numbers of the calls you've dialed, received, or missed if the caller is identified.

To recall any of these numbers:

1. If you typed characters on the display, press the  key to return to Idle mode.
2. Press the **Up** Navigation key to display a list of the most recent numbers used in the order you dialed or received them.
3. Use the **Up** and **Down** Navigation keys to scroll through the numbers and highlight the number you want.
4. To view call time for this number press .

Before you dial the number, you may also press the **Options** soft key to display the following options:

- **Call:** Allows you to call the selected number.
  - **Send message:** Allows you to send a Message or Audio postcard to the number.
  - **Save in Phonebook:** Allows you to save the contact information in the Phonebook.
  - **Delete:** Allows you to delete the selected number or All call records.
5. Press  to dial the number.

## Making a Call from the Phonebook

You can store regularly used phone numbers into the phone's memory (Phonebook).

Once you store a number in the Phonebook, you can press only a few keys to dial the stored number. By using the Speed Dial feature you can also assign your most frequently-used numbers to number keys.

For further details about the Phonebook feature, see “*Contacts*” on page 58.

## Adjusting the Call Volume

During a call, use the Volume keys on the left side of the phone to adjust the speaker volume.

- ▶ Press the **Up volume** key to increase the volume level and the **Down volume** key to decrease the level.

In Idle mode, you can also adjust the ring volume using these keys.

---

**Important!:** For safety information related to Call Volume, see *"Responsible Listening"* on page 136.


---

## Answering a Call


When somebody calls you, the phone rings and displays the incoming call image.

The caller's phone number, or name if stored in Phonebook, displays.

1. Press the  key or the **Accept** soft key to answer the incoming call.

If the **Any key** answer option in the **Answering mode** menu is activated, you can press any key to answer a call except for the  key and the **Reject** soft key. For more information about Answering mode, see *"Answering mode"* on page 96.

---

**Note:** To reject an incoming call, press the **Reject** soft key or .

---

2. Press  to end the call.

---

**Note:** You can answer a call while using the Phonebook or menu features. After ending the call, the phone returns to the function screen you were previously using.

---

## Call history

All incoming, outgoing and missed calls are listed in the Call history.

1. In Idle mode, press **Menu** → **Call history** and press **Select** or  to enter the menu.

---

**Note:** While in Idle mode, press the **Up** Navigation key to access the Call history.

---

Use the Right and Left Navigation keys to scroll through the Call history screens. The following Call history options are available:

## All calls

This menu lets you view the 90 most recent calls you received, dialed, and missed.

The name or number, if already stored in your Phonebook, displays with the number of occurrences for each number.

---

**Note:** At any time while you are in Call History, you may use the **Left** or **Right** Navigation keys to scroll between **All calls**, **Missed calls**, **Dialed calls**, and **Answered calls**.

---

## Missed calls

This menu lets you view the 30 most recent calls you received, but did not answer. The name and number, if already stored in your Phonebook, displays with the number of occurrences for each number.

### Viewing Missed Calls



When you are unable to answer a call for any reason, you can find out who is calling you, if this service is available, so that you can call the person back.

The number of calls you missed displays on the idle screen on the Missed Call tab, immediately after a call is missed.

To view a missed call immediately:

1. If the display is off, press the volume key to turn on the display.  
The Missed Call tab displays the last missed call.  
— or —
2. Press the **Up** Navigation key to view the **Call history**, then press the **Right** Navigation key to view the **Missed calls**.

The number corresponding to the most recently missed call displays, if available.

3. To scroll through the missed calls, press the **Up** or **Down** Navigation key.
4. Press  to call the displayed number.  
— or —  
Press  to display call details.

5. Press the **Options** soft key for the following options:

- **Call**: Allows you to call back the missed caller.
- **Send message**: Allows you to send a Message or Audio Postcard to the missed number.
- **Save in Phonebook**: Allows you to save the contact information in the Phonebook.
- **Delete**: Allows you to delete the selected number or delete all call records.

---

**Note:** You can press the  key at any time to exit the **Missed calls** feature.

---

### ***Dialed calls***

This menu allows you to view the 30 most recent calls you dialed. The name and number, if already stored in your Phonebook, displays with the number of occurrences for each number.

### ***Answered calls***



This menu allows you to view the 30 most recently answered calls. The name and number, time and date, displays with the number of occurrences for each number.

### ***Delete all***

This menu allows you to delete all of the records at one time.

1. Press the **Up** Navigation key to display the Call history menu.
2. Press **Options** → **Delete** → **All**.
3. At the **Delete all?** prompt, press **Yes** to delete all calls or **No** to cancel.  
— or —


Delete all using the Management Menu

1. Press **Menu** → **Settings** → **Call settings** → **Call log management** → **Delete all history** and press .
2. Highlight **All Calls** and press **Mark** or .
3. Press the **Delete** soft key to delete. At the **Delete?** prompt, press **Yes** to delete all calls or **No** to cancel.



## Vibration profile

Vibration profile is convenient when you wish to stop the phone from making any noise, (in a theater for example).

In Idle mode, press and hold the **set** key until the “**Vibration profile on**” message and the Vibration profile icon () display. When using Vibration profile, instead of sounds, your phone vibrates.

To exit and reactivate the previous sound settings, press and hold the **set** key again until the “**Normal profile on**” message displays.

## Selecting Functions and Options

Your phone offers a set of customizable functions. These functions are arranged in menus and sub-menus, and accessed using the two soft keys. Each menu and sub-menu allows you to view and alter the settings of a particular function.

### Soft Keys


The roles of the soft keys vary depending on the function you are currently using. The labels on the bottom line of the display just above each key indicate their current role.

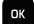


### Selecting Options

To view the various functions and options available, you must select the one you want by:

1. Pressing the appropriate soft key.
2. Selecting the displayed function or the highlighted option, press **Select** or **OK**.
3. Viewing the next function or highlighting the next option on a list, by pressing the **Down** Navigation key.

4. Moving back to the previous function or option on a list, by pressing the **Up** key.
5. Moving back up one level in the menu structure, by pressing the **Back** soft key.
6. Pressing the  key to exit the menu structure without changing the settings.

In some functions, you are asked for a password or PIN. Enter the correct code and press the **OK** soft key or .

When you access a list of options, your phone highlights the currently active option. If, however, there are only two options, such as **On/Off** or **Enable/Disable**, your phone highlights the option that is not currently active, so that you can select it.

### **Options During a Call**

Your phone provides a number of control functions that are available for use during a call.

#### **Switching off the Microphone (Mute)**

You can temporarily switch your phone's microphone off, so that the other person cannot hear you.

---

**Example:** You wish to say something to a person in the room but do not want the person on the phone to hear you.

---

To switch the microphone off temporarily:

- ▶ Press the **Mute**  key. The other person can no longer hear you. The Mute icon (  ) displays at the bottom left of the screen.


To switch the microphone back on:

- ▶ Press the **Unmute**  key. The other person can hear you again.


#### **Putting a Call on Hold**

You can place the current call on hold whenever you want. If your network supports this service, you can also make another call while a call is in progress.

To place a call on hold:



1. Press the **Options** soft key, highlight the **Hold** option, then press **Select** or .
2. Press the **Resume** soft key to reactivate the call.

To make a new call while a call is in progress:

1. Press **Options** → **New call** and press **Select** or .
2. Enter the new phone number that you wish to dial or press Search to look up the number.
3. Press **Call** to call the second number.

When there is an active call and a call on hold, you may switch between the two calls by placing the current held call to active and then placing the other call on hold.

To switch between the two calls:

1. Press the **Options** soft key, select **Swap**, and press . The current active call is placed on hold and the call on hold is then reactivated so that you can continue conversing with that person.
2. Press the  key when you are finished or want to end the call.

### Using the Speakerphone

While on a call, you can use your Speakerphone by following these steps:

1. Press the **Spkr on** soft key.
2. To turn the Speakerphone off, press the **Spkr off** soft key.

### Searching for a Number in Phonebook

You can search for a number in Phonebook during a call.

1. Press the **Options** → **Phonebook** and press .
- The Contacts screen displays.

With the Phonebook entries displayed:

2. Enter the name that you wish to find in the textbox located above the entries. If you enter the first few letters of the name, the Phonebook entries display, starting with the first entry that matches your input.
- Or, use the **Up** or **Down** Navigation key to highlight the contact that you desire.

3. To view the highlighted entry, press **View**. The Contact information displays.

---

**Tip:** For further details about the Phonebook feature, see “*Contacts*” on page 58.


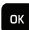


---

## Call Waiting

The **Call waiting** option must be set to **Activate** before you can answer an incoming call while another call is in progress.

You are then notified of an incoming call with a call waiting tone.

To answer a new call while another call is in progress:

1. Press either the **Accept** soft key or the  key to answer the incoming call. The first call is automatically put on hold.
2. To switch between the two calls, press the **Options** soft key, highlight **Swap** and press **Select** or .
3. To end a call on hold, press the **Options** soft key and select the **End → Held call** option. Then press **Select** or .
4. To end the current/remaining call, press .

## Making a Multi-Party Call

A multi-party call is a network service that allows up to six people to take part simultaneously in a multi-party or conference call.

For further details about subscribing to this service, contact T-Mobile customer service.

## Setting up a Multi-Party Call

1. Call the first participant in the normal way.
2. Press **Options → New call**.
3. Call the second participant in the normal way. The first call is automatically placed on hold.

4. To join the first participant to this multi-party call, press **Options → Join**.

---

**Note:** These first two calls are then grouped together on screen and displayed with an adjacent number corresponding to the order in which the calls were made.

---

---

**Note:** There are a maximum of two callers that can be joined to a single multi-party line. You cannot create two multi-party calls.


---

### Having a Private Conversation With One Participant

When there are two participants in a multi-party session, it might be necessary to place one of those participants on hold so that a private conversation can be held with a single caller. While you are in a multi-party call:

1. Press **Options → Split** option.

The short list of call participants then displays with the first caller selected.

2. Press the **Up** or **Down** Navigation key to highlight the person with which you want to talk privately, and press **Select** or .

---


**Note:** You can now talk privately to that person while the other participant is on hold.

---

3. To return to the multi-party call, press the **Options → Join**.

The other participant can now hear your conversation.

### Dropping One Participant

1. Press **Options → Split**. The short list of call participants displays.
2. Highlight the person you want to keep and press **Options → End**, press the **Right** Navigation key and select **Active call**, **Held call**, or **All calls**.
3. When you want to end the multi-party call, press the  key.

## Section 5: Entering Text

This section outlines how to select the desired text input mode when entering characters into your phone. This section also describes how to use the T9 predictive text system to reduce the number of key strokes associated with entering text.

### Using the QWERTY Keyboard

This phone also offers the convenience of a flip QWERTY keyboard. Using the QWERTY keyboard, you can type letters, numbers, punctuation, and other special characters into text entry fields or other applications simpler and faster than using the telephone keypad.

The following keys perform special functions when entering text:



1. **Left Soft Key** allows you to select soft key actions or menu items corresponding to the bottom left line of the screen.
2. **Earpiece** allows you to hear the other caller and the different ring tones or sounds offered by your phone.


3. **Shift** converts the alphabetic character into uppercase. Changes the text input mode to Upper/Lower case mode.
4. **Alt** allows you to use characters displayed at the top of the QWERTY keys. Examples: \$, @, #, !
5. **Symbol** displays the Symbols page. Choose from an extensive list of symbols and other character sets.
6. **www./com** inserts the www. or .com when entering a URL in the browser, or when logging in to Instant Messenger.
7. **Space** inserts an empty space.
8. **Return** moves the insertion point to the next line in a message.
9. **Send key** allows you to make or answer a call. In Idle mode, recalls the last number dialed or received when held down.
10. **Cancel/Clear key** deletes characters from the display. In Menu mode, this key returns you to the previous menu level.
11. **Power On/Off (Exit) key** ends a call. Press and hold this key for two seconds to turn your phone on or off. While in the Menu mode, it returns the phone to Idle mode and then cancels your input.
12. **OK (Select) key** allows you to accept the choices offered when navigating through a menu.
13. **Microphone** is used during phone calls and allows other callers to hear you clearly when you are speaking to them. It is also used in making voice note recordings.
14. **Navigation key** scrolls through the phone's menu options and acts as a shortcut key from Idle mode. In Idle mode:
  - **Up key:** allows you to directly access the Call history.
  - **Down key:** allows you to directly access Contacts.
  - **Left key:** scrolls to the left through the onscreen icons. Note: if you subscribe to myFaves, your favorites rotate one place counterclockwise
  - **Right key:** scrolls to the right through the onscreen icons. Note: if you subscribe to myFaves, your favorites rotate one place clockwise.
15. **Camera key** allows you to take pictures when you are in camera mode. Launches the camera with a press.

16. **Messaging key** allows you to program this key as a shortcut to your favorite messaging tool. You can reprogram the key at any time.
17. **Right Soft key** allows you to select soft key actions or menu items corresponding to the bottom right line on the display screen. It also provides quick access to your Contacts in Idle mode.
18. **Display** shows all the information needed to operate your phone, such as the received signal strength, phone battery level, and time.

## Changing the Text Input Mode

When using your phone, you often need to enter text, such as when storing a name in your Phonebook, creating your personal greeting or scheduling events on your calendar. You can enter alphanumeric characters by using your phone's keypad.

Your phone has the following text input modes:

- **ABC**: this mode allows you to enter letters by pressing the key labeled with the corresponding letter.
- **T9 (English)**: this mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter; for example, you press  to enter J, or K. However, the T9 mode automatically compares the series of keystrokes you make with an internal linguistic dictionary to determine the most likely word, thus requiring fewer keystrokes than the traditional ABC mode.
- **Numeric**: this mode allows you to enter numbers.
- **Symbol**: this mode allows you to enter symbols, such as punctuation marks.


---

**Note:** When you are in a field where you can enter characters, the text input mode indicator displays at the bottom right of the screen. Press the soft key to choose the Text Input Mode.

---

## Using ABC mode

To use ABC mode, use the letter keys to enter your text.

1. Press the key labeled with the letter you want:
  - Once for the first letter, twice for the second letter, and so on.
2. Select the other letters in the same way.
  - To enter periods, hyphens, apostrophes, and other special characters, press and hold the  key then press the key that contains the associated symbol.



- To shift case in ABC mode, press . There are 3 cases: Capital lock, Initial capital, and Lower case.

---

**Note:** You can move the cursor by using the Navigation keys.

---

To delete letters:


► Press . Press and hold the  key to clear the display.

---





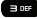






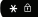
**Note:** The cursor moves to the right when you press a different key. When entering the same letter twice or a different letter on the same key, just wait for a few seconds for the cursor to automatically move to the right, and then select the next letter.

---

## Keys

By default, the first letter of an entry is capitalized and all consecutive letters are kept in lowercase (unless the  key is used). After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character on a different key.

Characters scroll in the following order (lowercase characters shown in parentheses):

	.@,:?-'!'/1		PQRS7 (pqrs7)
	ABC2 (abc2)		TUV8 (tuv8)
	DEF3 (def3)		WXYZ9 (wxyz9)
	GHI4 (ghi4)		One press inserts a space. Two presses insert a period.
	JKL5 (jkl5)		Press to shift case.
	MNO6 (mno6)		Press and hold to display symbols.

## Using T9 Mode

T9 is a predictive text input mode that allows you to key in any character using single keystrokes. This text input mode is based on a built-in dictionary.

To enter a word in T9 mode:


1. When you are in T9 mode, press any one of the letter keys to enter a word. Press each key only once for each letter.

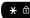
---

**Example:** To enter “Hello” in T9 mode, from the portrait keyboard, press the 4, 3, 5, 5, and 6 keys.

---

The word that you type displays on the screen. The word may change with each consecutive key press.

2. Enter the whole word before editing or deleting the keystrokes.
3. Press  to insert a space and begin entering the next word.

To enter periods, hyphens, apostrophes, and other special characters press  then press the key that contains the associated symbol.

To shift case in T9 mode:

- ▶ Press .

There are 3 cases: Capital lock, Initial capital, and Lower case.

---

**Tip:** You can move the cursor by using the Navigation keys.

---

To delete characters:

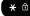
- ▶ Press . Press and hold the  key to clear the display.



## Using Number Mode

The Number mode enables you to enter numbers into a text message.

- ▶ Press the keys corresponding to the digits you want to enter.

## Using Symbol Mode

Symbol mode enables you to insert symbols and punctuation marks into text. To display a list of symbols press  until the symbols display on the screen, or press the Right soft key and select Symbol.

1. To insert the symbol a symbol, press the corresponding number key.
2. To display more symbols, press the Up and down Navigation keys.
3. To clear the symbol(s), press  . When the input field is empty, this key returns the display to the previous mode.
4. To insert the symbol(s) into your message, press the **OK** soft key or  .

## Section 6: Messaging

---

This section describes how to send or receive different types of messages. It also explains the features and functionality associated with messaging.

### Types of Messages




The following message types are available:

- Text Messages
- Picture Messages
- E-mail messages
- Audio postcards
- Instant Messaging
- Voice Mail

### Display Icons for Messages

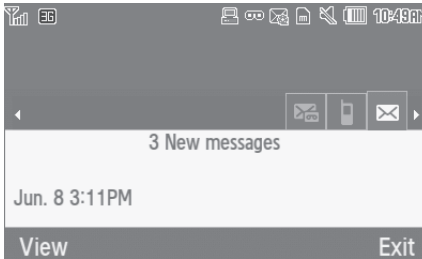 
When the handset receives new messages, icons display on the screen in two locations: on the View Tab that displays on the lower portion of the screen, and on the top of the screen (see “*Display Layout*” on page 19.)

#### ***Message Icons on the Icon Line***

The  icon displayed at the top of the screen indicates that a new text message or e-mail message was received. The  icon indicates a new picture message was received. The  icon indicates a new voice mail message was received.

## Missed Messages Tab




The Missed Messages Tab is an area that displays on the screen when a missed call, picture message, or voice mail is sent to the phone.



View Tabs for  
New messages,  
Missed Calls, or  
Voicemail

Missed Messages tab - Landscape mode

There are three View tabs that display icons:

1.  Text / Picture / Audio Postcard message
2.  Missed Calls
3.  Voice mail

Search through missed calls or unviewed messages by using the **Right** and **Left** navigation keys to select the associated message tab, then press the **Dial**, **Call**, or **View** soft key.

## Text Messages

Short Message Service (SMS) sends and receives short text messages to and from other mobile phones. In addition, the phone automatically switches to a picture message when you attach images, melodies, and animated images in messages.

---

**Important!** To use this feature, you must subscribe to T-Mobile's message service.



---

The Message icon displays when there is a new text message. When the memory is full, you cannot receive any new messages. You must delete message(s) before you can receive additional messages.

### Create message

Use this feature to write and send a text message.

#### Creating a Simple Text Message

1. Open the handset and perform this procedure using the QWERTY keypad.
2. In Idle mode, press **Menu** → **Messaging** → **Create message** and press Select or .
3. Highlight the **Recipients** field and press .
4. Select one of the following options:
  - **Recent recipients:** allows you to select a number or an address from the last 20 destinations you entered.
  - **Contacts:** allows you to enter the phone number you want from your phonebook.
  - **Groups:** allows you to select a group for a group e-mail.

— or —

Enter a phone number in the recipients field.
5. Press the **Down** navigation key and create your message.

 
---

**Note:** For further details, about entering characters, see “*Changing the Text Input Mode*” on page 37. You can enter up to 160 standard Alphabet characters per page in your text message, and the message can be up to 15 pages long.

---


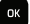
6. Press the **Options** soft key when you finish entering your message. The following options are available:
  - **Add recipients:** Choose recipients for this messages, from Recent recipients, Contacts or Groups.

- **Insert:** allows you to insert a **Text template**, **Text emoticon**, **Contacts**, or **Bookmarks** to your message.
- **Add attachment:** allows you to attach a File, Name card, an Appointment, Anniversary, Private, Holiday or Important event, or Tasks, Memos or Bookmarks
- **Copy & Paste:** allows you to turn on the text selection feature so you can copy and paste text in this message.
- **More:** allows you to set advanced options for messages, including:
  - **Add page:** add a page converts the message to a Picture Message so that you can attach a file.
  - **Sending options** (available if the Recipients list and message body have entries):
    - Reply path:** allows the recipient of your message to send you a reply message using your message center, if your network supports this service.
    - Request delivery report:** allows you to activate or deactivate the report function. When this option is enabled, the network informs you whether or not your message was delivered.
  - **Select language:** allows you to set the language to English, Français, or Español.
- **Save to:** allows you to save this message:
  - **Drafts:** saves the message to your Phone's Drafts folder.
  - **Templates:** saves the current text message to the list of preset message templates.
- **Exit composer:** allows you to exit the Create message screen. If you have entered text in the message, you will be prompted to save the message in Drafts; press the Yes or No soft key.

7. Press  to send the message.

## **Picture Message**

This menu allows you to create a new picture message and then send it to one or more destinations.

1. Open the handset and perform this procedure using the QWERTY keypad.
  2. In Idle mode, press **Menu** → **Messaging** → **Create message** and press **Select** or .
  3. Highlight the **Recipients** field and press .
  4. Select one of the following options:
    - **Recent recipients:** allows you to select a number or an address from the last 20 destinations you entered.
    - **Contacts:** allows you to enter the phone number you want from your phonebook.
    - **Groups:** allows you to select a group for a group e-mail.
- or –

 
Enter a phone number in the recipients field.

5. Press the **Down** navigation key and create your message.

---

**Note:** For further details, about entering characters, see *“Changing the Text Input Mode”* on page 37. You can enter up to 2000 standard Alphabet characters per page in your message, and the message can be up to 20 pages long.




---

6. Press the **Down** Navigation key and select one of the following icons to add an attachment:
  - **Record sound:** allows you to record a voice note to attach to this message.
  - **Add sound:** allows you to attach a file from the Sounds or Voice List folder to this message.
  - **Add picture:** allows you to attach an image from the Photos folder.
  - **Take picture:** activates the camera so you can take a picture and attach it to this message.
  - **Add video:** allows you to attach a video from the Videos folder, or activates the camcorder so you can take a video and attach it to this message.
7. Press  to send the message.

## Inbox

The Inbox stores received messages. You can tell what kind of message was received by the icon displayed. If the icon envelope is open then the message was read, otherwise a closed envelope displays.

The following types of messages may display in your inbox:

1.  Text messages
2.  Picture messages
3.  Audio Postcard

When you enter the Inbox, the list of messages displays with the sender's phone numbers, or names, if available in your Contacts list. After you view the message, the open envelope icon displays.

---

**Tip:** Press the **Left** or **Right** Navigation keys to scroll between **Inbox**, **Sentbox**, **Drafts**, **My folders**, and **Templates**.

---

► In Idle mode, press **Menu** → **Messaging** → **Inbox** and press **Select** or .



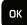
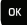
## Viewing a Text Message from the Inbox

1. In Idle mode, press **Menu** → **Messaging** → **Inbox** and press **Select** or **OK**.
2. Select a text message from the list and press the **Options** soft key. The following options display:
  - **Reply**: allows you to send a reply to the sender by sending a message.
  - **Call back**: allows you to call the sender back.
  - **Forward**: allows you to forward the text message to another person.
  - **Save to Contacts**: allows you to save the contact information in your Contacts list.
  - **Delete**: deletes the selected, multiple, or all messages.
  - **Lock/Unlock**: locks the selected message to protect it from deletion, or unlocks the message to allow deletion.
  - **More**:
    - **Move to Phone/SIM card**: allows you to move the message to store it in the phone's memory or on the SIM card.
    - **Move to my folders**: allows you to move the selected, multiple or all messages to My folders under Messaging.
    - **Sort by**: allows you to sort messages by Date, Sender, Type, Subject, Size, and Lock/Unlock status.
3. Press **OK** to view the message contents.
4. Press the **Up** or **Down** Navigation key to scroll through the contents.



Press the **Options** soft key while reading a text message to display the following:

- **Call back**: calls the sender of the message.
- **Forward**: allows you to forward the message to another number.
- **Save to Contacts**: allows you to save the contact information in your Contacts list.
- **Delete**: allows you to delete the message.
- **Lock/Unlock**: locks the selected message to protect it from deletion, or unlocks the message to allow deletion.
- **Save to Templates**: allows you to save this text message as a template for use in later messages.
- **More**:
  - **Move to Phone/SIM card**: allows you to move the message to store it in the phone's memory or on the SIM card.
  - **Move to my folders**: allows you to move the selected, multiple or all messages to My folders under Messaging.
  - **Print via Bluetooth**: allows you to print the message using a Bluetooth enabled printer.

## Viewing a Picture Message from the Inbox

1. In Idle mode, press **Menu** → **Messaging** → **Inbox** and press **Select** or .
2. Select a picture message from the list and press the **Options** soft key. The following options display:
  - **Reply**: allows you to send a reply to the sender by sending a message.
  - **Call back**: allows you to call the sender back.
  - **Forward**: allows you to forward the text message to another person.
  - **Delete**: deletes the selected, multiple, or all messages.
  - **Lock/Unlock**: locks the selected message to protect it from deletion, or unlocks the message to allow deletion.
  - **More**:
    - **Move to my folders**: allows you to move the message to My folders.
    - **Sort by**: allows you to sort messages by Read/Unread status, Date, Sender, Type, Subject, Size, and Lock/Unlock status.
    - **Properties**: displays Date, To:, From:, Size, Priority, Delivery report and Read report settings.
3. Press  to **View** the message contents.
4. Press the **Options** soft key while viewing a picture message to display the following:
  - **Reply**: allows you to send a reply to the sender by sending a message.
  - **Call back**: calls the sender of the message.
  - **Forward**: allows you to forward the message to another number.
  - **Replay**: allows you to replay the message (if video is attached).
  - **Save to Contacts**: allows you to save the contact information in your Contacts list.
  - **Delete**: allows you to delete the message.
  - **Save media**: allows you to save the attachments from the message.
  - **Lock/Unlock**: locks the selected message to protect it from deletion, or unlocks the message to allow deletion.
  - **Save to Templates**: allows you to save this message as a template for use in later messages.
  - **More**:
    - **Move to my folders**: allows you to move the selected, multiple or all messages to My folders under Messaging.
    - **Print via Bluetooth**: allows you to print the message using a Bluetooth enabled printer.
    - **Properties**: displays Date, To:, From:, Size, Priority, Delivery report and Read report settings.

## ***Listening to an Audio Postcard from the Inbox***

1. In Idle mode, press **Menu** → **Messaging** → **Inbox** and press **Select** or .
2. Select an Audio Postcard from the list and press the **Options** soft key. The following options display:
  - **Reply**: allows you to send a reply to the sender by sending a message.
  - **Call back**: allows you to call the sender back.
  - **Forward**: allows you to forward the message to another number.
  - **Delete**: deletes the Selected, Multiple or All messages.
  - **Lock/Unlock**: locks the selected message to protect it from deletion, or unlocks the message to allow deletion.
  - **More**:
    - **Move to my folders**: allows you to move the selected, multiple or all messages to My Folders under Messaging.
    - **Sort by**: allows you to sort your messages by Date, Sender, Subject, Size, or Lock status.
    - **Properties**: displays information about the message, including Date, From, To, Size, Priority, Delivery report and Read report status.
3. Press  to **View** the message. You will be prompted to choose whether to play sound.
4. Press **Stop** to stop listening to the message.
5. Press **Options** to display the following:
  - **Reply**: allows you to send a reply to the sender by sending a message.
  - **Call back**: allows you to call the sender back.
  - **Forward**: allows you to forward the message to another number.
  - **Replay**: allows you to play the message again.
  - **Save to Contacts**: allows you to save the contact information to your Contacts list.
  - **Delete**: deletes the selected message.
  - **Save media**: saves the attached files to the phone's memory or to an installed memory card.
  - **Lock/Unlock**: locks the selected message to protect it from deletion, or unlocks the message to allow deletion.
  - **Save to Templates**: saves the current message to the current list of preset message templates.
  - **More**:
    - **Move to my folders**: allows you to move the message to a personal folder.
    - **Print via Bluetooth**: allows you to print the message using a Bluetooth enabled printer.
    - **Properties**: shows you information about the message, such as Subject, Received date, From, To, Cc, Size, and Priority.


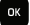

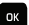


## E-mail

The E-mail option allows you to send or receive POP e-mail from AIM Mail, AOL Mail, Yahoo! Mail or you can select from several other predefined broadband e-mail providers.

### E-mail Setup







When you first activate the E-mail feature a welcome message displays. Press Next and continue with step 1 of the following procedure.

This option allows you to select the e-mail accounts you want to use.

1. In Idle mode, press **Menu → Messaging → E-mail** and press **Select** or .
2. Read the Welcome message (if this is the first setup) and press **Next**.
3. Select an account, and press **Select** or .
- or —
4. If you selected **More Accounts**, press the  key, and select an e-mail provider from the list, then press **Select** or .
5. If you selected AOL Mail as your e-mail service, press the **I agree** soft key, then sign in.
6. Enter the **E-mail address** and **Password**. Also, press the  key to select the **Keep me signed in** or **New E-mail Notification** checkbox (if desired).
7. Press  to sign in.
8. When the **Congratulations!** e-mail setup message displays, press the **OK** soft key to confirm your selection.

## Audio Postcard

In this menu you can select a frame, take a picture and then record a voice message up to one minute long and send it as an Audio Postcard.

1. In Idle mode, press **Menu** → **Messaging** → **Audio postcard** and press **Select** or .
2. Prior to capturing the picture you can select the **Menu** soft key and change the Camera settings. Options are:
  - **Camera:** set by default to Camera Audio postcards.
  - **Timer:** allows you to set a time delay before the camera takes the photo. Select the length of delay : 2 seconds, 5 seconds or 10 seconds. When you press the **OK**  button or **Camera**  key, the camera takes the photo after the specified time has elapsed.
  - **Choose frame:** allows you to choose a postcard frame, so that your picture is centered in the frame like a postcard. You can also choose a frame by pressing the Right navigation key in the Audio postcard screen.
  - **Night shot:** allows you to set mode for photos taken at night.
  - **White balance:** allows you to set this option from the following choices: Auto, Daylight, Incandescent, Fluorescent, or Cloudy.
  - **Effects:** allows you to change the color tone or apply special effects to the photo.
  - **Settings:**
    - Photo:** allows you to choose Economy, Fine or Superfine photo quality.
    - Setup:** consists of the following:
      - **Shutter sound:** allows you to select a tone to play when the camera's shutter opens and closes. Sound selections are Shutter1, Shutter2, Shutter3 or None.
      - **Default storage:** allows you to choose the default storage medium, either Phone or Memory card.
3. Hold the phone in landscape orientation, center a subject in the frame, then press the **OK**  button or **Camera** key  to take a photo for the postcard. The photo saves to the Photos folder.
4. Press **Add voice**  key to add a voice note to this postcard.
5. Press the **Stop** soft key when you are finished recording the voice message.
6. Press the **Send** to soft key to add recipients. Press the **Options** soft key for these options:
  - **Add recipients:** allows you to select a number or an address from the last 20 destinations you entered, or from your Contacts.
  - **Change recipients:** allows you to change the currently selected recipient to the To, Cc or Bcc lists.
  - **Back:** allows you to return to the Audio postcard.

7. Press **Select** and continue adding additional recipients.  
– or –
8. Press the **Send** soft key after you select a recipient.

## Instant Messaging (IM)

Instant Messaging is a way of sending short, simple messages that are delivered real time to users online.

Before using this feature, you need to subscribe to a messenger service. Your handset has 3 pre-loaded Messaging services (AIM, Windows Live, and Yahoo!).

---

**Note:** Contact T-Mobile customer service for further details.

---

## Sentbox

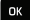
This message box stores sent messages. When you enter this menu, the list of messages in the Sentbox displays with the recipients' phone numbers or names, if available in your Contacts list.

1. Flip open the handset to Landscape view.
2. In Idle mode, press **Menu → Messaging → Sentbox** and press **Select** or .

---

**Note:** Press the **Left** or **Right** Navigation keys to scroll between **Sentbox**, **Drafts**, **My folders**, **Templates**, and **Inbox**.

---

3. Press **Options** for the following:
  - **Forward:** allows you to send the message to a new recipient.
  - **Delete:** deletes the Selected message, Multiple messages, or All messages.
  - **Lock/Unlock:** locks the selected message to protect it from deletion, or unlocks the message to allow deletion.
  - **More:**
    - **Move to my folders:** moves the Selected message, or Multiple messages from the current location to a created folder.
    - **Sort by:** allows you to sort messages by Date, Recipient, Type, Subject, Size, or Lock/Unlock.
    - **Properties:** shows you information about the Audio Postcard, such as Subject, Received date, From, To, Cc, Size, and Priority.
4. Select a message from the list and press  to view or play the message contents.

---

**Tip:** Press the **Options** soft key while reading a message to select alternate options.

---

5. To scroll through the contents, press the **Up** or **Down** Navigation keys.

## Drafts

This message box stores unsent messages that you may want to edit or send at a later time.

When you enter this menu, the list of messages in the box displays.

1. Flip open the handset to Landscape view.
2. In Idle mode, press **Menu** → **Messaging** → **Drafts** and press **Select** or .

---

**Note:** Press the **Left** or **Right** Navigation keys to scroll between **Drafts**, **My folders**, **Templates**, **Inbox** and **Sentbox**.




---

3. Select a message from the list and press **Options** to view the following:
  - **Send:** sends the message to Recent recipients, to contact(s) from the Phonebook, or a New recipient.
  - **Delete:** deletes the selected , multiple messages, or all messages.
  - **Lock/Unlock:** locks the selected message to protect it from deletion, or unlocks the message to allow deletion.
  - **More:**
    - **Move to my folders:** moves the Selected message, or Multiple messages from the current location to a created folder.
    - **Sort by:** allows you to sort the messages stored in this folder by Recipient, Type, Subject, Size, or Lock/Unlock.

---

**Tip:** Press the **Options** soft key while reading a message to select alternate options.

---

4. Press **Edit**  to edit the message contents.  
– or –
5. Press  then **Send** to send the message.
6. Press **End**  to return to the Idle screen.

## My Folders

Use My Folders to manage and organize your messages and store them on your phone.

► In Idle mode, press **Menu → Messaging → My folders** and press **OK**.

### To create a new folder:

1. Press the **Create** soft key.
2. Enter the title of the folder and press **OK**.

The newly created folder displays on the Messaging screen.

## Templates

Besides entering message text using the keypad keys, you can speed message composition by including copies of stored text (Templates) in your message.

► In Idle mode, press **Menu → Messaging → Templates** and press **Select** or **OK**.

The following options are available:

- Text message templates
- Picture message templates

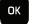

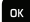
### ***Sending a Text template***

1. In Idle mode, press **Menu → Messaging → Templates → Text message templates** and press **Select** or **OK**.
2. Select a template from the Templates list and press **OK**.
3. Select **Options → Add recipients** and press the **Right** Navigation key.
4. Select the number(s) from Recent recipients, Contacts, or Groups, or enter a new address, and press **OK**.
5. Press **OK** to send.

The template message is sent to the selected recipient(s).



## Sending a Picture message template

1. In Idle mode, press **Menu → Messaging → Templates → Picture message templates** and press **Select** or .
2. Highlight a template and press **Options → Send**.
3. Press .  
The template displays.
4. Press **Options → Add recipients** and press the **Right Navigation** key.
5. Select the first or second recipient number listed, or select one of the following:
  - **Recent recipients:** allows you to select a number or an address from the last 30 destinations you entered.
  - **Contacts:** enter the phone number you want from your Contacts list.
  - **Groups:** select a group in which to send this picture message template.
  - **Online Album:** sends this picture message template to your Online Album.
  - **Cameo frame:** sends this picture message template to a cameo frame.
6. Press  to send the message.

## Settings

The **Settings** menu allows you to select where your contacts are saved, delete messages by folder, or check your memory status.

- In Idle mode, press **Menu → Messaging → Settings** and press **Select** or .

The following options display:

### Messages settings

In this menu, you can set up a default text message or a picture message, configure the Text Message Center, view the Voice mail number, and configure Push messaging Receiving or Service Loading options. The last setting you accessed is automatically activated for sending subsequent messages.

- In Idle mode, press **Menu → Messaging → Settings → Messages settings** and press **Select** or .

## Text message

The following **Sending options** are available:

- **Reply path:** allows the recipient of your message to send you a reply message using your message center, if your network supports this service.
- **Request Delivery report:** allows you to activate or deactivate the report function. When this function is activated, the network informs you whether or not your message was delivered.

## Text Message Center

Sets the default method of text message transmission used by the Text message center. The options are:

- T-Mobile
- Center 2
- Center 3
- Center 4

## Picture message

The following options are available:

### Sending Options

- **Priority:** you can select the priority level of your messages.
- **Expiration:** select the length of time you wish the message to remain on the MMS server.
- **Message size:** displays the size of the selected message.
- **Request delivery report:** when this option is enabled, the network informs you whether or not your message was delivered.
- **Request read report:** when enabled, your phone sends a request for a reply along with your message to the recipient.
- **Keep a copy:** you specify whether you want to keep a copy of the sent messages on your phone.
- **Add my name card:** attaches your name card to the Picture message.

### Receiving Options

This option specifies the category of messages you want to receive and allows you to set the following:

- **Send read report:** when this option is enabled, your phone sends a notification back to the recipient indicating that your message was received.
- **Send delivery report:** when this option is enabled, the phone informs the network whether or not your message was received.

- **Reject anonymous:** automatically rejects messages with a category of anonymous.
- **Reject advertisement:** automatically rejects messages with a category of advertisement.

### Auto Resize Image

1. Select one resize option: **No resize**, **100 KB**, **300 KB**, or **600 KB**.
2. Press **Save**.

### Creation Mode

Allows you to select the creation mode, **Free**, **Warning**, or **Restricted**.

### Default Style

Allows you to select the **Font color**, **Font style**, **Background color**, and **Page duration** for all picture messages.

### Voice mail

This menu displays the default phone number used for access of phone's remote voice mail.

### Push message

- **Receiving options:** specify whether to turn push message reception **On** or **Off**.
- **Service loading:** specify the time to load this service. Options are: **Always**, **Prompt**, or **Never**.

### Delete by folder

This menu allows you to delete all of the messages in each message box. Or, you can also delete all of your messages in all message boxes at one time.

---

**Important!:** Once messages are deleted, they cannot be recovered.

---

1. In Idle mode, press **Menu → Messaging → Settings → Delete by folder** and press **Select** or **OK**.
2. Press the **Up** or **Down** Navigation key to select a message box to clear. To delete all of your messages, select the **All** option.
3. Press the **OK** key to place or remove a check mark.
4. Press the **Delete** soft key to delete the marked objects.
5. After you receive the **Delete locked messages?** confirmation, press **Yes** to delete or press **No** to cancel.

## ***Memory status***

To view the memory status:

► In Idle mode, press **Menu → Messaging → Settings → Memory status** and press **Select** or  .

This screen displays the amount of the allocated memory and the memory available for picture messages.

The display shows the total space including the used and free space. Also displayed is the amount of space and the number of messages currently occupying each message box type:

- Picture message
- Text Message
- Push message
- Configuration

## Section 7: People

---


This section explains how to use and manage your contacts.

### Contacts


This menu allows you to view and manipulate contacts in your Phonebook.

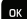
#### *Finding a Contact Entry*

You can store phone numbers and their corresponding names in the phone's built-in memory (the Contacts).

1. In Idle mode, press **Menu** → **People** → **Contacts** and press **Select** or .
2. Enter the first few letters of the name in the text box.

The Contacts entries are listed, starting with the first entry matching your input.

3. If needed, press the **Up** or **Down** Navigation key until the entry you want highlights.
4. Once you locate the entry, press **Send**  to dial the number, or press the **Options** soft key to access the following Contacts entry options:
  - **Edit**: allows you to edit the information for the selected contact.
  - **Send**: allows you to send a message to the selected number. You may choose between Message, Audio postcard, or E-mail.
  - **New contact**: takes you to the Add new contact menu.
  - **Call**: places a call to the selected phone number.
  - **Copy to phone/SIM card**: copies the selected or all of the contacts to the phone or SIM card, depending on where the contact was previously saved.
  - **Assign speed dial**: allows you to assign a speed dial key number to the selected Contacts entry.
  - **Send name card via**: allows you to send your name card via Message, to a Bluetooth-enabled device, or by E-mail.
  - **Delete**: allows you to delete the selected or multiple contacts from your Contacts. You are asked to confirm your name and number deletion by pressing the **Yes** soft key. To cancel, press the **No** soft key.
  - **Print via Bluetooth**: sends the contents of the selected text message to a Bluetooth enabled printer.
  - **Mobile backup**: allows you to view the Last sync you performed, or view the About mobile backup information.
5. Press **View** to view contact information, and press **Options** for the following options (some options are only visible if you have highlighted one of the contact's telephone numbers):

- **Edit:** allows you to edit the name and number fields in the entry. You can also add an e-mail address and notes.
- **Send:** allows you to send a message to the selected number. You may choose between Message, Audio postcard, or E-mail.
- **Copy to phone/SIM card:** copies the selected or all of the contacts to the phone or SIM card. Depends on where the contact was previously saved.
- **Assign speed dial:** allows you to assign a speed dial key number to the selected Contacts entry (only available if you have highlighted a telephone number).
- **Set as default number:** allows you to set this telephone number as the default number for this Contact (only available if you have highlighted a telephone number, and this contact has more than one telephone number).
- **Send name card via:** allows you to send your name card via Message, via Bluetooth to a Bluetooth enabled device, or by E-mail.
- **Delete:** allows you to delete the selected name and number from your Contacts. You are then asked to confirm the name and number deletion by pressing the **Yes** soft key. Press the **No** soft key to cancel the deletion.
- **Print via Bluetooth:** sends the contents of the selected text message to a Bluetooth enabled printer.
- Press  to dial the selected number.

### **Dialing a Number from Contacts**

Once you store phone numbers in Contacts, you can dial them easily and quickly by using the location numbers assigned to them and listed in Contacts.

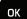
---

**Note:** If you cannot remember a location number, you must go into the **Contact list** menu in **Contacts** menu to search for the entry by name. For more information, refer to “Groups” on page 60.

---

### **Add a New Contact**

The default storage location for saving phone numbers to your phonebook is your phone's built-in memory. The first time you use the Phonebook feature, your phone prompts with the following: “Would you like to store a copy of your contacts on My.T-Mobile.com so you can view and manage your contacts online?” Responding with Yes copies the information stored on your SIM card to your phone's memory and then synchronizes with T-Mobile's network. After the initial use of this feature, additional, new contact information stores directly to the phone's memory and synchronizes with T-Mobile's network during predetermined, timed intervals.



1. In Idle mode, press **Menu** → **People** → **Add new contact** and press **Select** or .

– or –

Press **Contacts** → **Options** → **New contact**


2. Enter a first name in the **First name** text box. Press the **Down** key to tab to the next text box.  
For further details about how to enter characters, see “*Using ABC mode*” on page 37.
3. Enter a last name in the **Last name** text box.
4. Highlight a number type by pressing the **Up** or **Down** Navigation key, then enter a number in the text box.



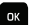




The following types are available:

- **Mobile:** assigns the number to the Mobile entry.
  - **Home:** assigns the number entered to the Home entry.
  - **Work:** assigns the number entered to the Work entry.
  - **Other:** assigns the number entered to the Other entry.
  - **Groups:** assigns the number entered to the Groups entry.
5. Press the **Right** Navigation key to add an **Icon**, **Ringtone**, or **URL** for this contact.
  6. Press the **Right** Navigation key to enter up to 4 addresses and 3 IM addresses for this contact.
  7. Press the **Right** Navigation key to enter a **Birthday** and **Anniversary** for this contact.
  8. Press the **Right** Navigation key to enter an address or Notes for this contact. Notes can be up to 50 characters.
  9. Press  to save your selections. The number saves to your selected destination and the new contact information displays.
  10. Press **End**  to return to Idle mode.


## Groups

### Adding a New Caller Group



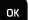
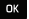
1. In Idle mode, press **Menu** → **People** → **Groups** and press **Select** or .
2. Press **Options** → **Add new group**.
3. Enter a name for the new group in the Input box and press the **Save** soft key.

4. Press **View** or  to view the new Group and press **Options** → **Add member** and press **Select** or .
5. Select a contact from the list or enter a new contact and press  to place a check mark next to the entry.
6. Press **Add** to add the selected contact(s).
7. Press **Options** → **Group settings** and press **Select** or .
8. Highlight the **Picture** field and press  to add a picture for this new caller group. Press the **Select** soft key to add a picture from one of the following locations:
  - Stored on the **Phone**:
    - **Wallpapers**: displays a list of available wallpapers.
    - **Downloaded images**: displays a list of downloaded images from which to select as a Caller ID.
    - **myFaves Icons**: displays a list of predefined Caller ID icons (if you subscribe to myFaves).
  - Stored on **Media** (if installed):
    - **Photos**: displays a list of available photos.
    - **Images**: displays a list of available images.
9. Highlight the **Ringtone** field and press  to add a ringtone for this new caller group. Press the **Select** soft key to set one of the following options:
  - Stored on the **Phone**:
    - **Sounds**: displays a list of sounds from which to select as a ringtone.
    - **Voice list**: displays a list of voice messages from which to select as a ringtone.
  - Stored on **Media** (if installed):
    - **Music**: displays a list of music files.
    - **Sounds**: displays a list of available sounds.
10. Press **Options** → **Save** when you are finished.
11. Press **End**  to return to Idle mode.

### ***Editing a Caller Group***

1. In Idle mode, press **Menu** → **People** → **Groups** and press **Select** or .
2. Scroll through the group list, highlight the group you want.
3. To edit the Caller group name, press **Options** → **Rename group**.



4. Press  to backspace, enter a new name in the **Rename group** text box and press **Save**.
5. To change the image associated with the Caller group, press **Options → Group settings** and press .
6. Highlight the **Picture** field and press  to create or change the picture for this new caller group. Select from one of the following locations:
  - Stored on the **Phone**:
    - **Wallpapers**: displays a list of available wallpapers.
    - **Downloaded images**: displays a list of downloaded images from which to select as a Caller ID.
    - **myFaves Icons**: displays a list of predefined Caller ID icons (if you subscribe to myFaves).
  - Stored on **Media** (if installed):
    - **Photos**: displays a list of available photos.
    - **Images**: displays a list of available images.
7. Highlight the **Ringtone** field and press  to create or change a ringtone for this new caller group. Select from one of the following options:
  - Stored on the **Phone**:
    - **Sounds**: displays a list of sounds from which to select as a ringtone.
    - **Voice list**: displays a list of voice messages from which to select as a ringtone.
  - Stored on **Media** (if installed):
    - **Music**: displays a list of music files.
    - **Sounds**: displays a list of available sounds.
    - **Videos**: displays a list of available videos.
8. Press **Options → Save** when you are finished.

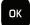


## Speed Dial

Once you store phone numbers for your Contacts, you can set up to 8 speed dial entries and then easily dial them whenever you want, by pressing the associated numeric key.

► In Idle mode, to speed dial the numbers assigned to keys (2 to 9), press and hold the appropriate key.

## Setting Up Speed Dial Entries

1. In Idle mode, press **Menu → People → Speed dial** and press **Select** or .

2. Use the Navigation key to select the keypad number key to where you wish to assign the new speed-dialing number and press the **Assign** soft key or the  key.
3. Highlight a contact entry number from the list and press **Select** or .
4. You receive a **Speed dial assigned** confirmation and the **Speed dial** menu displays the number assigned to the number key you selected.
5. Press **End**  to return to Idle mode.

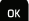
---

**Note:** Memory location 1 is reserved for your Voice mail server number and this speed dial location can not be changed.

---

## Management

To access the Management menu:

- In Idle mode, press **Menu** → **People** → **Management** and press **Select** or .

### View Contacts

This option allows you to set the source of contacts when you view contacts.

- In Idle mode, press **Menu** → **People** → **Management** → **View Contacts** and press **Select** or .

Available options are:

- **Phone and SIM card**
- **Phone**
- **SIM card**

### Default saving

The **Default saving** option allows you to choose where your contacts are saved. The following options are available:

- **Phone:** new contacts are saved to your phone. Your phone comes with the default set to Phone.
- **SIM card:** new contacts are saved to your SIM card.
- **Ask on saving:** you are prompted to choose between Phone or SIM Card whenever you save a new contact.




### Copy all to

You can copy all Contacts from the phone to the SIM card, and from the SIM card to the phone.

---

**Note:** When storing an Address Book entry on the SIM card, only the Name, Address, and slot location are saved.

---

1. In Idle mode, press **Menu** → **People** → **Management** → **Copy all to** and press **Select** or .
2. Highlight **Phone** or **SIM card** and press **Select** or .
3. Press  to place a check mark next to each contact to copy, or select **All**.
4. Press **Copy** to copy the selected contacts to the Phone or SIM card.

### **Delete all**

---

**Important!:** Once Contacts entries are deleted, they cannot be recovered.

---

This option allows you to delete all your contacts from Contacts.



### **Deleting all of the Contacts**

Perform the following procedure to delete all your entries from your phone's memory.

---

**Important!:** Once Contacts entries are deleted, they cannot be recovered.

---

5. In Idle mode, press **Menu** → **People** → **Management** → **Delete all** and press **Select** or .
6. Select **All**, **Phone**, or **SIM Card**.
7. When the **Delete?** confirmation message displays, press the **Yes** soft key to delete or press **No** to cancel.
8. Press the **Back** soft key or **End**  to return to Idle mode.




### **Memory status**

You can check how many names and numbers are stored in the Contacts, on the Phone, the SIM card, and the FDN. You can also see the current storage capacity of the memory.

1. In Idle mode, press **Menu** → **People** → **Management** → **Memory status** and press **Select** or .
2. Press **End**  to return to Idle mode.

## My number

This function is a memory aid, which you can use to edit or remove your own phone number. You can also edit the default name assigned to your phone number.

1. In Idle mode, press **Menu** → **People** → **My number** and press **Select** or .
2. Press the  key. The cursor displays in the **Name** field.
3. Press the **Down** Navigation, press the  key to erase the current entry, and type in a new number if desired.
4. Press the **Save** soft key when finished.

## Service Number

You can view the list of Service Dialing Numbers (SDN) assigned by your service provider. These numbers include emergency numbers, customer service numbers and directory inquiries.

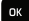
## Section 8: Media

---

This section outlines the media features available on your phone, such as the web2go browser, Photos, Music, Images, Sounds, Videos, Games & Apps, other file types, and Memory Status.

### web2go



Your phone is equipped with a browser which provides you wireless access and navigation to the Web using your phone. Web2go is only available when the phone is in the landscape/open mode. For more information, refer to “Browser” on page 79.

▶ From Idle mode, press **Menu → Media → web2go** and press .

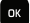
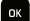
### Photos

Using the Photos option you can view your photos, and save them as a myFaves icon, Wallpaper, or Picture ID.

To save a photo as a myFaves icon (only available in open/landscape mode):


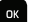
1. Open the handset and perform this procedure using the QWERTY keypad.
1. From Idle mode, press **Menu → Media → Photos** and press .
2. Highlight a photo from the list and press the **Options** soft key.
3. Select **Set as → myFaves icons** and press **Select** or .

To change the background image:

1. From Idle mode, press **Menu → Media → Photos** and press .
2. Highlight a photo from the list and press the **Options** soft key.
3. Select **Set as → Wallpaper** and press **Select** or .

Your wallpaper selection updates.

To save a photo as a Picture ID:

1. From Idle mode, press **Menu → Media → Photos** and press .
2. Highlight a photo from the list and press the **Options** soft key.
3. Select **Set as → Picture ID** and press **Select** or .

4. Search the Phonebook to associate the picture ID with an existing contact, or create a new contact for this picture ID.

## **Photos Options**

► While viewing a photo, press the **Options** soft key to choose from the following options:

- **Full screen view:** allows you to view the selected photo in full screen view.
- **Send to My Album:** allows you to send the selected photo to My Album.
- **Send via:** allows you to send the photo as a Message, E-mail, Audio Postcard, or to another Bluetooth compatible device.
- **Set as:** allows you to set the photo as a myFaves icon, Wallpaper or as a Picture ID.
- **Default destination:** allows you to Remove or Change the default destination for the location of photos.
- **Delete:** allows you to delete the selected photo.
- **Rename:** allows you to rename the photo.
- **Edit image:** allows you to edit the photo.
- **Bluetooth visibility:** allows you to select one or multiple photos to share with other Bluetooth devices.
- **Slide show:** allows you to view the photos in this folder as a slide show.
- **Print via Bluetooth:** ends the selected photo to a Bluetooth enabled device.
- **Lock/Unlock:** allows you to lock the photo to protect it from deletion or unlock it to allow deletion.
- **Properties:** displays Basic details or Media Information about the photo.

## **Camera**

For information on using the camera, see *“Using the Camera”* on page 119.

## **My Album**

My Album is a private online picture album that you can use to store and share pictures, videos, voice messages, and text. For more information, see *“My Album”* on page 126.

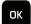


Use the following procedures to access **My Album**.

---

**Note:** When accessing My Album, charges may apply.

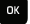
---

1. Flip open the phone.
2. From Idle mode, press **Menu → Media → Photos → My Album** and press **Select** or .

3. From the browser, select the **Inbox Album** link and press **Select** or .
4. Use the **Up** or **Down** key to highlight a particular image and press  to view the photos.
5. Press **End**  to exit the browser and return to the Idle screen.

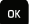
## Music

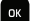
In this menu you can review the Music you've downloaded or you can view music stored on the memory card.

1. From Idle mode, press **Menu** → **Media** → **Music** and press **Open** or .
2. Highlight a music file on the phone, or press the **Right Navigation** key and select a music file from the memory card.
3. Press **Options** and choose from the following options:
  - **Send via:** allows you to send the selected music file as a message, E-mail, or via Bluetooth.
  - **Set as:** allows you to set the music file as a Ringtone, Individual Ringtone, Alarm tone, Message tone, or as a Calendar reminder.
  - **Delete:** allows you to delete the Selected, Multiple, or All music files.
  - **Move:** allows you to move the Selected or Multiple music files to another folder or location.
  - **Copy:** allows you to copy the Selected or Multiple music files to another folder or location.
  - **Rename:** allows you to rename the music file.
  - **Create folder:** allows you to create a personal folder in which to store music files.
  - **Sort by:** allows you to sort the listed audio files by category such as: Date, Type, Name, or Size.
  - **Bluetooth visibility:** allows you to set the Bluetooth visibility of the Selected or Multiple music files.
  - **Lock/Unlock:** allows you to lock the music file to protect it from deletion, or unlock it to allow deletion.
  - **Properties:** displays Basic details or Media Information about the photo.

## Music Player


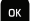
You can add music files, or play music stored in your playlist.

1. From Idle mode, press **Menu** → **Media** → **Music** → **Music player** and press **Select** or .
2. Select one of the following categories and press **Open**:
  - **All tracks:** lists all music files stored on the phone and memory card and allows you to play individual music files or play multiple files by creating a temporary music playlist.


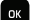
- **Artists:** displays artists names for music files on the memory card and allows you to play one or more files from a selected artist.
  - **Albums:** displays album titles for music files stored on the phone or memory card and allows you to play one or more music files from a selected album.
  - **Playlists:** displays any playlist saved and allows you to create, save and manage playlists.
3. Select a music file and press  to play the music.

## Music Player Library

While listening to music on the Music Player, the Library soft key allows you to quickly access and play music files by category.

1. From Idle mode, press **Menu** → **Media** → **Music** → **Music player** and press **Select** or .
2. Select a music file and press  to **Play** the music.
3. Press the **Library** soft key
4. The Library displays the following categories:
  - **Now playing:** Returns you to the music currently playing.
  - **All tracks:** lists all music files stored on the phone and memory card and allows you to play individual music files or play multiple files by creating a temporary music playlist.
  - **Artists:** displays artists names for music files on the memory card and allows you to play one or more files from a selected artist.
  - **Albums:** displays album titles for music files stored on the phone or memory card and allows you to play one or more music files from a selected album.
  - **Playlists:** displays any playlist saved and allows you to create, save and manage playlists.

## Music Player Shortcut Keys

1. From Idle mode, press **Menu** → **Media** → **Music** → **Music player** and press **Select** or .
2. Select **Library** → **All tracks** and press **Open**.
3. Select a music file and press  to play the music.
4. While playing a music file, the following keys act as shortcuts:





**Up** Navigation key scrolls through the current playlist.



**Down** Navigation key stops the music playback.



Pressing the **Left** Navigation key scans backward to play the previous music file.

Holding the **Left** Navigation key scans backward through the music file.



Pressing the **Right** Navigation key plays the next music file in the list.

Holding the **Right** Navigation key scans forward through the music file.



Ranks the song as a favorite (continue pressing to assign 1-5 stars).



Presets the audio equalizer to Rock, Pop, Dance, Classical, Jazz, Wide, Dynamic, Surround, or Normal.



Shuffle: the current randomly shuffled playlist continuously repeats.



Toggles to repeat the currently active song, or repeats all songs in the list. As the last song ends, the player begins replaying all of the songs in the order they display within the list.





Starts and Pauses the music.





5. Press **End**  to exit and return to Idle mode.

## ***Creating a Playlist***

Before music can be played directly via the Music Player, it is necessary that the desired playlist be active before music is added. Unless otherwise selected, Playlist 1 is the default playlist when new music is added from either the phone or memory card.

1. From Idle mode, press **Menu** → **Media** → **Music** → **Music player**.
2. Select **Library** → **Playlists** and press .
3. Highlight **Playlists** and press **Open**.
4. Select **Create playlist** and press .
5. Enter a name for the playlist in the **Enter name** field and press **Save**.

## ***Adding Music to a Playlist***

1. From Idle mode, press **Menu** → **Media** → **Music** → **Music player**.
2. Select **Library** → **Playlists** and press .
3. Highlight a playlist and press  to open the folder.
4. Press **Options** → **Add** and press the **Right** Navigation key.
5. Select **Tracks** and press .
6. Highlight a music file or **All** (to select all music files) and press  to place a checkmark beside the selected music files.
7. Press **Add**.

The song is added to the selected playlist.



## ***Transferring Music Files to the Memory Card***

Music files can be downloaded to the phone via one of two methods:

1. Downloaded to the phone from web2go.  
Music files can be directly stored on your phone from this site.
2. Downloaded to the phone via a direct USB connection.  
Music files are stored into a Music folder on the memory card.

## ***Assigning Music Files***

You can choose to assign music files as a Ringtone, as a ringtone for an Individual (Contact), an Alarm tone, a Message tone, or a Calendar reminder tone.

1. From Idle mode, press **Menu** → **Media** → **Music** → **Music player**.
  2. Highlight **All tracks** and press .
  3. Highlight the music file you want to assign and press **Options**.
  4. Press **Set as** and press the **Right** Navigation key.
  5. Select one of the following categories and press .
- **Ringtones:** saves the selected music file as a Ringtone.

- **Individual ringtone:** assigns the selected music file to a Contact as an individual ringtone.
- **Alarm tone:** assigns the selected music file as an Alarm tone.
- **Message tone:** assigns the selected music file as a Message tone.
- **Calendar reminder:** assigns the selected music file as a reminder for a Calendar event.

## Images

In this menu, you can view the list of images downloaded from the web server, taken with the built-in camera, or received in messages. You can set an image as the current background image.

- From Idle mode, press **Menu → Media → Images** and press .

The following options are available:

### **Browse wallpapers**

**Browse Wallpapers** allows you to access the T-Mobile website and using the browser, download new images.

- Highlight **Browse Wallpapers** and press .

---

**Note:** When downloading Wallpapers, charges may apply.

---

### **Wallpapers**

This folder contains preconfigured wallpapers.

- Scroll to the wallpaper you want to view and press the **Options** soft key to access the following options:
  - **Set as:** allows you to set the image as Wallpaper or Picture ID.
  - **Take photo:** allows you to take a photo and use the photo as a wallpaper.
  - **Create folder:** allows you to create a new folder in which to contain images.
  - **Sort by:** allows you to sort the images by Date, Type, Name, or Size.
  - **Properties:** displays Basic details about the selected wallpaper.

### **Downloaded images**

This menu allows you to access your downloaded images on your phone or on the memory card.

- Scroll to the image you want to view and press the **Options** soft key to access the following options:
  - **Send to My Album:** sends the selected image to My Album.

- **Send via:** allows you to send the image as a Message, E-mail, Audio Postcard, or to another Bluetooth compatible device.
- **Set as:** allows you to set the image as a myFaves icon, Wallpaper, or a Picture ID.
- **Delete:** allows you to delete the Selected, Multiple, or All images.
- **Move:** allows you to move the Selected or Multiple images to another location.
- **Copy:** allows you to copy the Selected or Multiple images to another location.
- **Default destination:** allows you to Remove or Change the default destination for the location of images.
- **Rename:** allows you to rename the image.
- **Take photo:** allows you to take another photo with the camera.
- **Create folder:** allows you to create a new folder in which to store images.
- **Sort by:** allows you to sort images by Date, Type, Name, or Size.
- **Bluetooth visibility:** allows you to select one or multiple images to share with other Bluetooth devices.
- **Print via Bluetooth:** sends the selected image to a Bluetooth enabled device.
- **Lock/Unlock:** allows you to lock the image to protect it from deletion or unlock it to allow deletion.
- **Properties:** displays Basic details or Media Information about the image.

## **Browse myFaves Icons**

Use this menu to browse and download additional myFaves icon types.

### **myFaves icons**

This menu displays a list of downloaded icon types.

## **Sounds**

In this menu, you can view the list of sounds downloaded from the web server or received in picture messages. You can also set a downloaded sound as the current ring tone.

► From Idle mode, press **Menu** → **Media** → **Sounds** and press **Open** or .

---

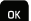
**Note:** When downloading **MegaTones®** or **HiFi Ringers™**, charges may apply.

---

The following options are available:

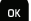
### **Browse HiFi Ringers**

Using the **Browse HiFi Ringers** option on the sounds list, you can quickly access T-Mobile website and use the browser to download new HiFi Ringers.

1. Open the handset and perform this procedure using the QWERTY keypad.
2. Press  to connect and purchase additional ringtones.

### **Browse MegaTones**

Using the **Browse MegaTones** option on the sounds list, you can quickly access the T-Mobile website and download new sounds by using the browser.

1. Open the handset and perform this procedure using the QWERTY keypad.
2. Press  to connect and purchase additional MegaTones.

## **Sounds**

Highlight an item in the **Sounds** menu and press the **Options** soft key. The following options are available:

- **Set as:** allows you to set the sound as a Ringtone, an Individual ringtone, an Alarm tone, a Message tone, or a Calendar reminder.
- **Create folder:** allows you to create a personal folder in which to store sounds.

- **Sort by:** allows you to sort the listed sounds by category such as: Date, Type, Name, or Size.
- **Properties:** displays basic details about the selected sound file.

► Highlight a sound file and press  to play the sound file.

## **Voice list**

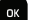
The Voice list contains your recorded audio messages. Highlight an item and press the **Options** soft key. The following options are available:

- **Send via:** allows you to send the audio message as a Message, E-mail or to a Bluetooth compatible device (only available in open/landscape mode).
- **Set as:** allows you to set this voice recording as a Ringtone, an Individual ringtone, an Alarm tone, a Message tone, or a Calendar reminder.
- **Delete:** allows you to delete the Selected, Multiple, or All audio files.
- **Move:** allows you to move the Selected, Multiple, or All audio files to another folder or location.
- **Copy:** allows you to copy the Selected, Multiple, or All files to another folder or location.
- **Rename:** allows you to change the name of the audio message.
- **Create folder:** allows you to create a personal folder in which to store audio files.
- **Sort by:** allows you to sort the listed audio files by category such as: Date, Type, Name, or Size.
- **Bluetooth visibility:** allows you to select one or multiple voice messages to share with other Bluetooth devices.
- **Lock/Unlock:** allows you to lock the audio message to protect it from deletion or unlocks it to allow deletion.
- **Properties:** displays Basic details about the audio file.

► Highlight an audio file and press  to play the audio file.

## **Voice recorder**

In this menu, you can record an audio file up to one minute long and then immediately send it as a message.

1. From Idle mode, press **Menu → Media → Sounds → Voice list → Voice recorder** and press **Access** or .
2. Press **Record** and begin recording your voice message.
3. Press **Stop** when you are finished recording.

---

**Note:** The message automatically saves to the Voice list.

---

4. Press **Options** and select one of the following options:

- **Send via:** allows you to send this voice recording as a Message, E-mail, or to another Bluetooth enabled device.
- **Set as:** allows you to set this voice recording as an Individual ringtone, Alarm tone, or Calendar reminder.
- **Delete:** deletes the selected voice recording.
- **Properties:** displays Basic details about this voice recording, such as: Name, Format, Size, Forwarding, Date created, and Location.

## Videos

In this menu, you can view videos saved to your Videos folder or memory card, which were recorded with the Camcorder module, downloaded from the web server or received in picture messages. You can also start the Camcorder module to record new videos.

### To record video:

1. From Idle mode, press **Menu** → **Media** → **Videos** and press **Open** or .
2. Highlight **Record video** and press . For more information, refer to “Record video” on page 123.

### To view lists of videos:

1. In Idle mode, press **Menu** → **Media** → **Videos** and press **Open** or .
2. Use the Navigation keys to scroll through the videos, then highlight a video and press  to play a video, or press the **Options** soft key to choose from the following options:
  - **Send via:** sends the video using a Message, E-mail, or to a Bluetooth enabled device.
  - **Delete:** deletes the Selected, Multiple, or All videos.
  - **Move:** allows you to change the location of the Selected or Multiple videos on the phone or memory card.
  - **Copy:** allows you to copy the Selected or Multiple videos to the phone or memory card.
  - **Rename:** changes the name of the video.
  - **Create folder:** allows you to create a folder in which to store video files.
  - **Sort by:** allows you to sort videos by Date, Type, Name or Size.
  - **Bluetooth visibility:** allows you to select one or multiple videos to share with other Bluetooth devices

- **Lock/Unlock:** allows you to lock the selected video to protect it from deletion, or allows you to unlock the video to allow deletion.
- **Properties:** display the Basic details about the selected video.

## Games and Apps

You can download MIDlets (Java applications that run on mobile phones) from various sources using the browser and store them in the phone. Downloading and browsing can only be used in the open/landscape mode.

1. From Idle mode, press **Menu → Media → Games and Apps** and press **Open** or .
2. Press **Downld.**

The browser displays links to games and applications.

### ***Browse games***

You can download more games from the website by using the **Browse Games** option.

- From Idle mode, press **Menu → Media → Games and Apps → Browse Games** and press .

The browser screen displays with options.

---

**Note:** When downloading games, charges may apply. MIDlet game options differ depending on the MIDlet selected.

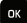
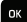
---



## Other files

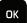
In this menu you can view or store other types of files without corruption, various document files and files stored in the phone's memory, or on a memory card.

Available file formats are Microsoft Word, Adobe PDF, or Plain text.

1. From Idle mode, press **Menu** → **Media** → **Other files** and press **Open** or .
2. Select **Other files** and press .
3. Select a file and press the **Options** soft key to choose from the following options:
  - **Send via:** allows you to send another file via a Message, E-mail or to a Bluetooth enabled device.
  - **Delete:** deletes the Selected, Multiple, or All videos.
  - **Move:** allows you to change the location of the Selected or Multiple videos on the phone or memory card.
  - **Copy:** allows you to copy the Selected or Multiple videos to the phone or memory card.
  - **Rename:** allows you to change the name of the selected file.
  - **Create folder:** allows you to create a personal folder in which to store files.
  - **Sort by:** allows you to sort files by Date, Type, Name or Size.
  - **Bluetooth visibility:** allows you to enable Bluetooth so you can share the selected file or multiple files with other Bluetooth devices.
  - **Lock/Unlock:** allows you to lock the file to protect it from deletion or unlock it to allow deletion.
  - **Properties:** displays the Name, Date, Format, Size, and Lock/Unlock status for the selected file.

## Memory status

You can check the amount of memory being used and memory remaining for Photos, Music, Images, Sounds, Videos, Other files, and Games & Apps. Memory status is only available in the open/landscape mode.

1. From Idle mode, press **Menu** → **Media** → **Memory status** and press **Open** or .
2. Press the **Up** or **Down** Navigation keys to scroll between the memory status of Photos, Music, Images, Sounds, Videos, Other files or Games & Apps.
3. Press the **Left** or **Right** Navigation keys to scroll between the memory status on the phone or memory card.

## Section 9: web2go Browsing

---

This section outlines the features of the web2go browser, which provides you wireless access and navigation to the Web using your phone. Web2go can only be used in open/landscape mode.

### Browser

▶ In Idle mode, press **Menu** → **Media** → **web2go** and press **Open** or .

The following options are available:

### Home


Selecting this menu connects the phone to the network and loads the homepage.

The content of the startup homepage depends on your Wireless Web service provider. To scroll through the screen, use the **Up** and **Down** keys.

To go to the startup homepage from any other screen, use the **Home** option. For more information on the browser menus, see *“Selecting and Using Menu Options”* on page 80.

▶ In Idle mode, press **Menu** → **Media** → **web2go** → **Home**.

### Exiting the Browser

▶ To exit the browser at any time, simply press the  key.

### Navigating the Browser

1. To scroll through browser items, press the **Up**, **Down**, **Left** and **Right** Navigation keys.
2. To select browser items, press .
3. To return to the previous page, press the **Back** soft key or .
4. Press the **Back** soft key until the startup **Home** page displays.

## Entering Text in the Browser

When you are prompted to enter text, the currently active text input mode is indicated on the screen. For more information on entering text, For more information, refer to “*Entering Text*” on page 35.

---

**Tip:** Press the  (landscape mode) to enter symbols in upper-case or lower-case character mode.

---

## Selecting and Using Menu Options

Various menus are available when you are navigating the Wireless Web.

To access the browser options menu:

1. Press **Options**.

---

**Note:** The menus may vary, depending on your browser version.

---

The following options are available:

- **Reload:** reloads the current page.
- **Resize page:** use the Left and Right Navigation key to enlarge or decrease the page size.
- **Go to:** navigates to a URL address, Homepage, Bookmarks, History, or a Saved page.
- **Save:** allows you to save the Image or Page.
- **Add to bookmarks:** adds the current URL to Bookmarks.
- **Send URL via message:** sends the currently viewed URL to a recipient as a message.
- **Page details:** allows you to view details about the current page such as Title, Address, Size, MIME type, and the date Last Updated.
- **Browser settings:** various settings are available, see “*Browser Settings*” on page 81.
- **Exit browser:** exits the browser page you are viewing and returns to the web2go menu.

## Enter URL



This menu allows you to manually enter the URL address of a web site that you wish to access.

For further details about entering characters, see “*Changing the Text Input Mode*” on page 37.

## Bookmarks

This menu stores up to 50 URL addresses.

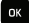
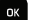
To store a URL address:

1. In Idle mode, press **Menu** → **Media** → **web2go** → **Bookmarks** and press **Select** or .
2. Press **Options** → **Add bookmark** and press **Select** or .
3. Enter a name for the bookmark in the **Title** text box and press the **Down** key.

---

**Note:** For further details about how to enter characters, For more information, refer to “*Using ABC mode*” on page 37.

---

4. Enter the address in the URL text box and press .
5. Highlight an item after saving a bookmark, then press the **Options** soft key to access the following:
  - **Edit bookmark:** allows you to edit the address.
  - **Delete:** allows you to delete the selected address or multiple addresses.
  - **Add bookmark:** allows you to enter a new bookmark URL.
  - **Send URL via message:** allows you to send the selected bookmark as a text message.
6. Select a URL and press . Your browser displays the site.

## **Saved Pages**

This option displays a list of the pages that were saved while navigating the browser.

## **History**

This option provides you with a list of the most recently visited web sites. You can use these entries to return to previously visited, but not bookmarked, web pages.

## **Browser Settings**

Various settings are available when you are using the browser to navigate the wireless web.

### **Clear caches**

You can clear the information stored in the cache, which is the phone's temporary memory and stores the most recently accessed Web pages.

- Press the **Yes** soft key to confirm the deletion. Otherwise, press the **No** soft key.

### **Cookies**

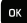
Cookies are stored on your phone, and are used by websites to store preferences. Cookies identify who you are when you visit favorite web sites; however, they are also used to track your web surfing habits.

## Cookie mode

The Cookie mode allows you to define how your browser handles cookies. Options are: Accept all, Reject all, or Prompt before receiving a cookie.



## Delete Cookies

Deleting all the cookies provides security.

1. Highlight **Delete cookies** and press **Select** or .
2. At the **Delete cookies?** prompt press **Yes**.

## Preferences

The Preferences option allows you to set preferences for the browser, such as Run JavaScript, Display images, Play sound, and View mode.

1. In Idle mode, press **Menu** → **Media** → **web2go** → **Browser settings** → **Preferences** and press **Select** or .
2. Use the **Up** and **Down** Navigation keys to scroll through the preferences, and press  to check and uncheck options. The following options are available:
  - **Run javascript:** allows you to specify whether the browser will display features requiring javascript.
  - **Display images:** allows you to specify whether the browser will display images on web pages.
  - **Play sound:** allows you to specify whether the browser will play sound on web pages.
  - **View mode:** allows you to specify the way web pages are viewed onscreen. Use the Right and Left Navigation keys to choose Desktop or Smart-fit view.

## About Browser

About Browser displays information about the browser such as the type and version.

## Section 10: Changing Your Settings

---

This section explains the sound and phone settings for your phone. It includes such settings as: display, security, memory, and any extra settings associated with your phone.

### myFaves Settings

myFaves Settings displays only if you subscribe to this service. From this menu you can modify the myFaves Display, Internal menu, Skin, myFaves icons, or Refresh contacts.

### Personalize

Using this menu you can personalize the Sound profiles, Display settings, Phone settings, Messaging key, Memory settings, Language, Greeting message, and Time and Date.


#### Sound profiles

You can customize various sound settings.

1. From Idle mode, press **Menu** → **Settings** → **Personalize** → **Sound profiles** and press **Select** or .

The following options display:

- **Normal:** the phone's incoming Alert Type is set to melody.
- **Silent:** the speaker is muted and the phone only vibrates.
- **Vibration:** the phone vibrates but does not play any other sound or melody.
- **Driving:** the speaker is activated and launches the currently selected ringtone or melody when the associated notification is activated.
- **Outdoor:** the speaker is activated, the volume settings are raised to their highest levels, and any currently active ringtones or melodies are activated.

2. Press  to select and apply a sound profile.

#### Display settings


In this menu, you can change various settings for the display or backlight.

- From Idle mode, press **Menu** → **Settings** → **Personalize** → **Display settings** and press **Select** or .

The following options display:

## Wallpaper

This menu allows you to change the background image to display in Idle mode. Wallpaper settings can only be used in the open/landscape mode. To change the background image:

1. In Idle mode, press **Menu** → **Settings** → **Personalize** → **Display settings** menu, highlight the **Wallpaper** option and press **Select** or .
2. Select **More wallpapers** to find other wallpapers stored in the phone's memory, or on an installed memory card. Navigate to a wallpaper, then press the **Select** soft key to preview the wallpaper. Press the **Set** soft key to set it as the wallpaper, or the **Back** soft key to go back.

— or —

To reset the wallpaper to the phone's default, select **Default wallpaper** and press the **Save** soft key or .

## My Theme

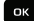

This menu allows you to change the appearance theme of displays on the phone. To change the theme,

1. From the Display settings menu, highlight the **My Theme** option and press **Select** or .
2. Choose a theme and press **Select** or .


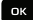
## Dialing display

This menu allows you to select the size and color of your dialing font and the background color.

To change the type of the font:

1. From the **Personalize** → **Display settings** menu, highlight **Dialing display** and press **Select** or .
2. Select the **Font type** option and press **Select** or .
3. Use the **Left** or **Right** Navigation key to select between: **Normal 1** or **Normal 2** and press **Save**.

To change the color of the font:

1. From the **Personalize** → **Display settings** menu, highlight **Dialing display** and press **Select** or .
2. Highlight the **Font color** option and press **Select** or .

3. Use the **Left** or **Right** Navigation key to select either **Monochrome**, **Gradation**, or **Basic** (black or white). If you select **Monochrome** or **Gradation**, select another option by pressing the **Down** Navigation key then scroll through the available choices. Choose from up to 15 different options.
4. Press **Save** to save your change. Otherwise, press the **Back** soft key.

To change the background color:

1. From the **Personalize → Display settings** menu, highlight **Dialing display** and press **Select** or **OK**.
2. Highlight the **Background color** option and press **Select** or **OK**.
3. Use the **Left** or **Right** Navigation key to select between 16 different colors.
4. Press **Save** to save your change. Otherwise, press the **Back** soft key.

## Brightness

You can adjust the display brightness to see it better in different lighting conditions.

1. From the **Personalize → Display settings** menu, highlight **Brightness** and press **Select** or **OK**.
2. Highlight **Main display** or **Cover display** and press **Select** or **OK**.
3. Press the **Left** or **Right** Navigation keys to adjust the level (from 1-5).
4. Press **Save** to save your changes.

## Backlight time

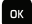
A backlight illuminates the external and internal display as well as the keypad. When you press any key, the backlight comes on. It goes off when no keys are pressed within a given period of time, depending on the setting within the **Backlight** menu. The display turns off after one minute to conserve battery power.

The **On** setting is how long the keypad backlight is on. The **Dim** option is how much longer after the keypad backlight goes off that the display remains lit.

To specify the length of time the backlight is active, access the **Backlight time** menu:

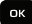
1. From the **Personalize → Display settings** menu, highlight **Backlight time** and press **Select** or **OK**.
2. Select the time the backlight is on and press **OK**. You may choose between **10 seconds**, **15 seconds**, **30 seconds**, or **1 minute**.



3. Press the **Down Navigation** key to highlight the **Dim** field and press . Select the time the Dim mode is on and press **OK**. You may choose between **Off**, **5 seconds**, **15 seconds**, **30 seconds**, or **1 minute**.
4. Press the **Save** soft key to retain your settings.

### Keypad light

In this menu you can configure the keypad light to turn on and off at any time. The default “Use at any time” allows you to use the keypad light any time day or night. When you select the “Use at custom time” option you can set the time the keypad light is on.

1. From the Display settings menu, highlight **Keypad light** and press **Select** or .
1. Use the Down Navigation key to highlight the **Set time** field and press the **Right Navigation** key to select **Use at custom time**.
2. Use the Down Navigation key to highlight the **After time** field and enter the time you want the keypad to come on. (example, after 5:00pm)
3. Use the Down Navigation key to highlight the **Until time** field to enter the time you want the keypad to shut off.
4. Press **Save** to save your selections. or press **Back** to cancel.

### Phone settings

You can customize various phone settings.

- From Idle mode, press **Menu** → **Settings** → **Personalize** → **Phone settings** and press **Select** or .

The following options display:

#### Airplane mode

Airplane mode allows you to use many of your phone's features, such as Games, Voice Notes, etc., when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When your phone is in Airplane Mode, it cannot send or receive any calls or access online information.

- Highlight **On** or **Off** and press **Save**.

#### Auto key lock

1. In Idle mode, press **Menu** → **Settings** → **Personalize** → **Phone settings** → **Auto key lock**.

2. Select **On** or **Off** and press **Save**.

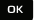
## USB mode

This menu selects the method of communication for the USB port.

---

**Important!** Note: The Bluetooth feature must first be disabled before initiating a USB connection with the phone. Prior to connecting the USB cable to the phone, install the latest version of the PC Studio application. This application installs the necessary USB drivers onto your machine.

---

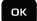
1. From Idle mode, press **Menu → Settings → Personalize → Phone settings → USB mode** and press **Select** or .
2. Select one of the following USB modes:
  - **Samsung PC studio**: sets PC Studio to launch as the default application when a USB connection is detected.
  - **Ask on connection**: requires the phone to display a message which requires you to assign a default USB application.
  - **Mass storage**: allows you to utilize the onboard storage capacity of the phone to store and upload files. This option allows your computer to detect the phone as a removable storage drive.
3. Press **Save** to confirm the selection.

## Security

### Lock phone

When the Lock phone feature is enabled, the phone is locked and you must enter the 4- to 8-digit phone password each time the phone is switched on.


Once the correct password is entered, you can use the phone until you switch it off.

1. From Idle mode, press **Menu → Settings → Personalize → Phone settings → Security → Lock phone** and press **Select** or .
2. Select one of the following options and press **Save**.
  - **Disable**: you are not asked to enter the phone password when you switch on the phone.
  - **Enable**: you are required to enter the phone password when you switch on the phone.

### Change phone password

The Change password feature allows you to change your current phone password to a new one. You must enter the current password before you can specify a new one.

Once you enter a new password, you are asked to confirm the change by entering the password again.

1. From Idle mode, press **Menu** → **Settings** → **Personalize** → **Phone settings** → **Security** → **Change phone password** and press **Select** or .
2. Enter a password in the **New password** field and press **Confirm**.
3. Enter the new password again.

---

**Note:** If you change your password, be sure to record it and keep it in a safe place. If you forget your password, contact your Service Provider for assistance.

---



### Check PIN code

When the Check PIN code feature is enabled, you must enter your PIN each time you switch on the phone. Consequently, any person who does not have your PIN cannot use your phone without your approval.

---

**Note:** Before enabling or disabling the PIN Check feature, you must enter your PIN.

---

1. From Idle mode, press **Menu** → **Settings** → **Personalize** → **Phone settings** → **Security** → **Check PIN code** and press **Select** or .
2. Select one of the following options and press **Select** or .
  - **Disable:** the phone connects directly to the network when you switch it on.
  - **Enable:** you must enter the PIN each time the phone is switched on.

### Change PIN code

This feature allows you to change your current PIN, provided that the Check PIN code feature is enabled. You must enter the current PIN before you can specify a new one.

Once you enter a new PIN, you are asked to confirm the PIN number by re-entering it.

### Change PIN2 code

The Change PIN2 feature allows you to change your current PIN2 to a new one. You must first enter the current PIN2 (obtained from T-Mobile) before you can specify a new one. Once you enter a new PIN2, you are asked to re-enter the new PIN2 to as confirmation.

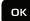

---

**Note:** Not all SIM cards have a PIN2. This menu does not display if your SIM card does not have the PIN2 feature.

---

### Set FDN Mode

FDN stands for Fixed Dialing Number. This feature determines whether numbers that are not stored in the Phonebook can be dialed with this phone. When enabled, FDN mode prevents calling of numbers that are not stored in the phonebook.

1. From Idle mode, press **Menu** → **Settings** → **Personalize** → **Phone settings** → **Security** → **Set FDN Mode** and press **Select** or .
2. Select one of the following options and press **Select** or .
  - **Disable:** calls can be placed to numbers not stored in the Phonebook.
  - **Enable:** only numbers stored in the Phonebook can be dialed.


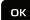
---

**Note:** Not all SIM cards support FDN. This menu does not display if your SIM card does not have the FDN feature.

---


### Data Roaming

This menu allows you specify whether the phone will roam when using data services.

1. From Idle mode, press **Menu** → **Settings** → **Personalize** → **Phone settings** → **Data roaming** and press **Select** or .
2. Highlight Enable or Disable and press **Save** or .

### Messaging key

This menu allows you to customize the Messaging key by assigning your favorite messaging application to the key. You can modify this setting any time.



1. From Idle mode, press **Menu** → **Settings** → **Personalize** → **Messaging key** and press .
2. Select the application to assign to the messaging key and press **Assign**.  
When pressed, the Messaging key shortcuts to this application.

## Memory Settings

Memory settings allow you to view details about the phone's memory, and the memory card, if one is installed. Memory settings is only available in open/landscape mode.



### Clear phone memory

From this menu you can clear the memory for Media, Messaging, Phonebook, Calendar, Tasks or Memo. You can select All to clear everything listed.

1. From Idle mode, press **Menu** → **Settings** → **Personalize** → **Memory settings** → **Clear phone memory** and press **Select** or .
2. Highlight one of the applications to clear, or highlight **All** to clear all the memory settings and press . A checkmark displays next to each application to clear.
3. Press **OK**.
4. Enter your password in the **Password** field and press **Confirm**.
5. At the **Clear?** prompt, press **Yes** to confirm your action.

### Memory card settings

From this menu you can view details about the memory card, format the memory card, rename the memory card, or turn Bluetooth visibility on or off.

1. From Idle mode, press **Menu** → **Settings** → **Personalize** → **Memory settings** → **Memory card settings** and press **Select** or .
2. Select one of the following options and press .
  - **Memory card details:** displays information about the memory card such as Name, Maximum size and Available memory.
  - **Format memory card:** allows you to format the memory card.
  - **Rename memory card:** allows you to rename the memory card.
  - **Bluetooth visibility On:** allows you to turn the Bluetooth visibility On or Off.

### Memory status

You can check the amount of the memory being used and the memory remaining for Shared memory, Messaging, Media, Calendar, Tasks, Memo, Phonebook.

The display shows the total space including the used and free space. You can also view how much space is currently occupied by each message box.

You can also check how many names and numbers are stored on the Phone, on the SIM card, and the FDN list.

1. From Idle mode, press **Menu → Settings → Personalize → Memory Settings → Memory status** and press **OK**.
2. Select a category (Shared memory, Messaging, Media, Calendar, Tasks, Memo, or Phonebook) from the menu and press **Select** to view the memory status for that category.

## **Language**

This menu allows you to select a display language for Text language and Input mode. Choose from Automatic, English, Français, and Español.

1. From Idle mode, press **Menu → Settings → Personalize → Language** and press **OK**.
2. Highlight the **Screen text** field and press **OK**.
3. Select one of the following options and press **OK**.
  - Automatic
  - English
  - Français
  - Español
4. Highlight the **Input language** field and press **OK**.
5. Select one of the following options and press **OK**.
  - English
  - Français
  - Español
6. Press **Save** to confirm your selections.

## **Greeting message**

This menu allows you to set a greeting to display briefly when the phone is switched on.

For further details about entering characters, see “*Changing the Text Input Mode*” on page 37.

1. From Idle mode, press **Menu → Settings → Personalize → Greeting message** and press **OK**.
2. Press **↵** to clear the text and enter the message you want to display in the greeting.
3. Press **Options** and select one of the following options:
  - **Save**: allows you to save the currently entered greeting message.
  - **Select language**: allows you to select Français or Español as the language with which to display your message.
  - **Edit style**: allows you to configure the Font color or Font type for this greeting message.
  - **Cancel**: allows you to exit the menu and return to the Personalize options.
4. Press **OK** to confirm your selections.

### **Time and Date**

This menu allows you to change the current time and date displayed. Time and Date can only be used in open/landscape mode.

1. From Idle mode, press **Menu → Settings → Personalize → Time and Date** and press **OK**.
2. The following options are available:
  - **Time zone update**: allows you to receive time information from T-Mobile's network.
    - **Automatic**: the phone automatically updates the time and date according to the current time zone using the network service.
    - **Manual only**: you need to manually set the time and date according to the current time zone using the Set time menu.
    - **Prompt first**: the phone asks for a confirmation before the update.
  - **Home zone**: displays a selectable list of 30 different time zones. Displays only if Manual only or Prompt first is selected.
  - **Time**: allows you to change the hour and minute. Displays only if Manual only or Prompt first is selected.
  - **Date**: allows you to enter the month, day, and year. Displays only if Manual only or Prompt first is selected.

To manually change your time and date:

1. Highlight the **Time zone update** field and use the **Left** or **Right** Navigation key to select **Manual only**.

---

**Important!** The **Manual only** or **Prompt first** option must be selected to activate the **Home zone**, **Time format**, and **Date format** fields.

---

2. Use the **Up** or **Down** Navigation key to select **Home zone**, then press **OK** to Edit. Use the Left and Right Navigation keys to select a home time zone, then press **OK** or the Save soft key to save the setting.

3. Use the **Up** or **Down** Navigation key to select the Time and Date settings, and enter the desired values.
4. Press **Save** to save your changes, or **Back** to cancel.

---

**Note:** Automatic updates of time and date do not change the time set for alarm settings or calendar memos.

---

## **My Account**

This option provides you with account specific information such as your current activity, Monthly Usage, Bill Summary, Plan & Services, My Downloads, MobileLife<sup>SM</sup>, Store Locator, Support, and Help. My Account can only be used in open/landscape mode.

## **Help**

This option displays the T-Mobile Help menu. Help can only be used in open/landscape mode.

## **Bluetooth**

Bluetooth is a short-range wireless communications technology capable of exchanging information over a distance of about 30 feet without requiring a physical connection.

Unlike infrared, you don't need to line up the devices to beam information with Bluetooth. If the devices are within a range of one another, you can exchange information between them, even if they are located in different rooms.

The following Bluetooth options are available:

### **Turn Bluetooth On/Off**

This option allows you to turn Bluetooth **On** or **Off**.

► Make a selection and press **Select** or .

### **My devices**

This option allows you to search for new Bluetooth devices.

► Highlight the **Search new device** option and press **Select** or .

The phone searches for available devices.

### **My visibility**

When the Bluetooth Visibility is turned on, your phone is wirelessly transmitting its phone name and status. This can be useful if you are attempting to connect additional Bluetooth devices. Allowing your phone to promote its visibility





can pose a security risk and incite unauthorized connection. This feature should be paired with a Bluetooth security option.

► Highlight the option (On/Off/Custom) and press **Select** or .

### ***My phone name***

When your phone's Bluetooth visibility is turned On, it identifies itself using the name entered into this text field. This name can be altered by selecting the pre-existing text and selecting a new text string in its place. This feature should be paired with a Bluetooth security option.

1. Press  to erase the previous name.
2. Use the phone's keypads to enter a new name. The default input entry method is Abc, where the initial character is Uppercase and each consecutive character in that same word is left as lowercase text.
3. Press the **Save** soft key or  to save the new name.

### ***Security mode***

When the Bluetooth Visibility is turned on, your phone is wirelessly transmitting its phone name and status. This transmission can pose a security risk and incite unauthorized connection to your phone. It is recommended that you active your phone's Bluetooth security.

► Highlight **On** or **Off** and press **Select** or .

### ***Remote SIM mode***

This mode allows you to turn On or Off Remote SIM Mode. Remote SIM mode, when set to On, allows the Bluetooth phone car kit to access the contact information stored on the SIM card.

► Select **On** or **Off** from the **Remote SIM mode** field.

### ***Features***

Actually, the Bluetooth specification is a protocol that describes how the short-range wireless technology works, whereas individual profiles describe the services supported by individual devices. Profiles reduce the chance that different devices integrate.

The following Service profiles are available:

- **Headset:** the remote Bluetooth headset enables both incoming and outgoing calls.
- **Handsfree:** the remote Bluetooth car kit enables both incoming and outgoing calls.

- **Bluetooth stereo headset:** used to make calls and listen to music through the Bluetooth stereo headset.
- **File transfer:** used to transfer files to and from Bluetooth devices.
- **Object push:** used to exchange personal data (namecards, Phonebook contacts, etc.) with Bluetooth devices.
- **Basic printing:** used to print images, text messages, personal data such as namecards and appointments, etc. through a remove Bluetooth printer.
- **Serial port:** used to connect to other Bluetooth devices through a virtual serial port.
- **SIM access:** used to provide access to the SIM card through Bluetooth.

## Help

Accesses the menu for general help information.


## Menu Design

The first time you turn on the phone your main menu displays as a Circle menu. Use this option to configure the display as either Circle or Grid menu format.

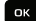

1. From Idle mode, press **Menu → Settings → Menu Design** and press **Select** or .
2. Highlight **Circle menu** or **Grid menu** and press **Select** or . Your Main menu displays in either Circle or Grid menu layout.

## Manage Cameo Frame

This menu allows you to add a Cameo frame to a list so you can send a message or pictures to the frame.

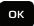
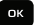
1. From Idle mode, press **Menu → Settings → Manage cameo frame** and press **Select** or .
2. Press the **Create** soft key.
3. Enter a name for the frame into the **Name** field.
4. Enter a phone number (the number assigned to the SIM for the Cameo frame) in the **Number** field screen.
5. Press **Save** when you are finished.

## Editing a Cameo Frame Link

1. From Idle mode, press **Menu → Settings → Manage cameo frame** and press **Select** or .
2. Highlight one of the frames listed in the **Manage Cameo Frame** screen.
3. Press **Options → Edit** and press **Select** or .

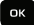
4. Navigate to the **Name** or **Number** fields using the **Up** and **Down** Navigation keys, and edit as needed.
5. Press **Save** when you are finished.

### ***Deleting a Cameo Frame Link***

1. From Idle mode, press **Menu** → **Settings** → **Manage cameo frame** and press **Select** or .
2. Highlight one of the frames listed in the Manage Cameo Frame screen.
3. Press **Options** → **Delete** and press **Select** or . Check the frame you want to delete, or **Select all** to delete all the frames. The selected link(s) delete from the list.

### ***Manage Online Album***


This menu allows you to manage the addresses for Flickr, Kodak, Photobucket, or Snapfish.

1. From Idle mode, press **Menu** → **Settings** → **Manage Online Album** and press the **Select** soft key or .
2. Select one of the services, **Flickr**, **Kodak**, **Photobucket**, or **Snapfish** and press **View**.
3. Press **Edit** to change the email address for this service. Press **Save** to save the change, or **Back** to go back.

## **Call settings**



### ***Answering mode***

The Answer Options menu allows you to select how your phone answers incoming calls.

1. From Idle mode, press **Menu** → **Settings** → **Call settings** → **Answering mode** and press **Select** or .
2. Press the key to make your selection. Press the **Save** soft key to save your new selection. Options include:
  - **Send key**: answers an incoming call by pressing the  Send key.
  - **Any key**: answers an incoming call by pressing any key on your phone.

### ***Auto redial***

In this menu, you can automatically redial the last number if the call was either cut off or you were unable to connect.

1. From Idle mode, press **Menu** → **Settings** → **Call settings** → **Auto redial** and press **Select** or .
2. Press  to make your selection then press the **Save** soft key to save your new selection. Options include:
  - **Off**: keeps the phone from automatically redialing the last number if the call was disconnected or the call was cut off.

- **On:** causes the phone to automatically redial the number.

### **Show my number**

In the Show my number menu you can select how your ID is handled when an outgoing call is initiated.

1. From Idle mode, press **Menu** → **Settings** → **Call settings** → **Show my number** and press **Select** or **OK**.
2. Highlight your selection and press **OK** to make your selection.
3. Press **Save** to save your new selection. Options include:
  - **Set by network:** uses the default network information to identify you to the other party.
  - **Show number:** displays your identifying information to the other recipient.
  - **Hide number:** hides your identifying information from the other recipient.

### **Call forwarding**

This network service enables incoming calls to re-route to a secondary number that you specify.

---

**Example:** You may wish to forward your business calls to a colleague while you are on holiday.

---

To set your call forwarding options:

1. From Idle mode, press **Menu** → **Settings** → **Call settings** → **Call forwarding** and press **Select** or **OK**.
2. Select a call forwarding option then press **Select** or **OK**. The following options are available:
  - **Always:** all calls are forwarded until this feature is cancelled.
  - **If Busy:** calls are forwarded when you are already on another call.
  - **If no reply:** calls are forwarded when you do not answer the phone.
  - **If out of reach:** calls are forwarded when you are not in an area covered by T-Mobile or when your phone is switched off.
  - **Cancel all:** all call forwarding options are canceled.
3. Enter the number in which to forward the calls in the **Forward to** field and press **Select** or **OK**.
4. Select **Options** → **Activate** then press **Select** or **OK**.

The current status displays. If the option was already set, the number to which the calls are forwarded displays.

---

**Tip:** To enter an international code, press and hold the  key until the + sign displays.

---

### ***Call barring (SIM Card Dependent)***

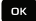
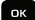
Call Barring allows you to restrict specific types of incoming and outgoing calls on your phone. This is useful if you allow someone to use your phone for a short period of time.

### ***Call waiting***

This network service informs you when someone is trying to reach you during another call.

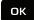
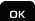
You can specify individual call waiting options for voice calls and/or data calls.

To set your call waiting options:

1. From Idle mode, press **Menu** → **Settings** → **Call settings** → **Call waiting** and press **Select** or .
2. Select **Options**, then **Activate** or **Deactivate**, then press **Select** or .

### ***Call status tones***

This option allows you to activate the phone to alert you to changes in call status.

1. From Idle mode, press **Menu** → **Settings** → **Call settings** → **Call status tones** and press **Select** or .
2. Press  to check/uncheck the following options:
  - **Call connect tone**: an alert is played when the call is connected.
  - **Minute minder**: an alert plays at one-minute intervals
  - **Call end tone**: an alert plays when the call is disconnected
3. Press the **Back** soft key, then choose **Yes** to save the changes, or **No** to discard the changes.

### ***Alerts on call***

This option allows you to specify whether the phone will use sounds to alert you during a call.

1. From Idle mode, press **Menu** → **Settings** → **Call settings** → **Alerts on call** and press **Select** or .
2. Highlight **Off** or **On** and press the **Save** soft key or .

## Auto reply

This option allows you to create a text message to be sent to the caller when you choose to Reject an incoming call.

1. From Idle mode, press **Menu** → **Settings** → **Call settings** → **Auto reply** and press **Select** or **OK**.
2. In the **Activation** field, use the **Left** and **Right** Navigation keys to choose **On** or **Off**.
3. Use the **Down** Navigation key to move to the Reply to send box to enter the text of the automatic reply message.
4. Press the **Options** soft key and choose **Save** to save the message.

## Call log management

### Call time

This menu lets you view the time log for calls both made and received.

---

**Note:** The actual time invoiced by T-Mobile may differ from times displayed on your phone due to network features and service plan.

---

The following time logs are available:

- **Last call time:** shows the length of your last call.
- **Total incoming:** shows the total length of all calls you have received since the timer was last reset.
- **Total outgoing:** shows the total length of all calls you have made since the timer was last reset.
- **Life time:** shows the total length of time for both incoming and outgoing calls. The length of call time must be at least 1 minute to increment this field. You cannot clear this information.

### Delete all history

This menu allows you to delete the records in each call record separately, or you can delete all of your call records at one time.

1. From Idle mode, press **Menu** → **Settings** → **Call Settings** → **Call log management** → **Delete all history** and press **Select** or **OK**.
2. Select one of the following call logs and press **OK** to place a check mark next to the item to delete.
  - All calls
  - Missed calls

- Dialed calls
  - Answered calls
3. Press **Delete**.
  4. At the **Delete?** prompt, press **Yes** to delete the selected category, or **No** to cancel.

## Advanced

### Network

The Network Selection feature enables you to automatically or manually select the network used when roaming outside of your home area.

---

**Note:** You can select a network other than your home network only if there is a valid roaming agreement between the two.

---

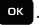

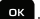
### Search Now

Search now allows you to search for available networks and choose a network for connection.

1. From Idle mode, press **Menu** → **Settings** → **Advanced** → **Network** and press **Select** or .
2. Select **Search now** and press **Select** or .
3. The phone searches for available networks. Highlight the network to which you want to connect and press **Select** or . The phone connects to that network.

### Default Setup

Default setup allows you to specify how the phone connects to a network when you start the Browser. To change your Default setup:

1. Highlight the **Default setup** option and press **Select** or .
2. Highlight one of the following options and press **Select** or 
  - **Automatic:** you are connected to the first available network when you start the browser.
  - **Manual:** causes the phone to search for available networks. Press the Up or Down Navigation key to highlight a network, then press **Select** or .

## Software update

The Software Update feature enables you to use your phone to connect to the network and upload any new phone software directly to your phone.

- From Idle mode, press **Menu** → **Settings** → **Advanced** → **Software update** and press **Select** or **OK**.

The phone updates with the latest software (if available).

## Reset settings

### Reset settings

From this menu you can reset your phone and sound settings to the default settings.

The following options are available:

- **All:** Phone, Display, and Sound settings are returned to default values.
- **Phone settings:** only phone settings are returned to default values.
- **Display settings:** only display settings are returned to default values.
- **Sound settings:** only sound settings are returned to default values.

To reset your settings:

1. From Idle mode, press **Menu** → **Settings** → **Reset settings** → **Reset settings** and press **Select** or **OK**.
2. Highlight one of the options or highlight **All** and press **OK** to place a check mark next to the option.
3. Press **Reset**.
4. Enter your password and press **Confirm**.

### Master reset

From this menu you can reset your phone and sound settings to the factory default settings.

1. From Idle mode, press **Menu** → **Settings** → **Reset settings** → **Master reset** and press **Select** or **OK**.
2. Enter your password and press **Confirm**.
3. At the **Reset settings?** prompt, press **Yes** to reset the settings or **No** to cancel.



## Self Help

A self-help application for diagnostics is provided on this handset. This solution allows your carrier to efficiently solve subscriber service issues from a T-Mobile portal. To use this feature:

- From the Idle menu, dial 611 then press  from the handset to diagnose.

Self Help software immediately captures the call and displays a menu screen that displays frequently asked questions, troubleshooting and other tips and tricks.

Using this portable, you can automatically configure your handset, using step-by-step instructions. You can also make account inquiries and pay bills.

---

**Note:** For more information, please contact T-Mobile customer service.

---

## Section 11: Organizer

---

The Organizer allows you to set alarms, schedule appointments, view the calendar, create Tasks, perform simple math calculations, check world time, perform unit conversions, set a timer, and use a stopwatch.

### Calendar

With the Calendar feature, you can:

- Consult the calendar by month, week, or day.
- Set schedules and note anniversaries
- Make a tasks list.
- Write memos to keep track of your schedule.
- Set an alarm to act as a reminder, if necessary.
- Check your memory status.

To navigate to the Calendar:

1. In Idle mode, press **Menu** → **Organizer** → **Calendar** and press **Select** or .

When you select the **Calendar** menu, the following options are available:

### Month view

When you select this option, the calendar displays the selected month with today's date highlighted.

Press the **Options** soft key to display the following options:

- **View**: displays the selected Day view.
- **View by**: select Day or Week view.
- **Create**: create an Appointment, Anniversary, Holiday, Important, or Private event.
- **Go to**: displays Today's date or the date you entered.
- **Event list**: displays the selected event. Selections are: Appointments, Anniversaries, Holidays, Important, or Private.
- **Settings**: set the Starting day for the calendar and also the view by (Month, Week or Day).
- **Missed alarm events**: displays any missed alarm events.
- **Memory status**: displays the memory usage of Appointment, Anniversary, Holiday, Important, or Private events. Memory status can only be viewed in open/landscape mode.

## Week view

When you select this option, the calendar displays the selected week with today's date highlighted. The following options are available when you press the **Options** soft key:

- **View by:** select Day or Month view.
- **Create:** create an Appointment, Anniversary, Holiday, Important, or Private event.
- **Go to:** takes you to today's date or the date you entered.
- **Event list:** displays the selected event. Selections are: Appointments, Anniversaries, Holidays, Important, or Private.
- **Settings:** set the Starting day for the calendar and also the view by (Month, Week or Day).
- **Missed alarm events:** displays any missed alarm events.
- **Memory status:** displays the memory usage of Appointment, Anniversary, Holiday, Important, or Private events. Memory status can only be viewed in open/landscape mode.



## Day view

When you select this option, the Day view displays the selected day with any events listed. Press **Options** to view the following options:

- **Create:** create an Appointment, Anniversary, Holiday, Important, or Private event.
- **View by:** select Week or Month view.
- **Event list:** displays the selected event. Selections are: Appointments, Anniversaries, Holidays, Important, or Private.
- **Settings:** set the Starting day for the calendar and also the view by (Month, Week or Day).
- **Missed alarm events:** displays any missed alarm events.
- **Memory status:** displays the memory usage of the Calendar events (Appointment, Anniversary, Important and Private). Memory status can only be used in open/landscape mode.


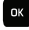
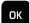
## Appointment

This option allows you to schedule an appointment.

1. In Idle mode, press **Menu** → **Organizer** → **Calendar** and press .
2. Press **Options** → **Create**, then highlight **Appointment** and press **Select** or .
3. Enter a title for this Appointment event in the **Title** field, then press the **Down** Navigation key.
4. Continue to enter other information including **Details**, **Start date**, **Start time**, **End date**, **End time**, **Location**, **Alarm**, **Before**, **Alarm tone**, **Repeat**, **Every**, **Except weekends** and **Until**.
5. Press **Options** → **Save** . The appointment saves to the Calendar.




## Anniversary

This option allows you to record Anniversaries in your calendar. You can also set an alarm to remind you of important anniversaries.

1. In Idle mode, press **Menu → Organizer → Calendar** and press .
2. Press **Options → Create**, then highlight **Anniversary** and press **Select** or .
3. Enter a title for this Anniversary event in the **Title** field, then press the **Down** Navigation key.
4. Continue to enter other information including **Details**, **Date**, **Alarm**, **Before**, **Alarm time**, **Alarm tone**, and **Repeat every year**.
5. Press **Options → Save** . The appointment saves to the Calendar.



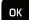
## Holiday

This option allows you to schedule a Holiday to the calendar.

1. In Idle mode, press **Menu → Organizer → Calendar** and press .
2. Press **Options → Create** then highlight **Holiday** and press **Select** or .
3. Enter a title for this Holiday event in the **Title** field, then press the **Down** Navigation key.
4. Continue to enter other information including **Details**, **Date**, and **Repeat every year**.
5. Press **Options → Save** . The holiday saves to the Calendar.

## Important

This option allows you to schedule an Important event to the calendar.

1. In Idle mode, press **Menu → Organizer → Calendar** and press .
2. Press **Options → Create**, then highlight **Important** and press **Select** or .
3. Enter a title for this Important event in the **Title** field, then press the **Down** Navigation key.
4. Continue to enter other information including **Details**, **Start date**, **Start time**, **End date**, **End time**, **Location**, **Alarm**, **Before**, **Alarm tone**, **Repeat**, **Every**, **Except weekend**, and **Until**.
5. Press **Options → Save** . The holiday saves to the Calendar.

## Private

This option allows you to record miscellaneous dates or events in your calendar.

1. In Idle mode, press **Menu → Organizer → Calendar** and press **OK**.
2. Press **Options → Create**, then highlight **Important** and press **Select** or **OK**.
3. Enter a title for this Important event in the **Title** field, then press the **Down** Navigation key.
4. Continue to enter other information including **Details**, **Start date**, **Start time**, **End date**, **End time**, **Location**, **Alarm**, **Before**, **Alarm tone**, **Repeat**, **Every**, **Except weekend**, and **Until**.
5. Press **Options → Save** **OK**. The Private information saves to the Calendar.

## Missed alarm events

You can check on all of the events that you have set an alarm on.

1. In Idle mode, press **Menu → Organizer → Calendar** and press **Select** or **OK**.
2. Press **Options → Missed alarm events** and press **Select** or **OK**.
3. To view event information, highlight an event and press **OK**. The missed alarm event information displays.
4. To acknowledge and remove the event, press the **Confirm** soft key or **OK**. The event is removed from the **Missed alarm events** menu.

## Memory status

This menu item shows the number of Appointment, Anniversary, Holiday, Important and Private calendar events you presently have, and the number of events allowed.

1. In Idle mode, press **Menu → Organizer → Calendar** and press **Select**.
2. Press **Options → Memory status** and press **Select** or **OK**.

## TeleNav GPS Navigator

TeleNav is a driving aid that uses both audible and visual instruction for GPS navigation.

1. From Idle mode, press **Menu → Organizer → TeleNav GPS Navigator** and press the **Select** soft key or **OK**.  
A Warning message displays.
2. Read the agreement and press **Agree** to accept the terms, or press **EXIT** to close the window.

## Alarm

This feature allows you to:



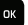

- Set up to 3 alarms to ring at specified times.
- Set the phone to switch on automatically and ring the alarm even if the phone is switched off.

The following options are available:

- **Alarm 1:** set the day, time, and tone for this alarm.
- **Alarm 2:** set the day, time, and tone for this alarm.
- **Alarm 3:** set the day, time, and tone for this alarm.
- **Auto power:** alarm rings at the specified time even if the phone is turned off.  
If the option is set to **Off** and the phone is switched off at the specified time, the alarm does not ring.

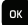
To set the alarm:

1. In Idle mode, press **Menu → Organizer → Alarm** and press **OK**.
2. Select an alarm and press **Select** or **OK**.
3. Press the **Down** navigation key and highlight the **Alarm activation** field. Press the **Right** navigation key to select **On**.
4. Press the **Down** key to highlight the **Alarm time** option. Enter the time you want the Alarm to sound.
5. Press the **Down** key to highlight the **Alarm type** option and press **OK** to **Edit**. Select one of the following alarm types, then press **OK**.
  - **Melody:** the alarm rings using the selected ring melody.
  - **Increasing melody:** the volume of the melody increases.
  - **Vibration:** the phone vibrates but does not play a tone.
  - **Vibration then melody:** the phone vibrates 3 times and then starts playing a melody.
  - **Vibration and melody:** the phone vibrates and plays the melody simultaneously.
  - **Vibration and increasing melody:** the phone vibrates and increases the volume of the melody.
6. Press the **Down** key to highlight the **Alarm tone** field. Press **OK** to display a list of tones from which to choose, then press **Select**.

7. Press the **Down** key to highlight the **Alarm volume** field. Press the **Left** or **Right** Navigation key to decrease or increase the volume.
8. Press the **Down** key to highlight the weekday checkboxes. Press  to display a list of days.
9. Press  to place a checkmark next to one of the following selections: **Everyday**, **Once only**, **Sunday**, **Monday**, **Tuesday**, **Wednesday**, **Thursday**, **Friday**, or **Saturday**. To place or remove a check mark, press . Press **OK** to confirm your selections.
10. Press the **Down** key to highlight the **Snooze** field. Press the **Right** Navigation key to select one of the following times: **Off**, **1 min**, **3 min**, **5 min**, **7 min**, or **10 min**.
11. If you set **Snooze** to a value other than **Off**, press the **Down** key to highlight the **Repeat** field. Press the **Right** Navigation key to select the number of times the Snooze will repeat: **1 time**, **2 times**, **3 times**, **5 times**, or **10 times**.
12. Press **Options** → **Save** to confirm your settings or **Back** to return to the Alarm screen.
13. Press the  key to return to Idle mode.
14. To stop the alarm when it rings, press any key or press the **Snooze** soft key.

## Voice recognition

Nuance is advanced speech recognition software used to activate a wide variety of functions on your phone. Nuance software automatically voice activates (up to 2,000 contacts) for voice dialing and searching. No pre-recording or training needed. Speak a contact name naturally to dial, and use your voice to look up contacts, launch applications and navigate phone menus.

1. In Idle mode, press **Menu** → **Organizer** → **Voice recognition** and press **Select** or .
2. At the voice prompt, say a command. The list of available commands is listed below.

---

**Note:** This list of voice commands is briefly displayed.

---

### Say a Command Options

- **Call <Name or #>:** dials a name or number listed in your contact list. If multiple numbers exist (i.e. home, work, or other) say the name and the number type (location).

- **Send Text <Name or #>**: displays the Create Text Message screen.
- **Lookup <Name>**: allows you use a voice command to locate and display contact information stored in the Contacts list. For more information, refer to *“Finding a Phonebook Entry”* on page 51.
- **More Options**
  - **Go to <App>**: accesses all the features of your phone if they are activated, such as: Web, Calendar, Ringtones, Tasks, Contacts, Voice mail, and Games and Apps.
  - **Check <Item>**: lets you check your phone's status in the same report (Status, Messages, Missed Calls, Time, Signal Strength, Network, Battery, and My Phone Number).
  - **More options**: Returns you to other options listed above.

While the Say a command screen displays, you have two options:

- **Tutorial**: provides examples of how to use the voice commands.
- **Settings**: lists the settings for voice command software such as: Confirmation, Adaptation, Audio Modes, Speakerphone, and About.

If the phone does not recognize your command the Command not recognized press Restart. The Restart command allows you to try to command options again.

Speak clearly when giving your command. There is no need for you to speak slowly or with added emphasis. The voice recognition software has been optimized to understand your speech in its natural form. If it does not recognize your command after a few seconds, a voice prompt asks you to repeat the command. If it does not recognize your command again, the following message displays “Sorry, no match found,” and voice recognition turns off.

---

**Important!** You must end your current Voice Commands call before you can make another call.

---

## Voice Recognition Tips

- Wait for the tone before you speak.
- Speak clearly and at a normal volume.
- There is no need to use paused speech. The voice recognition software has been trained to recognize natural speech, and performs best when you speak naturally.
- In very noise environments, it may be helpful to use the supplied earset or optional Bluetooth headsets.

## Contacts List Voice Activation

On startup Nuance reads your Contacts list and voice-activates all the names.



When you add or change contacts, Nuance automatically reloads and voice-activates the list.

## **Name Dialing**

To use Name Dial, you need contacts stored in your Phonebook. For more information, refer to “*Contacts*” on page 58.

### **To access Voice recognition:**

1. In Idle mode, press **Menu → Organizer → Voice recognition**.
2. Say “**Call**” followed by the first and last name of the contact that you want to dial.  
The name that you said is repeated through the earpiece and your phone dials the number.
3. If Nuance is not sure of the name that you said, “**Try Again?**” displays on the screen.
4. You’re asked to confirm the correct name as Nuance displays the results. Say “**Yes**” or “**No**” to confirm or reject the number when prompted.

The location repeats through the earpiece and your phone dials the number.

## **Send Text Message**

To access Voice recognition:

1. In Idle mode, press **Menu → Organizer → Voice recognition**.  
After a brief pause, a list of available commands displays on the screen along with the “**Say a command**” message.
2. Say “**Send Text**” at a distance of 3-8 inches from the microphone. “Say the Name” plays through the earpiece.
3. After you say a name, you might be prompted, “**Did you say send text?**” To confirm a name, wait for the beep and then say “**Yes**.”
4. When the Text Message client launches, compose your text message.

## **Name Lookup**

To perform a name lookup, you’ll need to have some entries in your Contacts list.

To access Voice recognition:

1. In Idle mode, press **Menu → Organizer → Voice recognition**.

After a brief pause, a list of available commands displays on the screen along with the “**Say a command**” message.

2. Say “**Lookup**” at a distance of 3-8 inches from the microphone. “Say the name” plays through the earpiece.
3. Say the name exactly as it displays in your Contacts, first name followed by last name.
4. The contact name displays on the screen with other information that you've entered for that contact.

## Opening Applications

You can open an application or access a menu on your phone using Voice recognition.

To access Voice recognition:

1. In Idle mode, press **Menu → Organizer → Voice recognition**.

After a brief pause, a list of available commands displays on the screen along with the “**Say a command**” message.

2. Say “**More Options**” then “**Go to**” at a distance of 3-8 inches from the microphone. Say the name of the application when prompted. A list of options is displayed.

---

**Note:** You can also say, “**Go To**” followed by the name of the application, e.g., “**Web**”.

---

The spoken application menu option activates.

## Checking Phone Status

Use the Check command to see and hear status information from your phone, including its phone number, status, current signal strength, and battery level.

To check phone status:

1. In Idle mode, press **Menu → Organizer → Voice recognition**.

After a brief pause, a list of available commands displays on the screen along with the “**Say a command**” message.

2. Say “**More options → Check**” at a distance of 3-8 inches from the microphone. A list of options displays.

The spoken application menu option displays.

## ***Voice Recognition Settings***

### **Confirmation**

Nuance uses a confirmation list when a name or number is not clearly recognized. The software displays three choices and prompts you to select a choice.

You can modify the way Nuance uses the confirmation list in the settings. Each time Nuance activates you can choose to view the confirmation list even if there is only one choice. Additionally, you can choose never to view a confirmation list, even if there are multiple choices. When the name or number you speak is not recognized, the Automatic setting displays the confirmation list.

1. In Idle mode, press **Menu → Organizer → Voice recognition**.

After a brief pause, a list of available commands displays on the screen along with the “**Say a command**” message.

2. From the “**Say a command**” screen, press **Settings → Confirmation**.

3. Select one of the following options:

- **Automatic:** Nuance displays a confirmation list only when it is not sure if it has correctly recognized the name or number.
- **Always Confirm:** Nuance always displays a confirmation list, even when there is only one choice.
- **Never Confirm:** Nuance never displays a confirmation list.

### **Adaptation**

If Nuance frequently does not recognize your commands, adapting digit dialing to your voice improves the accuracy of digit recognition.

After you adapt Digit Dial, your phone recognizes only your voice. Other users are not able to use the handset with Nuance unless the handset is reset to factory defaults.

Adapting requires recording multiple sequences of digits. The entire adaptation process takes approximately one minute.

1. In Idle mode, press **Menu → Organizer → Voice recognition**.

After a brief pause, a list of available commands displays on the screen along with the “**Say a command**” message.

2. From the “**Say a command**” screen, press **Settings → Adaptation**.
3. Press **Adapt Voice**.
4. The screen displays an adaptation message. The entire adaptation process takes just a couple of minutes to complete.

---

**Tip:** Perform the adaptation process in a quiet room.

---

5. Press **Select** to begin adaptation or **End** to cancel.

## **Audio Modes**

Your voice recognition software includes an interface that allows you to customize your voice recognition, mode setting to match your experience and comfort level with voice commands. You can select one of three levels, Expert mode, Prompt mode, or Readout mode.

Voice recognition provides three modes or settings, Expert mode, Prompt mode and Readout mode. Using Modes, you can select your user level.

1. In Idle mode, press **Menu → Organizer → Voice recognition**.

After a brief pause, a list of available commands displays on the screen along with the “**Say a command**” message.

2. From the “**Say a command**” screen, press **Settings → Audio Modes**.
3. Select one of the following options:
  - **Expert Mode:** turns off the voice and text prompts.
  - **Prompt Mode:** this is the default mode. Uses a voice prompt to confirm your selection and also displays a confirmation screen.
  - **Readout Mode:** displays an on-screen prompt with voice.

## **Speakerphone**

1. In Idle mode, press **Menu → Organizer → Voice recognition**.

After a brief pause, a list of available commands displays on the screen along with the “**Say a command**”

message.


- From the “**Say a command**” screen, press **Settings → Speakerphone**.
- Use the **Up** and **Down** Navigation keys to select **Automatic, Always On, or Always Off**, then press the **OK** soft key.

## About

The About option displays information about Nuance including version number, LVR number, build number, and device number.

## Tasks

This feature allows you to enter a task list.

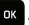
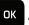
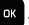
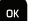
- In Idle mode, press **Menu → Organizer → Tasks** and press **Select** or .
- Press **Options → Create** to create a new task.
- Enter a short description of the task in the **Title** field then press the **Down** Navigation key.
- Continue to enter other information including Details, Start date, Due date, Alarm, Alarm date, Alarm time, Alarm tone, and Priority.
- Press **Options → Save** when you are finished. The Task list saves to the Calendar.

## Editing the Tasks List

When you select the Tasks list menu, the current contents display with a status checkbox and a priority marker.

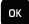
If the item was done, a check displays in the checkbox.

High priority items have a “1” triangle icon, Normal priority items have a “2” triangle icon, and Low priority items have a “3” triangle icon.

- In Idle mode, press **Menu → Organizer → Tasks** and press **Select** or .
- Highlight a task from the list, then press **Options → View**, and press .
- Highlight a field to edit and press **Options → Edit** and press .
- Edit the items you wish to change and press **Options → Save** .


## Memo

This option allows you to create notes to add to your events.

1. In Idle mode, press **Menu** → **Organizer** → **Memo** and press **Select** or .
2. Press **Options** → **Create** to create a new memo.  
A blank Notes screen displays.
3. Enter your text and press **Options** → **Save**.

## Calculator

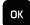
With this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions; addition, subtraction, multiplication, and division.

1. In Idle mode, press **Menu** → **Organizer** → **Calculator** and press **Select** or .
2. Enter the first number using the numeric keys.
3. Use the Navigation keys to select the calculation method, according to the illustration on the display.
4. Enter the second number using the numeric keys.

---


**Tip:** Press  to navigate the cursor to the left. Press  to navigate the cursor to the right.

---

5. Press  to view the result.  
Repeat steps 1 to 4 as many times as required.

## Tip calculator

This feature provides the percentage amount for tip. Use the following procedures to calculate a tip amount.

1. In Idle mode, press **Menu** → **Organizer** → **Tip calculator** and press **Select** or .
2. In the **Bill** field, enter the check amount.

---

**Tip:** Press  to enter the decimal point for the exact dollar amount.

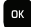

---

3. Use the **Down** Navigation key to highlight **Tip(%)** percentage. 15 is the default value but you can change this value.  
The **Tip(\$)** field value calculates according to the values entered.
4. Use the **Down** Navigation key to move to the **# paying** field to change the number of people contributing to the tip amount.
5. The **You pay** field displays the total for each individual.

## World clock

This feature allows you to find out what time it is another part of world, using the **Left** and **Right** Navigation keys. World clock is only available in open/landscape mode.

There are two time lines available. You can set the first setting to your home city and then use the second setting to check other city times.



1. In Idle mode, press **Menu → Organizer → World clock** and press **Select** or .
2. Press **Options → Add** to create a new time zone.
3. Press the **Left** or **Right** Navigation key until the desired time zone displays in the field.
4. Press the **Down** Navigation key and press  to place a check mark in the **Daylight saving** checkbox (if applicable).
5. Press **OK** to confirm your settings.

## Converter

The conversion menu provides the following conversion categories:

- Currency
- Length
- Weight
- Volume
- Area
- Temperature

To convert a currency, length, weight, volume, area, or temperature, do the following:

1. In Idle mode, press **Menu** → **Organizer** → **Converter** and press **Select** or .
2. Scroll to the conversion feature you wish to use and press **Select** or .
3. Use the **Up**, **Down**, **Left**, and **Right** navigation keys to select the From and To units of measure for the quantity you want converted.

---





**Tip:** Press  to include a decimal point.

---

4. Press the **Back** soft key to return to the **Unit conversion** menu.




## Timer

You can use this menu to set a timer. To enable the Timer, use the following options:

1. In Idle mode, press **Menu** → **Organizer** → **Timer** and press **Select** or .
2. Press the **Set** soft key and enter the length of time as **HH:MM:SS** and press **OK**.
3. Press  key to start the timer. Press  again to stop the timer.
4. Press  when you are finished.

## Stopwatch




This feature allows you to use a stopwatch to set and view up to 50 lap times.

1. In Idle mode, press **Menu** → **Organizer** → **Stopwatch** and press **Select** or .
2. Press  to start the stopwatch.
3. Press  to set **Lap** times.
4. Press the **Stop** soft key to stop the stopwatch and view the lap times.
5. Press the **Reset** soft key to erase all previously recorded stopwatch times.

## RSS Reader

The RSS Reader provides access to RSS feeds from various sources. You can set your phone's RSS Reader to update from RSS feeds on the web, and specify the timing of updates. The RSS Reader can only be used in open/landscape mode.



1. In Idle mode, press **Menu** → **Organizer** → **RSS Reader** and press **Select** or .
2. Press **Options** → **Add** to add an RSS feed.
3. Enter the URL, then press .
4. Press **Options** → **Settings** to set up automatic updates.
5. Press **Check** to select **Auto update**, then press the **Down** Navigation key to specify update intervals.
6. Press the **Right** and **Left** Navigation keys to set an update interval. Available intervals are at RSS reader launch, Daily or Weekly.
7. Press **Save** to save the setting.
8. Press **End**  when you are finished.

## Section 12: Camera

---

This section explains how to use the camera on your phone. You can take photographs by using the built-in camera functionality.

### Using the Camera

Using the camera module in your phone, you can take photos of people or events while on the move. Additionally, you can send these photos to other people in a Picture Messaging message or set a wallpaper or picture ID image.

---

**Note:** Do not take photos of people without their permission.  
Do not take photos in places where cameras are not allowed.  
Do not take photos in places where you may interfere with another person's privacy.

---


### Take and Send

Your camera produces photos in JPEG format.

---

**Note:** When you take a photo in direct sunlight or in bright conditions, shadows may appear on the photo.



---

1. In Idle mode, press **Menu → Media → Photos → Camera** and press **Select** or .  
– or –  
Press the **Camera** key.
2. Press the **Menu** soft key to access the camera options. For details, see “*Configuring Camera Options*” on page 120.

---

**Tip:** You can use the keypad to quickly change the camera options.



---

3. Adjust the image by aiming the camera at the subject and press the **Camera** key  or  key to take the photo.

---

**Note:** To change the default destination for your pictures, press the **Options** soft key when **Send to: My Album Online?** displays on the screen. Highlight the **Default destination** option and the **Change** option. You can then change your default destination to **Recent recipients**, **Contacts**, **Online Album**, **New E-mail**, **New number**, or **cameo frame**.

---


4. With the photo displayed, press **Options** to view the following options for this photo:
  - **Take another:** allows you to take another picture.
  - **Send to:** sends this image as a Picture Message.
  - **Send via:** in open/landscape mode, allows you to send this photo as a Message, E-mail, or to a Bluetooth enabled device.
  - **Default destination:** allows you to select a Remove or Change the destination for photos. Selections are: Recent recipients, Contacts, Online Album, New E-mail, New number, or cameo frame.
  - **Manage cameo frame:** allows you to add a Cameo frame to a list so you can send a message or pictures to the frame.
  - **Print via Bluetooth:** allows you to send the photo to a Bluetooth enabled printer.
  - **Delete:** allows you to delete the photo.
  - **Set as:** allows you to set this photo as a myFaves icon, Picture ID or Wallpaper.
  - **Edit:** in open/landscape mode, allows you to edit the selected photo.
  - **Rotate:** in open/landscape mode, allows you to rotate this photo either into a portrait or landscape position.
  - **Slide show:** in open/landscape mode, displays your photos in a slideshow presentation (if you have taken more than one photo).
  - **Properties:** allows you to view the properties of this photo such as Name, Format, Resolution, Size, Forwarding, Date created, and Location.
5. If the phone is in open/landscape mode, you can add a voice recording to the photo. Press **OK** to **Add Voice** to this photo.
6. Press **Stop** to stop recording.
7. To take another picture, press **Options** → **Take another**, or press the  button.
8. Press  to return to the Idle mode.

### **Configuring Camera Options**

1. In Capture mode, press the **Menu** soft key to use various options for the camera module.

The following options are available:

- **Camera/Camcorder :** in landscape mode, toggles between Camera and Camcorder.
- **Shooting Mode:** available in landscape mode only. Takes a photo in various modes. Once you change the mode, the corresponding indicator displays at the top left of the display.

- **Single:** takes a single photo and allows you view it before returning to the shooting mode.
- **Continuous:** takes a succession of consecutive photos.
- **Panorama:** takes a landscape photo and places a black mat in front of the photo so it looks like there are four panels in one photo.
- **Smile shot:** the camera uses Smile Shot technology to automatically adjust focus to facial features.
- **Mosaic:** takes up to four photos and then groups them together into a single final photo.
- **Night scene:** allows you to turn the night scene setting On or Off.
- **Size:** allows you to set the image size to either: 2M (1600x1200), 1.3M (1280x960), 0.3M (640x480), and 320x240. The selected image size displays on the capture screen.
- **White balance:** allows you to set this option from the following choices: Auto, Daylight, Incandescent, Fluorescent, or Cloudy.
- **Exposure meter:** allows you to set how the camera measures or meters the light source: Matrix, Center-weighted or Spot.
- **Effects:** allows you to change the color tone or apply special effects to the photo: None, Black and White, Sepia, Negative, or Watercolor.
- **Default destination:** in landscape mode, allows you to change or remove the default destination for photos.
- **Timer:** allows you to set a time delay before the camera takes the photo. Select the length of delay you want (Off, 2 seconds, 5 seconds, or 10 seconds). When you press the **Camera** key  or **OK** key, the camera takes the photo after the specified time elapses.
- **Viewfinder:** places a viewfinder on the screen to help you center your subject. Choose from:
  - **Indicator mode:** displays the photo screen without guidelines.
  - **Guideline mode:** displays the photo screen with guidelines.
- **Settings:**
  - **Photo:** allows you to set the Quality for this photo, Economy, Fine or Superfine.
  - **Setup:** allows you to configure: Review screen, Shutter sound, Default storage, and Shortcuts.

## Camera Shortcuts

You can change options using your keypad in capture mode. The following short cuts are available:



takes the photograph.



**Up** volume key zooms out.

**Down** volume key zooms in.



**Up** and **Down** navigation keys adjust the image brightness.



**Left** and **Right** navigation keys zoom in and out.



in open/landscape mode, toggles between camera and camcorder.



in open/landscape mode, scrolls through Shooting Modes. Also displays custom frame borders for your photo.



in open/landscape mode, changes Viewfinder Mode.



or sets the delay timer.





## Photos

1. With the Camera module open, press the **Photos** soft key. Use the Navigation keys to scroll through the photos.
2. Press the **Options** soft key to use the following options:
  - **Take another:** allows you to take another picture.
  - **Send to:** sends this image as a Picture Message.
  - **Send via:** in landscape mode, allows you to send the selected photo as a Message, in an E-mail, or to a Bluetooth enabled device.
  - **Default destination:** allows you to Change or Remove where your photos are sent after you take them.
  - **Manage cameo frame:** allows you to add a Cameo frame to a list so you can send a message or pictures to the frame
  - **Print via Bluetooth:** allows you to send the selected photo to a Bluetooth enabled printer.

- **Delete:** allows you to delete the Selected photo.
- **Set as:** allows you to set the photo as myFaves icon, Wallpaper or as a Picture ID.
- **Edit:** in open/landscape mode, allows you to edit the selected photo.
- **Rotate:** in open/landscape mode, allows you to rotate this photo either into a portrait or landscape position.
- **Slide show:** in open/landscape mode, displays your photos in a slideshow presentation (if you have taken more than one photo).
- **Properties:** shows the properties of the photo, such as the file name, file date, file format, image resolution, file size, forwarding status, and location.

## Deleting a Photo

You can delete photos one by one or all at one time.

1. With the Camera module open, press the **Photos** soft key. Use the Navigation keys to scroll through the photos.
2. Press the **Options** soft key and select **Delete** then press .
3. Press the **Yes** soft key to confirm the deletion.
4. Press the  key when you are finished.

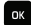
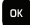

## Record video

Using the camcorder module in your phone, you can take videos of people or events while on the move. Additionally, you can send these photos to other people in a Picture Message. The camcorder module is only available in open/landscape mode.



---

**Tip:** When shooting video in direct sunlight or in bright conditions, it is recommended that you provide your subject with sufficient light by putting the light source behind you.



---

1. In Idle mode, press **Menu → Media → Videos** and press **Open** or .
2. Select **Record video** and press .
3. Before filming the video, press the **Menu** soft key to access camcorder options (see below).
4. Adjust the image by aiming the camera at the subject.
5. Press  to begin shooting video.
6. Press **Stop** to stop the recording and save the video file to your Videos folder.

– OR –

7. Press  to pause the recording. While paused, you can press the **Save** soft key to save the video file to your Videos folder.
8. Once the file saves, press  to play back your video for review.

### **Camcorder Options**

1. Press the **Menu** soft key to access the camcorder options.
  - **Camera/Camcorder:** toggles between Camera and Camcorder.
  - **Size mode:** allows you to select Normal or Limit for MMS.
  - **Size:** allows you to set the video size to either: 320x240 or 176x144.
  - **White balance:** allows you to set this option from the following choices: Auto, Daylight, Incandescent, Fluorescent, or Cloudy.
  - **Exposure meter:** allows you to set how the camera measures or meters the light source: Matrix, Center-weighted or Spot
  - **Effects:** allows you to change the color tone or apply special effects to the photo, including None, Black and White, Sepia, Negative, or Watercolor.
  - **Set Default destination:** allows you to Change or Remove the Default destination for new videos. Select from the following options: Recent recipients, Contacts, Online Album, New E-mail, New number, or cameo frame.
  - **Timer:** allows you to set a time delay before the camcorder takes the video. Select the length of delay you want (Off, 2 seconds, 5 seconds, or 10 seconds). When you press the Camcorder key  or , the camcorder begins recording after the specified time elapses.
  - **Viewfinder:** places a viewfinder on the screen to help you center your subject. Choose from:
    - **Indicator mode:** displays the video screen without guidelines.
    - **Guideline mode:** displays the video screen with guidelines.
  - **Settings:**
    - **Video:** allows you to view the Quality and Audio recording settings for this video.
    - **Setup:** allows you to configure: Review screen, Default storage, or Shortcuts.
2. Press the **Back** soft key to return to the video viewer.

## Camcorder Shortcuts

**Shortcut keys** allow you to change options using your keypad, Navigation keys, and Volume key in capture mode. The following options are available.



shoots video.



**Up** volume key zooms out.

**Down** volume key zooms in.



**Up** and **Down** navigation keys adjust the image brightness.



**Left** and **Right** navigation keys zoom in and out.



toggles between camcorder and camera mode.



changes the recording mode.



allows you to set a time delay before the camcorder takes the video.



in open/landscape mode, changes Viewfinder Mode.

## Videos

1. With the Camcorder module open, press the **Videos** soft key. Use the Navigation keys to scroll through the videos.
2. Press the **Options** soft key to use the following options:
  - **Record another:** allows you to record another video.
  - **Play:** plays the selected video.



- **Send to:** sends this video as a picture message.
- **Send via:** in open/landscape mode, allows you to send the selected video as a Message, E-mail, or to a Bluetooth enabled device.
- **Default destination:** allows you to Change or Remove where your videos are sent after you take them.
- **Delete:** allows you to delete the Selected video.
- **Properties:** shows the properties of the video, such as the file name, file date, file format, resolution, file size, forwarding status, and location.

## My Album


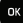

My Album is a private online picture album that you can use to store and share pictures, videos, voice messages, and text. My Album is only available in open/landscape mode.

Use the following procedures to access **My Album**.

---

**Note:** When accessing My Album, charges may apply. The feature is not activated until you send your first image to the remote My Album location.

---

1. In Idle mode, press **Menu → Media → Photos → My Album** and press **Connect** or  .  
The browser launches and displays the web2go Web page.
2. Scroll to **Inbox Album** and press  to view the photos.
3. Press the  key to return to the Idle screen.

## Section 13: Health and Safety Information

---

This section outlines the safety precautions associated with using your phone. These safety precautions should be followed to safely use your phone.

### Health and Safety Information

#### *Exposure to Radio Frequency (RF) Signals*

##### **Certification Information (SAR)**

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. government.

These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE).

In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg).

The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each model phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For body worn operation, this phone has been tested and meets FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body.

Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The FCC has granted an Equipment Authorization for this mobile phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. The maximum SAR values for this model phone as reported to the FCC are:

- Head: 1.35 W/Kg.
- Body-worn: 1.33 W/Kg.

SAR information on this and other model phones can be viewed online at <http://www.fcc.gov/oet/ea>. To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed somewhere on the case of the phone.

Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone. Additional product specific SAR information can also be obtained at [www.fcc.gov/cgb/sar](http://www.fcc.gov/cgb/sar).

## **Samsung Mobile Products and Recycling**

Samsung cares for the environment and encourages its customers to recycle Samsung mobile phones and genuine Samsung accessories.

Go to: <https://fun.samsungmobileusa.com/recycling/index.jsp> for more information.

## **UL Certified Travel Adapter**

The Travel Adapter for this phone has met applicable UL safety requirements. Please adhere to the following safety instructions per UL guidelines.

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE.

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS.

DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

FOR CONNECTION TO A SUPPLY NOT IN NORTH AMERICA, USE AN ATTACHMENT PLUG ADAPTOR OF THE PROPER CONFIGURATION FOR THE POWER OUTLET. THIS POWER UNIT IS INTENDED TO BE CORRECTLY ORIENTATED IN A VERTICAL OR HORIZONTAL OR FLOOR MOUNT POSITION.

## **Consumer Information on Wireless Phones**

The U.S. Food and Drug Administration (FDA) has published a series of Questions and Answers for consumers relating to radio frequency (RF) exposure from wireless phones. The FDA publication includes the following information:

### ***What kinds of phones are the subject of this update?***

The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called "cell," "mobile," or "PCS" phones. These types of wireless phones can expose the user to measurable radio frequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies.

When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures well within the FCC's compliance limits.

### ***Do wireless phones pose a health hazard?***

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

### ***What is FDA's role concerning the safety of wireless phones?***

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones.

Base stations are thus not the primary subject of the safety questions discussed in this document.

### ***What are the results of the research done already?***

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radio frequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in absence of RF exposure. Other studies exposed the animals to RF for up to

22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phones RF exposures.

However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

### ***What research is needed to decide whether RF exposure from wireless phones poses a health risk?***

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years' follow-up may be needed to provide answers about some health effects, such as cancer.

This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

### ***What is FDA doing to find out more about the possible health effects of wireless phone RF?***

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF).

FDA has been a leading participant in the World Health Organization international Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations.

CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

### ***What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?***

If there is a risk from these products - and at this point we do not know that there is - it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

- If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

### ***What about children using wireless phones?***

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000.

They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

### ***Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?***

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or

other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit.

### ***Do wireless phone accessories that claim to shield the head from RF radiation work?***

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike "hand-free" kits, these so-called "shields" may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption. In February 2002, the Federal Trade Commission (FTC) charged two companies that sold devices that claimed to protect wireless phone users from radiation with making false and unsubstantiated claims.

According to FTC, these defendants lacked a reasonable basis to substantiate their claim.

### ***What about wireless phone interference with medical equipment?***

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a compatible phone and a compatible hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations (Updated 12/9/2008):



- FCC RF Safety Program:  
<http://www.fcc.gov/et/rfsafety/>
- Environmental Protection Agency (EPA):  
<http://www.epa.gov/radiation/>
- Occupational Safety and Health Administration's (OSHA):  
<http://www.osha.gov/SLTC/radiofrequencyradiation/index.html>
- National Institute for Occupational Safety and Health (NIOSH):  
<http://www.cdc.gov/niosh/homepage.html>
- World Health Organization (WHO):  
<http://www.who.int/peh-emf/>
- International Commission on Non-Ionizing Radiation Protection:  
<http://www.icnirp.de>
- Health Protection Agency:  
<http://www.hpa.org.uk/radiation>
- US Food and Drug Administration:  
<http://www.fda.gov/cellphones>

## **Road Safety**

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features, such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
2. When available, use a hands-free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.
3. Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.

4. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
5. Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility, driving safely.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies.
9. Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency number.

**"The wireless industry reminds you to use your phone safely when driving."**

For more information, please call 1-888-901-SAFE, or visit our web-site [www.ctia.org](http://www.ctia.org).

---

**Important!:** If you are using a handset other than a standard numeric keypad, please call 1-888-901-7233.

---

Provided by the Cellular Telecommunications & Internet Association.

## Responsible Listening

---

**Caution!:** Avoid potential hearing loss.

---

Damage to hearing occurs when a person is exposed to loud sounds over time. The risk of hearing loss increases as sound is played louder and for longer durations. Prolonged exposure to loud sounds (including music) is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cellular telephones, at high volume settings for long durations may lead to permanent noise-induced hearing loss. This includes the use of headphones (including headsets, earbuds, and Bluetooth or other wireless devices). Exposure to very loud sound has also been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound and distorted hearing.

Individual susceptibility to noise-induced hearing loss and potential hearing problem varies. Additionally, the amount of sound produced by a portable audio device varies depending on the nature of the sound, the device settings, and the headphones that are used. As a result, there is no single volume setting that is appropriate for everyone or for every combination of sound, settings and equipment.

You should follow some commonsense recommendations when using any portable audio device:

- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to you can hear what you are listening to.
- Do not turn the volume up to block out noisy surroundings. If you choose to listen to your portable device in a noisy environment, use noise-cancelling headphones to block out background environmental noise. By blocking background environment noise, noise cancelling headphones should allow you to hear the music at lower volumes than when using earbuds.
- Limit the amount of time you listen. As the volume increases, less time is required before your hearing could be affected.
- Avoid using headphones after exposure to extremely loud noises, such as rock concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.
- Do not listen at any volume that causes you discomfort. If you experience ringing in your ears, hear muffled speech or experience any temporary hearing difficulty after listening to your portable audio device, discontinue use and consult your doctor.

You can obtain additional information on this subject from the following sources:

**American Academy of Audiology**

11730 Plaza American Drive, Suite 300

Reston, VA 20190

Voice: (800) 222-2336

Email: [info@audiology.org](mailto:info@audiology.org)

Internet: <http://www.audiology.org>

**National Institute on Deafness and Other Communication Disorders**

National Institutes of Health

31 Center Drive, MSC 2320

Bethesda, MD 20892-2320

Email: [nidcdinfo@nih.gov](mailto:nidcdinfo@nih.gov)

Internet: <http://www.nidcd.nih.gov/>

**National Institute for Occupational Safety and Health  
(NIOSH)**

395 E Street, S.W.

Suite 9200

Patriots Plaza Building

Washington, DC 20201

Voice: 1-800-35-NIOSH (1-800-356-4647)

1-800-CDC-INFO (1-800-232-4636)

Outside the U.S. 513-533-8328

Email: [cdcinfo@cdc.gov](mailto:cdcinfo@cdc.gov)

Internet: <http://www.cdc.gov>

1-888-232-6348 TTY

Internet: [http://www.cdc.gov/niosh/topics/noise/  
default.html](http://www.cdc.gov/niosh/topics/noise/default.html)

## **Operating Environment**

Remember to follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger.

When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder if you are using an external antenna).

## **Using Your Phone Near Other Electronic Devices**

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

## ***Implantable Medical Devices***

A minimum separation of six (6) inches should be maintained between a handheld wireless phone and an implantable medical device, such as a pacemaker or implantable cardioverter defibrillator, to avoid potential interference with the device.

Persons who have such devices:

- Should ALWAYS keep the phone more than six (6) inches from their implantable medical device when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the implantable medical device to minimize the potential for interference;
- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place;
- Should read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your wireless phone with such a device, consult your health care provider.

For more information see:

<http://www.fcc.gov/oet/rfsafety/rf-faqs.html>

## ***Hearing Aid Compatibility with Mobile Phones***

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

## ***Other Medical Devices***

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your phone off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

## ***Vehicles***

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

## ***Posted Facilities***

Switch your phone off in any facility where posted notices require you to do so.

## Potentially Explosive Environments

Switch your phone off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch the phone off while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.


Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

## Emergency Calls

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. If the phone is not on, switch it on.
2. Key in the emergency number for your present location (for example, 911 or other official emergency number). Emergency numbers vary by location.
3. Press the  key.

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

## ***Restricting Children's access to your Phone***

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

## **FCC Notice and Cautions**

### ***FCC Notice***

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association:

### **NFPA (National Fire Protection Agency)**

1 Batterymarch Park

Quincy, Massachusetts

USA 02169-7471

Internet: <http://www.nfpa.org>

### ***Cautions***

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment, and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

## **Other Important Safety Information**

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.



- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch your phone off before boarding an aircraft. The use of wireless phone in aircraft is illegal and may be dangerous to the aircraft's operation.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

## **Product Performance**

### ***Getting the Most Out of Your Signal Reception***

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal.

If you're inside a building, being near a window may give you better reception.

### ***Understanding the Power Save Feature***

If your phone is unable to find a signal after searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key.

Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

### ***Understanding How Your Phone Operates***

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

### ***Maintaining Your Phone's Peak Performance***

For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- To ensure that the Hearing Aid Compatibility rating for your phone is maintained, secondary transmitters such as Bluetooth and WLAN components must be disabled during a call. For more information, refer to the *"Disabling Bluetooth or WLAN"* section.

- If your phone is equipped with an external antenna, hold the phone with the antenna raised, fully-extended and over your shoulder.
- Do not hold, bend or twist the phone's antenna, if applicable.
- Do not use the phone if the antenna is damaged.
- If your phone is equipped with an internal antenna, obstructing the internal antenna could inhibit call performance.
- Speak directly into the phone's receiver.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it is inoperable, call Customer Care for service.

## **Availability of Various Features/Ring Tones**

Many services and features are network dependent and may require additional subscription and/or usage charges. Not all features are available for purchase or use in all areas. Downloadable Ring Tones may be available at an additional cost. Other conditions and restrictions may apply. See your service provider for additional information.

## **Battery Standby and Talk Time**

Standby and talk times will vary depending on phone usage patterns and conditions. Battery power consumption depends on factors such as network configuration, signal strength, operating temperature, features selected, frequency of calls, and voice, data, and other application usage patterns.

## **Battery Precautions**

- Avoid dropping the cell phone. Dropping it, especially on a hard surface, can potentially cause damage to the phone and battery. If you suspect damage to the phone or battery, take it to a service center for inspection.
- Never use any charger or battery that is damaged in any way.
- Do not modify or remanufacture the battery as this could result in serious safety hazards.
- If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Follow battery usage, storage and charging guidelines found in the user's guide.
- Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.

- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Do not use incompatible cell phone batteries and chargers. Some Web sites and second-hand dealers, not associated with reputable manufacturers and carriers, might be selling incompatible or even counterfeit batteries and chargers. Consumers should purchase manufacturer or carrier recommended products and accessories. If unsure about whether a replacement battery or charger is compatible, contact the manufacturer of the battery or charger.
- Misuse or use of incompatible phones, batteries, and charging devices could result in damage to the equipment and a possible risk of fire, explosion, leakage, or other serious hazard.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).
- Do not place the phone in areas that may get very hot, such as on or near a cooking surface, cooking appliance, iron, or radiator.
- Do not get your phone or battery wet. Even though they will dry and appear to operate normally, the circuitry could slowly corrode and pose a safety hazard.
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Do not permit a battery out of the phone to come in contact with metal objects, such as coins, keys or jewelry.
- Do not crush, puncture or put a high degree of pressure on the battery as this can cause an internal short-circuit, resulting in overheating.
- Dispose of used batteries in accordance with local regulations. In some areas, the disposal of batteries in household or business trash may be prohibited. For safe disposal options for Li-Ion batteries, contact your nearest Samsung authorized service center. Always recycle. Do not dispose of batteries in a fire.

## Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.

- Keep the phone dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, a stove or a radiator. The phone may explode when overheated.
- If your phone is equipped with an external antenna, use only the supplied or an approved replacement antenna. Unauthorized antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

## Section 14: Warranty Information

---

### Standard Limited Warranty

#### What is Covered and For How Long?

SAMSUNG TELECOMMUNICATIONS AMERICA, LLC ("SAMSUNG") warrants to the original purchaser ("Purchaser") that SAMSUNG's Phones and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Leather Case	90 Days
Holster	90 Days
Other Phone Accessories	1 Year

**What is Not Covered?** This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abuse, neglect, unusual physical, electrical or electromechanical stress, or modification of any part of Product, including antenna, or cosmetic damage; (b) equipment that has the serial number removed or made illegible; (c) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal use; (d) malfunctions resulting from the use of Product in conjunction with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (e) defects or damage from improper testing, operation, maintenance, installation, or adjustment; (f) installation, maintenance, and service of Product, or (g) Product used or purchased outside the United States or Canada.

This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

**What are SAMSUNG's Obligations?** During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized phone service facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or comparable substitute proof of sale showing the date of purchase, the serial number of Product and the sellers' name and address. To obtain assistance on where to deliver the Product, call Samsung Customer Care at 1-888-987-4357. Upon receipt, SAMSUNG will promptly repair or replace the defective Product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product. Repaired/replaced leather cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Product will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment shall become the property of SAMSUNG.

If SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

**WHAT ARE THE LIMITS ON SAMSUNG'S WARRANTY/LIABILITY?** EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

- THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;
- WARRANTIES OF TITLE OR NON-INFRINGEMENT;
- DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;
- THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR
- COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN. SOME STATES/PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR

INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM THE USE OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES, OR FOR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME STATES/PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE/PROVINCE TO PROVINCE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND STATES PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS. THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRDPARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

## **End User License Agreement for Software**

IMPORTANT. READ CAREFULLY: This End User License Agreement ("EULA") is a legal agreement between you (either an individual or a single entity) and Samsung Electronics Co., Ltd. for software owned by Samsung

Electronics Co., Ltd. and its affiliated companies and its third party suppliers and licensors that accompanies this EULA, which includes computer software and may include associated media, printed materials, "online" or electronic documentation ("Software"). BY CLICKING THE "I ACCEPT" BUTTON (OR IF YOU BYPASS OR OTHERWISE DISABLE THE "I ACCEPT", AND STILL INSTALL, COPY, DOWNLOAD, ACCESS OR OTHERWISE USE THE SOFTWARE), YOU AGREE TO BE BOUND BY THE TERMS OF THIS EULA. IF YOU DO NOT ACCEPT THE TERMS IN THIS EULA, YOU MUST CLICK THE "DECLINE" BUTTON, DISCONTINUE USE OF THE SOFTWARE.

1. **GRANT OF LICENSE.** Samsung grants you the following rights provided that you comply with all terms and conditions of this EULA: You may install, use, access, display and run one copy of the Software on the local hard disk(s) or other permanent storage media of one computer and use the Software on a single computer or a mobile device at a time, and you may not make the Software available over a network where it could be used by multiple computers at the same time. You may make one copy of the Software in machine-readable form for backup purposes only; provided that the backup copy must include all copyright or other proprietary notices contained on the original.
2. **RESERVATION OF RIGHTS AND OWNERSHIP.** Samsung reserves all rights not expressly granted to you in this EULA. The Software is protected by copyright and other intellectual property laws and treaties. Samsung or its suppliers own the title, copyright and other intellectual property rights in the Software. The Software is licensed, not sold.
3. **LIMITATIONS ON END USER RIGHTS.** You may not reverse engineer, decompile, disassemble, or otherwise attempt to discover the source code or algorithms of, the Software (except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation), or modify, or disable any features of, the Software, or create derivative works based on the Software. You may not rent, lease, lend, sublicense or provide commercial hosting services with the Software.
4. **CONSENT TO USE OF DATA.** You agree that Samsung and its affiliates may collect and use technical information gathered as part of the product support services related to the Software provided to you, if any, related to the Software. Samsung may use this information solely to improve its products or to provide customized services or technologies to you and will not disclose this information in a form that personally identifies you.
5. **UPGRADES.** This EULA applies to updates, supplements and add-on components (if any) of the Software that Samsung may provide to you or make available to you after the date you obtain your initial copy of the Software, unless we provide other terms along with such upgrade. To use Software identified as an upgrade, you must first be licensed for the Software identified by Samsung as eligible for the upgrade. After upgrading, you may no longer use the Software that formed the basis for your upgrade eligibility.



6. **SOFTWARE TRANSFER.** You may not transfer this EULA or the rights to the Software granted herein to any third party unless it is in connection with the sale of the mobile device which the Software accompanied. In such event, the transfer must include all of the Software (including all component parts, the media and printed materials, any upgrades, this EULA) and you may not retain any copies of the Software. The transfer may not be an indirect transfer, such as a consignment. Prior to the transfer, the end user receiving the Software must agree to all the EULA terms.

7. **EXPORT RESTRICTIONS.** You acknowledge that the Software is subject to export restrictions of various countries. You agree to comply with all applicable international and national laws that apply to the Software, including the U.S. Export Administration Regulations, as well as end user, end use, and destination restrictions issued by U.S. and other governments.

8. **TERMINATION.** This EULA is effective until terminated. Your rights under this License will terminate automatically without notice from Samsung if you fail to comply with any of the terms and conditions of this EULA. Upon termination of this EULA, you shall cease all use of the Software and destroy all copies, full or partial, of the Software.

9. **DISCLAIMER OF WARRANTIES.** You expressly acknowledge and agree that use of the Software is at your sole risk and that the entire risk as to satisfactory quality, performance, accuracy and effort is with you. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE SOFTWARE IS PROVIDED "AS IS" AND WITH ALL FAULTS AND WITHOUT WARRANTY OF ANY KIND, AND SAMSUNG AND ITS LICENSORS (COLLECTIVELY REFERRED TO AS "SAMSUNG" FOR THE PURPOSES OF SECTIONS 9, 10 and 11) HEREBY DISCLAIM ALL WARRANTIES AND CONDITIONS WITH RESPECT TO THE SOFTWARE, EITHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES AND/OR CONDITIONS OF MERCHANTABILITY, OF SATISFACTORY QUALITY OR WORKMANLIKE EFFORT, OF FITNESS FOR A PARTICULAR PURPOSE, OF RELIABILITY OR AVAILABILITY, OF ACCURACY, OF LACK OF VIRUSES, OF QUIET ENJOYMENT, AND NON-INFRINGEMENT OF THIRD PARTY RIGHTS. SAMSUNG DOES NOT WARRANT AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE SOFTWARE, THAT THE FUNCTIONS CONTAINED IN THE SOFTWARE WILL MEET YOUR REQUIREMENTS, THAT THE OPERATION OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE, OR THAT DEFECTS IN THE SOFTWARE WILL BE CORRECTED. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY SAMSUNG OR A SAMSUNG AUTHORIZED REPRESENTATIVE SHALL CREATE A WARRANTY. SHOULD THE SOFTWARE PROVE DEFECTIVE, YOU ASSUME THE ENTIRE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES OR LIMITATIONS ON APPLICABLE STATUTORY RIGHTS OF A CONSUMER, SO THESE EXCLUSIONS AND LIMITATIONS MAY NOT APPLY TO YOU.

10. EXCLUSION OF INCIDENTAL, CONSEQUENTIAL AND CERTAIN OTHER DAMAGES. TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT SHALL SAMSUNG BE LIABLE FOR PERSONAL INJURY, OR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES WHATSOEVER, OR FOR LOSS OF PROFITS, LOSS OF DATA, BUSINESS INTERRUPTION, OR FOR ANY PECUNIARY DAMAGES OR LOSSES, ARISING OUT OF OR RELATED TO YOUR USE OR INABILITY TO USE THE SOFTWARE, THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT OR OTHER SERVICES, INFORMATION, SOFTWARE, AND RELATED CONTENT THROUGH THE SOFTWARE OR OTHERWISE ARISING OUT OF THE USE OF THE SOFTWARE, OR OTHERWISE UNDER OR IN CONNECTION WITH ANY PROVISION OF THIS EULA, HOWEVER CAUSED, REGARDLESS OF THE THEORY OF LIABILITY (CONTRACT, TORT OR OTHERWISE) AND EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME JURISDICTIONS DO NOT ALLOW THE LIMITATION OF LIABILITY FOR PERSONAL INJURY, OR OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THIS LIMITATION MAY NOT APPLY TO YOU.

11. LIMITATION OF LIABILITY. Notwithstanding any damages that you might incur for any reason whatsoever (including, without limitation, all damages referenced herein and all direct or general damages in contract or anything else), the entire liability of Samsung under any provision of this EULA and your exclusive remedy hereunder shall be limited to the greater of the actual damages you incur in reasonable reliance on the Software up to the amount actually paid by you for the Software or US\$5.00. The foregoing limitations, exclusions and disclaimers (including Sections 9, 10 and 11) shall apply to the maximum extent permitted by applicable law, even if any remedy fails its essential purpose.

12. U.S. GOVERNMENT END USERS. The Software is licensed only with "restricted rights" and as "commercial items" consisting of "commercial software" and "commercial software documentation" with only those rights as are granted to all other end users pursuant to the terms and conditions herein.

13. APPLICABLE LAW. This EULA is governed by the laws of TEXAS, without regard to conflicts of laws principles. This EULA shall not be governed by the UN Convention on Contracts for the International Sale of Goods, the application of which is expressly excluded. If a dispute, controversy or difference is not amicably settled, it shall be finally resolved by arbitration in Seoul, Korea in accordance with the Arbitration Rules of the Korean Commercial Arbitration Board. The award of arbitration shall be final and binding upon the parties.

14. ENTIRE AGREEMENT; SEVERABILITY. This EULA is the entire agreement between you and Samsung relating to the Software and supersedes all prior or contemporaneous oral or written communications, proposals and representations with respect to the Software or any other subject matter covered by this EULA. If any provision of this EULA is held to be void, invalid, unenforceable or illegal, the other provisions shall continue in full force and effect.

## ***Precautions for Transfer and Disposal***

If data stored on this device is deleted or reformatted using the standard methods, the data only appears to be removed on a superficial level, and it may be possible for someone to retrieve and reuse the data by means of special software.

To avoid unintended information leaks and other problems of this sort, it is recommended that the device be returned to Samsung's Customer Care Center for an Extended File System (EFS) Clear which will eliminate all user memory and return all settings to default settings. Please contact the **Samsung Customer Care Center** for details.

---

**Important!:** Please provide warranty information (proof of purchase) to Samsung's Customer Care Center in order to provide this service at no charge. If the warranty has expired on the device, charges may apply.

---

Customer Care Center:

1000 Klein Rd.

Plano, TX 75074

Toll Free Tel: 1.888.987.HELP (4357)

Samsung Telecommunications America, LLC:

1301 East Lookout Drive

Richardson, Texas 75082

Phone: 1-800-SAMSUNG (726-7864)

---

**Important!:** If you are using a handset other than a standard numeric keypad, dial the numbers listed in brackets.

---

Phone: 1-888-987-HELP (4357)

©2009 Samsung Telecommunications America. All rights reserved.

No reproduction in whole or in part allowed without prior written approval. Specifications and availability subject to change without notice.

# Index

---

## A

**ABC mode** 37

**Accessing a Menu Function** 24

**Audio Postcard** 50

## B

### **Backlight**

description 22

settings 85

### **Battery**

charging 9

low indicator 10

removing 5

### **Bluetooth**

About 93

features 94

Searching for new devices 93

Turning Bluetooth On and Off 93

### **Browser** 79

Bookmarks 80

Clear caches 81

Enter URL 80

Entering Text 80

Exiting 79

History 81

Home 79

Navigating 79

Saved pages 81

settings 81

## C

**Calendar** 103

### **Call Functions** 25

Adjusting the Call Volume 27

Answering a Call 27

Call History 27

Correcting the Number 25

Ending a Call 25

Making a Call 25

Making a Call from Phonebook 26

Redialing Last Number 26

Vibration Mode 30

### **Call Records**

All calls 28

Delete all 29

Missed calls 28

### **Call Waiting** 33

### **Caller Group**

Editing 61

### **Camcorder Options** 124

### **Camera** 67, 119

taking photos 119

### **Camera Shortcuts**

Shortcut Keys 125

### **Charging battery** 9

## D

### **Dialing a Number**

Contacts 59

### **Dialing display** 84

Background color 85

Font color 84

Font type 84

## **Display 22**

backlight 22

icons 20

## **E**

### **E-mail**

messages 49

### **Entering Text 35**

Changing the Text Entry Mode 37

Using ABC Mode 37

Using Number Mode 39

Using Symbol Mode 39

Using T9 Mode 39

## **F**

### **Functions and Options 30**

## **G**

### **Getting Started 5**

Activating Your Phone 5

Voice mail 11

### **Groups**

Adding 60

## **H**

### **Health and Safety Information 127**

### **HiFi Ringers 74**

## **I**

### **Icons, description 20**

### **Instant Messaging 51**

### **International Call 25**

## **M**

### **Making a Call**

Phonebook 26

### **Media 66**

### **MegaTones 74**

## **Menu Navigation 23**

### **Messages 41**

E-mail 49

### **Messaging**

Types of Messages 41

### **Missed Call**

Viewing 28

### **Multi-Party Call 33**

Dropping One Participant 34

Private Conversation 34

Setting up 33

### **Mute 31**

### **My Album 67, 126**

## **N**

### **Number mode 37**

## **O**

### **On/off switch, phone 10**

### **Options**

During a Call 31

Making a New call while in a call 32

Putting a Call on Hold 31

### **Organizer 103**

Calculator 115

Calendar 103

Stopwatch 117

Timer 117

Tip calculator 115

Unit Conversion 116

World time 116

## **P**

### **Phone**

icons 20

- switching on/off 10
- Phone Keys** 13
- Phone Safety** 138
- Phone Settings** 86
- Phonebook**
  - Searching for a Number 32
- Photos**
  - Accessing pictures 122
  - Deleting pictures 123
- R**
- Recording Video** 123
- S**
- SAR values** 127
- Settings** 83
  - Bluetooth 93
  - Display 83
  - Phone 86
  - Sound 83
  - Time and Date 92
  - Voice recognition 112
- Shortcuts** 24
- SIM card**
  - installing 5
- Soft Keys** 30
- Speakerphone** 32
- Speed Dial**
  - Setting Up Entries 62
- Standard Limited Warranty**
  - 146
- Stopwatch** 117
- Storing a Number**
  - phone's memory 59

- Switching on/off**
  - phone 10
- Symbol mode** 37

## **T**

- T9 mode** 37
- Take and Send** 119
- Task List** 114
- Text input mode**
  - changing 37
- Text Messages** 43
- Timer** 117
- Travel adapter** 9

## **U**

- UL Certification** 128
- Understanding Your Contacts**
  - Contacts 58
  - Groups 60
- Understanding Your Phone** 12
  - Features of Your Phone 12
  - Front View 13

## **V**

- Voice Commands**
  - checking phone status 111
  - name dial 110
  - name lookup 110
  - open applications 111
  - send text message 110
- Voice Mail** 11
- Voice Recognition**
  - Say a Command options 108

## **W**

- Warranty Information** 146