



**CE0168**

[www.lgmobile.com](http://www.lgmobile.com)

MMBB0352038 (1.1) G

**GW300** User Guide

ENGLISH

Bluetooth QD ID B015721

# GW300 User Guide - English

Congratulations on your purchase of the advanced and compact GW300 phone by LG, designed to operate with the latest digital mobile communication technology.

Some of contents in this manual may differ from your phone depending on the software of the phone or your service provider.



# Contents

<b>Guidelines for safe and efficient use ..</b>	<b>6</b>
<b>Getting to know your phone.....</b>	<b>11</b>
<b>Installing the SIM and battery.....</b>	<b>13</b>
<b>Memory card .....</b>	<b>15</b>
<b>Your home screen .....</b>	<b>16</b>
The status bar .....	16
Using the Multitasking function.....	17
<b>Menu map .....</b>	<b>18</b>
<b>Calling.....</b>	<b>19</b>
Making a call.....	19
Making a call from your Contacts ....	19
Answering and rejecting a call.....	19
Speed dialling.....	19
Viewing your Call logs .....	20
Using call divert .....	20
Using call barring.....	21
Changing the call settings .....	21
<b>Contacts .....</b>	<b>22</b>
Common settings .....	22
Searching for a contact.....	23
Adding a new contact .....	23
Contact options .....	23
Creating a group.....	24
Using service dial numbers .....	24
Viewing your own number .....	24
Creating a business card.....	25
Changing your contact settings .....	25
<b>Messaging.....</b>	<b>26</b>
Messaging .....	26
Sending a message .....	26
Entering text .....	27
Text input mode using the keypad ...	27
Setting up your email .....	27
Sending an email using your new account.....	28
Retrieving your email .....	28
Message folders .....	28
Managing your messages .....	29
Changing your text message settings .. .....	30
Changing your multimedia message settings .....	30
Changing your email settings .....	31
Changing your other settings.....	32

<b>Camera .....</b>	<b>33</b>	Reset all channels.....	42
Taking a quick photo .....	33	Listening to the radio .....	42
After you've taken your photo .....	33	<b>Voice recorder .....</b>	<b>43</b>
Using the quick settings .....	33	Using the Voice recorder .....	43
Using the advanced settings.....	34	Recording your voice memo .....	43
Adjusting the brightness.....	35	Sending a voice recording.....	43
Changing the image size.....	36	<b>My stuff .....</b>	<b>44</b>
Viewing your saved photos .....	36	My images .....	44
<b>Video camera .....</b>	<b>37</b>	Sending a photo .....	44
Shooting a quick video .....	37	Using an image .....	44
After you've shot your video .....	37	Organising your images .....	45
Using the quick settings .....	37	Deleting an image.....	45
Using the advanced settings.....	38	Moving or copying an image .....	45
Watching your saved videos .....	38	Marking and unmarking images .....	45
<b>Music.....</b>	<b>39</b>	Checking your memory status .....	46
MP3 Player.....	39	My sounds .....	46
Transferring music onto your phone .....	39	Using a sound .....	46
Playing a song .....	40	My videos.....	46
Using options while playing music .....	40	Watching a video .....	46
<b>FM radio .....</b>	<b>41</b>	Sending a video clip.....	47
Using the FM radio.....	41	Games and Applications.....	47
Searching for stations .....	41		

# Contents

Playing a game.....	47	Using the stopwatch .....	53
Using the games options menu .....	47	Converting a unit .....	53
JustCricket .....	47	Adding a city to your World time .....	53
Flash contents .....	48	<b>Browser .....</b>	<b>54</b>
Others.....	48	Accessing the web.....	54
External memory .....	48	Adding and accessing your bookmarks .....	54
Installing a Java game & application	48	Saving a page.....	55
<b>Games &amp; Apps .....</b>	<b>49</b>	Accessing a saved page.....	55
Games & Apps.....	49	Viewing your Browser history.....	55
Playing a game.....	49	Changing the web Browser settings.....	55
Viewing applications .....	49	<b>Connectivity.....</b>	<b>56</b>
Changing the network profile.....	49	Changing your connectivity settings.....	56
<b>Organiser &amp; Tools .....</b>	<b>50</b>	Changing your Bluetooth settings .....	56
Setting your alarm .....	50	Pairing with another Bluetooth device ..	57
Adding an event to your calendar ....	50	.....	57
Adding an item to your task list .....	51	Using a Bluetooth headset.....	57
Adding a memo .....	51	Sending and receiving your files using	
Secret memo.....	52	Bluetooth.....	57
Date finder .....	52	Use your phone as a mass storage	
Settings.....	52	device .....	58
Using your calculator .....	52		

Synchronise your phone with your PC ..	Accessories .....	66
.....59	Network service .....	67
Installing LG PC Suite on your	Technical data .....	67
computer .....	Trouble Shooting .....	69
59		
Connecting your phone and PC .....		
59		
Viewing your phone files on your PC		
60		
Synchronising your contacts.....		
60		
<b>Yahoo! Search .....</b>		<b>61</b>
<b>Settings .....</b>		<b>62</b>
Changing your profiles .....		62
Using flight mode.....		62
Changing your phone settings .....		62
Changing your display settings .....		62
Changing the date & time .....		63
Changing your security settings.....		63
Viewing memory status.....		64
Resetting your phone .....		65
Software Upgrade .....		65

# Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

## Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information  
This mobile phone model GW300 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/Kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.16W/Kg (10g) and when worn on the body is 0.802 W/Kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/Kg averaged over 1g of tissue.



## Product care and maintenance

### **WARNING**

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.

# Guidelines for safe and efficient use

- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

## Efficient phone operation

### Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

### Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

## **Avoid damage to your hearing**

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

## **Blasting area**

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## **Potentially explosive atmospheres**

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

## **In aircraft**

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

## **Children**

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

## **Emergency calls**

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## **Battery information and care**

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.

## Guidelines for safe and efficient use

- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

# Getting to know your phone

Earpiece

Main LCD

Send key

- make call to a phone number and answers incoming calls.
- **In standby mode:** Shows the history of calls.

Alpha numeric keys

- **In standby mode:** Input numbers to dial
- Hold down**
  - 0\*** – International calls
  - 1\*** – Connect voice mail centre
  - 2** to **9** – Speed dials
  - #** – Hold the key down to go Silent mode
- **In editing mode:** Enter numbers & characters

Multitasking key

Go to Home screen or Menu directly.

Clear / lock key

- Clears a character with each press. Hold the key down to clear all input.
- Hold the key down to lock when using menus.



Soft keys  
(Left soft key /  
Right soft key)

- These keys perform the function indicated in the bottom of the display.

Confirm key / OK key

- Selects menu options and confirms actions.

End key

- Switch on/off (hold down)
- End or reject a call.

Navigation key

- **In standby mode:**



**Briefly:**  
Quick menu.



**Briefly:**  
Contacts  
Search.



 
**Briefly:**  
Profiles.



**Briefly:**  
Messaging.

- **In menu:** Scroll up & down.

# Getting to know your phone

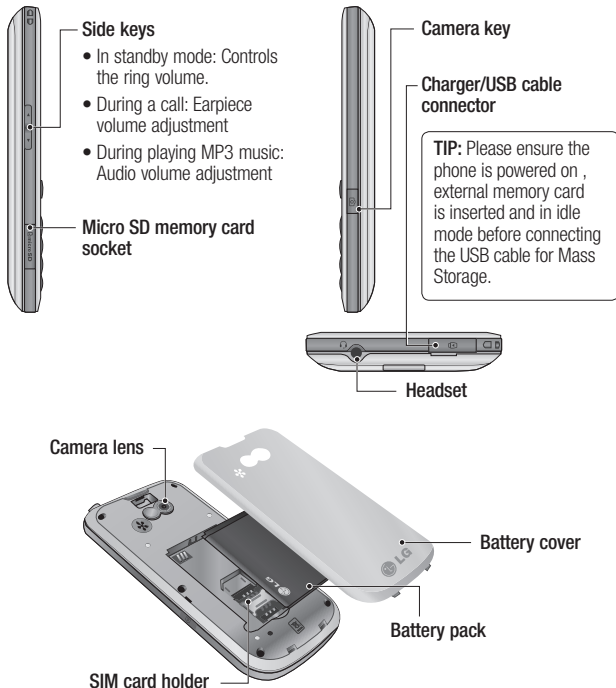

# Installing the SIM and battery

## 1 Remove the battery cover

Press the battery cover release latch.



## 2 Remove the battery

Lever the bottom edge of the battery and remove it carefully from the battery compartment.

 


**WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.

## 3 Install the SIM card

Slide the SIM card into the SIM card holder. Make sure that the gold contact area on the card is facing downwards. To remove the SIM card, pull it gently in the reverse direction.

**WARNING:** Do not replace or remove the SIM card while your phone is being used or turned on, or data may be lost or the SIM card might be damaged.

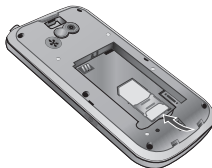

# Installing the SIM and battery

## 4 Install the battery

Insert the top of the battery first into the top edge of the battery compartment. Ensure that the battery contacts align with the terminals on the phone. Press down the bottom of the battery until it clips into place.

 


## 5 Replace the battery cover



## 6 Charging your phone

Pull out the cover of the charger socket on the top of your GW300. Insert the charger and plug into a mains electricity socket. Your GW300 will need to be charged until a message reading "Battery full" appears on screen.

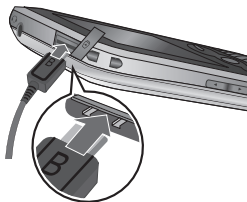




# Memory card

## Installing a memory card

You can expand the memory available on your phone using a memory card.

**Note:** A memory card is an optional accessory.

 Slide the memory card into the slot until it clicks into place. Make sure that the gold contact area is facing downwards.



## Removing a memory card

Carefully remove the memory card by gently pushing it in to the phone and quickly releasing it.

## Formatting the memory card

Your memory card may already be formatted. If your memory card isn't formatted, you will need to format it before you can begin using it.

- 1 From the home screen press **Menu** then select **Settings**.
- 2 Choose **Memory info.** and select **External memory**.
- 3 Press **Format** and enter the password, which is set to 0000 as default. Your memory card will be formatted and ready to use.
- 4 To view the new formatted folders on your GW300 press **Menu** and select **My stuff**. Choose **My memory card**.









**⚠ WARNING:** When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.

















# Your home screen

## The status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life, as well as telling you whether your Bluetooth connection is active.


The table below explains the meaning of icons you're likely to see in the status bar.

Icon	Description
	Network signal strength (number of bars will vary)
	No network signal
	GPRS available
	EDGE available
	Flight mode is activated
	Calls are diverted
	Roaming service
	Bluetooth® is activated

Icon	Description
	WAP service is connected
	Multitasking available
	An alarm is set
	Schedule
	New message
	New voice message
	New Email
	Normal profile in use
	Silent profile in use
	Outdoor profile in use
	Headset profile in use
	Remaining battery life
	Battery empty
	External memory
	FM radio
	MP3 music playing

## Using the Multitasking function

Press the multitasking key  to open the multitasking menu.

From here you can view all the applications you have running. When you have an application running in the background,  will appear in the status bar.



**WARNING:** Multitasking is disabled when user is using Multimedia applications (Camera, Voice Recorder, Video Recording).

# Menu map

## Games & Apps

1. My games & apps
2. Settings

## Calling

1. Call logs
2. Call durations
3. Data volume
4. Call costs
5. Call divert
6. Call barring
7. Fixed dial numbers
8. Call waiting
9. Common setting

## Organiser

1. Calendar
2. To do
3. Memo
4. Secret memo
5. Date finder
6. Settings

## Browser

1. Home
2. Enter address
3. Bookmarks
4. Saved pages
5. History
6. Settings

## Multimedia

1. Camera
2. Video camera
3. Music
4. FM radio
5. Voice recorder

## Messaging

1. Create new message
2. Inbox
3. Mailbox
4. Create new email address
5. Drafts
6. Outbox
7. Sent items
8. My folders
9. Templates
0. Emoticons
- \*. Settings

## My stuff

1. My images
2. My sounds
3. My videos
4. Games & apps
5. Flash contents
6. Others
7. My memory card

## Connectivity

1. Bluetooth
2. USB connection mode

## Yahoo! Search

1. Yahoo! Search

## Contacts

1. Add new
2. Search
3. Speed dials
4. Groups
5. Service dial numbers
6. Own number
7. My business card
8. Settings

## Tools



1. Quick menu
2. Alarms
3. Calculator
4. Stopwatch
5. Converter
6. World time

## Settings

1. Profiles
2. Phone
3. Screen
4. Date & Time
5. Network
6. Internet profile
7. Access points
8. Packet data conn.
9. Security
0. Memory info.
- \*. Reset settings

# Calling


## Making a call

- 1 Make sure your phone is on.
- 2 You can use the keypad. To delete a digit press **C/B** or the back arrow.
- 3 Press  to begin the call.
- 4 To end the call, press .

**TIP!** To enter + when making an international call, press and hold 0.

## Making a call from your Contacts

It's easy to call anyone whose number you have stored in your **Contacts**.

- 1 Press **Menu** to open the main menu. Select **Contacts**, then select **Search**.
- 2 Using the keypad, enter the first letter of the contact you want to call and scroll to the **Contacts**.
- 3 Press  to begin the call.

## Answering and rejecting a call

When your phone rings, press **Accept** or press  to answer the call.

While your phone is ringing you can press **Silent** to mute the ringing. This is useful if you have forgotten to change your profile to silent for a meeting.

Press  or select **Reject** in order to reject an incoming call.

**Note:** In call when speaker is activated, the speaker icon is displayed with red colour cross, when the speaker is deactivated speaker icon is displayed without red colour cross.


## Speed dialling

You can assign a speed dial number to a contact you call frequently.

- 1 Press **Menu** to open the main menu. Select **Contacts**, then select **Speed dials**.

# Calling

- 2 Your voicemail is preset to speed dial 1 and you cannot change this. Select any other number either by using the navigation keys and selecting **Add** or by pressing the hard key number.
- 3 Your contacts will open. Select the contact you'd like to assign to that number using the navigation keys then select **OK**.

To call a speed dial number, press and hold the assigned number until the contact appears on screen. The call will begin automatically and there is no need to press .

## Viewing your Call logs

Press **Menu** and select **Calling**. Choose **Call logs**.

**All calls** - View a complete list of all your dialed, received and missed calls.

**Missed calls** - View a list of any calls you have missed.

**Dialed calls** - View a list of all the numbers you have called.

**Received calls** - View a list of all the numbers that have called you.

**TIP!** From any call log select **Options** and then **Delete** to delete selected items.

## Using call divert

- 1 Press **Menu** and select **Calling**.
- 2 Select **Call divert**.
- 3 Choose whether to divert all calls, when the line is busy, when there is no answer and when you are out of reach.
- 4 Choose **Activate** and select whether to divert to voice mail, or to other number.
- 5 Enter your divert number or select **Search** to browse for your divert number.

**Note:** Charges are incurred for diverting calls. Please contact your network provider for details.

**TIP!** To turn off all call diverts, choose Call divert from calling menu then select Options then select Deactivate all .

**TIP!** Select **Fixed dial numbers** from the **calling menu** to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. When activated, only numbers included in the fixed dial list can be called from your phone.

## Using call barring

- 1 Press **Menu** and select **Calling**.
- 2 Select **Call barring**.
- 3 Choose any or all of the options:  
**All outgoing**  
**Outgoing international**  
**Outgoing international calls except home country**  
**All incoming**  
**Incoming when abroad**
- 4 Enter the call barring password. Please check with your network operator for this service.

## Changing the call settings

- 1 Press **Menu** and select **Calling**.
- 2 From here you can amend the settings for:

**Call durations** - View details of how long you have spent on your calls both received and dialled.

**Data volume** - View the amount in kilobytes of all your received and sent data.

# Contacts

**Call costs** - View the charges applied to your last call or all calls. This service is network dependent, some operators are unable to support this.

**Call divert** - Choose whether to divert your calls.

**Call barring** - Select which calls you would like to be barred.

**Fixed dial numbers** - Choose a list of numbers that can be called from your phone.

**Call waiting** - Be alerted when you have a call waiting.

## Common settings

(Press Menu, select Calling and choose Common settings)

**Call reject** - Select **Off** or **On** and choose to reject all calls, those from specific groups, contacts, unregistered numbers (those not in your list of contacts) or those with no caller ID.

**Send my number** - Choose whether your number will be displayed when you call someone. (Depends on your network provider.)

**Auto redial** - Allows you to set the auto redial function when a call attempt has failed.

**Answer mode** - Allows you to set the answering method. You can choose from **Press send key** or **Press any key**.

**Minute minder** - Determines whether to sound a tone every 1 minute when you are in the call.

**BT answer mode** - Choose how to answer a call when using a Bluetooth headset. Select **Hands-free** or **Handset**.

**Save new number** - Selecting this option will save numbers that are not already in your contacts upon ending the call.



## Searching for a contact

- 1 Press **Menu** and select **Contacts** then choose **Search**.
- 2 Using the keypad enter the first letter of the name of the contact you want to call.
- 3 To scroll through the contacts and their different numbers use the navigation keys.

Or, using the slightly quicker method...

- 1 Enter the number you wish to search on the home screen and select **Options**.
- 2 Choose **Search contacts** in option menu.

## Adding a new contact

- 1 Press **Menu** and select **Contacts** then choose **Add new**.
- 2 Choose whether to store your new contact on your **Handset** or **SIM** card.
- 3 Enter the information you want in the fields provided and select **Done**.

Or to use a slightly quicker method...

- 1 Enter the number you wish to store and press **Options**.
- 2 Choose **Save number**, and choose either **New contact** or **Update contact**.
- 3 Enter the relevant information and select **Done**.

## Contact options

There are many things you can do when viewing a contact. Here's how to access and use the options menu.

- 1 Press **Menu** and select **Contacts** then choose **Search**.
- 2 Select **Options** to open the list of options. From here you can:

**Send message** - Send a message to the contact. If the contact has an email address, select whether you'd like to send a **Message** or **Email**.

**Send business card** - Send the contact's details to another person as a business card. Choose to send as a **Text message**, **Multimedia message**, **Email** or via **Bluetooth**.

# Contacts

**Make call** - Directly make voice call to a contact you choose.

**Add new contact** - Add a new contact.

**Edit** - Change any of the contact's details.

**Mark/Unmark** - Choose whether to mark a contact or unmark.

**Search by** - Search a contact by **Number** or **Group**.

**Save to Handset/SIM** - Choose to move or copy to the phone or SIM card (depending on where you originally saved the contact).

**Delete** - Delete the contact. Select **Yes** only if you are sure.

**Speed dials** - You can assign a frequently-called contact to a speed dial number.

## Creating a group

- 1 Press **Menu** and select **Contacts**.
- 2 Select **Groups** and choose **Options**.
- 3 Select **Add new group**.
- 4 Enter a name for your new group.


## 5 Press **Done**.

**Note:** If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your contacts.

**TIP!** You can edit an existing group by highlighting it and selecting **Options**. Choose to **Add member** to the group from your contacts, select **Edit group** or **Delete** the group.

## Using service dial numbers

You can view the list of Service Dial Numbers (SDN) assigned by your service provider (if supported by the SIM card). Such numbers include emergency, directory enquiries and voicemail numbers.

After selecting a service number, press  to dial that service.

## Viewing your own number

Select **Own number** in the **Contacts** menu to view your number.

## Creating a business card

You can create your own business card by selecting **My business card**, then **Add**. Enter your name, number, email address, image and etc.

## Changing your contact settings

- 1 Press **Menu** and select **Contacts**.
- 2 Select **Settings**. From here you can adjust the following settings:

**Contact list settings** - Choose whether to view contacts saved to both your **Handset & SIM**, **Handset** or **SIM**. You can also select to show the first name or last name of a contact first, and to show a contact picture.

**Copy** - Copy your contacts from your SIM card to your handset or from your handset to your SIM card. Choose to do this one by one, or all together.

**Move** - This works in the same way as **Copy**, but the contact will only be saved to the location you've moved it to. If you move a contact from the SIM card to the handset it will be deleted from the SIM card memory.

### **Send all contacts via Bluetooth**

- Send all contacts information to another handset by Bluetooth.

**Backup contacts** - You can save all the phonebook data in the handset to an external memory card by the form of vcard.

**Restore contacts** - You can restore all the phonebook data in an external memory card to the phone memory by the form of vcard.

**Clear contacts** - Delete all your contacts.

**Memory info.** - You can check how much memory you've got left on your handset or your SIM card.

# Messaging

## Messaging

Your GW300 includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service) as well as the network's service messages. To use these functions, press **Menu** and select **Messaging**.

## Sending a message

- 1 Press **Menu**, select **Messaging** and choose **Create new message**.
- 2 A new message editor will open. Message editor combines **SMS** and **MMS** in one intuitive mode that is easy to switch between. The default setting of the message editor is **SMS** mode.
- 3 Enter your message using the keypad. See **Entering text** on the right for more information on how to enter text.

- 4 Select **Options** and choose **Insert** to add an **Image, Video, Sound, Symbols, Template, Emoticon, Name & Number, New slide, Subject** or **More (Business card/Schedule/Memo/Task/My business card)**.
- 5 Choose **Send**.
- 6 Choose a contact from the list of contacts or enter the phone number.
- 7 Select **Send**.

**Note:** Note: You can send SMS to many users at a time. Option Send to Many will open the contacts list where in user can mark/unmark contacts for sending message. First 100 contacts marked will be chosen if Mark all is selected. To send the SMS to a particular group of contacts select the option Send to Group after composing the SMS.



**WARNING:** Image, Sound, Video, New slide, Subject, Business card, Schedule or My business card is added to the message editor, it will be automatically converted to MMS mode and you will be charged accordingly.

## Entering text

You can enter alphanumeric characters using the phone's keypad. For example, storing names in contacts, writing a message and creating scheduling events in the calendar all require entering text. The following text input methods are available in the phone: Abc mode, and 123 mode.

**Note:** Some fields may allow only one input mode (e.g. telephone number in contact fields).

## Text input mode using the keypad

When you want to enter text, for example when writing a message, the keypad will default to Abc mode. If you are entering a number, for example when making a call, the keypad number keys will default to numbers.

## Setting up your email

You can stay on the move using email on your GW300. It's quick and simple to set up a e-mail or Other email accounts.

- 1 Press **Menu**, select **Messaging** and choose **Settings**.
- 2 Select **Email** and choose **Email accounts**.
- 3 Select **Add** and follow the pop up instruction and enter the information required.

# Messaging

## Sending an email using your new account

To send/receive an email, you should set up an email account (see above).

- 1 Press **Menu**, select **Messaging** and choose **Create new message**.
- 2 Choose **Email** and a new email window will open.
- 3 Write a subject line then press **OK**.
- 4 Enter your message using the keypad.

## Retrieving your email

- 1 Press **Menu** and select **Messaging** then choose **Mailbox**.
- 2 Select the account you want to use.
- 3 Choose **Retrieve** and the phone will connect to your email account and retrieve your new messages.

## Message folders

Press **Menu** and select **Messaging**. The folder structure used on your GW300 should be self-explanatory.

**Create new message** - Create your new message.

**Inbox** - All the messages you receive are placed into your **Inbox**. From here you can reply, forward and more.

**Mailbox** - All the mails you receive are placed into your **Mailbox**.

**Drafts** - If you don't have time to finish writing a message, you can save what you have written so far in here.

**Outbox** - This is a temporary storage folder while messages are being sent or stores the messages that are failed to sent.

**Sent messages** - Copies of all the messages you send are kept into your Sent folder.

**My folders** - You can move messages of **Inbox** or **Sent items** into **My folders**. Also you can move those messages of **My folders** into the original message box.

**Templates** - A list of pre written useful messages, useful for a quick reply.

**Emoticons** - You can add, edit and delete emoticons. You can insert the emoticon which you preferred on writing a message.

## Managing your messages

- 1 Press **Menu**, select **Messaging** and choose **Inbox**.
- 2 Select **Options** and then choose to:

**Reply** - Send a reply to the selected message.

**Forward** - Send the selected message on to another person.

**Make call** - Call the person who sent you the message.

**Save number** - Save the number of the message.

**Delete** - Delete the selected message.

## Threaded view/General view

- Choose to type of message view. Options are changed depending on the view type.

**Create new message** - Write a new message or email regardless who sent you message.

**Mark/Unmark** - Mark a message or all.

**Copy&Move** - Choose to copy or move the selected message to the SIM card or phone.

**Filter** - Displays messages by desired message types.

**Message info** - You can check the message info of its type, subject, where it is from and its date.

If you see the message **No space for SIM message**, you should delete some messages from your inbox to create space.

If you see the message **No space for messages**, you can delete either messages or saved files to create more space.

# Messaging

**TIP!** When you receive the message, you can reply quickly by using **Quick reply** function. While you see the message, press **Options** and select **Quick reply**. This is useful if you need to reply the message during a meeting.

**TIP!** While you see the message, press **Options** and select **Extract**. You can extract the information such as a number, email address or web address from the selected message.

## Changing your text message settings

Press **Menu**, select **Messaging**, then choose **Settings** and **Text message**. You can make changes to:

**Text message centre** - Enter the details for your message centre.

**Delivery report** - Choose to receive confirmation that your message have been delivered.

**Validity period** - Choose how long your messages are stored at the message centre.

**Message types** - Convert your text into **Voice, Fax, X.400** or **Email**.

**Character encoding** - Choose how your characters are encoded. This affects the size of your message and therefore data costs.

**Send long text as** - Choose whether to send your message as Multiple SMS or MMS when you enter a text longer than 2 pages in the message field.

## Changing your multimedia message settings

Press **Menu**, select **Messaging**, then choose **Settings** and **Multimedia message**. You can make changes to:

**Retrieval mode** - Choose to automatically or manually download multimedia messages depending on whether you are at home or roaming.

**Delivery report** - Choose to request or allow a delivery report.

**Read reply** - Choose to request or allow a read reply.

**Priority** - Choose the priority level of your multimedia message.



**Validity period** - Choose how long your message is stored at the message centre.

**Slide duration** - Choose how long your slides appear on screen.

**Creation mode** - Allows you to select the contents type supported by MMS.

**Delivery time** - Configures the delivery time of message to the recipient. The multimedia message centre will deliver the message after the delivery time.

**Multi msg centre** - Allows you to configure network information such as the multimedia service centre and the internet profile to send a multimedia message.

## Changing your email settings

- 1 Press **Menu**, select **Messaging** and choose **Settings**.
- 2 Select **Email** then you can adapt the following settings:

**Email accounts** - You can set up an email account.

**Allow reply email** - Choose to allow the sending of 'read confirmation' messages.

**Request reply email** - Choose whether to request read confirmation messages.

**Retrieve interval** - Choose how often your GW300 checks for new email messages.

**Retrieve amount** - Choose the number of emails to be retrieved at any one time.

**Include message in Fwd & Reply** - Choose whether or not to include the original message.

**Include attachment** - Choose whether or not to include the original attachment.

**Auto retrieval in roaming** - Choose whether or not to automatically retrieve your messages when abroad.

**New email notification** - Choose whether or not to be alerted to new emails.

# Messaging

**Signature** - Create an email signature and switch this feature on.

**Priority** - Choose the priority level of your email messages.

**Info. service** - Choose the reception status, channels and language of your info messages.

**Backup text messages** - You can choose to backup text messages to Handset memory or External memory.

## Changing your other settings

Press **Menu**, select **Messaging**, and choose **Settings** then:

**Text message** - You can configure text message related options.

**Multimedia message** - You can configure multimedia message related options.



**Email** - You can adapt your email settings to your own preferences.

**Voicemail** - Add a new voicemail service. Contact your network operator for more information on the service they provide.

**Service message** - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders.

# Camera

## Taking a quick photo

- 1 Press  and hold the key on the right side of the phone.
- 2 Point the lens towards the subject of the photo.
- 3 Press  to take a photo.


**TIP!** To access this function press unlock.


## After you've taken your photo


Your captured photo will appear on the screen. The following options are available:


**Back** - Go back to previous menu.

 **Album** - View the My images you have taken in your album.

 **Send** - Send the photo as MMS, as an Email or via Bluetooth.

 **New** - Take another photo straight away. Your current photo will be saved.

 **Use as** - Set the image you have just taken as wallpaper, a contacts image or in your start-up/shut down screen. (Contact image can only be added to contacts saved to your phone, not your SIM card.)

 **Delete** - Delete the photo you have just taken. The viewfinder will reappear.

**Options** - You can change the name of the image or edit the image file.

## Using the quick settings

From the viewfinder use navigation keys and select the options you would like to use.

**Album** - Choose to look at the other images in your album.


**Video** - Choose to switch from camera to video camera mode.

**Capture** - Allows you to take a picture.

**Brightness** - Set the brightness of the image in the viewfinder of the camera.

# Camera

**Zoom** - Adjust the zoom using the navigation key on the middle of your phone. The zoom function is only available when the image size is set to 640x480 or below.

**TIP!** Press down key  of navigation key twice to disappear options. (Press up key to view the options.)

## Using the advanced settings

From the viewfinder select **Settings** to open all the advanced settings options. Use the navigation key to navigate through the options.

### <Preview>

**Image size** - Change the size of the photo.

**Colour effect** - Choose a colour tone to apply to the photo you're taking.

**White balance** - The white balance ensures that any white in your photo is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** or **Cloudy**.

**Night mode** - You can take better My images at night by selecting **On**.

**Timer** - The self-timer allows you to set a delay after the capture button is pressed. Choose from **3 seconds**, **5 seconds** or **10 seconds**. Great for a group photo that you want to be part of.

**Shot mode** - Choose from **Normal** or **Burst shot**. Burst shot lets you to take up to three, six or nine shots automatically in very quick succession, great for taking photos of moving objects or at sporting events.

**Image quality** - Controls the quality of image. The finer the quality the sharper a photo will be, but the file size will increase. This means you'll be able to store fewer photos in your memory.

### <Others>

**Memory in use** - Choose whether to save your photos to the handset memory or to the external memory.

**Hide icons** - Hide the icons to the side of the viewfinder.

**Shutter sound** - Select one of three different shutter sounds.

**Note:** Always press **Select** after selecting a new setting to implement the changes you've made. The settings menu will automatically close, ready for you to take your picture.

## Adjusting the brightness

Contrast defines the difference between light and dark in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.

- 1 Select **Brightness** in the quick settings.
- 2 Slide the contrast indicator along the bar, towards “-” for a lower contrast, hazier image or towards “+” for a higher contrast, sharper image.

# Camera

## Changing the image size

The more pixels, the larger the file size, which in turn means they will take up more of your memory. If you want to fit more My images on your phone or memory card you can alter the number of pixels to make the file size smaller.




- 1 Select **Image size** in **Settings**.
- 2 Select a pixel value from the numerical options: **1600x1200**, **1280x960**, **640x480**, **320x240**.

## Viewing your saved photos

- 1 You can access your saved photos from within the camera mode by selecting **Album**. Your album will appear on the screen.
- 2 Highlight the photo you want to view to bring it to the front of the album.
- 3 Select the photo to open it fully.

# Video camera

## Shooting a quick video

- 1 Press and hold  the key on the right side of the phone.
- 2 Select **Video** menu by pressing navigation key < in the quick menu.
- 3 Focus the camera on what to record.
- 4 Press  once to start recording.
- 5 **Rec** will appear at the bottom of the viewfinder. Press  again to stop recording.

## After you've shot your video

A still image representing your captured video will appear on screen. The following options are available:

**Back** - Go back to previous menu.



**Album** - Press to look at the other video clips in your album. Your current video clip will be saved.



**Play** - Press to play the video you have just recorded.



**New** - Press to shoot another video straight away. Your current video will be saved.



**Send** - Send the video as MMS, as an Email or via Bluetooth.



**Delete** - Delete the video you have just recorded. The viewfinder will reappear.

**Options** - You can change the name of the video clip.

## Using the quick settings

From the viewfinder use navigation keys and select the options you would like to use.

**Album** - Choose to look at the other videos in your album.

**Camera** - Choose to switch from video camera to camera mode.

**Rec.** - Allows you to record a video.

**Brightness** - Set the brightness in the viewfinder of the video camera.

**Colour effect** - Choose an effect tone to apply to the video you're recording.

# Video camera

## Using the advanced settings

From the viewfinder select **Settings** to open all the advanced settings options. Use the navigation key to navigate through the options.

### <Preview>

**Colour effect** - Choose an effect tone to apply to the video you're recording.

**White balance** - The white balance ensures that any white in your photos is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** or **Cloudy**.

**Night mode** - You can select night mode on or off.

**Quality** - Controls the quality of video.

**Duration** - Choose **Normal** or limit your video to fit in a **Message**.

### <Others>

**Memory in use** - Choose whether to save your videos to the handset memory or to the external memory.

**Hide icons** - Hide the icons to the side of the viewfinder.

**Voice** - Choose **Mute** to record a video without sound.

**Note:** Always press **Select** after selecting a new setting to implement the changes you've made.

## Watching your saved videos

- 1 You can access your saved videos from within the video camera mode by selecting **Album**. Your album will appear on screen.
- 2 Highlight the video you want to view to bring it to the front of the album.
- 3 Select the video to open it fully.



# Music

## MP3 Player

Your GW300 has a built-in music player so you can play all your favourite music.

### Note:

- Before using music player, you will need to transfer music file onto your phone.
- Music player supports codec types as follows: MP3, WMA, AAC. Music player does not necessarily support all features and variations of file formats.

To access the music player, press **Menu** and select **Multimedia** and select music. From here you can access to:

**Recently played** - View all of the songs you have played recently.

**All tracks** - Contains all of the songs you have on your phone.

**Playlists** - Contains all playlists you have created.

**Artists** - Allows you to view all tracks sorted by artist.

**Albums** - Allows you to view all tracks sorted by album.

**Genres** - Allows you to view all tracks sorted by genre.

**Shuffle tracks** - Allows you to play all of the songs in random order.

## Transferring music onto your phone





The easiest way to transfer music onto your phone is via Bluetooth or sync cable.

To transfer music using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are visible to one another.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is sent you should to accept it on your phone by selecting **Yes**.
- 4 The file should appear in **All tracks**.

# Music

## Playing a song

- 1 Press **Menu** and select **Multimedia**, then choose **Music**.
- 2 Choose **All tracks** then select the song you want to play. Select .
- 3 Select  to pause the song.
- 4 Select  to skip to the next song.
- 5 Select  to skip to the previous song.
- 6 Select **Back** to stop the music and return to the **All tracks** menu.

**TIP!** To change the volume while listening to music, use the volume keys on the left hand side of your phone.

**Note:** The copyright of music files can be protected in international treaties and national copyright laws. Therefore, it may be necessary to obtain a permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Before downloading or copying the file, please check the national legislation of the applicable country concerning the use of such material.

## Using options while playing music

Select **Options** and choose from:

**Minimize** - Hide the music player screen so that you can continue using your phone as normal while music is playing.

**Repeat** - You can listen to the music repeatedly.

**Shuffle** - Play your tracks in a random order.

**LG Equalizer** - You can view the LG Equalizer on the screen.

**Visualization** - Select a visual effect.

**Add to playlist** - Adds the current track to a playlist.

**File info.** - You can view information about the music file you are listening to.

**Send** - Send the song as a message, Email or via Bluetooth.

**Use as** - Use the song as a ringtone, Message tone, Start-up or Shut down.

# FM radio

## Using the FM radio

Your GW300 has an **FM radio** feature so you can tune into your favourite stations to listen on the move.

**Note:** You will need to insert your headset in order to listen to the radio. Insert the plug into the headset connector.

## Searching for stations

You can tune radio stations into your phone by searching for them either manually or automatically. They will then be saved to specific channel numbers so you don't have to keep re-tuning.

### To auto tune:

- 1 Press **Menu** and select **Multimedia**, then choose **FM radio**.
- 2 Select **Option** and choose **Auto scan** then select **Yes**.

- 3 Available radio stations will be automatically found and allocated to a channel in your phone.

### To manually tune:

- 1 Press **Menu** and select **Multimedia**, then choose **FM radio**.
- 2 To enter your station, you can use the navigation key to search or you can enter the frequency using the keypad, then select **Set**.
- 3 Select a channel number that you want to save a station to and choose **Select**.

**Note:** You can also edit the stations you have saved in a channel number.

**TIP!** To improve the reception extend the headset cord, which functions as the radio antenna.

# FM radio

## Reset all channels

- 1 Press **Menu** and select **Multimedia**, then choose **FM radio**.
- 2 Select **Options** and select **Reset all channels**. Choose **Yes** to confirm the reset.

## Listening to the radio

- 1 Press **Menu** and select **Multimedia**, then choose **FM radio**.
- 2 Select the channel number of the station you would like to listen to.

**Note:** You can listen to the radio via built-in speaker. Press **Options**, select **Listen via speaker**.

# Voice recorder

## Using the Voice recorder

Use your **Voice recorder** to record voice memos or other sounds.

### Recording your voice memo

- 1 Press **Menu** and select **Multimedia**, then choose **Voice recorder**.
- 2 Press **OK** to begin recording.
- 3 Choose **Stop** to end the recording.
- 4 Press **Options** and select **Play** to listen to the recording.

**Note:** You can listen to all of the voice recordings you have saved by selecting **Options** and **Go to Voice recordings**.

## Sending a voice recording

- 1 Once you have finished recording, select **Options**.
- 2 Select **Send** and choose from **Message**, **Email** or **Bluetooth**. If you choose **Message** or **Email**, the recording will be added to the message and you can write and send it as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on.

## My stuff

You can store any multimedia files on your phone's memory so that you have easy access to all of your images, sounds, videos, games and apps, flash contents and others. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

### My images

My images contains a list of My images including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

### Sending a photo

- 1 Press **Menu** and select **My stuff** then choose **My images**.
- 2 Select the photo you want to send and press **Options**.
- 3 Select **Send** and choose from **Message**, **Email** or **Bluetooth**.

- 4 If you choose **Message** or **Email**, your photo will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture to.

### Using an image

You can choose images to use as wallpapers, start up/shut down images or even to identify a caller.

- 1 Press **Menu** and select **My stuff** then choose **My images**.
- 2 Select the image and choose **Options**.
- 3 Select **Use as** and choose from:  
**Wallpaper** - Set a wallpaper for the home screen.  
**Contacts image** - Allocate an image to a particular person in your contacts list so that the picture shows when they call you.

**Start-up image** - Set an image to appear when you switch the phone on.


**Shut down image** - Set an image to appear when you switch the phone off.

## Organising your images

- 1 Press **Menu** and select **My stuff**, then choose **My images**.
- 2 Select **Options** and choose **Sort by**.
- 3 Choose from **Date**, **Type** or **Name**.

## Deleting an image

- 1 Press **Menu** and select **My stuff**, then **My images**.
- 2 Select the image you want to delete and press **Options**.
- 3 Select **Delete** and choose **Yes** to confirm.

**TIP!** To quickly delete any file in **My stuff**, highlight it with the cursor and press the  key.

## Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to either free up some space in one of the memory banks or to safeguard your images from being lost.

- 1 Press **Menu** and select **My stuff** then choose **My images**.
- 2 Select an image and press **Options**.
- 3 Select **Move** or **Copy**.

## Marking and unmarking images

If you want to move, copy, send or delete several images at once, you first need to identify them by marking them with a tick.

- 1 Press **Menu** and select **My stuff** then choose **My images**.
- 2 Select **Options** and choose **Mark/Unmark**.
- 3 A box will appear to the left of each image. If you select an image, a tick will appear in the box marking it.

## My stuff

- 4 To unmark an image, select the image again so that the tick disappears from the box.
- 5 Once you have marked all of the appropriate images, choose one of the options to apply to all of them.

**Note:** Allow for a delay in loading if you have several images stored on memory card.

## Checking your memory status

You can check to see how much of your memory you have used and how much you have remaining.

- 1 Press **Menu** and select **My stuff**, then choose **My images**.
- 2 Select **Options** and choose **Memory info**.
- 3 Choose **Handset memory** or **External memory**.

**Note:** If you do not have a memory card inserted, you will not be able to select **External memory**.

## My sounds

The **My sounds** folder contains the Downloaded sounds, **Default sounds** and **Voice recordings**.

## Using a sound

- 1 Press **Menu** and select **My stuff**, then choose **My sounds**.
- 2 Select **Default sounds** or **Voice recordings**.
- 3 Select a sound and press **Play** to listen to it.
- 4 Select **Options** and choose **Use as**.
- 5 Choose from **Ringtone**, **Message tone**, **Start-up** or **Shut down**.

## My videos

The **My videos** folder shows the list of downloaded videos and videos you have recorded on your phone.

## Watching a video

- 1 Press **Menu** and select **My stuff** then choose **My videos**.
- 2 Select a video and press **Play**.



## Sending a video clip

- 1 Press **Menu** and select **My stuff** then choose **My videos**.
- 2 Select a video and choose **Options**.
- 3 Select **Send** and choose from **Message**, **Email** or **Bluetooth**.
- 4 If you choose **Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video to.

**Note:** The video may need to be resized before it can be sent by MMS. Some videos may be too large to send by MMS at all.

## Games and Applications

You can download games and applications to your phone to keep you amused when you have time to spare.

If you download a game from the network, you will need to install the downloaded game in your phone before enjoying the game.

## Playing a game

- 1 Press **Menu** and **My stuff**, choose **Games & apps**.
- 2 Select **Games** menu.
- 3 Select a game and press **Launch**.

## Using the games options menu

From the **Games** and **Applications** folders, the following options are available:

**Create new folder** - Create a folder within the games and applications menu.

**Sort by** - Sort the games and applications by **Date**, **Size** or **Name**.

**Memory info.** - View the memory status.

## JustCricket

We can see the live cricket scorecar.

# My stuff

- 1 Press **Menu** and **My stuff**, choose **Games & apps**.
- 2 Select **Applications** menu.
- 3 Select the **JustCricket** .

## Flash contents

The **Flash contents** folder contains all of your default and downloaded flash contents.

## Others

The **Others** folder is used to store files which are not My images, My sounds, My videos, games or applications.

## External memory

If you purchase an optional external microSD memory card, you can manage more content.

## Installing a Java game & application

Depending on the service provider, all Java based programs such as Java games can be downloaded and run

on your phone. You can transfer Java program files from a compatible PC to the memory in your phone using the Bluetooth, USB mass storage or external memory. The Java program files are in .jad or .jar format.

If you save the Java program files in your phone, you should install the files before using a Java game or application first.

To install a Java game & application:

- 1 Press **Menu** and select **My stuff**, then choose **Others** or **My memory card** (If external memory is inserted).
- 2 Select the file (\*.jad or \*.jar) you want to install and press Install.

**Note:** The .jad file should contain its own .jar file.

- 3 Once installed, the Java program can be viewed in the **Games** or **Applications** menu where you can select, execute or delete.

# Games & Apps

## Games & Apps

Your GW300 comes with preloaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they will be saved into this folder.

**Note:** An additional cost is incurred when connecting to this service. Check your data charges with your network provider.

## Playing a game

- 1 Press **Menu** and select **Games & Apps**.
- 2 Select **My games & apps** and choose **Games**.
- 3 Choose the game you want to play and select **Launch**.

## Viewing applications

You can manage the Java applications installed in your phone by using the **Applications** menu. You can also delete downloaded applications.

- 1 Press **Menu** and select **Games & Apps**.
- 2 Select **My games & apps** and choose **Applications**.
- 3 View and manage any applications you have.

## Changing the network profile

To download a game, you can set the value to connect to the network using **Settings**.

- 1 Press **Menu** and select **Games & Apps**.
- 2 Select **Settings**.
- 3 From here you can:

**Profiles** - You can see profile and add new profile.

**Certificates list** - You can see the certification list for using Java application.

# Organiser & Tools

## Setting your alarm

- 1 Press **Menu** and select **Tools**, then choose **Alarms**.
- 2 Press **Options** and select **Add new**.
- 3 Scroll down and enter the time you would like the alarm to sound at.
- 4 Choose the repeat type to indicate whether you would like your alarm to sound **Not repeated**, **Daily**, **Mon - Fri**, **Mon - Sat**, **Except holiday**, or **Choose weekday**.
- 5 Scroll down and choose whether you would like the alarm to **Alarm Ring**, **Vibration**, **Ring & vibration** or **Follow profile**.
- 6 Scroll down to choose the alarm tone. Press **OK** and choose a sound from the My stuff.
- 7 Scroll down and enter a name for the alarm or keep the suggested name.

- 8 Finally you can set the snooze interval at 5, 10, 20, 30 minutes, 1 hour or off.

- 9 Select **Done**.

## Adding an event to your calendar

- 1 Press **Menu** and select **Organiser**, then choose **Calendar**.
- 2 Select the date you would like to add an event to. You can choose a date either by scrolling to it using the navigation keys or by selecting **Options** and **Go to date** in order to enter a date.
- 3 Select **Options** then select **Add new** and scroll down to enter the time you would like your event to begin. Scroll down and enter the end time of your event.
- 4 Enter a **Subject** for the event. Use the keypad to type letters and numbers.

- 5 Scroll down again and choose whether you would like to set an **Alarm** for the event. Scroll left or right to see the available options. You can set the alarm to go off at the starting time of the event or at a set period of time before the event starts to remind you the event is coming up.
- 6 Scroll down once more to select whether the event is occurring **Not repeated** or repeated at **Daily, Weekly, Monthly** or **Annually** intervals. Also you can choose **User setting**. If the event is repeated, you can also scroll down to enter an **Expiration date** for when the events will stop completely.
- 7 Select **Done** and your event will be saved in the calendar. A square cursor will mark the days of any saved events.

## Adding an item to your task list

- 1 Press **Menu** and choose **Organiser**.
- 2 Select **To do** and select **Add**.
- 3 Set the date for the to do item, add notes and select a priority level: **High, Medium** or **Low**.
- 4 Save your to do list item by selecting **Done**.

**TIP!** You can edit an item by selecting it, pressing **Options** and **Edit**. Confirm your amends by selecting **Save**.

## Adding a memo

- 1 Press **Menu** and select **Organiser**, then **Memo**.
- 2 Select **Add** and type your memo.
- 3 Select **Save**.
- 4 Your memo will appear on the screen.

# Organiser & Tools

## Secret memo

You can write the private memo to protect your privacy. You enter the security code to use this menu.

## Date finder

Date finder is a handy tool to help you calculate what the date will be once a certain number of days have passed.

## Settings

**Calendar** - You can set the configurations to view the calendar.

### Send all shedules & To do

**Bluetooth** - You can send all the data in your calendar and/or to do list from your phone to other phones by using Bluetooth.

**Backup calendar & To do** - You can create the backup files of the calendar or to do list saved in the phone when you insert an external memory.

**Restore calendar & To do** - You can reset the backup files of calendar or tasks when you insert an external memory.

**Memory info.** - You can view the information of available memory regarding Calendar, Tasks, Memo and Secret memo.

**Clear all** - You can delete all data regarding Calendar, Tasks, Memo and Secret memo.

## Using your calculator

- 1 Press **Menu** and select **Tools**, then choose **Calculator**.
- 2 Press the numeric keys to input numbers.
- 3 For simple calculations, select the function you require (+, -, ×, ÷) using the navigation keys followed by =.
- 4 For more complex calculations, select **Options** to choose a command.
- 5 Select **C/A** to clear the screen and start a new calculation.

## Using the stopwatch

- 1 Press **Menu** and select **Tools**, then choose **Stopwatch**.
- 2 Select **Start** to begin the timer.
- 3 Choose **Lap** if want to record a lap time. Up to 20 lap times can be saved.
- 4 Select **Stop** to end the timer.
- 5 Choose **Resume** to restart the stopwatch at the time you stopped it at or select **Reset** to return to zero.

## Converting a unit

- 1 Press **Menu** and select **Tools**, then choose **Converter**.
- 2 Choose whether you would like to convert **Currency**, **Surface**, **Length**, **Weight**, **Temperature**, **Volume** or **Velocity**.
- 3 Scroll left and right to select a unit, then scroll down and enter the unit quantity.

- 4 Scroll down to the unit conversion box and choose the unit measurement you want to convert into. The conversion will show automatically in the line below.

**Note:** For **Currency** convert, you need to set **Rate** according to current exchange rate first.

## Adding a city to your World time

- 1 Press **Menu** and select **Tools**, then choose **World time**.
- 2 To find out the time of specific city, press **Options** and select **Add city**.
- 3 Scroll down the list or enter the first letter of the city. Also you can select **Map** and choose a city.
- 4 Press **Select**.

**TIP!** If you are abroad, you can change your time zone from World time by selecting **Options**, followed by **Change current city**. Choose your required city as above.

# Browser

With Browser at the tip of your fingers, you can get up-to-date news and weather forecasts as well as information on sports or traffic whenever you need it. In addition, Browser allows you to download the latest music, ringtones, wallpapers and games.

## Accessing the web

- 1 Press **Menu** and choose **Browser**.
- 2 To access the Browser homepage directly, select **Home**.  
Alternatively, select **Enter address** and type in your desired URL, followed by **Open**.

**Note:** An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

## Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 Press **Menu** and choose **Browser**.
- 2 Select **Bookmarks**. A list of your bookmarks will appear on the screen.
- 3 To create a new folder, select **Options** and choose **Create new folder**. Enter the name of your bookmark folder.
- 4 To add a new bookmark, select **Options** and press **Add new**. Enter a name for your bookmark followed by the URL.
- 5 Select **Done**. Your bookmark will be displayed in the list of bookmarks.
- 6 To access the bookmark, simply scroll to it and select **Open**.



## Saving a page

- 1 Access your required webpage as described above.
- 2 Select **Options** and **Save items**, then choose **Save this page**.
- 3 Enter a name for the webpage so you can easily recognise it.
- 4 Select **Save**.

## Accessing a saved page

- 1 Press **Menu** and choose **Browser**.
- 2 Select **Saved pages**.
- 3 Select **Open** to connect to the saved page.

## Viewing your Browser history

- 1 Press **Menu** and choose **Browser**, then select **History**.
- 2 A list of web page titles you have accessed recently will be displayed.
- 3 To access one of these pages, simply select the required page and press **Open**.

## Changing the web Browser settings

- 1 Press **Menu** and choose **Browser** then select **Settings**.
- 2 You can choose to edit **Profiles**, **Appearance settings**, **Cache**, **Cookies**, **Security**, or **Reset Settings**.
- 3 Once you have changed your settings, press **Select**.

# Connectivity

## Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone straightaway. If you want to change any settings, use this menu.

Press **Menu** and select **Connectivity**. Your options are:

**Bluetooth** - Set up your GW300 for Bluetooth use. You can adapt your visibility to other devices or search through devices your phone is paired with.

**USB connection mode** - You can select the USB connection mode on your phone for several uses.

## Changing your Bluetooth settings

- 1 Press **Menu** and select **Connectivity**.
- 2 Choose **Bluetooth** then **Settings**. Make your changes to:

**My device visibility** - Set **Visible** or **Visible for 1 min** so that other devices can detect your phone when they are searching for a Bluetooth device. If you select **Hidden**, other devices will not be able to detect your phone when they are searching for a Bluetooth device.

**My device name** - You can name or rename your phone as it will appear on other devices. Your phone's name will be shown on other devices only when **My device visibility** is set to **Visible**.

**Supported services** - You can view the list of devices such as headsets and handsfree supported by Bluetooth enabled phone.

**My address** - Check your Bluetooth address here.

**Note:** To improve security, we recommend that once you have configured or paired with a device, **Visibility** be set to **Hidden**. For incoming connections, regardless of whether or not the other device has been paired with your phone, you can choose to accept or reject the connection.

## Pairing with another Bluetooth device

By pairing your GW300 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **Turn on** and **Visible**. You can change your visibility in the **Settings** menu, by selecting **My device visibility**, then **Visible**.
- 2 From **Bluetooth**, choose **Turn on** and select **Search new device**.
- 3 Your GW300 will search for devices. When the search is completed **Add** and **Refresh** will appear on screen.
- 4 Choose the device you want to pair with, select **Add** and enter a passcode then choose **OK**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

## Using a Bluetooth headset

- 1 Check your Bluetooth is **Turn on** and **Visible**.
- 2 Follow the instructions that came with your headset to place it in pairing mode and pair your devices.
- 3 Your GW300 will automatically connect to your Bluetooth headset and switch to headset profile.

## Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

Before you can start sharing files using Bluetooth, you will need to pair your phone with another Bluetooth device. For information on pairing devices, see **Pairing with another Bluetooth device**.

# Connectivity

## To switch Bluetooth on:

- 1 Press **Menu** and select **Connectivity** then select **Bluetooth**.
- 2 Select **Turn on**.
- 3 Select **Turn off** to switch Bluetooth off.

## To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Select **Options** and choose **Send**, then **Bluetooth**.
- 3 Select **Yes** to turn Bluetooth on if it is not already activated.
- 4 Your GW300 will automatically search for other Bluetooth enabled devices within range.
- 5 Choose the device you want to send the file to and select **OK**.

## To receive a file:

- 1 To receive files, your Bluetooth must be both **Turn on** and **Visible**.
- 2 A message will prompt you to accept the file from the sender. Select **Yes** to receive the file.

**TIP!** Keep an eye on the progress bar to make sure your file is sent.

**Note:** The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under licence. Other trademarks and trade names are those of their respective owners.

**Note:** When Music player or FM radio is playing in background user will not be able to turn ON/OFF the bluetooth.

## Use your phone as a mass storage device

Your phone can be used as a mass storage device.

- 1 Connect the USB cable to your phone and your PC.
- 2 Select **Mass storage** from the popup menu in your phone.
- 3 Connect your phone to your PC. Do not disconnect during transfer.
- 4 All of your phone files will automatically be stored onto your PC hard drive.

## Synchronise your phone with your PC

You can synchronise your phone with your PC to make sure all your important details and dates match, but also to backup your files to put your mind at ease.

## Installing LG PC Suite on your computer

- 1 Insert the supplied CD into your PC.
- 2 LG PC Suite Installer will appear on your screen. Click on LG PC Suite Installer.
- 3 Select the language you would like the installer to run in and click OK.
- 4 Follow the instructions on screen to complete the LG PC Suite Installer wizard.
- 5 Once installation is complete, the LG PC Suite icon will appear on your desktop.

## Connecting your phone and PC

- 1 Connect the USB cable to your phone and your PC.

- 2 Select **PC suite** from the popup menu in your phone.
- 3 Double click on the LG PC Suite icon on your desktop.
- 4 Click on **Connection Wizard**, then **USB**.
- 5 Click on **Next**, then **Next** again, then choose **Finish**. Your phone and PC are now connected.

## Backing up and restoring your phone's information

- 1 Connect the USB cable to your phone and your PC.
- 2 Select the **PC suite** from the popup menu in your phone.
- 3 Click on the Backup icon, and select **Backup** or **Restore**.
- 4 Mark the contents you would like to back up or restore. Select the location you would like to backup information to, or restore information from. Click OK.
- 5 Your information will be backed up or restored.

# Connectivity

## Viewing your phone files on your PC

- 1 Connect the USB cable to your phone and your PC.
- 2 Select the **PC suite** from the popup menu in your phone.
- 3 After searching the phone it will be connected automatically.

**TIP!** Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove contents you no longer need.

- 5 Click on **File** and select **Save**. You can now select where you would like to save your contacts to.

**Note:** To backup contacts saved to your SIM card, click on the SIM card folder on the left side of your PC screen. Right-click your contact then Select All. Right-click your contact again and select Copy to Phone Memory. Now click on the Handset folder on the left of your screen and all your numbers will be displayed.

## Synchronising your contacts

- 1 Connect the USB cable to your phone and your PC.
- 2 Select the **PC suite** from the popup menu in your phone.
- 3 Click on the **Contacts** icon.  
Your PC will now import and display all contacts saved to your SIM card and handset.
- 4 Select **Phone memory**. Your PC will export your contacts to your handset.

## Yahoo! Search

You can access Yahoo Mobile Internet Service. To access Yahoo services, press Menu and select Yahoo! Search.

**Note:** You may be unable to access Yahoo in some countries. This is dependent on network services.

# Settings

## Changing your profiles

- 1 Press **Menu** and select **Settings**.
- 2 Select **Profiles** and then choose the profile you want to edit.
- 3 Select **Options** and choose **Edit**.
- 4 You can change all of the tones, its volumes and alert options from here.

## Using flight mode

To turn on flight mode, press **Menu** and then select **Settings** and **Profiles**. Select **Flight mode** to activate. Flight mode will not allow you to make calls, connect to the internet or send message.

## Changing your phone settings

- 1 Press **Menu** and select **Settings**.
- 2 Select **Phone** settings and choose from the list below.  
**Auto key lock** - Choose a duration for locking the key automatically.

**Languages** - Change the language of for your GW300's display.

**Power save** - Choose to switch the factory set power saving settings **Off**, **Night only** or **Always on**.

**Information** - View the technical information for your GW300.

## Changing your display settings

- 1 Press **Menu** and select **Settings**.
- 2 Select **Screen** and choose from:

**Screen theme** - Choose the theme of your home screen or start-up/shut down screen.

**Menu style** - Change the menu view from **List style** or **Grid style**.

**Dialling** - Adjust the font style and size for when you are dialling a phone number.

**Font** - Adjust the font size.



**Backlight** - Choose how long the backlight remains on. Also, use the navigation keys to adjust the main screen brightness.

**TIP!** The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.

**Handset theme** - Quickly change the whole look of your screen.

**Greeting message** - After selecting **On**, you can write a welcome message. The message will appear on screen whenever you start-up the phone.

## Changing the date & time

- 1 Press **Menu** and select **Settings**.
- 2 Select **Date & Time** and choose from the list below:

**Time** - You can enter the current time. You can set the time format to either 24 hours or 12 hours. You can select a city as time zone.

**Date** - You can enter the current date. You can set the date format (YYYY.MM.DD, DD.MM.YYYY, MM.DD.YYYY).

**Auto update date/time** - Select **On**, and the phone will automatically update the date and time.

**Daylight saving** - Select whether to activate the daylight saving function or not. You can set the summer time difference of selected home city for 1 hour or 2 hours.

## Changing your security settings

Change your security settings to keep your GW300 and the important information it holds protected.

- 1 Press **Menu** and select **Settings**.
- 2 Select **Security** and choose from the list below:

**PIN code request** - Choose a PIN code to be requested when you turn your phone on.

# Settings

**Handset lock** - Choose a security code to lock your phone **When switching on, If SIM changed or Immediate**.

**Change codes** - Change your PIN code (This menu item will appear if PIN code request is set to On), PIN2 code, Security code or ATMT code.

**Anti Theft Mobile Tracker** - When the handset is stolen, handset sends the SMS to the numbers configured by real owner. To activate the ATMT feature, you will need to set ATMT on, and configure the ATMT settings with name, primary number and secondary number. Default ATMT code is "0000."

ATMT SMS will contain information about the stolen phone IMEI, current location (captured as per Cell Broadcast message) & number of the person who is using that handset.

**Application lock** - You can set the application lock to avoid unauthorized use of My Images, My sounds, My videos and To do. You will need a securitycode.

## **Note: Security code**

The security code protects the unauthorized use of your phone. The default security code is set to '0000' and the security code is required to delete all phone entries and to activate the **Reset settings** menu. Also, the security code is required to enable or disable the phone lock function to prevent unauthorized use of the phone. The security code default setting can be modified from the **Security > Change codes**.

## **Viewing memory status**

Your GW300 has three memories available: the phone, the SIM card and an external memory card (you may need to purchase the memory card separately).

You can use the memory manager to determine how each memory is used and see how much space is available.

Press **Menu** and select **Settings**, choose **Memory info**. You will then see the current status of the memories in your GW300. If you insert an external memory card in your phone, you can also select **Primary storage settings** then choose the default location you prefer items to be saved to.

## Resetting your phone

Use **Reset settings** in **Settings** menu to reset all the settings to the factory definitions. You need the security code to activate this function.

## Software Upgrade

### LG Mobile Phone Software Upgrade Program

For more information on installing and using this program, please visit <http://LGmobile.com>.

This feature allows you to upgrade your software to the latest version quickly and conveniently on the Internet without needing to visit our service center.

As the mobile phone software upgrade program requires the user's full attention for the duration of the upgrade process, please be sure to check any instructions and notes that appear at each step before proceeding.

Please note that removing the USB data communication cable or batteries during the upgrade may seriously damage your mobile phone.

As the manufacturer takes no responsibility for loss of data during the upgrade process, you are advised to note down any important information in advance for safekeeping.

## Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

---

### Standard Battery



---

### Hands free earmicrophone



---

### Travel Adapter



---

### Data cable and CD



#### Note

- Always use genuine LG accessories.
- Failure to do so may invalidate your warranty.
- Accessories may vary in different regions; please check with our regional service company or agent for further information.