- Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provide
- Third party services may be terminated or interrupted at any time and Samsung makes no representation or warranty that an content or service will remain available for any period of time
- This product includes certain free/open source software. The exact terms of the licences, disclaimers, acknowledgements and notices are available on the Samsung's website opensource.samsung.com

Printed in Korea GH68-36933A English (EU). 12/2012. Rev. 1.1



- Use your device to call for help. Dial a local emergency number in the case of fire, traffic accident, or medical emer Use your device to help others in emergencies. If you see an auto
- accident, a crime in progress, or a serious emergency where lives are in danger, call a local emergency number.
- Call roadside assistance or a special, non-emergency assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen call roadside assistance or another special, non-emergency number

### Proper care and use of your mobile device

### Keep your device dry

- Humidity and all types of liquids may damage device parts or Do not turn on your device if it is wet. If your device is already on
- turn it off and remove the battery immediately (if the device will not turn off or you cannot remove the battery, leave it as-is). Then, dry the device with a towel and take it to a service centre
- Liquids will change the colour of the label that indicates water damage inside the device. Water damage to your device can void vour manufacturer's warrantv.

Do not use or store your device in dusty, dirty areas Dust can cause your device to malfunction

Do not store your device on slopes If your device falls, it can be damaged

Do not store your device in hot or cold areas. Use your device at -20  $^{\circ}\text{C}$  to 50  $^{\circ}\text{C}$ Your device can explode if left inside a closed vehicle, as the inside

- temperature can reach up to 80 °C.

  Do not expose your device to direct sunlight for extended periods of
- time (such as on the dashboard of a car)
- . Store the battery at 0 °C to 40 °C.

# SAR

Safety precautions

This product meets applicable national SAR limits of 2.0 W/kg. The specific maximum SAR values can be found in the SAR information section of this manual.

When carrying the product or using it while worn on your body, either use an approved accessory such as a holster or otherwise maintain a distance of 1.5 cm from the body to ensure compliance with RF exposure requirements. Note that the product may be transmitting even if you are not making a phone call

### Warning: Prevent electric shock, fire, and explosion

Do not use damaged power cords or plugs, or loose electrical

Do not touch the power cord with wet hands, or disconnect the charger by pulling on the cord

Do not bend or damage the power cord

Do not use your device while charging or touch your device with

Do not short-circuit the charger or the battery

Do not drop or cause an impact to the charger or the battery

Do not charge the battery with chargers that are not approved by

### Reduce the risk of repetitive motion injuries

· Never use a damaged charger or battery

Turn off your device where prohibited

Do not use your device during a thunderstorm

authorised service centre

Your device may malfunction and your risk of electric shock is increased.

Do not handle a damaged or leaking Lithium Ion (Li-Ion) battery

· Use only Samsung-approved batteries and chargers specifically

cause serious injuries or damage to your device.

Never dispose of batteries or devices in a fire. Follow all local regulations when disposing of used batteries or devices.

Never place batteries or devices on or in heating devices, such as

Never crush or puncture the battery. Avoid exposing the battery to

Avoid exposing your device and batteries to very cold or very hot

reduce the charging capacity and life of your device and batteries.

Prevent batteries from contacting metal objects, as this can create a connection between the + and – terminals of your batteries and lead to temporary or permanent battery damage.

Caution: Follow all safety warnings and regulations when using your device in restricted areas

Comply with all regulations that restrict the use of a mobile device in a

high external pressure, which can lead to an internal short circuit and

designed for your device. Incompatible batteries and chargers can

For safe disposal of your Li-lon batteries, contact your nearest

Handle and dispose of batteries and chargers with care

nicrowave ovens, stoves, or radiators. Batteries overheated.

Protect the device, batteries, and chargers from damage

When you repetitively perform actions, such as pressing keys, drawing characters on a touch screen with your fingers, or playing games, you may experience occasional discomfort in your hands, neck, shoulders or other parts of your body. When using your device for extended periods, hold the device with a relaxed grip, press the keys lightly, and take frequent breaks. If you continue to have discomfort during or after such use, stop use and see a physician.

### Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged
- Disconnect chargers from power sources when not in use
- · Use batteries only for their intended purposes

# Use manufacturer-approved batteries, chargers, accessories and

- Using generic batteries or chargers may shorten the life of your device Samsung cannot be responsible for the user's safety when using
- accessories or supplies that are not approved by Samsung

### Do not bite or suck on the device or the battery · Doing so may damage the device or cause explosion

- If children use the device, make sure that they use the device
- properly. Do not insert the device or supplied accessories into the eyes,

### ears, or mouth

Doing so may cause suffocation or serious injuries.

### When speaking on the device:

- Hold the device upright, as you would with a traditional phone
- Speak directly into the mouthpiece. Do not touch the device's internal antenna. Doing so may result in
- reduced call quality or cause the device to emit unintender radio frequency (RF) energy.

Do not use your device near other electronic devices Most electronic devices use radio frequency signals. Your device may interfere with other electronic devices.

### Do not use your device near a pacemaker

- · Avoid using your device within a 15 cm range of a pacemaker if possible, as your device can interfere with the pacemaker
- If you must use your device, keep it at least 15 cm away from the
- To minimise the possible interference with a pacemaker, use your device on the opposite side of your body from the pacemal

### Do not use your device in a hospital or near medical equipment that can be interfered with by radio frequency

If you personally use any medical equipment, contact the manufacturer of the equipment to ensure the safety of your equipment from radio

## If you are using a hearing aid, contact the manufacturer for information about radio interference

Some hearing aids may be interfered with by the radio frequency of your device. Contact the manufacturer to ensure the safety of your hearing aid.

### Turn off the device in potentially explosive environment

- Turn off your device in potentially explosive environments instead of removing the battery.
  Always comply with regulations, instructions and signs in potentially
- explosive environments
- Do not use your device at refuelling points (service stations), near fuels or chemicals, and at blasting areas.
  Do not store or carry flammable liquids, gases, or explosive materials
- in the same compartment as the device, its parts, or accessories.

### Turn off your device when in an aircraft

Using your device in an aircraft is illegal. Your device may interfere with the electronic navigation instruments of the aircraft

### Electronic devices in a motor vehicle may malfunction due to the radio frequency of your device

Electronic devices in your car may malfunction due to radio frequency of your device. Contact the manufacturer for more information

### Comply with all safety warnings and regulations regarding mobile device usage while operating a

While driving, safely operating the vehicle is your first responsibility. Never use your mobile device while driving, if it is prohibited by law. For your safety and the safety of others, practice good common sense and member the following tips

- Get to know your device and its convenience features, such as speed dial and redial. These features help you reduce the time needed to place or receive calls on your mobile device.
- Position your device within easy reach. Be able to access your wireless device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, let your voice mail. answer it for you.
- Suspend calls in heavy traffic or hazardous weather conditions
- Rain, sleet, snow, ice, and heavy traffic can be hazardous.

  Do not take notes or look up phone numbers. Jotting down a "to do"
- list or flipping through your address book takes attention away from your primary responsibility of driving safely. Dial sensibly and assess the traffic. Place calls when you are not moving or before pulling into traffic. Try to plan calls when your car
- will be stationary
- Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.

### Do not store your device with such metal objects as coins, keys Your device may become deformed or malfunction

- If the battery terminals are in contact with metal objects, it may cause

### Do not store your device near magnetic fields

- Your device may malfunction or the battery may discharge from exposure to magnetic fields.
- Magnetic stripe cards, including credit cards, phone cards, passbooks and boarding passes, may be damaged by magnetic fields.
- Do not use carrying cases or accessories with magnetic closures or allow your device to come in contact with magnetic fields for extended to the contact with magnetic fields. periods of time.

### Do not store your device near or in heaters, microwaves, hot cooking equipment, or high pressure containers

- The battery may leak.
- · Your device may overheat and cause a fire

### Do not drop your device or cause impacts to your device · The screen of your device may be damaged.

- If bent or deformed, your device may be damaged or parts may Do not use your device or applications for a while if the device is
- Prolonged exposure of your skin to an overheated device may cause low temperature burn symptoms, such as red spots and pigmentation

If your device has a camera flash or light, do not use a flash close to the eyes of people or pets

Using a flash close to the eyes may cause temporary loss of vision or damage to the eyes.

### Use caution when exposed to flashing lights

- While using your device, leave some lights on in the room and do not hold the screen too close to your eyes. Seizures or blackouts can occur when you are exposed to flashing
- lights while watching videos or playing Flash-based games for extended periods. If you feel any discomfort, stop using the device

# Internal antenna

### Protect your hearing and ears when using a headset



- Excessive exposure to loud sounds can cause hearing damage.
- Exposure to loud sounds while walking may distract your attention and cause an accident.

  Always turn the volume down before plugging the
- earphones into an audio source and use only the minimum volume setting necessary to hear your
- conversation or music.

  In dry environments, static electricity can build up in the headset. Avoid using headsets in dry environments or touch a metal object to discl static electricity before connecting a headset to the

may be illegal depending on your region

· Do not use a headset while driving or riding. Doing so may distract your attention and cause an accident, or

### Use caution when using the device while walking or moving

Always be aware of your surroundings to avoid injury to yourself or Do not carry your device in your back pockets or around your waist

### You can be injured or damage the device if you fall. Do not disassemble, modify, or repair your device

- Any changes or modifications to your device can void your manufacturer's warranty. For service, take your device to a Samsung Service Centre.
- · Do not disassemble or puncture the battery, as this can cause explosion or fire.

### Do not paint or put stickers on your device Paint and stickers can clog moving parts and prevent proper operation.

If you are allergic to paint or metal parts of the product, you may experience itching, eczema, or swelling of the skin. When this happens stop using the product and consult your physician

### When cleaning your device:

- Wipe your device or charger with a towel or an eraser.
   Clean the terminals of the battery with a cotton ball or a towel.
- · Do not use chemicals or detergents.

Do not use the device if the screen is cracked or broken Broken glass or acrylic could cause injury to your hands and face. Take the device to a Samsung Service Centre to have it repaired.

Do not use the device for anything other than its intended use

Avoid disturbing others when using the device in public

Do not allow children to use your device Your device is not a toy. Do not allow children to play with it as they could hurt themselves and others, damage the device, or make calls

your vehicle are securely mounted.

that increase your charges Install mobile devices and equipment with caution Ensure that any mobile devices or related equipment installed in

Avoid placing your device and accessories near or in an air bag

### deployment area. Improperly installed wireless equipment can cause rious injury when air bags inflate rapidly.

Allow only qualified personnel to service your device Allowing unqualified personnel to service your device may result in damage to your device and will void your manufacturer's warranty.

### Handle SIM cards or memory cards with care

- Do not remove a card while the device is transferring or accessing information, as this could result in loss of data and/or damage to the card or device.
- · Protect cards from strong shocks, static electricity, and electrical noise from other devices.

  Do not touch gold-coloured contacts or terminals with your fingers or
- metal objects. If dirty, wipe the card with a soft cloth

### Ensure access to emergency services

Emergency calls from your device may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternative method of contacting emergency services

### Keep your personal and important data safe

- · While using your device, be sure to back up important data
- Samsung is not responsible for data loss.

   When disposing of your device, back up all data and then reset your device to prevent misuse of your personal information
- Carefully read the permissions screen when downloading applications. Be particularly cautious with applications that have access to many functions or to a significant amount of your personal Check your accounts regularly for unauthorised or suspicious use
- If you find any sign of misuse of your personal information, contact your service provider to delete or change your account information
- In the event your device is lost or stolen, change the passwords on your accounts to protect your personal information.
   Avoid using applications from unknown sources and lock your device with a pattern, password, or PIN.

### Do not distribute copyright-protected material

Do not distribute copyright-protected material that you have recorded to others without the permission of the content owners. Doing this may violate copyright laws. The manufacturer is not liable for any legal issues caused by the user's illegal use of copyrighted material.

### Specific Absorption Rate (SAR) certification information

### THIS DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves (radio frequency electromagnetic fields) recommended by international guidelines. The guidelines were developed by an independent scientific organisation (ICNIRP) and include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The radio wave exposure guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2.0 W/kg.

Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The highest SAR values under the ICNIRP guidelines for this device model are:

Maximum SAR for this model and conditions under which it was recorded				
Head SAR	0.457 W/kg			
Body-worn SAR	0.426 W/kg			

During use, the actual SAR values for this device are usually well below the values stated above. This is because, for purposes of system efficiency and to minimise interference on the network, the operating power of your mobile device is automatically decreased when full p ded for the call. The lower the power output of the device, the wer its SAR valu A body-worn SAR test has been performed on this device with an approved accessory or at a separation distance of 1.5 cm. To meet RF exposure guidelines during body-worn operation, the device must be used with the approved accessory or positioned at least 1.5 cm away from the body. If you use an unapproved accessory, ensure that the

Organisations such as the World Health Organisation and the US Food and Drug Administration have suggested that if people are concerned and want to reduce their exposure, they could use a hands-free accessory to keep the wireless device away from the head and body during use, or reduce the amount of time spent using the device. For more information, visit www.samsung.com/sar and search for you device with the model number

accessory does not contain any metal components and that it positions

the device at least 1.5 cm away from the body.

### Correct disposal of this product (Waste Electrical & Electronic Equipment)



(Applicable in the European Union and other European countries with separate collection systems) This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and

how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic

accessories should not be mixed with other com This EEE is compliant with RoHS.


### Correct disposal of batteries in this product



(Applicable in the European Union and other European countries with separate battery return systems) This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life

Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environmen To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

### Phone layout

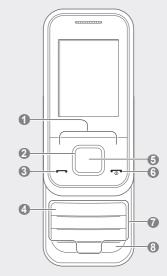

### Softkeys Perform actions indicated at the bottom of the display



Scroll through menu options; In Idle mode access user-defined menus (left/right/up/down); Make a fake call (down) Depending on your service provider, the default home screen or pre-defined menus

may differ See "Make fake calls"



Make or answer a call; In Idle mode, retrieve recently dialled, missed, or received numbers



Alphanumeric key

(press and hold)

 
**C € 0168** 



Confirm key Select the highlighted menu option or confirm an input; In Idle mode, access Menu

Depending on your service provider or region, the key may perform differently

In Menu mode, cancel input



mode

and return to Idle mode



Silent profile key In Idle mode, activate or deactivate the silent profile

uie top	or the screen.			
Icon	Description		Icon	Description
Tail	Signal strength		<u></u>	Synchronised
6	GPRS network connected	m2 m	with PC	
		$\approx$	New text message (SMS)	
6	Call in progress			,
¢	Call diverting activated		Pá	New multimedia message (MMS)
0	SOS message feature activated		=	New voice mail
		_	message	
¥	Alarm activated	-	₽	Memory card inserted
ۈ	Connecting to secured web page		4	Normal profile activated
B	Roaming (outside of normal service area)	54	Silent profile	
			14	activated
**	Bluetooth		{IIIII	Battery power level
ń	FM radio on			
ಕಾ	FM radio			
0.0	suspended			

### Install the SIM card and battery

1. Remove the back cover and insert the SIM card.



2. Insert the battery and replace the back cover.



### Charge the battery

1. Plug the supplied travel



2. When charging is finished, unplug the travel adapter

# the phone

- · Do not remove the battery before removing the travel adapter. Doing this may cause damage to
- · To save energy, unplug the travel adapter when not in use. The travel adapter does not have a power switch, so you must unplug the travel adapter from the electrical socket when not in use to avoid wasting power. The device should remain close to the electrical socket while charging.

### Insert a memory card (optional)

Your phone accepts microSD™ or microSDHC™ memory cards up to 8 GB (depending on memory card manufacturer and type).



Formatting the memory card on a PC may cause incompatibility with your phone. Format the memory card only on the phone.

- 1. Remove the back cover.
- 2. Insert a memory card with the gold-coloured contacts facing down.



- 3. Push the memory card in the memory card slot until it locks in place
- 4. Replace the back cover

### Instructional icons



Note: notes, usage tips, or additional information

Followed by: the order of options or menus you must select to perform a step; for example: In Menu mode, select Messages → Create message (represents Messages, followed by Create message)



Square brackets: phone keys: for example: [ 🐨 ] (represents the Power/End key)



Angled brackets: softkeys that control different functions at each screen: for example: **OK**> (represents the **OK** softkey)

### Turn your phone on or off

To turn your phone on,

- 1. Press and hold [ ]
- 2. Enter your PIN and press < OK > (if necessary).
- 3. When the setup wizard opens, customise your phone as desired by following the screen.



If you remove the battery, the time and date will be

To turn your phone off, repeat step 1 above.

### Access menus

To access your phone's menus.

- 1. In Idle mode, press < Menu > to access Menu mode.

You may need to press the Confirm key to access Menu mode depending on your region or service provider. When you are using the smart home screen, you cannot use the Confirm key to access

- 2. Use the Navigation key to scroll to a menu or
- 3. Press < Select > or the Confirm key to confirm the highlighted option.
- 4. Press <Back> to move up one level; Press [ ] to return to Idle mode.



- When you access a menu requiring the PIN2, you must enter the PIN2 supplied with the SIM card For details, contact your service provider.
- · Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.

### Make a call

- 1. In Idle mode, enter an area code and a phone number.
- 2. Press [ ] to dial the number.
- 3. To end the call, press [ ].

### Answer a call

- 1. When a call comes in, press [-].
- 2. To end the call, press [ ].

### Adjust the volume

### To adjust the volume of the ringtone

- 1. In Menu mode, select **Settings** → **Sound profiles**.
- 2. Scroll to the profile you are using.

If you are using the silent or offline profile, you are not allowed to adjust the volume of the ringtone.

- 3. Press < Edit> → Volume
- 4. Scroll to Call alert.
- 5. Scroll left or right to adjust the volume level and press <Save>

### To adjust the volume of voice during a call

While a call is in progress, press the Navigation key up or down to adjust the volume.



In noisy environments, you may have difficulty hearing the calls while using the speakerphone feature. For better audio performance, use the normal phone mode

### Change your ringtone

- 1. In Menu mode, select **Settings** → **Sound profiles**.
- 2. Scroll to the profile you are using.



If you are using the silent or offline profile, you are not allowed to change the ringtone

- 3. Press <Edit> → Voice call ringtone.
- 4. Select a memory location (if necessary).
- 5. Select a ringtone

To switch to another profile, select it from the list.

### Call a recently dialled number

- 1. In Idle mode, press [-].
- 2. Scroll left or right to a call type.
- 3. Scroll up or down to a number or name.
- 4. Press the Confirm key to view details of the call or [ ] to dial the number

### Use the smart home screen

The smart home screen allows you to access your favourite applications and contacts and view upcoming events or tasks. You can customise the smart home screen to fit your preferences and needs.



When you are using the smart home screen, the Navigation key does not work as shortcuts

### To customise the smart home screen

- 1. In Menu mode, select Settings  $\rightarrow$  Display  $\rightarrow$  Smart home
- 2 Press < Edit>
- 3. Select the items to display on the smart home screen
- 4. Press < Options >  $\rightarrow$  Save.
- 5. Press the Confirm key.



You can change the idle screen to another style. In Menu mode, select Settings  $\rightarrow$  Display  $\rightarrow$  Smart home and scroll left or right to a style you want.

### To access the smart home items

Press the Navigation key to scroll through the items on the smart home screen and press the Confirm key to select an item.



Available items may vary depending on your service provider.

### To customise the shortcuts toolbar

- In Menu mode, select Settings → Display → Smart home
- 2. Press < Edit>.
- 3. Scroll to Shortcuts toolbar and press < Options > → Edit shortcuts.
- 4. Select a menu to change or an empty location
- 5. Select the menus you want. Press the Navigation key right to select submenus (if necessary).
- 6. Press <Save>.

### **Enter text**

### To change the text input mode

- · Press and hold [#] to switch between T9 and ABC modes. Depending on your region, you may be able to access an input mode for your specific language.
- · Press [#] to change case or switch to Number mode.
- Press [\*) to switch to Symbol mode.
- Press and hold [\*] to select an input method or change the input language.

### T9 mode

- Press appropriate alphanumeric keys to enter an
- 2. When the word displays correctly, press [0] to insert a space. If the correct word does not display, select an alternate word from the list that appears

 
Press an appropriate alphanumeric key until the character you want appears on the display.

Press an appropriate alphanumeric key to enter a

symbol.



- To move the cursor, press the Navigation key.
- To delete characters one by one, press <Clear>. To delete characters quickly, press and hold <Clear>.
- · To insert a space between characters, press [0].



The memory location to save new contacts may be preset depending on your service provider. To change the memory location, in Menu mode, select Contacts → <Options> → Settings → Save new contact to  $\rightarrow$  a memory location.

- 1. In Idle mode, enter a phone number and press the Confirm key
- 2. Select Create contact  $\rightarrow$  a memory location (if necessary).
- 3. Select a number type. 4. Enter contact information.
- 5. Press the Confirm key or press Save to add the contact to memory.
- Send and view messages To send a text or multimedia message
- 1. In Menu mode, select  $Messages \rightarrow Create$ message 2. Enter a recipient number and scroll down. 3. Enter your message text. See "Enter text."
- For sending as a text message, skip to step 5 For attaching multimedia, continue with step 4. 4. Press <Options> → Add multimedia and add
- 5. Press the Confirm key to send the message

### To view text or multimedia messages

- In Menu mode, select Messages → Inbox.
- 2. Select a text or multimedia message.

You can simulate an incoming call when you want to get out of meetings or unwanted conversation

### To activate the fake call feature

Make fake calls

To make a fake call

### In Menu mode, select Settings o Call o Fake call oFake call hot key → On.

- In Idle mode, press and hold the Navigation key down.
- When the phone is closed and keys are locked, press the Navigation key down four times

When someone inserts a new SIM card in your phone, the mobile tracker feature will automatically send the contact number to two recipients to help you locate and

- recover your phone. To activate the mobile tracker. 1. In Menu mode, select Settings  $\rightarrow$  Security  $\rightarrow$
- 2. Enter your password and press < OK >.
- The first time you access Mobile tracker, you will be prompted to create and confirm a password
- 5. Press < Options> → Contacts to open your contact You can also enter phone numbers including a
- 7. Select a number (if necessary).
- 8. When you are finished selecting contacts, press <Add>
- 10. Scroll down and enter the sender's name.

### Activate the mobile tracker

- Mobile tracker.
- 4. Scroll down and press the Confirm key to open the
  - step 8
- 6. Select a contact.
- 9. Press the Confirm key to save the recipients

- 3. Press the Confirm key to turn on the mobile tracker
- recipient list.
- country code (with +) in the recipient list. Skip to

- 11. Press the Confirm key → < Accept>.

# Activate and send an SOS message

In an emergency, you can send SOS messages to your

### To activate the SOS message

- In Menu mode, select  $Messages \rightarrow Settings \rightarrow$  $\textbf{SOS messages} \rightarrow \textbf{Sending options}.$
- 2. Press the Confirm key to turn on the SOS message 3. Scroll down and press the Confirm key to open the recipient list.

4. Press < Options > → Search to open your contact

- list
- 5. Select a contact. 6. Select a number (if necessary).
- When you are finished selecting contacts, press the Confirm key to save the recipients.
- 8. Scroll down and set the number of times to repeat the SOS message
- 9. Press <Back> → <Yes>

### To send an SOS message

- 1. With the phone closed, press [ ] four times to send an SOS message to preset numbers. The phone switches to SOS mode and sends the preset SOS message.
- 2. To exit SOS mode, press [ ].

### Number mode

Symbol mode Press an appropriate alphanumeric key to enter a



- To change line, press [0] three times • To enter punctuation marks, press [1].

SAMSUNG ELECTRONICS

**Declaration of Conformity** 

Product details

# **C € 0168**

Declaration & Applicable standards We hereby declare, that the product above is in compliance with the essential

SAFFTY EN 60950-1 : 2006 + A12 : 2011 EN 50360 : 2001 / AC 2006 EN 62479 : 2010 EN 62311 : 2008 EN 301 489-01 V1.9.2 (09-2011) EN 301 489-07 V1.3.1 (11-2005) EN 301 489-17 V2.1.1 (05-2009)

EN 301 511 V9.0.2 (03-2003) EN 300 328 V1.7.1 (10-2006) and the Directive (2011/65/EU) on the restriction of the use of certain haz substances in electrical and electronic equipment.

ts of the R&TTE Directive (1999/5/EC) by application o

The conformity assessment procedure referred to in Article 10 and detailed in Annex[IV] of Directive 1999/5/EC has been followed with the involvement of the following Notified TÜV SÜD BABT, Forsyth House, Churchfield Road, Walton-on-Thames

Representative in the EU

Samsung Electronics Euro QA Lab Blackbushe Business Park, Saxon rateley, Hampshire, GU46 6GG, UK 2012.12.04

(Place and date of issue)

(Name and signature of authorised pers

not the address of Samsung Service Centre. For the address or the phone number of isung Service Centre, see the warranty card or contact the retailer where you purchase