

Copyright © Huawei Technologies Co., Ltd. 2012. All rights reserved.

## Trademarks and Permissions



**HUAWEI**, **HUAWEI**, and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

The *Bluetooth*<sup>®</sup> word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Huawei Technologies Co., Ltd. is under license.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

## NO WARRANTY

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

# Contents

<b>1 Getting to Know Your Phone .....</b>	<b>1</b>
Your Phone .....	1
Keys and Functions .....	2
Indicator Light .....	4
Screen Icons .....	4
<b>2 Getting Started .....</b>	<b>6</b>
Installing the SIM Card and Battery .....	6
Removing the Battery and SIM Card .....	6
Installing and Removing a microSD Card .....	7
Charging the Battery .....	7
Phone Lock .....	8
PIN and PUK .....	9
Locking and Unlocking the Keypad .....	9
Entertainment .....	10
<b>3 Voice Services .....</b>	<b>11</b>
Making a Call .....	11
Answering a Call .....	11
<b>4 Text Input .....</b>	<b>12</b>
Changing the Text Input Mode .....	12
Entering a Word .....	13
Entering a Digit .....	14
Entering a Symbol .....	14
<b>5 File Manager .....</b>	<b>14</b>
<b>6 Phonebook .....</b>	<b>15</b>
Creating a Contact .....	15

Searching for a Contact .....	15
Setting a Speed Dial Number .....	16
<b>7 Games.....</b>	<b>16</b>
<b>8 Messaging .....</b>	<b>16</b>
<b>9 Multimedia .....</b>	<b>17</b>
Camcorder .....	17
Image Viewer.....	18
Video Player .....	19
Audio Player.....	20
Sound Recorder.....	20
FM Radio (optional) .....	21
<b>10 Organizer.....</b>	<b>22</b>
Ebook Reader.....	22
Calculator .....	23
Calendar .....	23
Tasks .....	23
Alarm.....	23
World Clock .....	23
Flashlight .....	24
<b>11 Settings .....</b>	<b>24</b>
Phone Settings .....	24
Security Settings.....	25
<b>12 Connectivity.....</b>	<b>25</b>
Bluetooth (optional) .....	25
Internet Services .....	26

13 Profiles .....	27
14 Chat Function .....	27
15 Warnings and Precautions.....	28

 


Features marked with "optional" are optional. These features may vary according to service providers. For details, contact your service provider.

# 1 Getting to Know Your Phone

## Your Phone

The following figure shows the appearance of your phone.

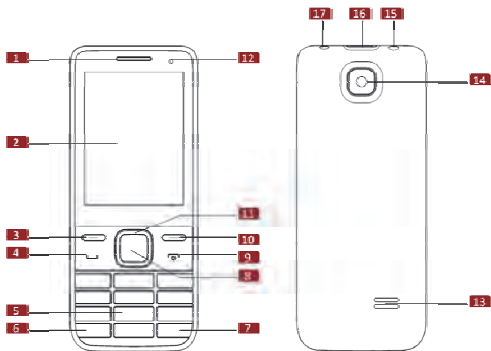











- 1 Earpiece
- 2 Screen
- 3 Left soft key


- 10 Right soft key
- 11 Navigation keys
- 12 Indicator light

4	Call/Answer key	13	Speaker
5	Number keys	14	Camera
6	* key	15	Headset jack
			Charger jack/micro
7	# key	16	Universal serial bus (USB) port
8	Confirm key	17	Flashlight
9	End/Power key		

## Keys and Functions

Press...	To...
	<ul style="list-style-type: none"> <li>• Make a call.</li> <li>• Answer a call.</li> <li>• View call logs in standby mode.</li> </ul>
	<ul style="list-style-type: none"> <li>• Power the phone on or off (press and hold the key for about 3 seconds).</li> <li>• End or reject a call.</li> <li>• Return to standby mode.</li> <li>• Turn the screen on or off in standby mode.</li> </ul>
 (Left soft key)	<ul style="list-style-type: none"> <li>• Select the option displayed in the lower left corner of the screen.</li> <li>• Unlock the keypad (must also press the right soft key immediately after).</li> </ul>
 (Right soft key)	Select the option displayed in the lower right corner of the screen.
	Confirm a selection.



Press...	To...
	<ul style="list-style-type: none"> <li>• Scroll through submenus on a menu screen or options on an option screen.</li> <li>• Scroll through the widgets (press  on the home screen.</li> <li>• Access the functions assigned to the navigation keys (press  in standby mode).</li> </ul> <p><b>NOTE</b></p> <p>To assign a function to a navigation key, select <b>Menu &gt; Settings &gt; Phone settings &gt; Shortcuts &gt; Dedicated key</b>.</p>
	<ul style="list-style-type: none"> <li>• Enter numbers, letters, and symbols.</li> <li>• Call voicemail in standby mode (press and hold the <b>1</b> key for about 3 seconds).</li> <li>• Speed dial phone numbers in standby mode (set a number key from 2 to 9 as a speed dial key first and press and hold it for about 3 seconds.)</li> <li>• Select an option labeled with the corresponding number.</li> <li>• Turn the flashlight on or off in standby mode (press and hold the <b>0</b> key for about 3 seconds).</li> </ul>
	<ul style="list-style-type: none"> <li>• Enter <b>*</b> (press the key once), <b>+</b> (press the key twice), <b>p</b> (press the key three times), or <b>w</b> (press the key four times) in standby mode.</li> <li>• Display the symbol list in editing mode.</li> <li>• Switch between the <b>Meeting</b> profile and current profile in standby mode (press and hold the key for about 3 seconds).</li> </ul>

Press...	To...
	<ul style="list-style-type: none"> <li>• Enter #.</li> <li>• Switch between text input modes in editing mode.</li> <li>• Lock the keypad in standby mode (press and hold the key for about 3 seconds).</li> </ul>















## Indicator Light

Color	Status	Indicates...
Red	Steady	The battery is charging and the battery level is low.
	Blinking	The battery level is low.
Orange	Steady	The battery is charging and the battery level is between 15% and 90%.
Green	Steady	The battery is charging and nearly full or is already full.
	Blinking	You have missed calls, unread messages (SMS, MMS, email, voice mail, and SNS), missed alarms, or calendar reminders.

## Screen Icons

Icon	Indicates...
	Signal strength.
	Battery level.

 


Icon	Indicates...
	New text messages.
	New multimedia messages.
	Call divert enabled.
	Headset connected.
 (optional)	Bluetooth turned on.
	Missed calls.
	Alarms enabled.
	Keypad locked.
	<b>Ring only</b> enabled.
	<b>Vib. only</b> enabled.
	<b>Vib. and ring</b> enabled.
	<b>Vib. then ring</b> enabled.
	<b>Silent</b> profile activated.
	microSD card inserted.

## 2 Getting Started

 
### Installing the SIM Card and Battery

When installing the subscriber identification module (SIM) card, ensure that the gold contact area faces down, and that the beveled edge of the SIM card aligns with that of the SIM card slot.

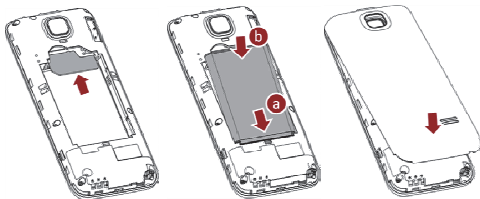

### Removing the Battery and SIM Card

Before removing the battery and SIM card, ensure that your phone is powered off.

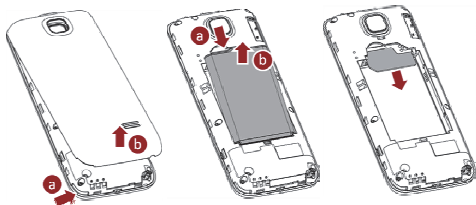

## Installing and Removing a microSD Card



Before installing or removing a microSD card, power the phone off.

You can expand your phone's memory capacity by installing a microSD card with a capacity of up to 8 GB.

When installing a microSD card, ensure that the gold contact area faces down, and that the beveled edge of the microSD card aligns with that of the microSD card slot.



## Charging the Battery

1. Connect the small end of the USB cable to the phone's charger jack and the large end to the charger.



2. Connect the charger to a power outlet.
3. Wait until the battery is fully charged.  
While the battery is charging, the charging icon blinks. When the charging icon stops blinking, the battery is fully charged.
4. Unplug the charger from the power outlet and the USB cable from the phone.

## Phone Lock

The phone lock protects your phone from unauthorized use. The preset password to unlock your phone is **1234**. By default, the phone lock is disabled. Once you enable the phone lock, you must enter the password each time you power on the phone.

To enable the phone lock:

1. In standby mode, select **Menu > Settings > Security settings > Phone security > Phone lock**.
2. Enter the preset password.

To change the preset password:

1. In standby mode, select **Menu > Settings > Security settings > Phone security > Change password**.
2. Enter the preset password.

3. Enter a new password.  
The password must be a numeric string between four and eight digits.
  4. Enter the new password again to confirm it.
- If you forget the password, contact your service provider.

## PIN and PUK



The personal identification number (PIN) protects your SIM card from unauthorized use.

If you incorrectly enter the PIN a specified number of times, the PIN is blocked and the phone prompts you to enter the PIN unblocking key (PUK). If this occurs, enter the PUK to unblock the blocked PIN.

If you incorrectly enter the PUK a specified number of times, the SIM card will become permanently invalid, and you must contact your service provider for a new SIM card.

Both the PIN and the PUK are provided with the SIM card. For details, contact your service provider.

To enable the PIN lock:





1. In standby mode, select **Menu > Settings > Security settings > SIM security > PIN lock**.
2. Enter the PIN, and press <sub>1</sub> (OK) or .

## Locking and Unlocking the Keypad

To lock the keypad, press and hold  for 3 seconds in standby mode. To unlock the keypad, press <sub>1</sub> (Unlock), then <sub>2</sub> (OK).

If the **Auto keypad lock** function is enabled, the phone will automatically lock the keypad after being idle in standby mode for a pre-defined period.



When the keypad is locked, you can press  to answer a call, as well as  (Options) or , and then **Answer**. You can also press  to make an emergency call.

## Entertainment

In addition to being a communication device, your phone also serves as an entertainment center by providing you with the following applications:

- **Games:** play games.
- **Camcorder:** take pictures or record videos.
- **Image viewer:** view pictures stored in the phone memory or microSD card.
- **Video player:** play video files stored in the phone memory or microSD card.
- **Audio player:** play audio files stored in the phone memory or microSD card.
- **Sound recorder:** record audio clips.
- **FM radio:** listen to radio programs over the FM frequency.
- **Ebook reader:** read ebooks stored in the phone memory or microSD card.
- **AppStore:** browse through and download applications.
- **FaceBook:** connect with family and friends.

## 3 Voice Services

### Making a Call

1. In standby mode, enter a phone number.
  - To make an international call, press twice to enter the plus sign (+). Then enter the country or region code, area code, and phone number.
  - To call an extension number, enter the switchboard number, press three times to enter p, and enter the extension number.
2. Press or to call the number.
3. Press to end the call.




 





- You can also make calls from the call history, phonebook, or messages.
- During a call, you can use to adjust the in-call volume. You can also press (Options) and select **Volume**, and then press .

### Answering a Call

When there is an incoming call:


- Press to answer the call.
- Press (Options) or , and select **Answer** to answer the call.

- Press  **(Silent)** to mute the ringtone, and press  **(Reject)** or  to reject the call.
- If the **Silent** profile is activated, press  **(Reject)** or  to reject the call.

If the **Any key** answer function is enabled, you can press any key except  and  to answer a call.

## 4 Text Input




 



### Changing the Text Input Mode

The current text input mode indicator is displayed in the upper left corner of the screen. Press  to switch between text input modes.






Indicator	Text Input Mode
ABC, abc, ES, and es	Multi-tap input modes
S ABC and S abc	Predictive input modes
123	Number input mode






- In any text input mode, press  **(Clear)** to delete the last character entered, or press and hold  **(Clear)** for about 3 seconds to delete all the characters entered.
- In multi-tap input mode, repeatedly press  to select and enter commonly used symbols, and press  once to enter a space and twice to enter **0**.
- In predictive input mode, press  to display commonly used symbols, and press  to enter a space.
- In any text input mode, press  to access the symbol list.





## Entering a Word

- To enter a word in multi-tap input mode, repeatedly press the key labeled with each letter in the word until the desired letter is displayed on the screen. Then repeat this process until the full word is displayed.
- To enter a word in predictive input mode:
  1. Press each key once according to the spelling sequence of the desired word.  
The phone displays candidate words that may be spelt by the keystroke sequence.
  2. Use  to scroll to the desired word, and press   to turn pages.
  3. Press  **(Select)** or  to enter the word.

## Entering a Digit

- In number input mode, press the number key labeled with the desired digit.
- In multi-tap input mode, repeatedly press the number key labeled with the desired digit until it is displayed. You can also press and hold the number key labeled with the desired digit until it is displayed.
- In predictive input mode, press the number key labeled with the desired digit once, and press  to scroll to the desired digit.




## Entering a Symbol




1. Press  to display the symbol list.
2. Use  to scroll to the desired symbol.
3. Press  (OK) or  to enter the symbol.

# 5 File Manager

The **File manager** application lets you manage files and folders stored in the phone memory or microSD card.




To manage files and folders:

1. Select **Menu > File manager**.
2. Use  to scroll to the desired folder, and press  to open the folder, or press  (Options) for the following options:
  - **Open**: open the folder.
  - **New folder**: create a folder.

- **Rename:** rename the folder.
  - **Delete:** delete the folder.
  - **Sort by:** sort folders by name, type, time modified, or size.
3. Use  to scroll to the desired file, and press  to open the file or press  **(Options)** for additional operations. The operations applicable to files may be different from those applicable to folders.

## 6 Phonebook

### Creating a Contact

1. In standby mode, select **Menu > Phonebook > Add new contact**.
2. Press  and select **To SIM** or **To Phone** to select the location that you want to use to save the contact.
3. Enter the name and phone number of the contact.
4. Press  or  **(Options)** and select **Save** to save the contact.




- To choose a different storage location, select **Menu > Phonebook > Options > Phonebook settings > Preferred storage** and select **Both**.
- You can edit **Email address**, **Caller picture**, and **Caller ringtone** only when you save contacts to the phone memory.

### Searching for a Contact

1. In standby mode, select **Menu > Phonebook**.
2. Enter the first letter of the contact name.

3. Use  to scroll to the desired contact.

## Setting a Speed Dial Number


1. In standby mode, select **Menu > Phonebook**.
2. Press  (Options), and select **Phonebook settings > Speed dial > Status > On**.
3. Select **Set numbers**, and set one of the 2–9 keys as a speed dial key.
4. Enter the number that you want to assign to the speed dial key. In standby mode, you can press and hold the speed dial key to speed-dial the number.



## 7 Games

This phone comes with three built-in games. Select **Menu > Games** to select a game.

## 8 Messaging

To send a message:

1. In standby mode, select **Menu > Messaging > Write message**.
2. Write the message.  
You can also add pictures, audio files, video files, or other attachments to the message and send it as a multimedia message.
3. Enter a recipient's phone number or press  (Options), and select **Add recipient** to add a recipient from **Phonebook**. Repeat this step to add more recipients.

4. Press  **1 (Options)**, and select **Send** to send the message. You can also press  **1 (Options)** to select **Input method**, **Smart input method**, **New Cstar word**, and others.







- Contact your service provider to determine the availability of the Multimedia Messaging Service (MMS) and how to subscribe to the service.
- Open multimedia messages with caution. Objects in multimedia messages may contain viruses and malicious software that can damage your phone.

## 9 Multimedia

### Camcorder




 





#### Camera

1. In standby mode, select **Menu > Multimedia > Camcorder**.
2. Press  **1** to view the photo album or configure the camera settings.
3. Frame the picture you want to take on the viewfinder screen, and press  to take the picture.
4. After taking the picture:
  - Press  **1**, and select **Forward** to send the picture or **Delete** to delete the picture.
  - Press  **2** to exit the camera.




All the pictures are stored in **Photos** on your phone or microSD card depending on which storage you have set as the preferred storage for pictures. You can select **Menu > File manager > Phone/Memory card > Photos** to access these pictures and perform operations, such as **Rename** and **Delete**, on them.

## Video Recorder

1. In standby mode, select **Menu > Multimedia > Camcorder**.
2. Press  to switch to video recorder or press <sub>1</sub> and select **Switch to > Video recorder**.  
Press  to switch to camera or press <sub>1</sub> and select **Switch to > Camera**.
3. Press <sub>1</sub> to view the video player and configure video settings.
4. Frame the scene you want to take on the viewfinder screen, and press  to begin recording the video.
5. When recording the video:
  - Press <sub>1</sub> or  to pause or continue.
  - Press <sub>2</sub> to stop recording.






After recording the video, press <sub>1</sub> to play or delete it. You can also send it via a multimedia message (video file cannot exceed 300 KB) or Bluetooth.

## Image Viewer

The **Image viewer** application lets you manage your pictures.  
To manage pictures:



1. Select **Menu > Multimedia > Image viewer**.

2. Use  to scroll to the desired picture, and press  to view the picture or press  (Options) for the following options:

- **View:** view the picture.
- **Image information:** display detailed information about the picture.
- **Browse style:** browse the picture in list or matrix style.
- **Send:** send the picture to other devices via multimedia message or Bluetooth.
- **Use as:** use the picture as wallpaper, screen saver, or contact picture.
- **Rename:** rename the picture.
- **Delete:** delete the picture.
- **Sort by:** sort pictures by name, type, time modified, or size.
- **Mark several:** select and mark one or more pictures to delete, copy, move or send.
- **Delete all files:** delete all pictures.
- **Storage:** view pictures stored in the phone memory or microSD card.





## Video Player



1. In standby mode, select **Menu > Multimedia > Video player**.

2. Use   to scroll to a video file.

3. Select **Options > Play**.

While playing the video file:






- Use   to adjust the volume.
- Use  to rewind or fast-forward.
- Press  to pause or continue.

- Press  **1** to switch between the full and standard screens.
- 4. Press  **2** (**Stop**) to stop playing the video file.



All the video files are stored in **Videos** on your phone or microSD card depending on which storage you have set as the preferred storage for video files. You can select **Menu > File manager > Phone/Memory card > Videos** to access these video files and perform operations, such as **Rename** and **Delete** on them.

## Audio Player

1. In standby mode, select **Menu > Multimedia > Audio player**.
2. Press  **1** (**List**), and select a music file.
3. Select **Options > Play**.  
While playing the music file:
  - Use  to adjust the volume.
  - Press  to skip to the previous or next music file, or press and hold  to rewind or fast-forward through the music file.
  - Press  to pause or continue.



All the music files are stored in **My Music** on your phone or microSD card depending on which storage you have set as the preferred storage for music files. You can select **Menu > File manager > Phone/Memory card > My Music** to access these music files and perform operations, such as **Rename** and **Delete** on them.



## Sound Recorder

The **Sound recorder** application lets you record audio.




To record audio:

1. Select **Menu > Multimedia > Sound recorder**.

2. Press  **1 (Options)** and select **New record**, or press  to start recording.


While recording, you can press  or  **1 (Pause/Continue)** to pause or continue.

3. Press  **2 (Stop)** to stop recording and save the recorded audio.

To play the recording:

1. Press  to play the audio.

When playing the audio, press  or  to adjust the volume.

2. Press  **1 (Options)** for additional operations.

## FM Radio (optional)




The headset cable also functions as the FM radio antenna when the radio is turned on. To ensure good radio reception, do not disconnect the headset from the phone or severely bend the headset cable.


To listen to the radio:


 
 
1. Connect a compatible headset to the phone.
2. In standby mode, select **Menu > Multimedia > FM radio**.

 


When the FM radio is turned on, the phone plays the program on the current channel.

3. On the **FM radio** screen:

- Press  **1 (Options)**, and select **Auto search** to automatically search for and save channels.
- Use   to adjust the volume.

- Press  **1 (Options)** and select **Record** to record the current program.


When recording, press  or  **1 (Pause/Continue)** to pause or continue recording. Press  **2 (Stop)** to stop recording, edit the filename, and choose whether to save it.


- Press  **1 (Options)** and select **Settings** to configure settings such as **Background play**, **Audio quality** and **Record storage**.
4. Press  to pause or stop FM radio, and press  **2 (Back)** to exit the application.

## 10 Organizer






### Ebook Reader

1. In standby mode, select **Menu > Organizer > Ebook reader** to display the bookshelf.  
The phone automatically adds the ebooks stored in the default storage location (phone or microSD card) to the bookshelf.
2. Select an ebook.

3. Press  to open the ebook.

While reading the ebook, press  **1 (Options)** for options such as **Full screen on/off**, **Find**, **Jump to**, **Add bookmark**, **Go to bookmark**, **Delete bookmark**, **Auto scroll on/off** and **Close**.

4. Press  **2 (Back)** to close the ebook.

 When reading an ebook, use   to turn pages, and use   to change lines.

## Calculator





The **Calculator** application lets you perform a variety of mathematical operations. The accuracy of certain decimals is limited, and the calculator can only be used for simple calculations.

## Calendar

The **Calendar** application lets you view dates, edit schedules, and set alerts. If you create a memo in the schedule for a particular date, that date will be highlighted. To view all memos for a day, press



to select the date. Press  (Options) for the following options:

- **View:** check memos for that specified day.
- **View all:** check all memos.
- **Add event:** enter **Type**, **Start**, **End**, **Subject**, **Alarm**, **Repeat**, **Location**, and **Details**. Press  or  (Select/Edit) to edit, or press  (Save) or  to save and exit.
- **Delete event:** clear memos in **All**, **Overdue**, or **Specific period**.
- **Jump to date:** enter and jump to a date.
- **Go to today:** go to today.
- **Go to weekly view:** display a weekly view of the calendar.

## Tasks

The **Tasks** application lets you record important events.

## Alarm

The **Alarm** application lets you set alarms to ring at specified times.




## World Clock

The **World clock** application lets you look up the local times of cities

around the world with respect to their time zones. Use  to view different time zones. Press  or  (Options) to select **Daylight saving time for foreign city**.

## Flashlight

The **Flashlight** application lets you shine a bright light.

- In standby mode, select **Menu > Organizer > Flashlight**, press  or  (OK) to turn the flashlight on or off.
- In standby mode, press and hold  to turn the flashlight on or off.

# 11 Settings

## Phone Settings

Select **Menu > Settings > Phone settings**.





Configure the following settings:

- **Time and date**: set the home city, time, date, format, and time zone.
- **Schedule power on/off**: set the time at which the phone will power on or off automatically.
- **Language**: set the display language.
- **Pref. input method**: set the preferred input method.
- **Display**: set the wallpaper, screen saver, time, date, and LCD backlight.
- **Themes**: set the phone's theme.
- **Shortcuts**: set the shortcuts style, menu, and dedicated key.
- **Auto update time**: set whether to turn auto update time on.

## Security Settings

### Changing PIN





To change the PIN, enable **PIN lock** first, and do the following:

1. Select **Menu > Settings > Security settings > SIM security > Change PIN**.
2. Enter the PIN, and press  or <sub>1</sub> (OK).
3. Enter a new PIN, and press  or <sub>1</sub> (OK).
4. Re-enter the new PIN to confirm.

### Changing PIN2

PIN2 is the personal identification number used for special functions provided by the network, such as billing.



To change PIN2, do the following:

1. Select **Menu > Settings > Security settings > SIM security > Change PIN2**.
2. Enter PIN2, and press  or <sub>1</sub> (OK).
3. Enter a new PIN2, and press  or <sub>1</sub> (OK).
4. Re-enter the new PIN2 to confirm.

## 12 Connectivity

### Bluetooth (optional)

Your phone supports Bluetooth. You can synchronize files between your phone and a computer, transfer data between your phone and other Bluetooth devices, and talk on the phone using a Bluetooth headset.



1. In standby mode, selecting **Menu > Settings > Connectivity > Bluetooth > Power > On** to turn on Bluetooth.
2. Select **My device > Search new device** to search for available Bluetooth devices.
3. Scroll to the desired Bluetooth device, and press <sup>1</sup> (**Pair**) or .  
When you pair your phone with the device for the first time, a password is required.
4. Use the Bluetooth device to talk on the phone or transfer data with your phone.

## Internet Services


You can use your phone to access Wireless Application Protocol (WAP) sites and use WAP-based services. To browse WAP pages, you must subscribe to the data service from your service provider and configure your phone's relevant settings.

### Setting Up Your Data Account

Before accessing WAP sites on your phone, set up your data account as follows:

1. In standby mode, select **Menu > Services > Internet service > Settings > Data account**.
2. Select your service provider.  
Your account settings are provided by your service provider.
3. Press <sup>1</sup> (**OK**) or  to save the settings.

### Accessing a WAP Site

1. In standby mode, select **Menu > Services > Internet service > Search or Input URL**.
2. Enter the Uniform Resource Locator (URL) of the desired WAP site.
3. Press <sup>1</sup> (**Options**), and select **Go to** to access the WAP site.






You can create and edit bookmarks so that you can quickly access your favorite WAP sites.

## 13 Profiles

Your phone provides you with various profiles: **General**, **Silent**, **Meeting**, **Outdoor**, and **My style**. You can customize the ringtone and other settings for each profile depending on the environment and need. You can activate or deactivate a profile.

To customize a profile:

1. Select **Menu > Profiles**.
2. Use  to scroll to the desired profile, and press  to select the profile or press  (Options) for the following options (except **Silent** and **Meeting**):
  - **Activate**: activate the profile.
  - **Customize**: set the alert type, ring type, incoming call, ringtone volume, message, message volume, keypad tone, keytone volume, power on/off, and system alert.
  - **Reset**: Reset to default settings.



 
In the **My style** profile, you may **Rename** the profile name.

## 14 Chat Function

The **FaceBook** application is a social networking service (SNS) that lets you connect with family and friends.

To use Facebook, select **Menu > FaceBook**, and enter your email and password. You will then be connected to Facebook and redirected to its homepage.



- Check GPRS settings before using this application.
- Before saving the chat history, ensure that a microSD card has been inserted to the phone.
- From the Facebook registration page, press  to delete an entered phone number.

## 15 Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

### Electronic Device

Power off your device if using the device is prohibited. Do not use the device when using the device causes danger or interference with electronic devices.

### Medical Device

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.



## Potentially Explosive Atmosphere

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or a fire, resulting in bodily injuries or even deaths. Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

## Traffic Security

Observe local laws and regulations while using the device. In addition, if using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.

- Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft. Using wireless devices in an aircraft may cause danger to the operation of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

## **Operating Environment**

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- On a stormy day with thunder, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and the standby time are reduced.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between 0°C and 40°C while the device is being charged. Keep the ambient temperature between 0°C to 40°C for using the device powered by a battery.

## **Prevention of Hearing Damage**

Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

## Safety of Children

Comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

## Accessories

Use the accessories delivered only by the manufacturer. Using accessories of other manufacturers or vendors with this device model may invalidate any approval or warranty applicable to the device, result in the non-operation of the device, and cause danger.

## Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than the normal time, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.
- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.

- If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.
- Danger of explosion if battery is incorrectly replaced. Recycle or dispose of used batteries according to the local regulations or reference instruction supplied with your device.
- Notice: For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.

## **Cleaning and Maintenance**

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand. Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.
- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may not function properly and may lead to a fire or an explosion. When

the temperature is lower than 0°C, performance of the battery is affected.

- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.

## **Emergency Call**

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

## **Certification Information (SAR)**

This device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization International Commission on Non-Ionizing Radiation Protection (ICNIRP) and include safety measures designed to ensure safety for all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the

device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit adopted by USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when tested for use at the ear is 0.878 W/kg, and when properly worn on the body is 1.290 W/kg.

The SAR limit also adopted by Europe is 2.0 W/kg averaged over 10 grams of tissue. The highest SAR value for this device type when tested at the ear is 0.795 W/kg, and when properly worn on the body is 1.450 W/kg.

## Disposal and Recycling Information



This symbol on the device (and any included batteries) indicates that they should not be disposed of as normal household garbage. Do not dispose of your device or batteries as unsorted municipal waste. The device (and any batteries) should be handed over to a certified collection point for recycling or proper disposal at the end of their life.

For more detailed information about the recycling of the device or batteries, contact your local city office, the household waste disposal service, or the retail store where you purchased this device.

The disposal of this device is subject to the Waste from Electrical and Electronic Equipment (WEEE) directive of the European Union. The reason for separating WEEE and batteries from other waste is to minimize the potential environmental impacts on human health of any hazardous substances that may be present.

## Reduction of Hazardous Substances

This device is compliant with the EU Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH) Regulation (Regulation No 1907/2006/EC of the European Parliament and of the Council) and the EU Restriction of Hazardous Substances (RoHS) Directive (Directive 2002/95/EC of the European Parliament and of the Council). For more information about the REACH compliance of the device, visit the Web site [www.huaweidevice.com/certification](http://www.huaweidevice.com/certification). You are recommended to visit the Web site regularly for up-to-date information.

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications made to this device not expressly approved by Huawei Technologies Co., Ltd. may void the FCC authorization to operate this device.

## **EU Regulatory Conformance**

Hereby, Huawei Technologies Co., Ltd. declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

For the declaration of conformity, visit the web site  
[www.huaweidevice.com/certification](http://www.huaweidevice.com/certification).

**C € 0678**

Notice: Observe the national local regulations in the location where the device is to be used. This device may be restricted for use in some or all member states of the European Union (EU).

Please visit [www.huaweidevice.com/worldwide/support/hotline](http://www.huaweidevice.com/worldwide/support/hotline) for recently updated hotline and email address in your country or region.