

Mobile Phone  
user manual

- Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.
- Bluetooth QD ID : B016045

www.samsung.com

Printed in China  
Code No.:GH68-26562A  
English (IND). 04/2012. Rev. 1.2



WARNING

Safety warnings

Keep your phone away from small children and pets

Keep your phone and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

Protect your hearing



Excessive exposure to sound at high volumes can cause hearing damage. Always turn the volume down before plugging the earphones into an audio source and use only the minimum volume setting necessary to hear your conversation or music.

Install mobile phones and equipment with caution

Ensure that any mobile phones or related equipment installed in your vehicle are securely mounted. Avoid placing your phone and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your phone. Incompatible batteries and chargers can cause serious injuries or damage to your phone.
- Never dispose of batteries or phones in a fire. Follow all local regulations when disposing used batteries or phones.
- Never place batteries or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

Avoid interference with pacemakers

Maintain a minimum of 15 cm between mobile phones and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research. If you have any reason to suspect that your phone is interfering with a pacemaker or other medical device, turn off the phone immediately and contact the manufacturer of the pacemaker or medical device for guidance.

Turn off the phone in potentially explosive environments

Do not use your phone at refuelling points (service stations) or near fuels or chemicals. Turn off your phone whenever directed by warning signs or instructions. Your phone could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.

Reduce the risk of repetitive motion injuries

While using your phone, hold the phone with a relaxed grip, press the buttons lightly, use special features that reduce the number of buttons you have to press (such as templates and predictive text), and take frequent breaks.

Do not use the phone if the screen is cracked or broken

Broken glass or acrylic could cause injury to your hand and face. Bring the phone to a Samsung service centre to replace the screen. Damage caused by careless handling will void your manufacturer's warranty.



CAUTION

Safety precautions

Drive safely at all times

Avoid using your phone while driving and obey all regulations that restrict the use of mobile phones while driving. Use hands-free accessories to increase your safety when possible.

Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a mobile phone in a certain area.

Use only Samsung-approved accessories

Using incompatible accessories may damage your phone or cause injury.

Turn off the phone near medical equipment

Your phone can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

Turn off the phone or disable the wireless functions when in an aircraft

Your phone can cause interference with aircraft equipment. Follow all airline regulations and turn off your phone or switch to a mode that disables the wireless functions when directed by airline personnel.

Protect batteries and chargers from damage

- Avoid exposing batteries to very cold or very hot temperatures (below 0° C/32° F or above 45° C/ 113° F). Extreme temperatures can reduce the charging capacity and life of your batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and – terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

Handle your phone carefully and sensibly

- Do not disassemble your phone due to a risk of electric shock.
- Do not allow your phone to get wet—liquids can cause serious damage and will change the colour of the label that indicates water damage inside the phone. Do not handle your phone with wet hands. Water damage to your phone can void your manufacturer's warranty.

- Avoid using or storing your phone in dusty, dirty areas to prevent damage to moving parts.
- Your phone is a complex electronic device—protect it from impacts and rough handling to avoid serious damage.
- Do not paint your phone, as paint can clog moving parts and prevent proper operation.
- Your phone may be damaged by exposure to magnetic fields. Do not use carrying cases or accessories with magnetic closures or allow your phone to come in contact with magnetic fields for extended periods of time.

Avoid interference with other electronic devices

 
Your phone emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, medical devices, and other electronic devices in homes or vehicles. Consult the manufacturers of your electronic devices to solve any interference problems you experience.



Important usage information

Use your phone in the normal position

Avoid contact with your phone's internal antenna.

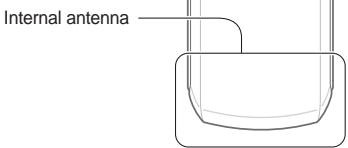

Allow only qualified personnel to service your phone

Allowing unqualified personnel to service your phone may result in damage to your phone and will void your warranty.

Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.
- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.

Handle UIM cards and memory cards with care

- Do not remove a card while the phone is transferring or accessing information, as this could result in loss of data and/or damage to the card or phone.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Frequent writing and erasing will shorten the life span of memory cards.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

Ensure access to emergency services

Emergency calls from your phone may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.

Specific Absorption Rate (SAR) certification information

Your device conforms to U.S. Federal Communications Commission (FCC) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile devices that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 1.6 W/kg of body tissue.

During testing, the maximum SAR values recorded for this model were: In normal use, the actual SAR is likely to be much lower, as the device has been designed to emit only the RF energy necessary to transmit a signal to the nearest base station. By automatically emitting lower levels when possible, your device reduces your overall exposure to RF energy.

The FCC has granted an Equipment Authorisation for this model phone based on the compliance of all reported SAR levels with the FCC RF exposure guidelines. The authorisation can be found on the FCC Office of Engineering and Technology website at [http:// www.fcc.gov/oet/ea](http://www.fcc.gov/oet/ea).

Correct disposal of this product

(Waste Electrical & Electronic Equipment)



(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal. This EEE is compliant with RoHS.

Correct disposal of batteries in this product

 


(Applicable in the European Union and other European countries with separate battery return systems)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

Phone layout

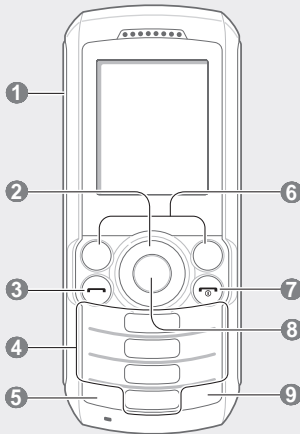

1 **Volume key**  
In Idle mode, adjust the key tone volume

2 **4-way navigation key**  
In Idle mode, access user-defined menus; In Menu mode, scroll through menu options

3 **Dial key**  
Make or answer a call; In Idle mode, retrieve recently dialled, missed, or received numbers; Send an SOS message  
▶ *Activate and send an SOS message*

4 **Alphanumeric keys**

5 **Keypad lock key**  
In Idle mode, lock or unlock the keypad (press and hold)

6 **Softkeys**  
Perform actions indicated at the bottom of the display

7 **Power/Menu exit key**  
Turn the phone on and off (press and hold); End a call; In Menu mode, cancel input and return to Idle mode

8 **Confirm key**  
In Idle mode, access the music player menu; In Menu mode, select the highlighted menu option or confirm an input

9 **Silent profile key**  
In Idle mode, activate or deactivate the silent profile (press and hold)

Your phone displays the following status indicators on the top of the screen:

Icon	Description
	Signal strength
	Call in progress
	SOS message feature activated
	Roaming
	Alarm activated
	Memory card inserted
	New text message
	New voice mail message
	Normal profile activated
	Silent profile activated
	Battery power level

Install the UIM card and battery

1. Remove the battery cover and insert the UIM card.



2. Insert the battery and replace the battery cover.



Charge the battery

1. Plug the supplied travel adapter.



2. When charging is finished, unplug the travel adapter.




Do not remove the battery from the phone before unplugging the travel adapter first. Otherwise, the phone may be damaged.

Insert a memory card (optional)

Your phone accepts microSD™ or microSDHC™ memory cards up to 2 GB (depending on memory card manufacturer and type).

Formatting the memory card on a PC may cause incompatibility with your phone. Format the memory card only on the phone.

- Open the cover to the memory card slot on the side of the phone.
- Insert a memory card with the label side facing up.

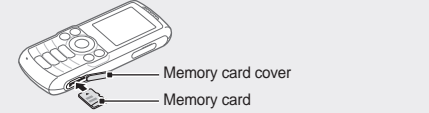

- Push the memory card in the memory card slot until it locks in place.

Instructional icons

	<b>Note:</b> notes, usage tips, or additional information
	<b>Followed by:</b> the order of options or menus you must select to perform a step; for example: In Menu mode, select <b>Messages</b> → <b>Create message</b> (represents <b>Messages</b> , followed by <b>Create message</b> )

Symbol mode

Press an appropriate alphanumeric key to enter a symbol.

- To move the cursor, press the Navigation key.
- To delete characters one by one, press <Clear>. To delete all of the characters, press and hold <Clear>.
- To insert a space between characters, press [0].
- To enter punctuation marks, press [1].

Add a new contact

- In Idle mode, enter a phone number and press <Options>.
- Select **Create contact** → a memory location (phone or UIM).
- Select a number type (if necessary).
- Enter contact information.
- Press <Options> → **Save** to add the contact to memory.

Set favourite numbers

- In Menu mode, select **Phonebook** → **Favourites**.
- Scroll to a number you want to set (1-9) and press [►II].
- Select a contact to assign to the favourite number.

Use the camera

To capture photos

- In Menu mode, select **Camera** to turn on the camera.
- Aim the lens at the subject and make any adjustments.
- Press [►II] to take a photo.  
The photo is saved automatically.
- Press <Back> to take another photo (step 2).

To view photos

In Menu mode, select **My files** → **Images** → a photo file.

[ ]	<b>Square brackets:</b> phone keys; for example: [☛] (represents the Power/Menu exit key)
< >	<b>Angled brackets:</b> softkeys that control different functions at each screen; for example: <OK> (represents the <b>OK</b> softkey)

Turn your phone on or off

To turn your phone on,

- Press and hold [☛\*].
- Enter your PIN and press <OK> (if necessary).
- When the mobile tracker message appears, press <Yes> and activate the mobile tracker feature.  
► *Activate the mobile tracker*

To turn your phone off, repeat step 1 above.

Access menus

To access your phone's menus,

- In Idle mode, press <Menu> to access Menu mode.
- Use the Navigation key to scroll to a menu or option.
- Press <Select> or [►II] to confirm the highlighted option.
- Press <Back> to move up one level; Press [☛\*] to return to Idle mode.

Send and view messages

To send a text message

- In Menu mode, select **Messages** → **Create message**.
- Enter a destination number and scroll down.
- Enter the message text. ► *Enter text*
- Press [►II] to send the message.

To view text messages

- In Menu mode, select **Messages** → **Inbox**.
- Select a text message.

Activate the mobile tracker

This feature helps track your phone when it is stolen or when someone tries to use your phone using other UIM card, the phone will automatically send the preset tracking message to family or friends. This feature may be unavailable due to certain features supported by your service provider.

To activate the mobile tracker

- In Menu mode, select **Settings** → **Security** → **Mobile tracker** → **Settings**.
- Enter a new 8-digit password for the mobile tracker and press the Confirm key.

To capture videos

- In Menu mode, select **Camera** to turn on the camera.
- Press <Options> → **CamCorder** to switch to Recording mode.
- Aim the lens at the subject and make any adjustments.
- Press [►II] to start recording.
- Press [►II] to stop recording.  
The video is saved automatically.

To view videos

In Menu mode, select **My files** → **Videos** → a video file.

Listen to music files

- In Menu mode, select **Applications** → **Music player**.
- Press <Options> → **Create**.
- Enter a title for your new playlist and press <Save>.
- Select the new playlist.
- Press <Add> → a memory location.
- Select the files you want to include and press <Add>.
- Press [►II] to begin playback.
- Control playback using the following keys:

Key	Function
►II	Pause or resume playback

Make a call

- In Idle mode, enter an area code and a phone number.
- Press [☛] to dial the number.
- To end the call, press [☛\*].

Answer a call

- When a call comes in, press [☛].
- To end the call, press [☛\*].

Adjust the volume

To adjust the volume of the ringtone

- In Menu mode, select **Settings** → **Profiles**.
- Scroll to the phone profile you are using.
- Press <Options> → **Edit**.
- Select **Volume** → **Call alert**.
- Scroll left or right to adjust the volume level.
- Press <Save>.

To adjust the volume of voice during a call

While a call is in progress, press the Volume key to adjust the volume.

In noisy environments, you may have difficulty hearing the calls while using the speakerphone feature. For better audio performance, use the normal phone mode.

- Enter the new password again and press the Confirm key.
- Scroll left or right to **On**.
- Scroll down and press [►II] to open the recipient list.
- Press <Options> → **Phonebook** to open your contact list.
- Select a contact.
- Select a number (if necessary).
- Press <Options> → **Save** to save the recipients.
- Scroll down and enter the sender's name.
- Press [►II] → <Accept> .

To change the password for the mobile tracker, select **Change password**.

To access a remote phone

If a remote phone has the mobile tracker feature and it is activated, you can get contacts, delete data, and get location information of the remote phone.

To get contacts of the remote phone,

- In Menu mode, select **Settings** → **Security** → **Mobile tracker** → **Access remote phone**.
- Enter the phone number of the remote phone and scroll down.
- Enter the mobile tracker password of the remote phone and press <OK>.

Key	Function
Navigation	<ul style="list-style-type: none"><li>Left: Skip backward in the playlist; Scan backward in a file (press and hold)</li><li>Right: Skip forward in the playlist; Scan forward in a file (press and hold)</li><li>Up/Down: Adjust the volume</li></ul>

Listen to the FM radio

- Plug the supplied headset into the phone's headset jack.
- In Menu mode, select **Applications** → **FM radio**.
- Press [►II] to start the FM radio.
- Press <Yes> to start automatic tuning.  
The radio scans and saves available stations automatically.

The first time you turn on the FM radio, you will be prompted to start automatic tuning.

Key	Function
Navigation	<ul style="list-style-type: none"><li>Left/Right: Tune a radio station; Select a saved radio station (press and hold)</li><li>Up/Down: Adjust the volume</li></ul>
►II	Turn the FM radio on or off

Change your ringtone

- In Menu mode, select **Settings** → **Profiles**.
- Scroll to the profile you are using.
- Press <Options> → **Edit**.
- Select **Call ringtone**.
- Select a ringtone category → a ringtone.
- Press <Save>.

Call a recently dialled number

- In Idle mode, press [☛].
- Scroll left or right to a call type.
- Scroll up or down to a number or name.
- Press [►II] to view details of the call or [☛] to dial the number.

Enter text

To change the text input mode

- Press and hold [#] to switch between T9Abc and Abc modes; In T9 mode, press [#] repeatedly to switch to HingAbc mode.
- Press [#] to change case or switch to Number mode.
- Press [\*] to switch to Symbol mode.
- Press and hold [\*] to select an input mode or change the input language.

- Select **Get Contact**.
- Enter the name of the contact you want to retrieve and press [►II].  
Your phone will receive a text message with the contact information.

To delete data on the remote phone,

- In Menu mode, select **Settings** → **Security** → **Mobile tracker** → **Access remote phone**.
- Enter the phone number of the remote phone and scroll down.
- Enter the mobile tracker password of the remote phone and press <OK>.
- Select **Delete User Data**.
- Press <Yes>.  
A call log list, Phonebook contacts, and all messages of the remote phone will be deleted.

To set call diverting on the remote phone,

- In Menu mode, select **Settings** → **Security** → **Mobile tracker** → **Access remote phone**.
- Enter the phone number of the remote phone and scroll down.
- Enter the mobile tracker password of the remote phone and press <OK>.
- Select **Set call diverting**.
- Enter the phone number of the diverted phone and <Options> → **Activate**.

Use Air services

To use the Brew service

You can use this service to download various kinds of ringtones, wallpapers, or games offered by your service provider. In Menu mode, select **Air services** → **Brew**.

To use UIM Card toolkit menus

You can use a variety of additional services offered by your service provider. This menu is available only when you use a UTK UIM card that provides additional services. In Menu mode, select **Air services** → **UIM card toolkit**.

Air sevices are applicable to Reliance, Tata and Virgin mobile CDMA services in India.

Set and use alarms

To set a new alarm

- In Menu mode, select **Organiser** → **Alarms**.
- Select an empty alarm location.
- Set alarm details.
- Press <Save>, or press <Options> → **Save**.

HingAbc mode

- Press appropriate alphanumeric keys to enter an entire word.
- When the word displays correctly, press [0] to insert a space. If the correct word does not display, press the Navigation key up or down to select an alternate word.

T9Abc mode

- Press appropriate alphanumeric keys to enter an entire word.
- When the word displays correctly, press [0] to insert a space. If the correct word does not display, press the Navigation key up or down to select an alternate word.

Abc mode

Press an appropriate alphanumeric key until the character you want appears on the display.

Number mode

Press an appropriate alphanumeric key to enter a number.

To get location information,

- In Menu mode, select **Settings** → **Security** → **Mobile tracker** → **Access remote phone**.
- Enter the phone number of the remote phone and scroll down.
- Enter the mobile tracker password of the remote phone and press <OK>.
- Select **Get Location Information**.  
You will receive a text message with the remote phone's location information.

Activate and send an SOS message

In an emergency, you can send SOS messages to your family or friends for help.

To activate the SOS message

- In Menu mode, select **Messages** → **Settings** → **SOS messages** → **Sending options**.
- Scroll left or right to **On**.
- Scroll down and press [►II] to open the recipient list.
- Press <Options> → **Add recipients** → **Contacts list** to open your contact list.
- Select a contact.
- When you are finished selecting contacts, press <Options> → **Save** to save the recipients.

To stop an alarm

When the alarm sounds,

- Press <OK> or [►II] to stop an alarm without snooze.
- Press <OK> or [►II] to stop an alarm with snooze, or press <Snooze> to silence the alarm for the snooze period.

To deactivate an alarm

- In Menu mode, select **Organiser** → **Alarms**.
- Select the alarm you want to deactivate.
- Scroll left or right to **Off**.
- Press <Save>.