

Turning Your Phone On and Off

1. Hold down the [END] key until the phone switches on.
2. To switch the phone off, hold down the [END] key until the power-off image displays.

Making a call

1. Enter a phone number including the area code.
2. Press the [SEND] key to call the number.
3. When finished, press the [END] key.

Answering a call

1. When the phone rings and the phone icon flashes on the screen, press the [SEND] key or the left soft key to answer.
2. If the Any Key menu option (Menu 5.5.2.1), has been set, any key press will answer a call except for the [END] key or the right soft key.
3. End the call by pressing the [END] key.

Note: After the call ends, the phone will go back to standby mode.

Making an international call

1. Press and hold the [key] key for the international prefix. The '+' character automatically selects the international access code.
2. Enter the country code, area code, and the phone number.
3. Press [SEND] key to call the number.

How to set the tone

Ring tones

1. Press the left soft key [Menu] and select [Settings - Profiles] using the up/down navigation keys.
2. Select [General - Personalise] and choose Ring tones menu.
3. Press the left soft key [OK] and then you can set the desired ringtone.

Tip

› If you want to change your ringer to vibrate, select Vibrate mode or press and hold the [key] key.

Call alert type, Ring tones, Ring volume, Message alert type, Message tones, Message volume, Keypad tones, Keypad volume, Effect sound volume, Power on/off volume

You can select Call alert type, Ring tones, Ring volume, Message alert type, Message tones, Message volume, Keypad tones, Keypad volume, Effect sound volume, Power on/off volume.

You can change the sound that will occur when a key is pressed, or volume level.

[Menu - Settings - Profiles - General - Personalise]

Installing the SIM Card and Charging the Battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important!

› The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

 
› USIM is not supported in this phone.

Charging the battery

1. Connect the lead from the travel adapter to the socket on the side of your phone (A).
2. Connect the charger to an AC wall outlet.

Illustrations

1. Open battery cover and remove the battery
2. Insert your SIM
3. Insert battery and close the battery cover
4. Charge your battery

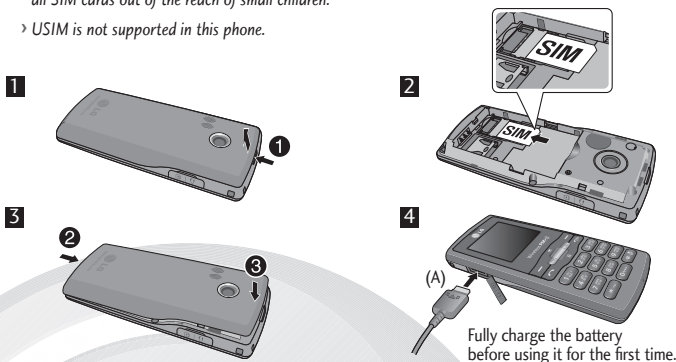

Entering Text

You can enter alphanumeric characters by using the phone's keypad. To change modes, press the [key] key.

T9 Mode

This mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal linguistic dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode.

ABC Mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

 
123 Mode (Numbers Mode)

Type numbers using one keystroke per number.

Symbol Mode

This mode allows you to enter special characters by short pressing [key] key.

Phone Components

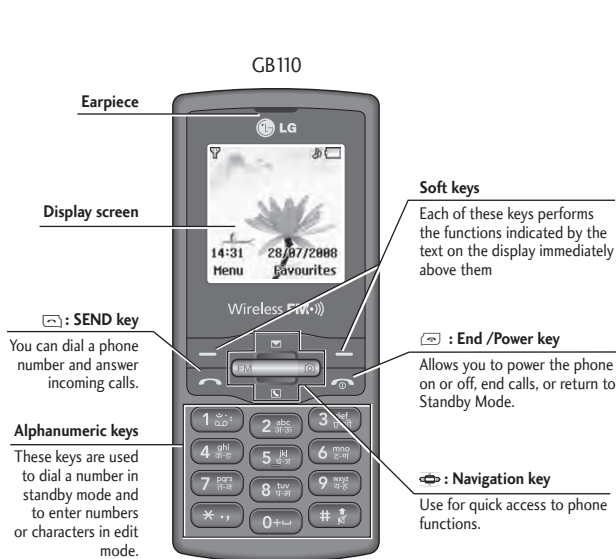


FM Radio (This function may be different in different regions.)

1. Press the corresponding number key of a channel to store the selected radio station.
2. After presetting radio channels, you can listen to another channel by pressing the corresponding number key.
3. You can access the following option menus by pressing the left soft key [Options].
 - › **Edit channel:** You can adjust frequency and channel 0.1 MHz at a time using the Left/Right navigation keys and number keys.
 - › **Auto scan:** If you turn "Auto Scan Now?" on, this automatically sets the radio channel. When "Save this Station?" message pops up and you select Yes, the selected frequency will be stored.
 - › **Reset channels:** You can delete all channels you saved.
 - › **Listen via speaker:** You can listen to the FM radio via built-in speaker. When you select [Options - Listen via wired headset] and connect the ear-mic then you can listen via headset.

Note

› **Wireless FM:** In weak FM radio signal area the sensitivity can degrade with wireless antenna mode. So it is advisable to insert the ear-mic for better & enhanced FM quality.

 Display Information

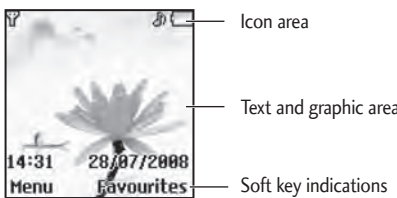

On-Screen Icons

The table below describes various display indicators or icons that appear on the phone's display screen.

[Signal strength icon]	Tells you the strength of the network signal.
[Call icon]	Call is connected.
[Roaming icon]	Shows that you are using a roaming service.
[Alarm icon]	The alarm has been set and is on.
[Battery icon]	Tells you the status of the battery.
[Message icon]	You have received a text message.
[Voice message icon]	You have received a voice message.
[Vibrate icon]	Vibrate only menu in profile.
[General menu icon]	General menu in profile.
[Outdoor menu icon]	Outdoor menu in profile.
[Silent menu icon]	Silent menu in profile.
[Headset icon]	Headset menu in profile.
[Schedule icon]	You can view your schedule.

[Storage icon]	Storage (Only when external memory is inserted)
----------------	-------------------------------------------------

Anti-theft Mobile Tracker (ATMT)

1. The ATMT feature of this phone provides you with the ability to have a tracking system in place for your Mobile in case you lose or misplace it.
2. The moment an un-authorized user uses your phone, a SMS is triggered from your phone and the Message is sent to your pre-defined number.
3. Setting the ATMT ON [Menu - Settings - Security]
 - › Select Anti-theft Mobile Tracker
 - › Set ATMT and Select ON
 - › Press OK and enter default ATMT code

Note

- › In case you want to use your phone with some other SIM card, make sure to set the ATMT OFF.
- › It is recommended to enter the Number for ATMT with the country code (e.g. for INDIA +91 followed by mobile number)
- › Default ATMT code is "0000".

Menu tree

1. Contacts <ul style="list-style-type: none">1.1 Search1.2 New contact1.3 Speed dials1.4 Copy all1.5 Delete all1.6 Memory status1.7 Information	3. Call history <ul style="list-style-type: none">3.1 All calls3.2 Missed calls3.3 Dialed calls3.4 Received calls3.5 Call duration 4. Tools <ul style="list-style-type: none">4.1 My stuff4.2 Alarm4.3 Games4.4 FM radio4.5 Calendar4.6 Memo4.7 Calculator4.8 Stopwatch4.9 Unit converter4.0 World clock4.* SIM services <p>Note: This menu will be displayed if SIM services are provided by the service provider.</p>	5. Settings <ul style="list-style-type: none">5.1 Profiles5.2 Date & Time5.3 Language5.4 Display5.5 Call5.6 Auto keylock5.7 Security5.8 Power save5.9 Network selection5.0 Reset settings5.* Memory status 6. Camera
-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Quick feature reference

This section provides brief explanations of features on your phone.

Contacts Menu 1	
Search	You can Search for contacts. Note: Instant searching is available by inputting the initial letter of the name you want to search.
New contact	You can add phonebook entries by using this menu.
Speed dials	Assign contacts to any of keys between [25] and [99].
Copy all	You can copy all entries from SIM card memory to Phone memory and also from Phone memory to SIM card memory.
Delete all	You can delete all entries from SIM card memory or Phone memory.
Memory status	You can check free space and memory usage.
Information	<ul style="list-style-type: none">› Service dial numbers: Access the list of service numbers assigned by service provider safely.› Own number: You can save and check your own numbers in SIM card.› Business card: This option allows you to create your own business card featuring your name, mobile phone number and so on.
Messaging Menu 2	
This menu includes functions related to SMS (Short Message Services).	
New message	This menu allows you to type a new message up to 459 characters.
Inbox	You will be alerted when you have received a message.

Tools	Menu 4
My stuff	This menu allows you to manage the multimedia files in your phone's memory & SD card so that you have easy access to all of your pictures.
Alarm	Allows you to set one of three alarms. The current time is displayed at the top of the screen when you select an alarm to set. At the alarm time, the Alarm icon will be displayed on the LCD screen and the alarm will sound.
Games	In this menu, you can manage games installed in your phone.
FM Radio	You can search radio stations and enjoy listening to the radio.
Calendar	You can check track of daily or monthly schedules.
Memo	You can create a list of tasks
Calculator	This contains the standard functions such as +, -, x, /: Addition, Subtraction, Multiplication and Division.
Stopwatch	Stopwatch is available just as common stopwatches we see and use in daily life.
Unit Converter	This converts any measurement into a unit you want.
World clock	Allows you to determine the current time in another time zone or country.
SIM services	If the SIM card supports SAT (SIM Application Toolkit) services, this menu will provide access to operator specific value added services. Please refer to the information provided with your SIM card for further information on how to use the related options.

Guidelines for safe and efficient use (Continued)

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- The unit should be kept away from heat sources such as radiators or cookers.
- Use a dry cloth to clean the exterior of the unit. (Do not use any solvents.)
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.

Electronic devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over a pacemaker, i.e. in your breast pocket.

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- Do not use a hand-held phone while driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

Do not use the phone at a refueling point. Do not use near fuel or chemicals.

Settings	Menu 5
	You can set the following menus for your convenience and preferences.
Profiles	You can adjust and customize the phone tones.
Date & Time	You can set functions relating to the date and time.
Language	You can change the language for the display texts in your phone. This change will also affect the Language Input mode.
Display	You can change settings for the phone display.
Call	You can set the menu relevant to a call.
Auto keylock	When this feature is enabled, the phone keypad is locked.
Security	This menu allows you to set the phone safely. <ul style="list-style-type: none">PIN code request: You can set the phone to ask for the PIN code of your SIM card when the phone is switched on. Phone lock: You can use a security code to avoid unauthorized use of the phone. Call barring: The Call barring service prevents your phone from making or receiving a certain category of calls. This function requires the call barring password. Fixed dial number (SIM dependent): You can restrict your outgoing calls to selected phone numbers. The numbers are protected by your PIN2 code. The numbers you wish to allow access to once this service has been enabled, must be added to the contacts after enabling Fixed dial number. Anti-theft Mobile Tracker: The ATMT feature of this phone provides you with the ability to have a tracking system in place for your mobile in case you lose or misplace it.

Guidelines for safe and efficient use (Continued)

In aircraft

Wireless devices can cause interference in aircraft.

- Turn off your mobile phone before boarding any aircraft.

Children

Keep the phone in a safe place out of children's reach. It includes small parts which if detached may cause a choking hazard.

Emergency calls

Emergency calls may not be available under all cellular networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care.

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs to be replaced.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose off used batteries according to the manufacturer's instructions.

Settings	Menu 5 (Continued)
Security (Continued)	<ul style="list-style-type: none">Change codes: PIN is an abbreviation of Personal Identification Number to prevent use by unauthorized persons. You can change the access codes: Security code, PIN code, PIN2 code and ATMT code.
Power save	If you set this to On, you can save the power when you are not using the phone.
Network selection	You can select a network that will be registered either automatically or manually. Usually, the network selection is set to Automatic.
Reset settings	You can initialize all setting values as defaults. You need a Security code to activate this function.
Memory status	You can check free space and memory usage of each repository.

Camera	Menu 6
	Press the Menu key and select Camera > [Options]. You can also directly open the camera module by pressing the Camera key in standby mode.
[Camera preview] (Options)	<ul style="list-style-type: none">Resolution: 160x120, 320x240, 640x480 Quality: Normal, Fine, Super fine Self timer: Off, 3 seconds, 5 seconds, 10 seconds View option: Full image, Full screen Save to: Phone, External Multi shot: 1 shot, 3 shots, 6 shots Effects: Off, Sepia, Mono, Negative White balance: Auto, Fluorescent, Tungsten Shutter tone: Tone 1, Tone 2, Tone 3

Guidelines for safe and efficient use (Continued)

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model GB110 has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to ensure safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the international Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over ten (10) gram of tissue.
- This highest SAR value for this model phone tested by DASY4 for use at the ear/body is [0.956/0.701] W/kg(10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE) is 1.6 W/kg averaged over one (1) gram of tissue.

Camera	Menu 6 (Continued)
[Camera preview] (Options)	<ul style="list-style-type: none">Reset settings: Yes, No Banding Frequency: 50Hz, 60Hz <p>After setting all the values, focus on the subject to capture and press the Camera key or Right Soft Key [Capture]. With a click, the image is captured.</p>
[After captured] (Options)	<ul style="list-style-type: none">New Photo: This returns back to camera preview state to capture a new photo. Set as Wallpaper: Captured picture can be Set as Wallpaper. Album: This will show you the images stored in album.

Guidelines for safe and efficient use

Please read these simple guidelines. Ignoring them may be dangerous or illegal. Further detailed information is given in this manual.

Warning

- For your safety, use ONLY specified ORIGINAL batteries and chargers.
- Switch off the phone in any area where required by special regulations, e.g. in a hospital where it may affect medical equipment.
- Batteries should be disposed off in accordance with relevant legislation.

Product care and maintenance

WARNING! Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

Technical Data

General

- Product name** : GB110

- System** : GSM 900 / DCS 1800

Ambient Temperatures

- Max.** : +55°C, Charging (+45°C)

- Min** : -10°C

Battery Specification

- Type** : 950 mAh, Li-Ion

 
- Talk Time*** : Upto 10 hrs

Note!


- Variation in operation time may occur depending on SIM card, network condition, usage style, usage setting and environment.*

सिम कार्ड स्थापित करना और बैटरी को चार्ज करना

- सिम कार्ड स्थापित करना**
- जब आप किसी सेल्युलर नेटवर्क की सेवाएं लेते हैं, तो आपको एक सिम कार्ड दिया जाता है जिसमें आपकी ग्राहकी के ब्योरे, जैसे आपका पिन, उपलब्ध वैकल्पिक सेवाएं और कई अन्य ब्योरे लोड होते हैं।
- !महत्वपूर्ण**
- सिम कार्ड तथा इसके संपर्कों को खरोचने या मोड़ने से आसानी से नुकसान पहुंच सकता है, इसलिए कार्ड को संभालने, भीतर डालने या हटाने के समय सावधान रहें। सिम कार्ड को छोटे बच्चों की पहुंच से दूर रखें।
 - इस फोन में USIM समर्थित नहीं हैं।

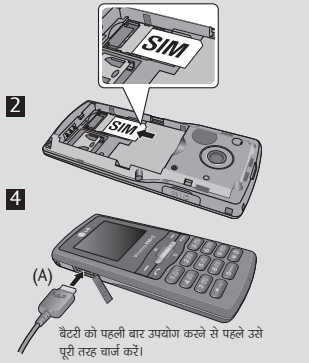- बैटरी को चार्ज करना**
- अडाप्टर की लीड को फोन के बगल की सॉकेट में लगायें (A)।
 - चार्जर को AC प्लग पॉइंट से जोड़ें।
- चित्र**
- बैटरी कवर खोलें और बैटरी निकालें।
 - सिम कार्ड डालें।
 - बैटरी डालें और बैटरी कवर को बंद करें।
 - बैटरी चार्ज करें।
- 

फोन के अवयव

- 
- GB110**
- इयरपीस**
- डिस्प्ले स्क्रीन**
- सॉफ्ट कुंजी**
- इनमें से प्रत्येक कुंजी उनके रीक उभर डिस्प्ले पर दिखने वाले पाठ्य द्वारा बताए गए कार्यों को करती है।
- मेनू कुंजी**
- इनमें से प्रत्येक कुंजी उनके रीक उभर डिस्प्ले पर दिखने वाले पाठ्य द्वारा बताए गए कार्यों को करती है।
- अक्षरणीय कुंजियाँ**
- आप फोन के कुंजी पटल का प्रयोग करके कोई नंबर डायल कर सकते हैं तथा आने वाली कॉल का उत्तर दे सकते हैं।
- अक्षरणीय कुंजियाँ**
- आप फोन के कुंजी पटल का प्रयोग करके कोई नंबर डायल कर सकते हैं या संपादन में वर्ण और संख्या प्रविष्ट कर सकते हैं।
- संयोजक/सॉफ्ट कुंजी**
- इससे आप फोन को चालू या बंद कर सकते हैं, कॉल समाप्त कर सकते हैं या निष्क्रिय मोड में वापस जा सकते हैं।
- नेविगेशन कुंजी**
- फोन कार्यों तक स्वरित पहुंच के लिए प्रयोग करें।

अक्षर व अंक प्रविष्ट करने की तालिका

कुंजी	अक्षर / अंक (कुंजियों को इतनी बार दबाएं)													
1	2 बार	3 बार	4 बार	5 बार	6 बार	7 बार	8 बार	9 बार	10 बार	11 बार	12 बार	13 बार	14 बार	
1	ॉ	ं	ः	ॠ	ॡ	ॢ	ॣ	।	॥	०	१	२	३	
2	ा	ि	ी	ु	ू	ॄ	ॅ	ॆ	े	ै	ॉ	ॊ	ो	2
3	े	ै	ो	ो	ी	ॉ	ए	ऐ	ऐ	ओ	औ	ओं	३	
4	क	ख	ग	घ	ङ	च	क	ख	ग					
5	ख	ज	झ	ञ	॥	॥	॥	॥	॥					
6	ट	ठ	ड	ढ	ण	६	ड	ढ						
7	त	थ	द	ध	न	7	न							
8	प	फ	ब	भ	म	८	फ							
9	य	र	ल	व	श	ष	स	ह	९	ळ	र	ळ	स	
0	—	0												

हिन्दी शब्द लिखने के उदाहरण

- कितাব**

क :- कुंजी 4 को 1 बार दबाएं ।
ि :- कुंजी 2 को 2 बार दबाएं ।
त :- कुंजी 7 को 1 बार दबाएं ।
ा :- कुंजी 2 को 1 बार दबाएं ।
ब :- कुंजी 8 को 3 बार दबाएं ।
- सत्रिय**

क :- कुंजी 4 को 1 बार दबाएं ।
् :- कुंजी 1 को 4 बार दबाएं ।
ष :- कुंजी 9 को 6 बार दबाएं ।
त :- कुंजी 7 को 1 बार दबाएं ।
् :- कुंजी 1 को 4 बार दबाएं ।
र :- कुंजी 9 को 2 बार दबाएं ।
ि :- कुंजी 2 को 2 बार दबाएं ।
य :- कुंजी 9 को 1 बार दबाएं ।
- ज्ञानी**

ज :- कुंजी 5 को 3 बार दबाएं ।
् :- कुंजी 1 को 4 बार दबाएं ।
ञ :- कुंजी 5 को 5 बार दबाएं ।
ा :- कुंजी 2 को 1 बार दबाएं ।
न :- कुंजी 7 को 5 बार दबाएं ।
ी :- कुंजी 2 को 3 बार दबाएं ।

FM रेडियो (यह फंक्शन अलग-अलग क्षेत्रों में भिन्न-भिन्न हो सकता है।)

- रेडियो चैनलों को सेट करने के लिए अनुकूल नंबर कुंजी को दबाएं।
- रेडियो चैनलों को पहले से सेट करने के बाद, आप संबंधित नंबर कुंजी को दबाकर दूसरा चैनल चुन सकते हैं।
- आप बाई सॉफ्ट कुंजी [] [विकल्प] को दबाकर निम्नलिखित विकल्प मेनू में जा सकते हैं।
 - चैनल संपादित करें आप बाई/दाई नेविगेशन कुंजियों और नंबर कुंजियों का प्रयोग करके बारी-बारी से फ्रीक्वेंसी और चैनल 0.1 MHz से आगे-पीछे कर सकते हैं।
 - स्वतः स्कैन यदि आप "अभी स्वतः स्कैन करें?" को चालू करेंगे, तो इससे रेडियो चैनल स्वतः सेट हो जाएंगे। जब "यह स्कैन को रोकित करें?" संदेश उभरता है और आप "हां" चुनते हैं, तो चयनित फ्रीक्वेंसी संचित हो जाएगी।
 - चैनल रीसेट करें आप रोकित किए गए सभी चैनलों को मिटा सकते हैं।
 - स्पीकर से सुनना: आप एफएम रेडियो को फोन में निर्मित स्पीकर द्वारा सुन सकते हैं। जब आप [विकल्प-वायर्ड हेडसेट द्वारा सुनें] चुनेंगे और हेडसेट लगाएंगे, तब आप हेडसेट द्वारा सुन सकते हैं।

नोट

- वायरलेस एफएम:** कमज़ोर रेडियो संकेत क्षेत्र में, वायरलेस एप्टेन्वा मोड में संवेदनशीलता कम हो सकती है। इसलिए, ये सलाह दी जाती है कि बेहतर और बढ़िया एफएम गुणवत्ता के लिए हेडसेट लगाएँ।