



Nothing like Anything



A73 User Guide

1 Welcome

1.1 Exciting Features

Thank you for purchasing the Micromax A73 Android mobile phone. You are now the proud owner of the A73 which offers you these exciting features:

- Video Calls
- Dual SIM support
- 2M(Back) + 0.3M(Front) Camera
- 3.5 Inch/262K/TFT touch screen
- T-Flash card support (up to 32 GB)
- LED Flashlight
- Music Player and FM Radio
- Android 2.3 (Gingerbread) operating system
- Hindi language support

Contents

1	Welcome	2
1.1	Exciting Features.....	2
2	Phone Layout	6
2.1	Keya and Parts	6
2.2	Icons and Indicators.....	7
3	Getting Started	8
3.1	Remove/Insert Battery.....	8
3.2	Insert SIM card.....	8
3.3	Insert Memory card	9
3.4	Charge the Battery	9
3.4.1	Charging via power socket.....	10
3.4.2	Charging via USB cable.....	10
4	The Home Screen	12
4.1	Wake up the phone	12
4.1.1	Return to Home screen	13
4.2	Using the touch screen	13
4.3	Using the phone's buttons	14
4.4	Home Screen	15
4.5	Widgets.....	16
5	Placing and Receiving Calls	16
5.1.1	To place a call by dialing.....	17
5.2	End a call.....	18
5.3	To disable phone calls (Airplane mode)	18
5.4	Options During a Call.....	18
5.5	Conference Call.....	20
6	Browse the Internet	20
6.1	Access Internet via Wi-Fi.....	22
7	Managing Notifications	22
7.1	Open the Notifications Panel.....	22
7.2	Respond to Notifications.....	23
7.3	Clear all Notifications	23
7.4	Close Notifications Panel.....	23
8	Working With Call Logs	23
8.1	Open the Call log.....	24
8.2	Actions from Call Log.....	24
9	Working With Menus	24

User Guide

9.1 Options menus.....	24
9.2 Context menus.....	25
9.3 Toolkits.....	26
9.4 Using the Onscreen Keyboard.....	26
9.5 Enter text.....	27
9.6 Enter Various Characters.....	27
9.7 Edit Text.....	27
9.8 Select Text.....	27
9.9 Cut /Copy/Paste Text.....	28
9.10Open and Switch Applications.....	28
9.11Open and Close the Launcher.....	29
9.12Switch to Recently Used Application.....	30
9.13Lock Your Screen.....	30
9.14Customize Home screen.....	30
9.14.1Add items to the Home screen.....	31
9.14.2Change the Home screen wallpaper.....	31
9.14.3Rename a Folder.....	32
10 Messaging.....	32
10.1Delete Message Threads.....	32
10.2Exchange Messages.....	33
10.3Create and Send Multimedia Message.....	33
10.3.1Forward a message.....	34
10.3.2Lock a Message.....	34
10.3.3View Message Thread.....	34
11 Camera.....	34
11.1Take a Picture.....	35
11.2Shoot Videos.....	35
11.3Gallery.....	35
11.4Share an Album.....	36
12 Music.....	37
12.1Play Music.....	38
12.2Control Playback Volume.....	38
13 FM Radio.....	39
14 Other Features.....	39
15 Connect to Networks and Devices.....	40
15.1Connecting to Mobile Networks.....	40
15.2Determine the Network you are Using.....	40
15.3Edit or Create New Access Points.....	40
15.4Connect to Wi-Fi Networks.....	41
15.4.1Connect to Wi-Fi Network.....	41

User Guide

15.5Receive Notifications.....	41
15.6Bluetooth.....	42
15.6.1Turn Bluetooth On/Off.....	42
15.6.2Pair With Bluetooth Devices.....	42
15.6.3Connect to Bluetooth Devices.....	43
15.6.4Connect to a computer via USB.....	43
15.6.5Connect to Internet via your Phone	43
15.7Working with Secure Certificates.....	44
15.8Install Secure Certificate from SD Card.....	44
16 Phone Settings	45
17 Health and Safety Information	47
18 Taking Care of Your Device	48

2 Phone Layout











2.1 Keys and Parts



1	Power/Lock Key	8	Back Key
2	Proximity/ Light Sensor	9	Earphone Connector
3	Front Camera Lens	10	Charge/USB Port
4	Receiver	11	Volume key
5	Screen	12	LED Flash
6	Context Menu Key	13	Rear Camera Lens
7	Home key	14	Speaker

User Guide

2.2 Icons and Indicators

Icons	Indicators	Icons	Indicators
	Signal strength indicator		Alarm has been set
	New missed calls		Wi-Fi is activated
	USB is connected		Bluetooth is on
	The headphone is being used		Battery level
	New message		Airplane mode is activated

 
3 Getting Started

3.1 Remove/Insert Battery


You may need to remove the battery to insert SIM cards, Memory card or for replacing the battery.

To insert the battery:

1. Invert the back of the mobile phone upward and then take off the rear cover.

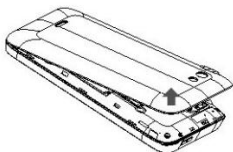

 2. Insert the battery as shown in the following figure.

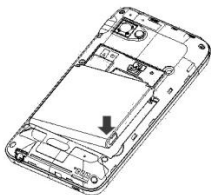


3. Finally place back the rear cover of the mobile phone.

3.2 Insert SIM card

The A73 is a Dual SIM mobile phone allowing you to use the facility of two networks. To insert SIM card(s):

User Guide

 1. Switch off the mobile phone and remove the rear cover and battery.
2. Insert the SIM card correctly in the card slot(s)(See figure below)

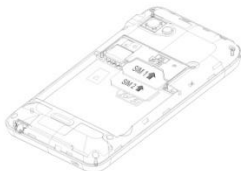


3. Finally insert the battery and replace the rear cover of the mobile phone.

3.3 Insert Memory card

Use only compatible memory cards approved by Micromax for use with this device. Incompatible memory cards may damage the card or the device and corrupt the data stored in the card.

To insert the memory card:

 1. Power off the mobile phone, then remove the rear cover and battery.
2. Insert the memory card into the slot.

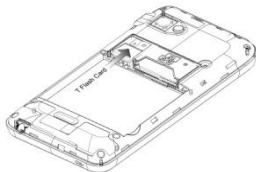

3. Finally insert the battery and the rear cover of the mobile phone.

3.4 Charge the Battery

You can charge your battery using the charger or the USB cable

supplied with this phone.

3.4.1 Charging via power socket

1. Connect the charger to the charger jack on the phone.
2. Next connect the charger to a power socket, the charging starts, with the charging icon in an animated state.



3. When the charging icon becomes static, it indicates that the battery is full.
4. Disconnect the charger from the power socket and the phone.

3.4.2 Charging via USB cable

1. Connect the USB cable to the charger socket on the phone.
2. Next, connect the USB jack of the cable with the pc or laptop. The charging starts, with the charging icon in an animated state.

User Guide

 


3. Disconnect the USB cable from the PC/Laptop and the phone.

Note: Slight heating during charging is normal. It indicates that the battery is full, when the charging icon becomes static.

4 The Home Screen

When you sign in, the home screen opens.

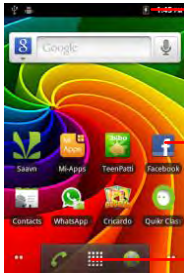

The status bar shows the time, signal strength, battery status, and other information. It also displays notification icons.

Touch items on the Home screen to open them. Touch and hold an empty spot to add a shortcut to an application, a widget and so on

 
Touch the Launcher icon to open the Launcher and view all your applications.

- The Home screen is your starting point to access all the features on your phone. It displays application icons, widgets, shortcuts, and other features.
- At the top of the screen, the Status bar displays the time, status, and notifications.
- Touch the Launcher icon at the bottom of the screen to view all installed applications.

4.1 Wake up the phone

If you do not use the phone for a while, the Home screen or other screen is replaced with a locked screen and the screen darkens to conserve the battery.

1. Press the power button.

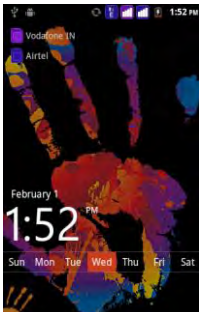

2. Drag the screen to unlock according to the arrow direction on the screen.

Based on your locking method, you may need to draw an unlock pattern or enter a PIN or password to unlock.

4.1.1 Return to Home screen

- Press the Home button  at any time, in any application.

To view other parts of the Home screen

Slide your finger left or right across the Home screen.

These extensions to the Home screen provide more space for widgets, shortcuts, and other items.

4.2 Using the touch screen

The main way to access the features is by using your finger to touch the icons, buttons, menu items, the onscreen keyboard, and other items on the touch screen.

- **Touch:** Acts on items on the screen, such as application and settings icons, to type letters and symbols using the onscreen keyboard, or to press onscreen buttons.
- **Touch and hold:** Touch and hold an item on the screen until an



User Guide

action occurs. For example, to open a menu for customizing the Home screen, you can touch an empty area on the Home screen until the menu opens.


- **Drag:** Touch and hold an item and move your finger on the screen until you reach the target position.
- **Swipe or slide:** Quickly slide your finger across the surface of the screen, (without dragging an item). For example, slide the screen up or down to scroll a list, and in some Calendar views swipe quickly across the screen to change the range of time visible.
- **Double-tap:** Tap quickly twice on a webpage, map, or other screen to zoom. For example, double-tap a section of a webpage in Browser to zoom that section to fit the width of the screen. You can also double-tap to control the Camera zoom, In Maps, and in other applications.
- **Pinch:** In some applications (Such as Maps, Browser, and Gallery) you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).
- **Rotate the screen:** On most screens, the orientation of the screen rotates with the phone as you turn it from upright to its slide and back again. You can turn this feature on and off.

4.3 Using the phone's buttons


The phone's physical buttons and soft buttons offer a lot of functions and shortcuts.

Button	Press	Press and hold
Back 	Opens the previous screen you were working on.	
Menu 	Opens a menu with items related to the current screen/application.	

User Guide

Home 	Opens the Home screen. If you are viewing the left or right Extended Home screen, opens the central Home screen.	Opens the most recently used application.
Power (Top)	Turns on/off the screen.	Opens a menu with options for airplane mode, for powering off the phone and so on.
Volume Up/Down (Right side)	Increases or decrease the call volume silences the ringer. Controls the volume of music, and other audio.	Quickly setting the ringtone volume to maximum or minimum.

 4.4 Home Screen

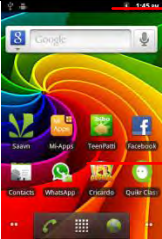

Status bar

Display area

Status bar: Appears at the top of every screen. Displays icons indicating that you have received notifications, and icons indicating the phone's status, along with the current time.

Display area: For various interface actions and display.

Interface switches includes:
The dialer, Main menu and Browser

Dialer



Main menu



4.5 Widgets

A widget acts as a shortcut to preview or open an application. You can paste the widget on the desktop as icons or preview windows.


You can also download additional widgets from the library of Android widgets.

5 Placing and Receiving Calls

You can dial a phone number or touch a number in your contacts, on web pages, and other places. When you are on a call, you can send them to your voicemail box.

You can also place from the Call log or contacts.

5.1.1 To place a call by dialing

1. Touch the phone icon  on the Home screen or touch the Phone tab from Contacts or the Call log.





Touch to erase digits.


Touch & hold to erase the entire number.

 
Touch and hold to enter "+" sign.

Touch to make a video call (Dependent on network operator.)

2. Touch the keys on the phone tab to enter the phone number.

If you enter a wrong number, touch  to erase the digits one by one. To erase entire number, touch & hold  icon.


- To dial an international number, touch and hold the 0 key to enter the Plus (+) symbol, then enter the international prefix or the country, followed by the full phone number.
- Touch the blue phone icon  to dial the number that you entered.

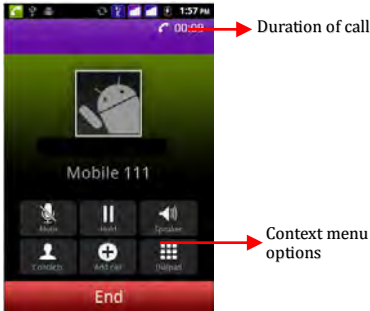

You can switch applications during a call—for example, to look up contacts. The green phone icon appears in the status bar while the call is underway.

- Press the **Volume Up/ Down button** to adjust the call volume.

5.2 End a call

While during a call, touch the  icon.

5.3 To disable phone calls (Airplane mode)

 
Some locations may require you to turn off your phone's mobile, Wi-Fi, and Bluetooth wireless connections. You can turn off all these wireless connections at once by placing your phone in Airplane mode.

1. Press and hold the **Power** button.
2. Touch the Airplane mode.

5.4 Options During a Call

When a call is in progress, you can put it on hold, initiate a phone conference, mute your microphone etc.


- To place a call on hold, touch the Hold icon.

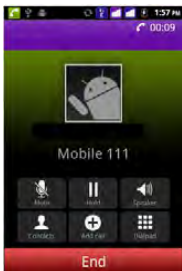

- Take the call off hold by touching the Unhold button.
- Touch the Mute icon to mute your voice at the other end. Unmute the microphone by touching the Mute icon again.
- Touch the speakerphone icon to turn on/off the speaker.

5.5 Conference Call

 If you accept a new call when you are already on a call, you can switch between the two callers or merge the two calls into a conference call.

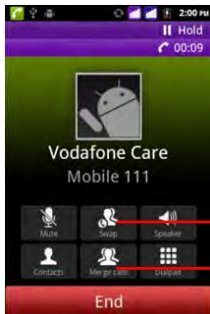

Touch to swap calls

Touch to merge the calls

1. Place a call to the first participant
2. When you are connected, touch the **Add call** icon, the first participant is put on hold and you are prompted to dial the second caller.
3. Place the next call, using the phone tab, the Call log, or your contacts.
4. When you are connected, touch Merge calls. The participant is added to the conference call.

You can add as many callers as your carrier supports.

Recommendation: Contact your service provider to know whether they support conference calls and how many participants you can include.

6 Browse the Internet

You can browse the Internet from the comfort of your A73

User Guide

Mobile phone while on the go. The A73 phone features the Google chrome browser to let you access the Internet.

Touch the browser icon at the launcher or the menu to access the Internet.



Tap the Google bar to search the Internet. Tap the Voice icon for voice search

Touch the browser icon at the launcher to access the Internet



Enter the URL at address bar

You can configure your Internet by going to:

Wireless & Networks > Mobile Networks > access point names.

Next, select the access point name or change the access point name for your Internet connectivity.

6.1 Access Internet via Wi-Fi

To browse the Internet via Wi-Fi:

1. Go to **Menu> settings> wireless & networks** and then tap **Wi-Fi**.
2. Next, go to **Menu> settings> wireless & networks > Wi-Fi Settings** and then tap the context menu on the phone and then tap **Scan**.

For more information on the connectivity settings, refer to section 15, Connect to Networks and Devices.

7 Managing Notifications

Notification icons inform the arrival of new messages, ongoing events, such as when music player is on or the current call status.

 
When you receive a notification, its icon appears in the status bar, along with a summary that appears only briefly.

Applications such as Gmail have their own settings, with options to configure notifications, such as ringtone, vibration and so on.

7.1 Open the Notifications Panel

Drag the status bar down from the top of the screen.

The Notifications panel displays your wireless provider and a list of your current notifications.

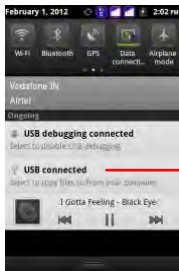

Touch a notification to open its application.

7.2 Respond to Notifications

- Open the notification panel and touch a notification to respond to it.
- What happens next depends on the notification. For example, for network disconnection notification, the list of configured network opens for you to reconnect.

7.3 Clear all Notifications

- Opens the Notifications panel
- Touch Clear at the panel. All event-based notifications are cleared; ongoing notifications remain in the list.

7.4 Close Notifications Panel

- Drag the tab at the bottom of the Notifications panel to the top of the screen. Or just press the back button. The panel also closes when you touch a notification to respond to it.


8 Working With Call Logs

The call log is a list of all the calls you have dialed, received, or missed. It offers a convenient way to redial a number, return a call, or add a number to your Contacts.

8.1 Open the Call log

Press the **Call log** button. Or if you have the **phone** or **Contacts** tab open, touch the **Call log** tab.



8.2 Actions from Call Log

 
- Touch and hold the entry to open a menu with options for communicating with that contact.
- Touch a Call log entry to call the contact, send a message, add the number to your contacts, learn more about the original call and much more.
- While viewing the call log, press  and touch **Clear call log**.
- Touch and hold an entry in the log and then, touch **Remove from call log** to remove the entry from the log.

9 Working With Menus

The phone provides you with Options menus and context menus.

9.1 Options menus


- You can open options menu by pressing the menu button .
- Not all screens have options menus. If you press menu  on a screen that has no options menu, nothing happens.

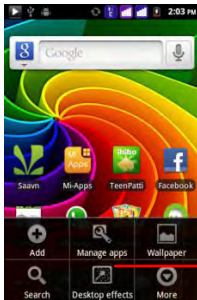

Options menu contains items that apply to the current screen or to the application as a whole.

9.2 Context menus

 Context menus contain tools that apply to specific items on the screen. You can open a context menu by touching and holding an item on the screen. Not all items have context menus.

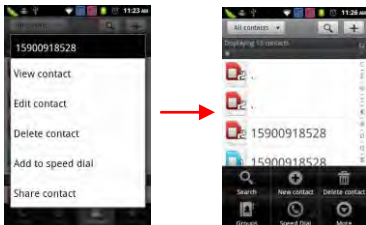

1. Touch the photos of the left of the item, an option menu opens.
2. When you touch and hold some items on a screen, a context

 
User Guide

menu opens.

9.3 Toolkits

Allows you to quickly start applications such as Bluetooth, Wi-Fi, GPS and so on.


- Open the Notifications panel by dragging down the top of screen with your finger.

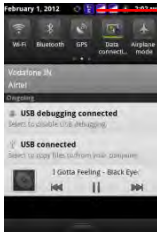

Toolkits


9.4 Using the Onscreen Keyboard

 You can enter text via the onscreen keyboard. Some applications display the keyboard by default. In others, you touch a text field where you want to enter text, to open the keyboard.



Tap this icon to select
desired contact from
phonebook

9.5 Enter text

- Use the keyboard to type.
- Use the  icon to erase characters.
- After typing, press Back to close the keyboard.

9.6 Enter Various Characters

- Press the symbols key to switch to the numbers and symbols keyboard.
- Press the ALT key on the symbols keyboard to view additional symbols; Press it again to switch back.

9.7 Edit Text

You can cut, copy, and paste text, within or across applications. Others may offer their own way to select text you want to work with.

 
- Touch the text field that contains the text to select the word.
- Cut or copy the text.

9.8 Select Text

You can select text for cutting or copying. The selected text is highlighted in orange.

User Guide

- Touch the text field or portion that contains text. A menu opens with options.
- Touch "Select word", to move the cursor to select the text.
- Touch "Select all" to select all the text.
- Touch the text field to move the cursor in text.

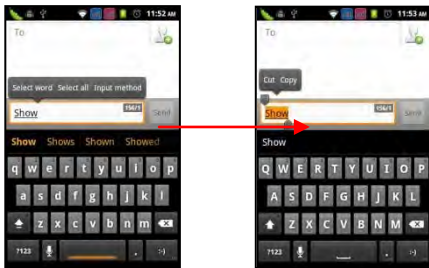

9.9 Cut /Copy/Paste Text

1. Tap on the text to cut or copy.
2. Touch **Cut or Copy** in the menu that opens.
3. Copy the text to paste.
4. Touch the text field where you want to paste the text. You can paste the text that you copied from one application into a text field in any application.
5. Touch **Paste** in the menu that opens. The text is inserted at the cursor.



9.10 Open and Switch Applications

 
The Launcher, holds icons for all of the applications on your phone, including any application that you downloaded from Android Market or other sources.

When you open an application, the other applications will keep on running: playing music, opening web pages etc. You can quickly switch between your applications, and work with

several at once.

9.11 Open and Close the Launcher

On the Home screen, touch the Launcher Icon  to open it. You can add an application icon to the Home screen by dragging it to the Launcher until it vibrates and then dragging it to .

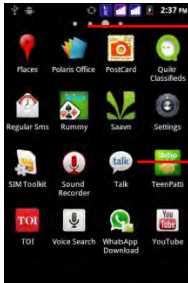


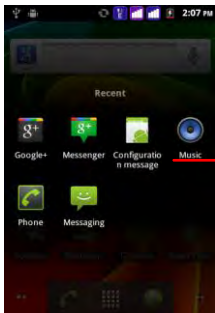 
Slide the Launcher left or right to bring more icons into view.

Touch an application to open it.

Press Home key or Back key to close the Launcher.

9.12 Switch to Recently Used Application


1. Press and hold the  button.
2. Touch an icon to open its application. Or press Back key to return to the current application.



Touch an icon to
open an application

9.13 Lock Your Screen

You can lock your screen to as a security measure. You may also be required to lock your screen by a policy set by an email or other account you add to your phone.



1. On the Home screen, press Menu  and touch **More > Settings > Security**.
2. Touch **Set up screen lock**.
3. Touch **Pattern** or **Password**. If you touch **Pattern**, you are guided to create a pattern you must draw to unlock the screen. If you touch password, you are prompted to set a numeric password you must enter to unlock your screen.

9.14 Customize Home screen

You can add applications, shortcuts, widgets, and other items to

any part of the Home screen or change the wallpaper.


9.14.1 Add items to the Home screen

1. Press  to open the Home screen.
2. Press menu  and touch **Add**. Or just touch and hold an empty location on the Home screen. If **Add** is dimmed; you must delete or move items to add another item, or switch to another Home screen.
3. In the menu that opens, touch the type of item to add. You can add the following types.
 - **Shortcuts**: Add shortcuts to applications, a bookmarked webpage, a favorite contact, a destination in Maps, a music play list, etc. The shortcuts available depends on the applications you have installed.
 - **Widgets**: Add any applications (widgets) to your Home screen, Including clock, music player, picture frame, Google search bar, Power manager, News & weather widget. You can also download widgets from Android Market.
 - **Folder**: Add a folder where you can organize Home screen items, or folders that contain all your contacts, contacts with phone number, or starred contacts. Your folder's contents are kept up to date automatically.
 - **Wallpapers**: You can add wallpapers using this option.

To move an item on the Home screen

1. Touch and hold the item you want to move.
2. Drag the item to a new location on the screen.

To remove an item from the Home screen

1. Touch and hold the item you want to remove.
2. Then drag it to trash can .

9.14.2 Change the Home screen wallpaper

1. Press Menu  and touch **Wallpaper**. You can also touch and hold an empty area of the Home screen and in the menu

that opens, touch **Wallpapers**.

2. Touch Gallery, Live wallpapers, Pictures or Wallpapers. Set it as wallpaper.

Touch **Live wallpapers** to open a scrolling list of animated wallpapers installed on your phone.

 
3. Touch **Set wallpaper**.

9.14.3 Rename a Folder

1. Touch the folder to open it.
2. Touch and hold the folder window's title bar.
3. Enter a new name in the dialog that appears
4. Touch **Ok**.

10 Messaging

You can use Messaging to exchange text messages and multimedia messages with your friends on their mobile phones.

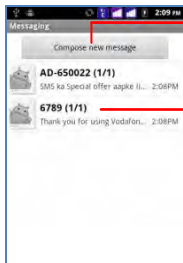


Touch to compose a new text or multimedia message.

Touch to open a messaging conversation

10.1 Delete Message Threads

1. Touch and hold the message to start a new text or multimedia message.

2. Touch **Delete thread** in the menu that opens.


You can also press Menu  and touch **Delete threads** to delete all message threads from the window.

 
10.2 Exchange Messages

You can send text message of up to 160 characters to another mobile phone. If you keep typing after the limit, your message is delivered as a series of messages.

A Message automatically converts into an MMS if you send it to an email address, add a subject, or media file.

10.3 Create and Send Multimedia Message

1. On the Messaging screen, touch **compose new message**.
2. Enter a mobile phone number or email address in the **To** field.
3. Touch the composition text box to start entering your message.
4. Touch  below the LCD screen. A menu opens as shown:

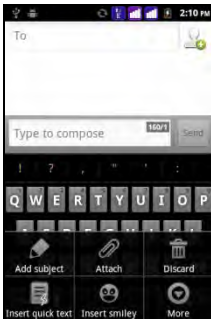

- Touch **Attach** to attach pictures, videos, audio and so on through the options available.
- Touch **Add subject** to add a subject.
- Touch **Insert Smiley** to insert smileys.

User Guide

- Touch **Insert Quick Text** to insert readymade texts.
5. Touch Send icon to send the multimedia message.

10.3.1 Forward a message

1. Touch and hold a message in a message window.
2. Touch **Forward** in the menu that opens.
3. Touch Send icon to send the message.

10.3.2 Lock a Message

You can lock a message so it won't be deleted if you reach your storage limits.

 
1. Touch and hold message in a message window.
2. Touch **Lock message** in the menu that opens. A lock icon appears to the left of the message. Unlock a message by touching and holding it and then touch **Unlock message**.

10.3.3 View Message Thread

1. Touch and hold a message in a message window.
2. Touch **View thread** in the menu that opens.

11 Camera

Your camera's pictures and videos are stored in the SD card, so you must insert one to use the Camera. You can copy pictures and videos from the SD card to a computer and vice versa. You can share pictures and videos from the Gallery.

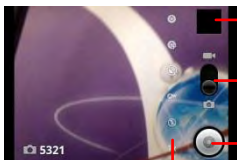

Touch to preview your pictures or videos in Gallery.

Drag up/down to toggle between video/camera mode

Touch to take a picture/ video.

Touch settings to change them

11.1 Take a Picture

Touch the Camera icon in the main menu.

- Adjust the exposure, flash, and other settings if you wish.
- Frame your subject on screen. You can zoom in or out by sliding the Zoom icon.
- Touch the shutter icon on the screen.

The clicked photograph is displayed for a moment, and then is displayed as a thumbnail at the bottom right.

11.2 Shoot Videos

- Drag the control to the video position
- Adjust the quality, effect, and other settings if you wish.
- Point the lens to the scene you want to capture
- Touch the start video icon.
- Touch the stop video icon to stop shooting.

11.3 Gallery

You can use the Gallery to view pictures and play videos.


1. Touch the Gallery icon in the Launcher.
2. Open Gallery from camera by touching the thumbnail image at the bottom right.



Touch to
open camera

Album of
photos
and videos


Slide left
or right to
view more
albums

3. Open Gallery from the camera by pressing  and touching Gallery.

If you have many pictures or videos on your SD card, it may take a few minutes to open and organize them.

4. Touch an album to open it and view its contents.
5. Peek into an album stack by touching it with two fingers and spreading them apart.
6. Touch a picture or a video in an album to view it.

11.4 Share an Album

 
1. Open the main Gallery window.
2. Press Menu  twice.
3. Check or uncheck the albums you want to share.
4. Touch **Share** at the bottom of the screen. In the menu that opens, touch the application to use to share the selected albums.

You can share via email, Bluetooth, Gmail and messaging.

12 Music


You can easily transfer your favorite music from your PC to the SD card and experience a whole world of interesting and melodious music.

When you copy music to your SD card, the Music player searches the card for music files and builds a catalog of your music, based on information about each file that is stored in the file itself.

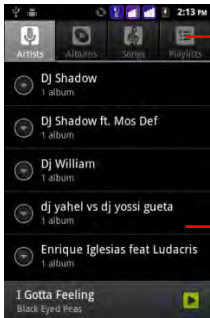


Touch a tab to view your library in one of four ways

Opens the content based on the active tab such as albums, songs etc.

You can return to the main library screen from most other screens in the Music applications by pressing Menu  and touch Library.

12.1 Play Music

 Your A73 comes with a music player to let you enjoy any music of your choice through your SD card.

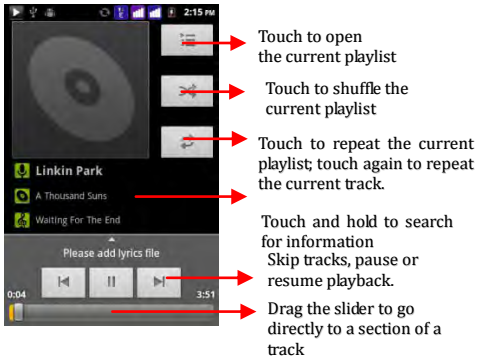


12.2 Control Playback Volume

Press the phone's volume up/down keys. A panel opens to show the current media volume; the indicator moves as you adjust the volume.

13 FM Radio

 You can listen to your favorite FM channels using the inbuilt FM receiver of your phone.

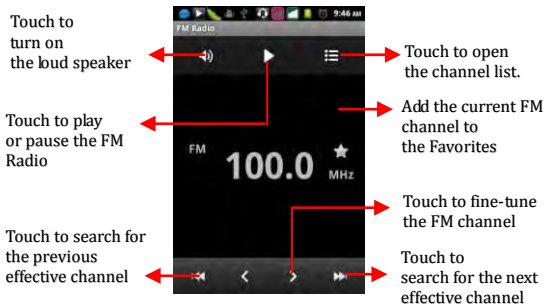

14 Other Features

Some of the notable features that appear on the phone's main menu are:

- **Calculator** for simple calculations
- **Calendar** for dates
- **Gmail:** Check your Gmail from here
- **File Manager** to manage your files.
- **Sound Recorder** for recording sounds
- **SIM toolkit** for access to various network services
- **Network based services** such as Weather, browser, Navigation, Messaging, Market, Search, Gmail, Latitude, etc.
- **Battery saving** allows you to start battery saving, and set

battery saving settings

- **Google search** to search your phone and the web. In many applications, opens a Search box for searching within the application

15 Connect to Networks and Devices


Your phone can connect to a variety of networks and devices, including Wi-Fi, GPRS, Bluetooth, devices, such as headsets. You can also transfer files to/from your PC through the data cable.

15.1 Connecting to Mobile Networks

Your phone is configured to work with more than one mobile carriers' network.


Your phone is configured to use the fastest mobile network available. But you can configure your phone to use a slower 2G network or a quicker 3G network. You can also configure your phone to behave in special ways when roaming.



15.2 Determine the Network you are Using

1. Touch , and touch **Settings**.
2. Touch **Wireless & networks>Mobile networks> Access Point Names**. The name of the wireless service provider you are currently registered with is selected in the list.

15.3 Edit or Create New Access Points

If you and your wireless service provider determine that you need to change the settings of your current access point name (APN) or to create a new one, you must obtain the APN and detailed settings from your provider.

1. Touch , and touch **Settings**.
2. Touch **Wireless & networks>Mobile networks>Access point names**.

3. Touch an existing APN to edit it, or press **Menu**  and touch **New APN**. Enter the APN settings that you obtained from your wireless service provider.
4. When you are finished, press **Menu**  and then **Save**.
5. If you created a new APN, touch it in the APNs screen to start using it.


15.4 Connect to Wi-Fi Networks

Wi-Fi is a wireless networking technology that can provide internet access at distance of up to 100 meters. To use Wi-Fi on your phone, you access a wireless access point, or “hotspot”. Some hotspots are open and you can simply connect to them. Others are hidden or implement other security features, so you must configure your phone so it can connect to them.

TIP: Turn off Wi-Fi when you are not using it, to extend the life of your battery.

15.4.1 Connect to Wi-Fi Network

If you are adding a Wi-Fi network when first setting up your phone, Wi-Fi is turned on automatically, so you can skip to step 4.

1. Touch , and touch **Settings**.
2. Touch **Wireless & networks > Wi-Fi settings**.
3. Check Wi-Fi to turn it on. The phone scans for available Wi-Fi networks and displays the names of those it finds. Secured networks are indicated with a Lock icon.
4. Touch a network to connect to it

If the network is open, you are prompted to confirm that you want to connect to that network by touching **Connect**.

If the network is secured, you are prompted to enter a password or other credentials (Ask your network administrator for details)

15.5 Receive Notifications

By default, when Wi-Fi is on, you receive notifications in the


status bar when your phone detects an open Wi-Fi network.

1. Turn on Wi-Fi, if it's not already on.
2. In the Wi-Fi settings screen, check **Network notification**. You can uncheck this option to stop receiving notifications.

15.6 Bluetooth

Bluetooth is a short-range wireless communications technology that devices can use to exchange information over a distance of about 10 meters.


15.6.1 Turn Bluetooth On/Off

1. Touch , and touch **Settings**.
2. Touch Wireless & networks.
3. Check or uncheck **Bluetooth** to turn it on or off.

*Important: Go to **Bluetooth Settings** and check **Discoverable** option so that your phone can be detected by other devices.*

15.6.2 Pair With Bluetooth Devices


You must pair your phone with a device before you can connect to it. Once you pair your phone with a device, they stay paired unless you unpair them.

1. Touch , and touch **Settings**.
2. Touch **Wireless & network > Bluetooth settings**.
3. If Bluetooth is not turned on, check **Bluetooth** to turn it on. Your phone scans for and display the IDs of all available Bluetooth devices in range.
4. If the device you want to pair with is not in the list, make it discoverable.
5. If your phone stops scanning before you make the other device discoverable, touch **Scan for devices**.
6. Touch the ID of the other device in the list in Settings to pair them. The devices pair with each other. If you are prompted to enter a password, try entering 0000 or 1234 (the most common password). If the pairing is successful, your phone

connects to the device.

15.6.3 Connect to Bluetooth Devices

Once paired, you can connect to Bluetooth device—for example, to switch devices or the reconnect after the phone and the device comes within range.

1. Touch , and touch **Settings**.
2. Touch **Wireless & network > Bluetooth settings**.
3. If Bluetooth is not turned on, check **Bluetooth** to turn it on.
4. In the list of devices, touch a paired but unconnected device in the list. If the device you expected is not displayed, touch **Scan for devices**. When the phone and device are connected, the device is displayed as connected in the list.

15.6.4 Connect to a computer via USB

 
You can connect your phone to a computer with a USB cable to transfer music, pictures, and other files between your phone's SD card and the computer.

You can not share your phone's data connection and SD card via USB cable at the same time. If you are using USB tethering, you must turn that off first.

15.6.5 Connect to Internet via your Phone

You can browse the Internet on your PC using your mobile phone. To do this:

1. Connect your mobile phone to your PC via the USB adaptor.
2. Go to **Menu > Settings > Wireless & Networks > Tethering & portable hotspot >** and then touch **USB Tethering**.

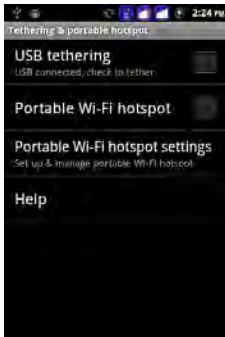

In case of Linux , Windows 7 and Vista OS, the drivers get automatically installed.

However, in case of Windows XP, you need to manually install the drivers.


15.7 Working with Secure Certificates

If your organization's VPN or Wi-Fi Network rely on secure certificates, you must obtain the certificates and store them in your phone's secure credential storage, before you can configure access to those VPN or Wi-Fi networks on your phone.

If your network administrate instructs you to download the certificates from a website, you are prompted to set a password for the credential storage when you download the certificates.

15.8 Install Secure Certificate from SD Card

1. Copy the certificate from your computer to the root of the SD card.

2. Touch  , and touch **Settings**.

3. Touch security.
4. Touch **Install from SD card**.
5. Touch the file name of the certificate to install. Only the names of certificates that you have not already installed on your phone are displayed.
6. If prompted, enter the certificate's password and touch **OK**.
7. Enter a name for the certificate and touch **OK**.

16 Phone Settings

You can go to Settings to configure how your phone looks, sounds, communication, privacy, and operations in a variety of ways:

SIM management	Set preferences on how you use SIMs inserted in your phone.
Wireless & networks	Lets you configure and manage connections to networks and devices by Using Wi-Fi, Bluetooth, and mobile networks.
Call settings	Lets you configure phone call settings, such as call forwarding, call waiting, and other special features offered by your carrier.
User profiles	Lets you configure how and at what volume the phone rings, vibrates etc.
Display	Lets you configure brightness and other screen settings.
Location	Set location preferences
Security	Lets you set your preferences for using and sharing your location when

User Guide

	your search for information and use location-aware applications, such as Maps.
Applications	Set preferences for the various application displayed on the phone menus.
Accounts & sync	Lets you add, remove and manage your Google and other supported accounts
Privacy	Lets you manage your personal information.
Storage	Lets you see and manage available space on your phone and on your SD card.
Language & keyboard	Lets you select the language for the text on your phone and for configuring the onscreen keyboard.
Voice input & output	Configure the voice input feature to enter text by speaking.
Accessibility	Enable your installed accessibility applications and adjust related settings.
Date & Time	Lets you choose preferences such as format and time zones
Schedule Power On/Off	Schedule automatic powering on/off of the phone.
About phone	View information about your phone, such as system updates, status, and battery use.

17 Health and Safety Information

Please read the following guidelines regarding the use of your phone. Not following them may be dangerous or illegal.

Certification Information (SAR)

- Your phone is designed not to exceed the limits of emission of radio waves recommended by international guidelines. These guidelines developed by the independent scientific organization ICNIRP includes safety margins designed to assure the protection of all persons, regardless of age and health.
- SAR (specific absorption rate) is the unit of measurement of body-absorbed RF quantity when the phone is in use. SAR value is ascertained according to the highest RF level generated during laboratory tests.
- The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 gram of human tissue.
- The true SAR level during phone usage will be far lower than this level.
- The SAR value of the phone may change depending on factors such as how close you are to a network base station, use of accessories and other enhancements.
- The highest SAR value under the ICNIRP guidelines for use of the device is 0.615 W/kg (head) and 0.507 W/kg (body) averaged over 10 gm of human tissue.
- The SAR value may differ depending on national reporting, testing requirements and the network band.

SAR Recommendations

- Please keep your calls short and use SMS whenever more convenient. This advice applies especially to children, adolescents and pregnant women

User Guide

- Prefer to use your cell phone when the signal quality is good.
- People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant.
- Maintain a preferable distance of 15 mm from the device.

Safe Driving

- Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit.
- Please do not put the phone onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.

During Flight

- Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone or switch to flight mode during a flight.

In Hospitals

- Your Phone's radio waves may interfere with the functioning medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external Radio Frequency. Switch off your device when regulations posted instruct you to do so.
- Do not carry the wireless device in a breast pocket.
- Turn off the phone if there is any reason to suspect that interference is taking place.

Unsafe Areas

- Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.

18 Taking Care of Your Device

Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you

User Guide

protect your phone:

- Keep the device dry. If your device gets wet, remove the battery without turning on the device, wipe it with a dry cloth and take it the service center.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not attempt to open the device other than as instructed in this guide. Repairing the phone by yourself other than our authorized service agents/centers goes against the warranty rules.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.

Battery Recommendations:

- Please put the battery in a well-ventilated place out of direct sunlight. Charge the battery at room temperature range.
- If the time span of the battery after charging becomes much shorter than usual, the battery life is at an end. Replace the battery with a new battery of the same make and specification.
- Do not discard the battery with household trash. Please dispose of used battery according to your local environmental laws and guidelines.
- Use manufacturer approved batteries, chargers, accessories and supplies. Micromax will not be responsible for user's safety when using unapproved batteries or accessories.

User Guide

Disclaimers

- Micromax will not bear any responsibility for any incompliance with the above mentioned guidelines or improper usage of the mobile phone.
- The content of this manual may vary from the actual content displayed in the mobile phone. In such a case, the later shall govern.
- Micromax keeps the right to make modifications to any of the content in this user guide without public announcement or prior notification.

Copyrights:

- All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Micromax is strictly prohibited.