

Welcome

Thank you for purchasing the Micromax X286 handset. This handset provides you with the following rich array of exciting features:

- ✓ Dual SIM
- ✓ Camera
- ✓ Music Player
- ✓ Video Recorder
- ✓ FM Radio
- ✓ Torch
- ✓ Memory card support

PHONE LAYOUT



INSERT SIM AND MEMORY CARD

You can use your phone with one or two SIM cards inserted.

1 Open the back cover and remove the battery.

2 Insert the SIM card correctly in the card slot(s) as shown below.



3 Open the memory card slot, and insert the memory card into the slot with the gold colored contacts facing down (as shown above)



SWITCH PHONE ON/OFF

- To switch ON your phone, press and hold the End key for a few seconds.
- To turn OFF your phone, press and hold down the End key for a few seconds.

MAKE A CALL



You can make a call in the following ways:

- Enter the desired number in standby mode and press the **Call key 1/2**.
- Go to Menu> Phonebook and then select and dial the desired number.
- Just press the **Call Key 1** or **Call Key 2** key in standby mode to dial the contacts listed in Call logs.
- You can also dial a contact from the messages.

ANSWER A CALL

Press the **Call Key 1/2** to answer a call.

START A CALL CONFERENCE

- ① While on a call, you can make or accept a new call. Once the new call gets connected, the first call will be put on hold.
- ② After this, press **Options** and then choose **Conference**.

AUTO REDIAL

Menu>Settings>Call Settings>Advanced Settings>Auto Redial

Once activated, the phone will automatically redial, if there is no answer from the number you have dialed.

CALL TIME REMINDER

Menu>Settings>Call Settings>Advanced Settings>Call Time Reminder

If activated, the phone beeps at the interval time you set during a call.

THEFT TRACKER

Menu > Settings > Security Settings> Theft Tracker

Track your phone in case of loss or thefts by activating the Theft Tracker mode and configuring an alternate number for receiving messages from the unauthorized user. If an illegal user is using your mobile, a SMS will be sent to the notify number so that you can obtain the number of the illegal user.

SEND AND VIEW MESSAGES



Menu > Messages

You can compose, send, receive, forward, delete or back up selected messages.

USE THE TORCH



Menu > Organizer> Torch

In standby screen, long press 0 key to turn on/off the torch.

MULTIMEDIA



Menu > Multimedia

You can use features like Camera, Video recorder, Video player, Music player, Sound Recorder, Image viewer and FM radio.

CONNECT WITH BLUETOOTH DEVICES

Menu > Organizer> Bluetooth

Your phone enables you to connect the phone wirelessly to other Bluetooth devices and exchange data with them.

SECURE YOUR PHONE

Menu> Settings> Security settings>Phone Security>Phone Lock

Let you lock your phone via a security password which you can change anytime.

The default security code to unlock the phone is 0000.

PRIVACY FOR MESSAGES, PHONEBOOK,

CALL LOGS...

Menu > Settings> Security settings >

Privacy Protection

a.Enter the default password 0000 to set the privacy lock.

b.Go to Protected Objects

c.Select and enable the desired objects to protect and save the choice.

Each time you access the protected feature such as messages, you will be asked for the password which you can change as per your requirement.

BLACKLIST NUMBERS

Menu> Settings > Call Settings > Advanced Settings> Blacklist

This feature blocks a list of contacts as per your choice.



HEALTH & SAFETY INFORMATION

Please read the following guidelines regarding the use of your phone. Not following them may be dangerous or illegal.



Safe Driving

- Do not use the phone while driving. When you have to use the phone, please use the personal hands-free

kit.

- Please do not put the phone onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.



In Hospitals

- Your Phone's radio waves may interfere with the functioning of inadequately shielded medical devices. Switch off your device when instructed to do so.
- Always keep your phone at least 15.3 centimeters (6 inches) from the medical device.
- Do not carry the wireless device in a breast pocket.
- Turn off the phone if there is any reason to suspect that interference is taking place.
- Follow the manufacturer directions for the implanted medical device.
- If you have any questions about using your wireless device with an implanted medical device, consult

your health care provider.



Unsafe Areas

Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.

TAKING CARE OF YOUR DEVICE

The following suggestions will help you protect your phone:

- Keep the device dry. If your device gets wet, remove the battery without turning on the device, wipe it with a dry cloth and take it the service center.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not attempt to open the device other than as instructed in this guide.

Repairing the phone by yourself other than our authorized service agents/centers goes against the warranty rules.

- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.
- Location: The socket-outlet shall be installed near the equipment and shall be easily accessible.



Battery Recommendations

- Please put the battery in a cool and well-ventilated place out of direct sunlight. We recommend you to charge the battery at room temperature range.
- Batteries have life cycles. If the time that the battery powers equipment

becomes much shorter than usual, the battery life is at an end. Replace the battery with a new battery of the same make and specification.

- Use manufacturer approved batteries, chargers, accessories and supplies. Micromax will not be held responsible for user's safety when using unapproved accessories or supplies.
- Warnings on Battery:
 - (a) Please use appointed battery in case of explosion risk.
 - (b) Please dispose of lifeless battery under guidance.

Recycle Your Phone



The WEEE logo (shown at the left) appears on the product (battery, handset, and charger) to indicate that this product must not be disposed off or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste

equipment by relocating over to the specified collection point for recycling. of such hazardous waste.

Collection and proper recovery of your electronic waste equipments at the time of disposal will allow us to help preserve the environment. Recycling of the electronic waste equipment will ensure safety of human health and environment. For more information on best practices for disposal of electronic and electrical waste, please visit to our web site:
www.micromaxinfo.com/weee.php

Disclaimers

- The colors and specifications shown/mentioned in the user manual may differ from the actual product. Images shown are for representation purpose only.
- Micromax keeps the right to make modifications to the content in this user guide without any prior notice.
- The functions explained or listed in this manual may differ from the

actual functions appearing in the mobile phone. In such a case, the latter shall govern. We do not guarantee the absolute accuracy of the User Guide Vis-a vis the actual handset.

Copyrights

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Micromax is strictly prohibited.