

INTEX

Aqua Style
Android Smart Phone
User Guide

Directory

1	Install.....	9
1.1	Install the SIM card or USIM card and battery.....	9
1.2	Battery charging.....	10
1.3	Insert the storage card.....	12
1.4	Remove the storage card.....	13
1.5	Format the storage card.....	13
1.6	Use the storage card as U disk.....	14
1.7	Standby screen.....	15
2	Custom mobile phone.....	16
2.1	Wireless and internet.....	16
2.2	Equipment.....	17
2.3	Personal.....	18
2.4	System.....	19
2.5	Install and unload apps.....	20
2.6	Gesture Sensor.....	20
3	First Interface.....	21
3.1	Dial.....	21
3.2	Contacts.....	22
3.3	Message.....	23
3.4	Browser.....	24

3.5	<i>E-mail</i>	25
3.6	<i>Camera & Vidicon</i>	26
3.7	<i>Multi-media file management</i>	27
3.8	<i>Music player</i>	29
3.9	<i>Recorder</i>	30
3.10	<i>Calendar</i>	31
3.11	<i>clock</i>	Error! Bookmark not defined.
3.12	<i>calculator</i>	Error! Bookmark not defined.
3.13	<i>Other functions</i>	33
4	<i>Application</i>	34
4.1	<i>Map</i>	34
4.2	<i>Talk</i>	35
4.3	<i>Facebook</i>	36
4.4	<i>Nimbizz</i>	37
4.5	<i>Google+, Messenger</i>	38
4.6	<i>Play Music, AajTAK, Headlines, Saavn</i>	40
4.7	<i>Documents to Go, Adobe Reader, Flash Player settings</i>	40
4.8	<i>Games</i>	40
4.9	<i>Play Store</i>	40
5	<i>Use and Maintenance</i>	40
6	<i>Technical Information</i>	41

Dear INTEX customer,

Congratulations on becoming a proud owner of INTEX product. You have now joined the fraternity of millions of satisfied INTEX customers spread across the globe.

Intex Technologies is one of the fastest growing IT Hardware, Mobile Phones and Electronics Company. A well established brand, INTEX has kept pace with the technology needs of millions of IT hardware & electronics consumers and has been serving them with more than 300 user friendly, high quality, state-of-the art yet simple products/solutions. The products have been in the market since 1996 and conform to global standards.

Brand INTEX covers a wide range of computer peripherals and accessories such as Computer Multimedia speakers, Cabinets, Keyboards, Mouse, UPS, Add-on cards, Webcams, Headphones, Laptop bags, etc. As a part of its diversification strategy, Intex also offers an interesting range of PCs, TFT-LCD Monitors, Consumer Electronics (DVD Players), Home UPS & Mobile Phones.

Every INTEX product goes through a rigorous process of sample evaluation and approval before commercial launch. Customers look upon the brand as a value-for-money & feature-rich offering, supported by efficient after sales service.

We look forward to your patronage.

It would be our pleasure to receive feedback and suggestions you may have for improvements in the product(s) you are using.

Intex Technologies (I) Ltd

info@intextechnologies.com

www.intextechnologies.com

Helpline No. 1800-103- 8822 (India)

Intex Way Gulf LLC

service@intexuae.com

www.intexuae.com

Toll Free No. 800-468- 39823 (Dubai)

Tel: 00971 04 3931991

Need Add below in safety column

SAR

The highest SAR value for this mobile phone is < 1.6 W/Kg, in accordance with the requirements of the ICNIRP, which recommended the limit for exposure to radio waves is 1.6 watts/kilogram (W/kg) averaged over 1 gram of tissue. For more information, please visit (website) to query

SAFETY TIPS

Use of wireless hands-free system (headphone, headset) with a low power Bluetooth emitter.

Make sure the cell phone has a low SAR.

Keep your calls short or send a text message (SMS) (instead.

This advice applies especially to children, adolescents and pregnant women.

Use cell phone when the signal quality is good.

People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant.

Please read the instruction file first

 
 
Before you use this phone, please read all the safety cautions in the instructions in detail, to ensure safety and correct use.

- *The descriptions are based on the default settings*
 - *The pictures and screen shots may different from the actual product.*
 - *The phone with sound resource, wall paper and picture are permitted to use limited in Intex or among all the owners.*
- Against the commercial and other reason to extract and use these file will violate the copyright law. Intex is not responsible*

for this behave of right violation.

- *Receive and send message, upload and download, automatic synchronism or GPRS service may cause other kinds of fee. If you want to avoid the extra fee, choose the probable charging plan. Any relevant information, please contact the service supplier.*
- *To the unknown software, be careful when install, the strange website pop up when browsing the internet, you can click but better to avoid the operation or the phone will be poisoned.*
- *Please properly keep this instruction book for the future reference.*


Mobile phone parts diagram

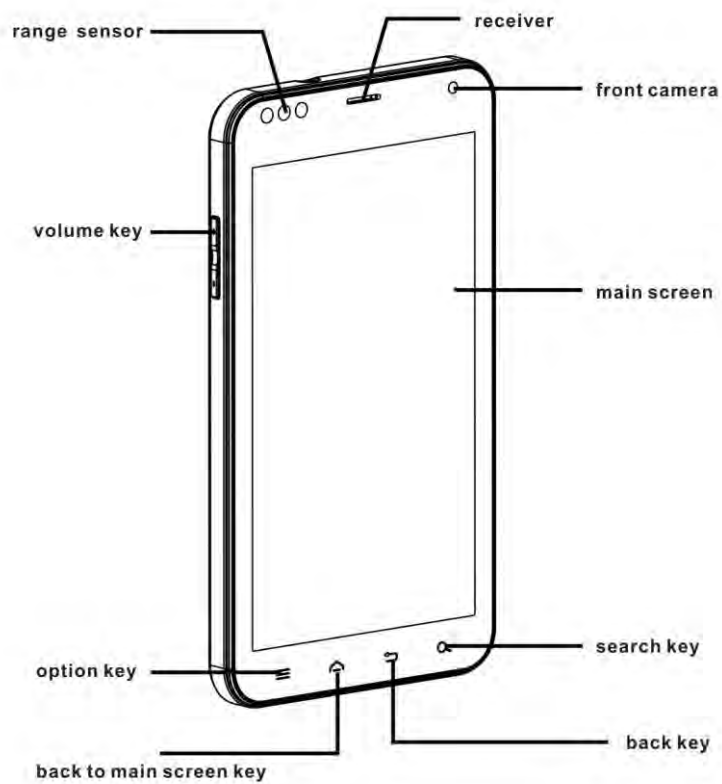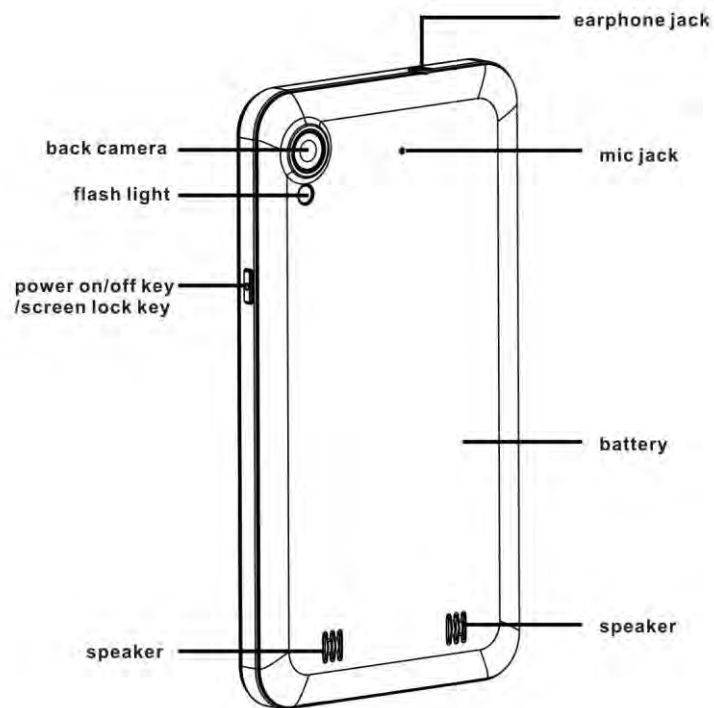


1 Install


1.1 Install the SIM card or USIM card and battery

 1, If the phone is on power, please turn it off, press the power off key->choose power off->confirm to turn off the phone, take off the battery

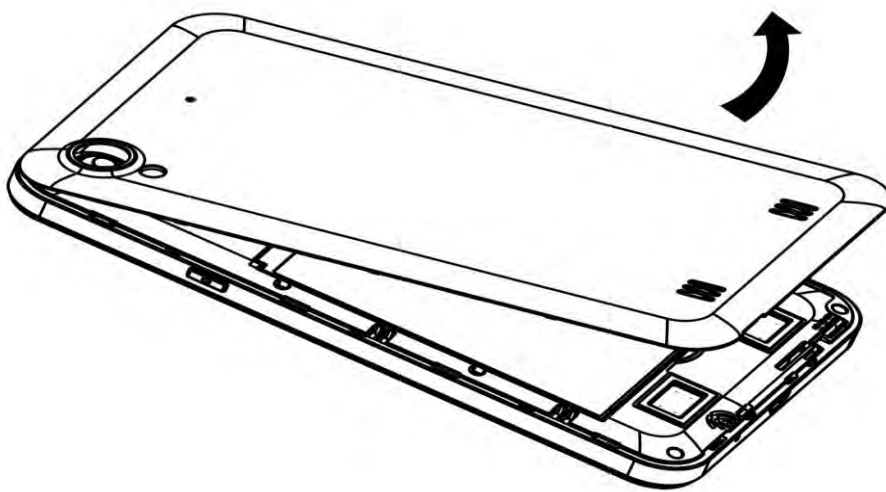

  2, Take off the battery, put the SIM card into the corresponding card slot

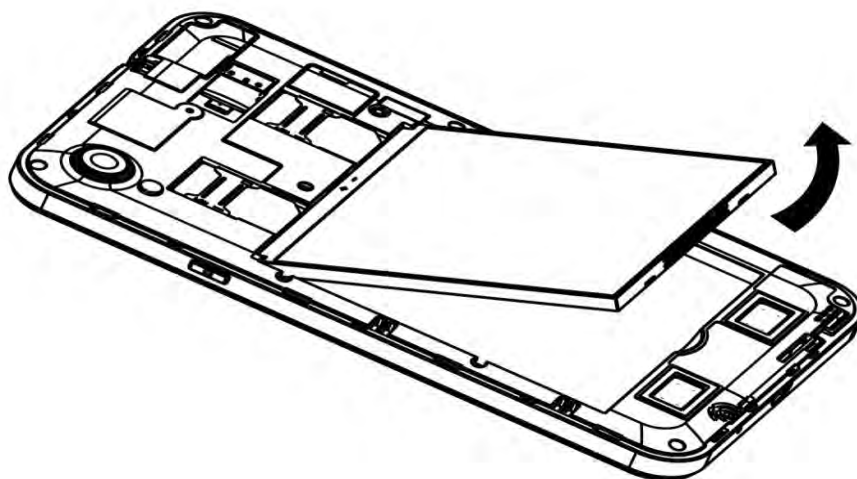

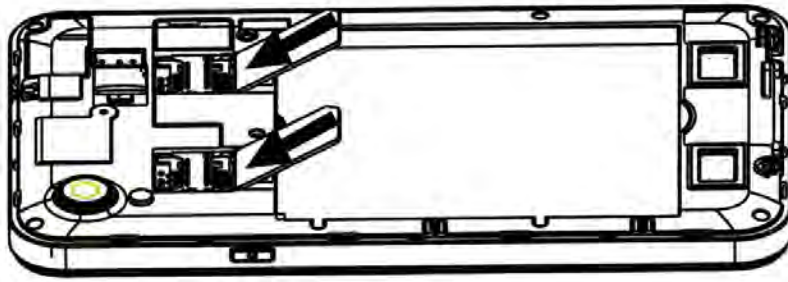

3, Put back the battery and battery cover

1.2 Battery charging

- *When using the phone at the first time, need to charge for the phone, can use charger or connect the phone with the computer via data cable.*
- *The phone will issue warning tone and display electricity shortage information when low battery, the battery icon will turn red, moreover, the phone will turn off automatically when electricity is too low. Need to charge then you can use the phone.*
- *If the battery is power off, can't turn on the phone immediately even connect to the charger, before you turn on the phone, please charge for several minutes.*
- *When charging with the charger, Please put the small end plug of the charger into the mobile phone in the multi-function socket, put the big end into the standard*

power socket, be attention the improper charger connection will lead to serious damage to the phone, to the damage caused by disoperation, will not guarantee to repair.

- Can use the phone when charging, but thus will influence the charging time of the phone, the phone may get hot when charging, this is normal phenomenon, do not affect the using life and performance.
- When the batteries get full electricity (battery icon doesn't move), please disconnect the charger and the phone, and take down the charger from the socket. Do not take off the battery when charging, this might damage the phone.

Reduce battery loss

If launched automatic synchronization, Bluetooth function or WLAN function in the background, the battery will consumes faster. If you want to save electricity, please shut down unnecessary application. You can also reduce background light time and the brightness of the display screen, or press the power off key to switch over to sleep patterns.

 
1.3 Insert the storage card

If you want to store more multi-media file, you should insert storage card, the biggest storage card can be used in this phone is 32GB (depending on the storage card manufacturer and category)

Karbons use the public storage card industry standard, but some brand may can't compatible with the phone, if use incompatible storage card might damage the phone and storage card, and also damage the data in the card.

Install the storage card:

1, Take down battery cove and battery, insert the storage card into the phone, and let the golden electric shock surface downward.

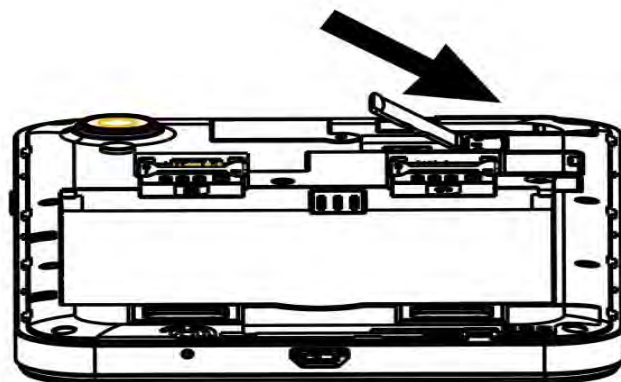

2, Push the storage card into the socket until it lock in place.

3, Put back the battery and battery cover.

1.4 Remove the storage card

Before you remove the storage card, please uninstall for safely remove.

1, Under standby pattern, setting>storage>uninstall SD card>confirm

2, Take down the battery cover and battery.

3 Slightly push the storage card to drop from the phone, take out the card.

4, Put back the battery and battery cover

Attention: when upload or download data, please do not take out the storage card, or may lead to data loss or damage the phone and storage card.

1.5 Format the storage card

Format the storage card on the computer may lead to incompatibility between the card and the phone, please format the card on the phone.

Under standby pattern, setting>storage>format SD card>OK

 
 
Before you format the storage card, remember to back up the important file to the phone.

1.6 Use the storage card as U disk

If you want to transfer the file from computer to the storage card of the equipment, please set the equipment to U disk pattern.

1, Use USB cable to connect the equipment and the computer, at this time will drop-down the shortcut list, choose USB already connected.

USB connected

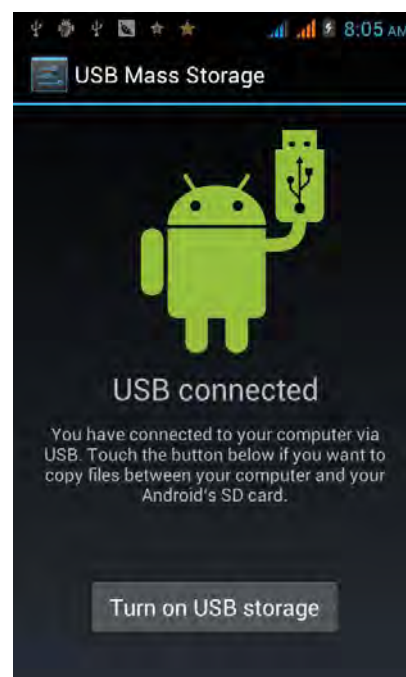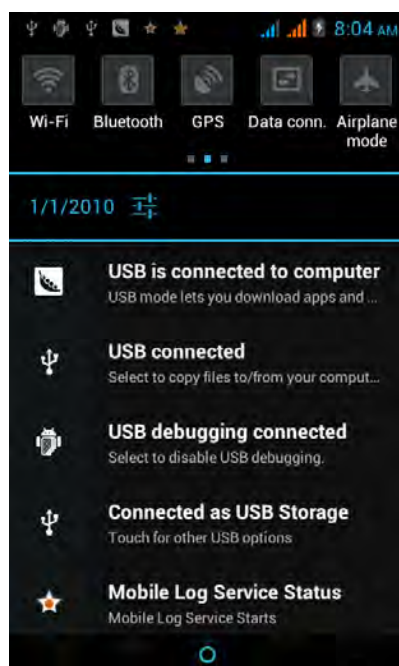

2, In the pop-up interface, click to open the USB storage equipment,

Turn on USB storage

Attention: after open the USB equipment, some applications may can't be used, such as camera, music player etc. If want to close U disk pattern, please click to close the USB storage

equipment.

1.7 Standby screen

- *When the phone is under standby pattern, can see standby screen. In the standby screen, can view the state of the phone and access program, and the standby screen have multiple panels, sliding to the left or right to choose a screen panel*
- *Can add application or the application project, the group file or folder shortcuts to custom the standby screen: under standby mode, long hold application icon click on the standby screen blank area.*
- *Move the project in the standby screen, click on the project, and drag to the position you want.*
- *Delete project from standby screen: click on the project, the recycle bin appear above the screen, drag the project to the recycle bin, loosen when project turn red.*
- *Use shortcuts surface; under standby pattern or use the application, click on the indicator icon area and drag down to open the shortcut panel, can cancel or start data connection function and access notice list, such as information, call, activity or processing condition. If you want to hide list, drag up the list will be OK. On the shortcut panel can also start*

or shut down the following options: data connection, off-line mode, the screen brightness, standby, automatic roll screen and contextual model switching.

2 Custom mobile phone

Standby interface->main menu->setting

 
2.1 Wireless and internet

SIM card management: can set SIM card and voice calls, information, data connection to start or close.

Flow use situation: can check the current flow use situation, so that you can more clearly to control the flow use.

Other mode setting: start or close flight mode, and the internet setting.

Use WIFI: setting>WLAN setting>open, will appear the wireless internet nearby, choose your internet, enter the password will be ok.

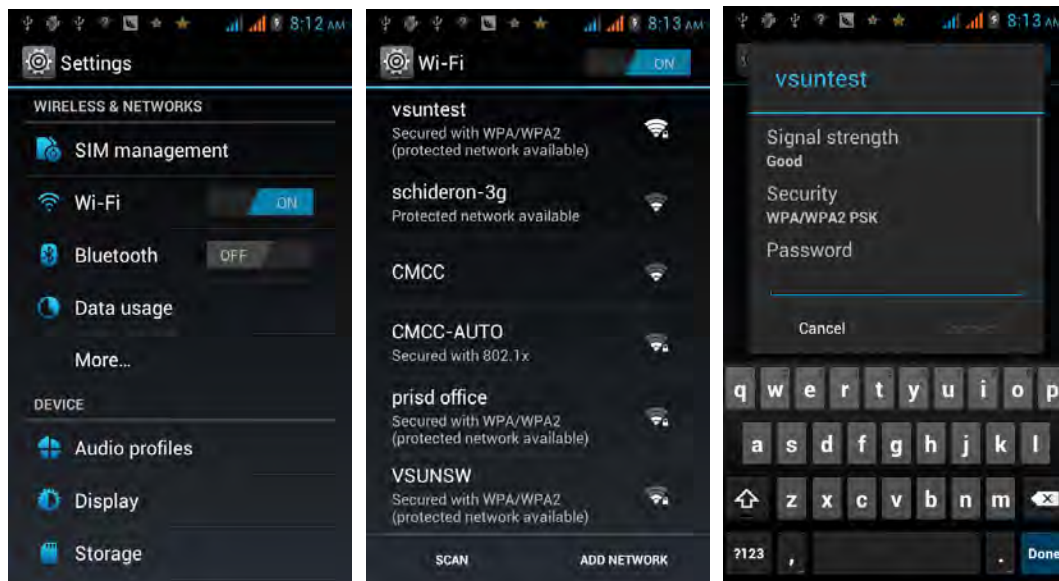

2.2 Equipment

Audio Profiles: In audio profiles, it has General mode, Silent mode, Meeting mode, and Outdoor mode. You also can add Custom mode according to your demand, and reset all the audio profiles to default.

Display: You can custom the display settings.

- *Brightness: Set the brightness of the screen.*
- *Wallpaper: Wallpaper setting has four modes, Live Wallpapers, Gallery, Wallpapers, and Video Wallpapers. You can choose your style by yourself, also can download from the Internet*
- *Theme: change the Theme UI.*
- *Auto-rotate screen: On/Off.*
- *Sleep: 15seconds/30seconds/1min/2min/5min/10min/30min, you can set the sleep time according to your habit. Sleep time*

 
is shorter, you can save more electricity, increase your mobile using time.

➤ *Font size: Set the size of System fonts.*

Storage: Check the use condition, and install, unload, erase SD card.

Battery Percentage: Start or Close the battery percentage, know about the using condition of the battery.

Apps: check and manage the downloaded apps, and unload the unnecessary apps.

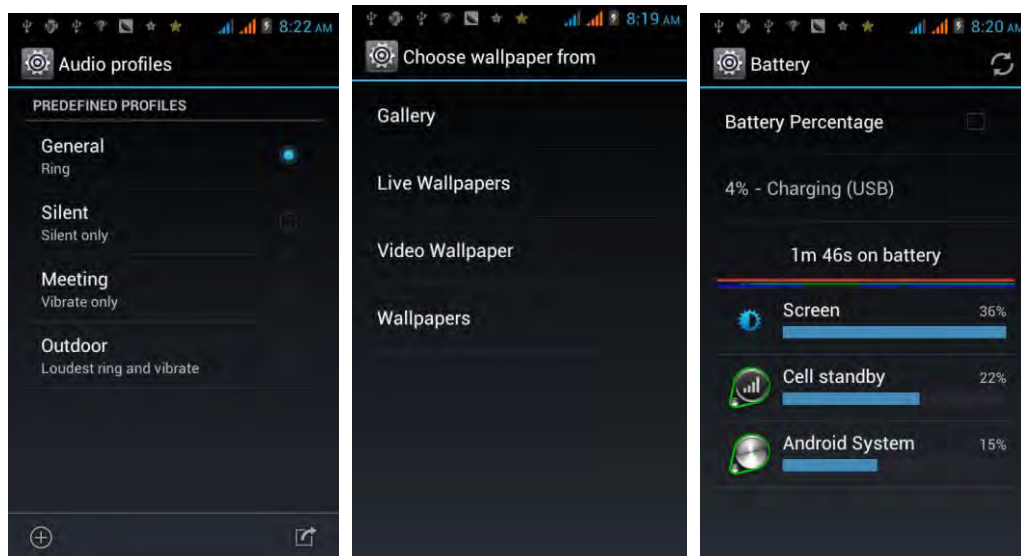

2.3 Personal

Accounts & sync: On/Off.

 
Location services: set the location services.

Security: Security settings can set screen lock mode, encrypt the

phone, set SIM card lock and device administrators, and set the use and install of the unknown sources and apps.

Language & Input: Set the system languages and input methods.

Backup & reset: DRM reset, Factory data reset. Note that the data of your mobile will be erased when reset factory data.

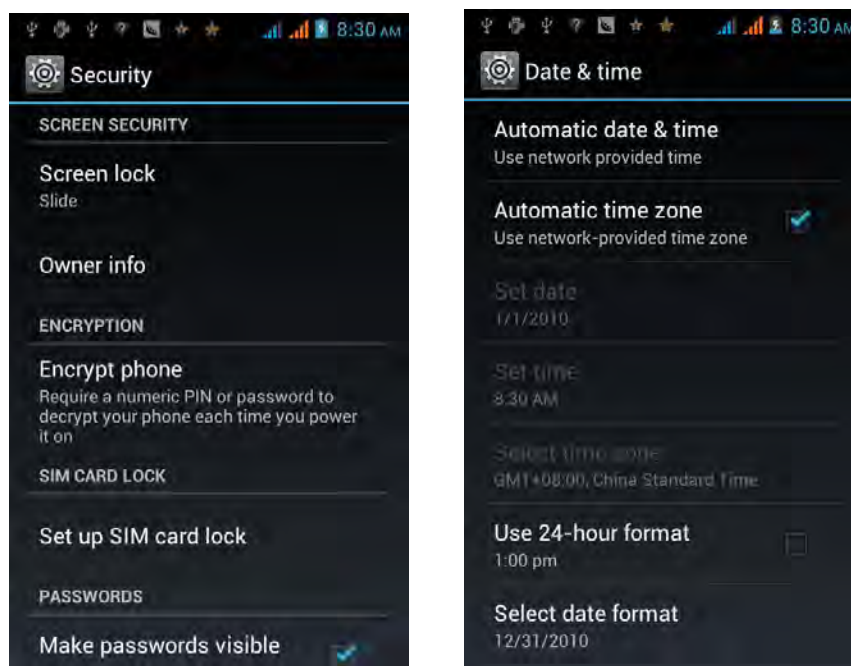

2.4 System

Date & time: Manual setting time, automatic time mode.

- *Automatic date & time: can choose use network provided time and off.*
- *Automatic time zone: On/Off.*
- *Set date/time/ Select time zone: Manually set date, time and time zone.*
- *Use 24-hour format: On/Off.*

➤ *Select date format: Select the format according to your habit.*

Accessibility: some special functions settings.

About Phone: Include Status, Legal information, Model number, Android, Baseband version and Kernel version.

2.5 Install and unload apps

Install apps: download the app through e-market or browser, click install. Android system is APK format. You also can down from your computer, copy it to T-Flash card, then get into the T-Flash card through file manager, choose APK file, click install.

Unload apps: Click the menu> Manage applications, click the app you want to unload, click “unload” or “erase the data” to erase the app record, release the space.

Note: If the app downloaded from the browser can not be installed, please choose Setting > Security> Unknown sources. And you can find it from the download content.

2.6 Gesture Sensor

 
Gesture Sensor: Aim at the cell phone top left corner, slide left and right. Through the gesture slide to operate the parts


functions of the cell phone, switch pictures, videos, music and answer and end incoming calls.

3 First Interface

3.1 Dial

In homepage, click , input the numbers then click .

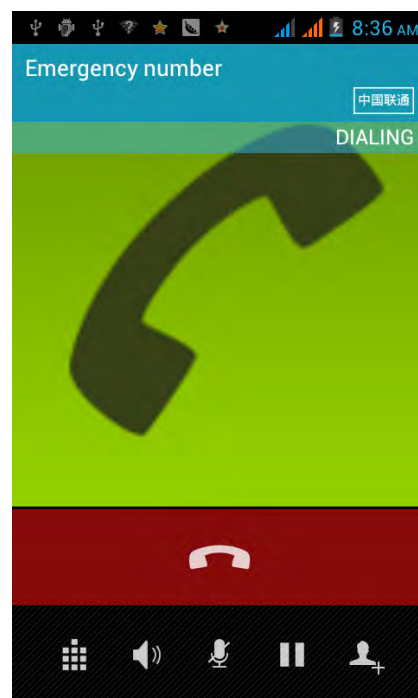


Press  when incoming calls, Slide to left for rejecting the calls, slide to the top is rejecting the SMS, slide to right is answering the calls.

Note: When receive the incoming calls, will display the name,

number, contacts photo, etc, information. And will choose ringtone hint and Vibration hint according to cell phone settings. If the incoming calls are not in the contacts list, it will only display the number and default photo.

3.2 Contacts

 In homepage, click  >Contact. Choose  new contact, display  is OK.

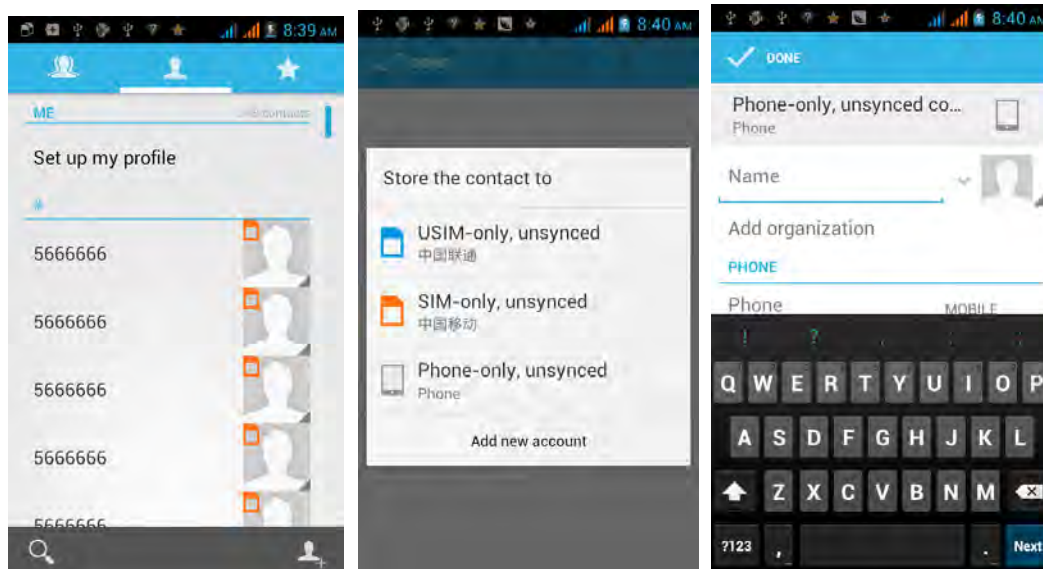

Import Contacts

- 1. In contacts list, press menu, click import/export, choose the contact in the list.*
- 2. Choose next, you can import or export the message according to the steps.*

Note: If the contacts are too many, it will take some time to

read the contacts information, please wait with patiently.

Search contacts

 
1, Press “search” in contacts list





2, Input the contact name, then contact meet the requirements will display in the bottom of the input box.

Note: find the contacts, you can click it to make the phone call or send SMS/MMS/Emails, etc.

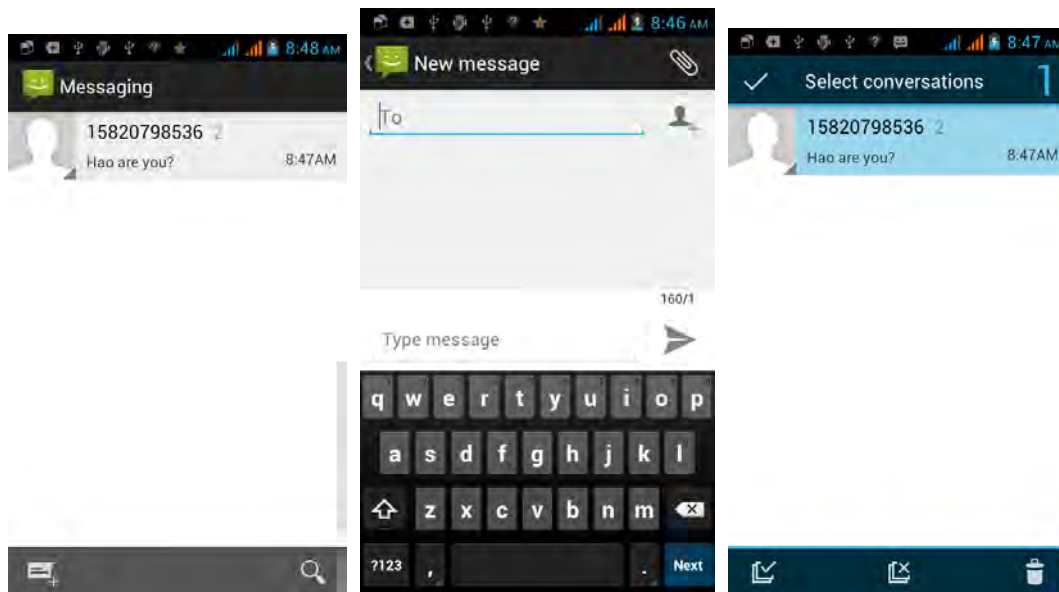
3.3 Message

In homepage, click  > message



Click  to type messages, click  add contacts, also you can input the number. After type messages, click  to send message. Long press the message, choose  can

delete, multi-choose, and select all messages.

 
 
Send MMS, please click  in information editor interface, choose the attachments, it will convert to MMS. Or:

1, Click “Menu”, click “add theme”, type theme content.

2, Click “input content” box, type your message.

3, Click “Menu”, add attachment.


Note: In attachment adding window, you can add pictures, videos, audios, records, PPT, contacts, calendar, etc. After adding the attachments, you can also check, replace, and delete them.

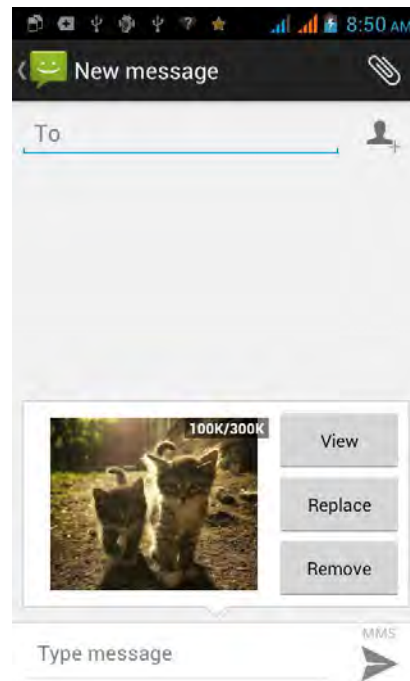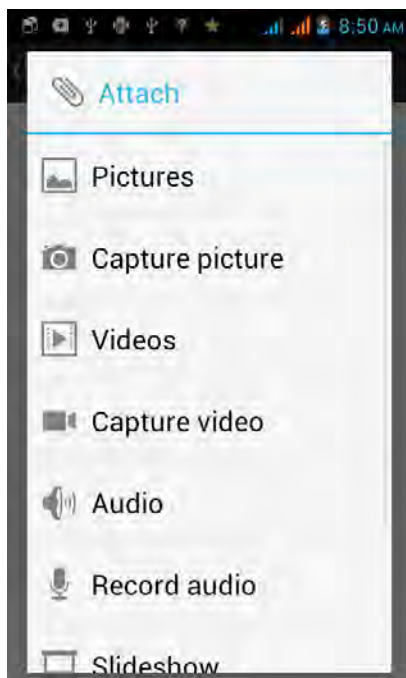

3.4 Browser

In homepage, click  to search or input the websites, click

 
Go

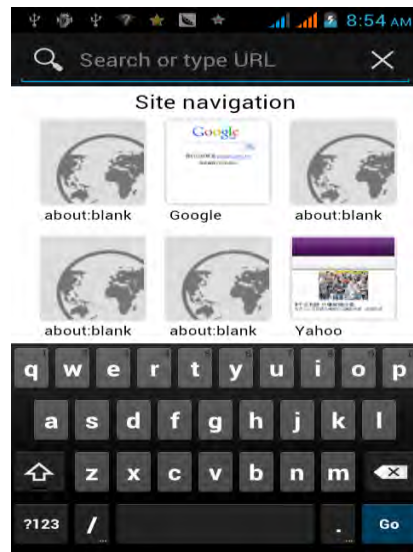



 Click “Menu”, can realize more functions.

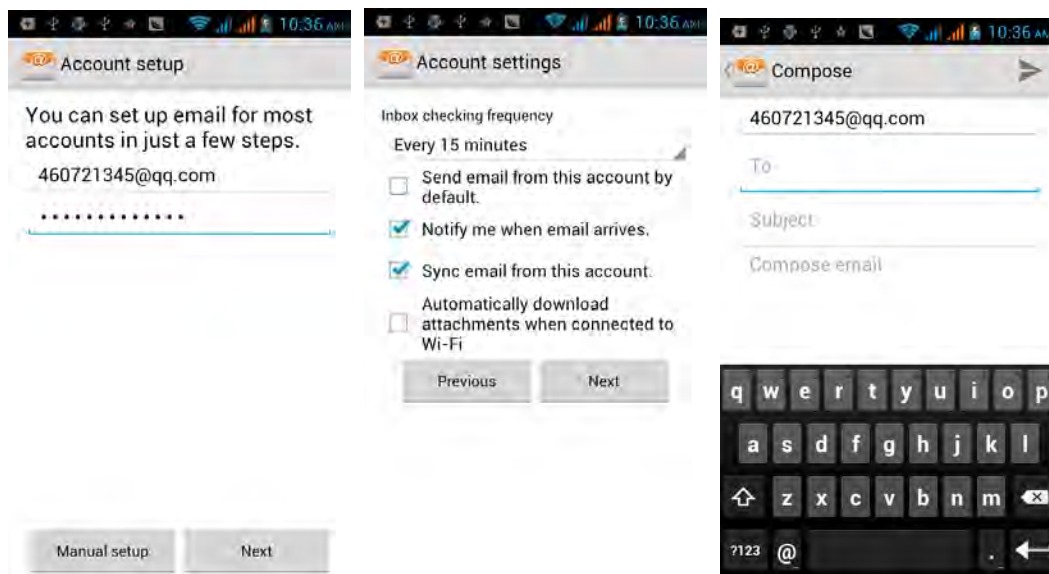


3.5 E-mail

1, In homepage, click “Email” > input email account and password>click next step, system will extract mail setting automatically.





2, Send-receive emails

 
Click  to edit the mail>input the address in recipients' box> type theme> edit mail content>click  to send the mail out. You also can press "menu" to add attachment and set the sent mails. When your cell phone connect to the internet, enter into Email, the inbox will receive the mails automatically.




Note: Click  can search the mails. Click  can refresh the mails. Click  can get into mail folder list to check the draft and sent mails.

3.6 Camera & Vidicon

Take Picturesque

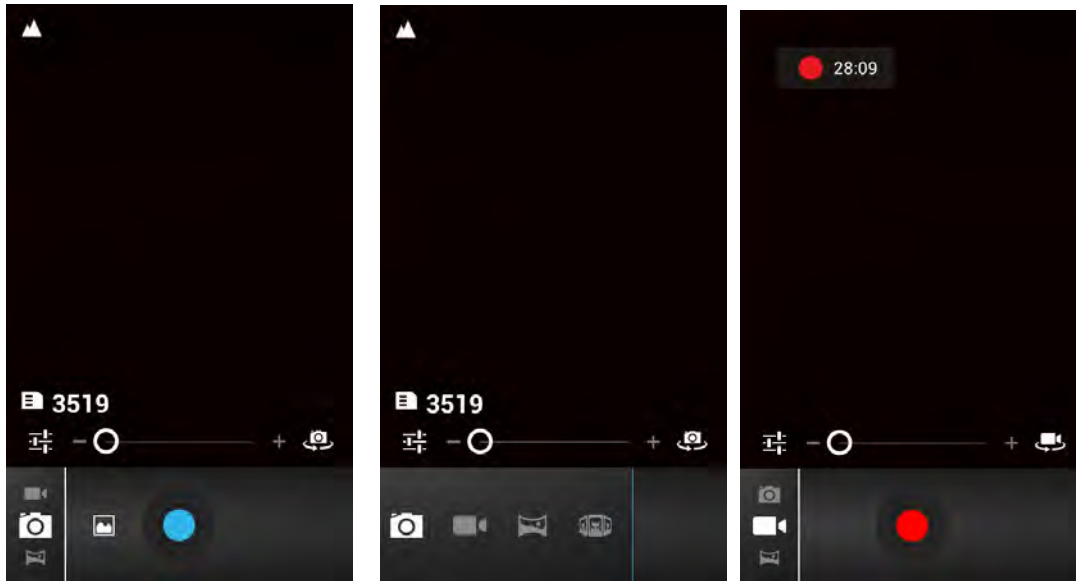In homepage, click  >camera>Camera alignment to shooting objects>click 



 
Click  The bottom or top of the icon and choose  for continuous shooting, Select  for Panorama shooting.

Select  Video shooting.



Cameras frame your subject, Click  Shooting, Click  to end shooting.


3.7 Multi-media file management

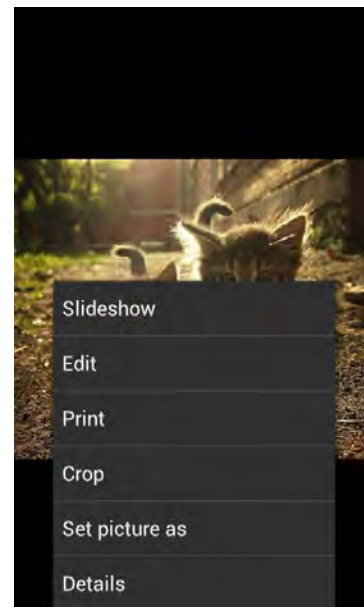
1, Click  in menu to enter into pictures list interface





Choose picture and click, change pictures via horizontal left and right slide. Click menu button to choose play film slide.

 Click  to send email or message for the selected picture. Click  to delete pictures.

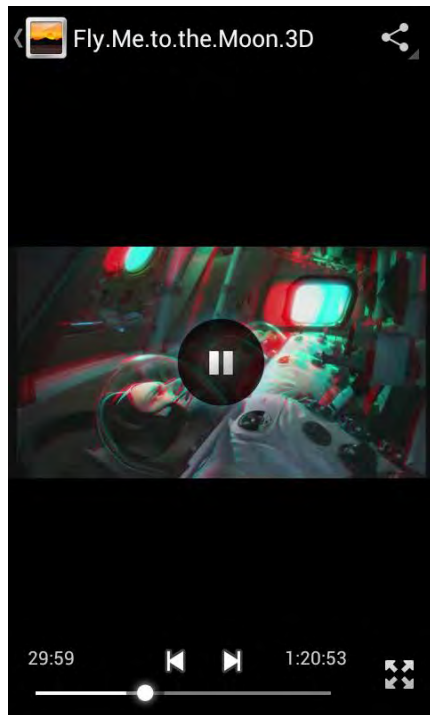
2, Click  in menu to enter into pictures list interface, choose video for play

 
 


Click  to transfer to full screen for the playing video.

Also could click  in menu to enter into video playing list to play video.

3.8 Music player

Click  main menu interface > music list, Choose the music for play.

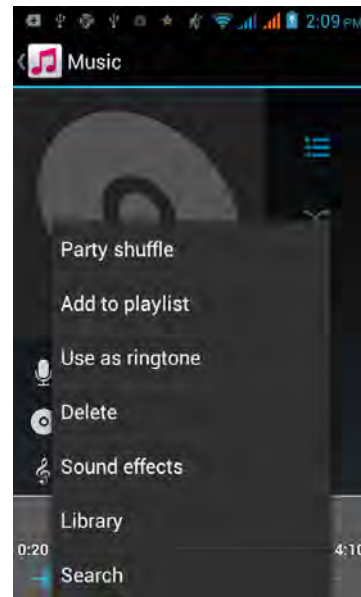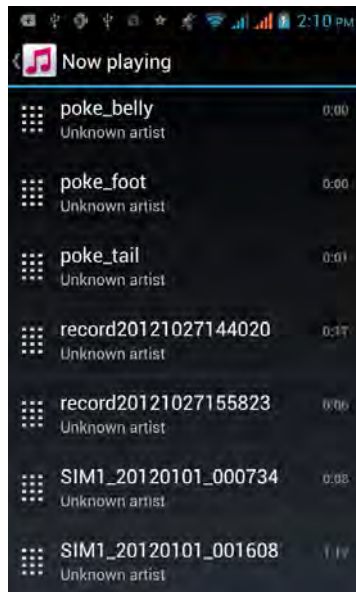

Choose music to into playing interface:



: Enter into music list interface.



: On or off random play.



: Replay switch.



: Music switch, last or next item, and pause.



: Music fast reverse and fast forward.

Note: for more operation please click menu button, see above picture.

3.9 Recorder



Click in main menu > recorder, click



into record, click

 


for pause




Click for stop, and remind to save or abandon the record

file. Choose save and click  to play the file.

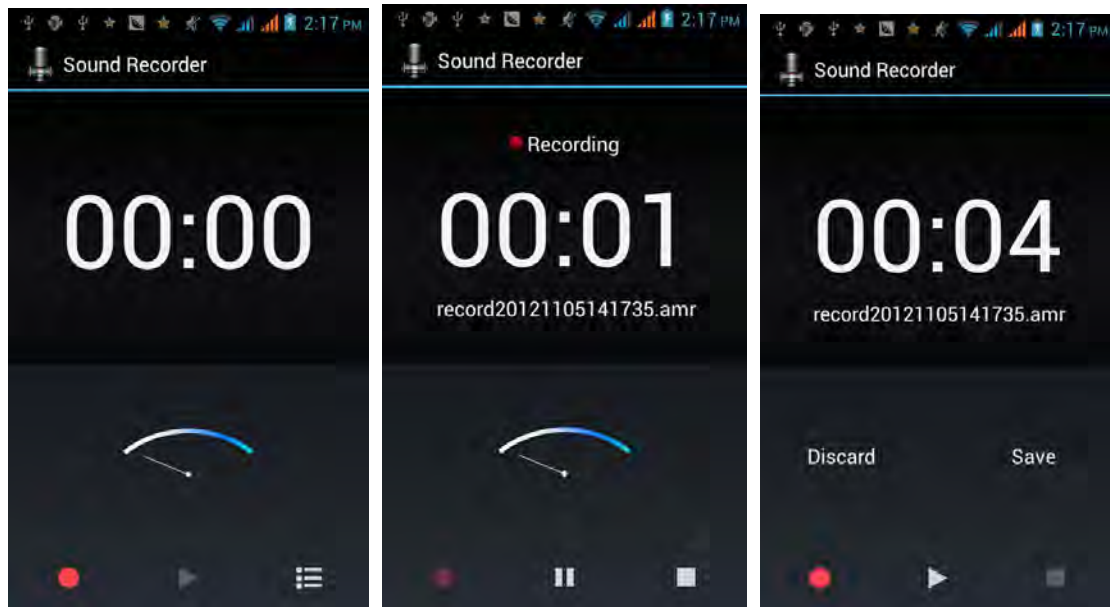

3-10 Calendar

 Click  in main menu > calendar

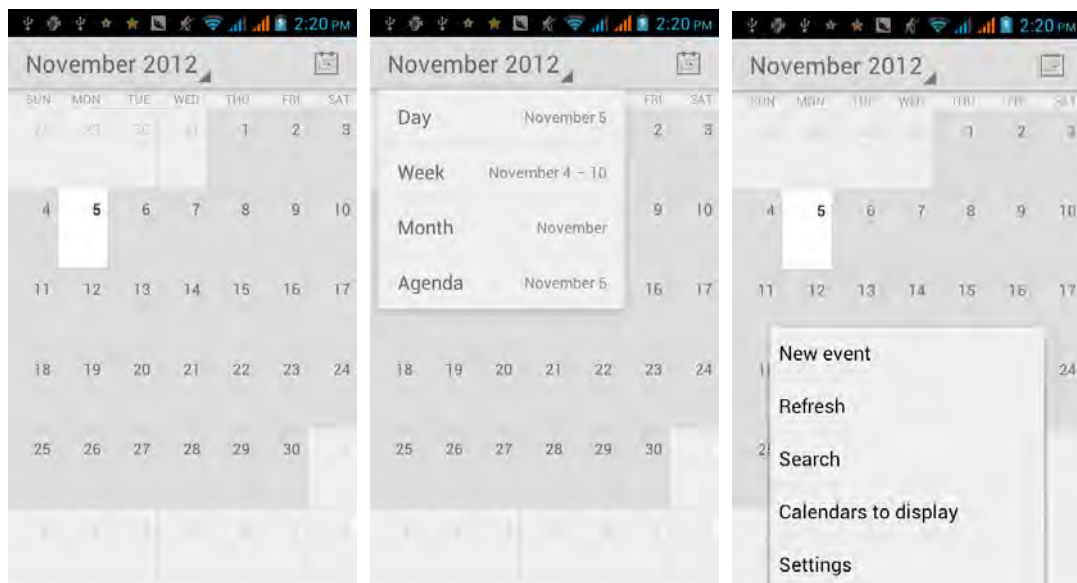 



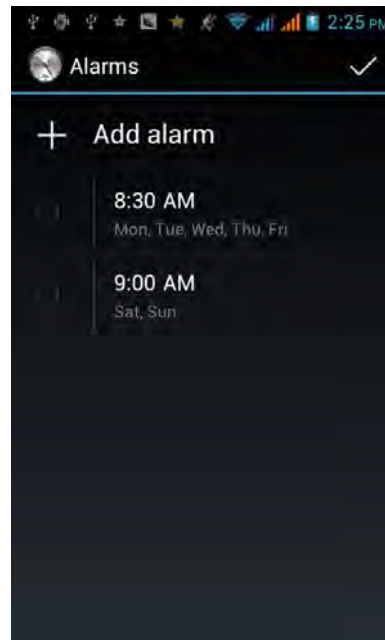 
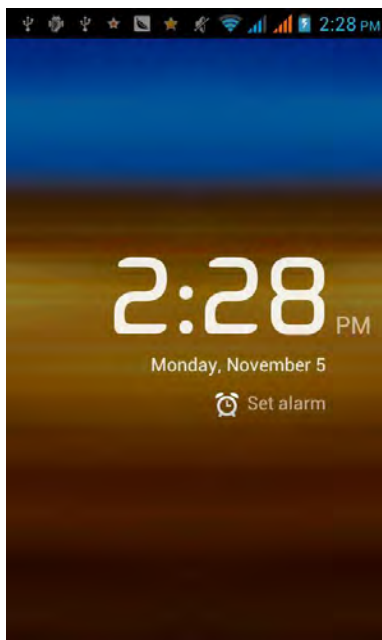 
Choose **November 2012** to switch the calendar interface, display per date, week, month or schedule.

Press menu button for more info set.

3.11 Clock

 
Click  in main menu>clock

Click  to into interface for alarm setting, click  after set and then add ok.



3.12 Calculator

Click  in main menu>calculator

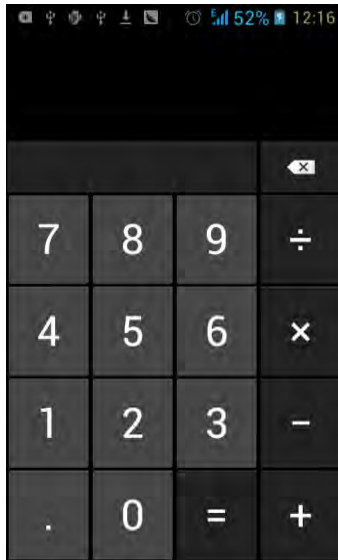

Press menu key>choose high grade panel to get the high grade usage.

3.13 Other functions

1, SIM card application: this will be differ per your operators

2, Search: shortcut of search engine

You should select right area, then enter to search channel. And channels searched will be channel list.

4, FM: Make sure the headset, which is used as the antenna, is plugged in before using the FM radio.

5, Flashlight: on/off.

6, auto call record: on/off.

7 Flip mute: on/off

8, Mobile Tracker

By Selecting Mobile Tracker you should input a new password that

you remember easily. And you should input this password every time you enter this menu.

By default it is set as off.

When you set it ON, the mobile will remember SIM's IMSI.

In case that user turn ON and lost the mobile, if someone pick-up the mobile and insert new SIM,

The Mobile Tracker will send SMS to Phone No. to show the details of the lost mobile as given below.

 
4 Application

These are third party applications; you have to open the GPRS or WLAN before using these functions.

4.1 Map


Local, Maps, Navigation, these applications are based on Google maps, When you use a navigation; you must first open the setting of GPS. Settings>Location services



Latitude: You can share your location.

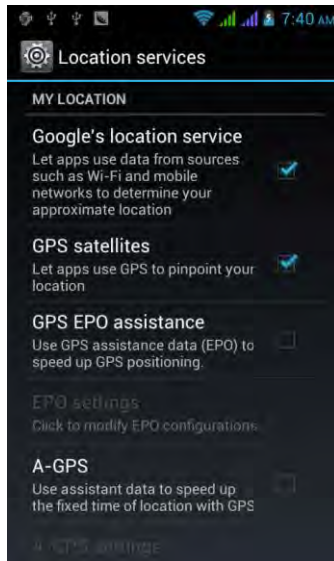

4.2 Talk


These are third party applications; using these functions will cost GPRS charges as per the Service Provider. If you don't have a SIM card, you must open the WLAN.

  
Click  in main menu > talk, Input the corresponding user name and password. and then landing

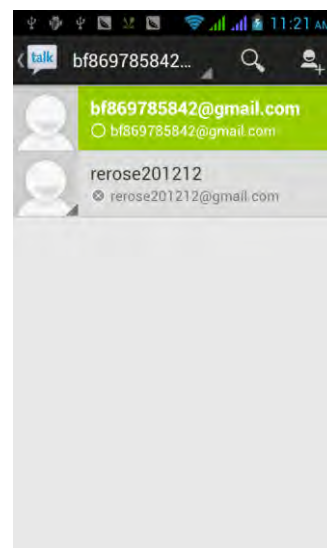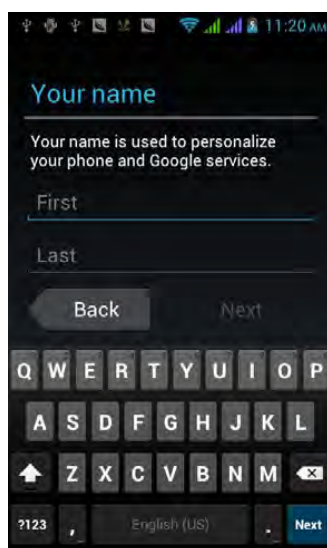

Choose a friend to start a conversation and Click , You can tell

 a friend video calls. More important, Can switch video and only voice chat.

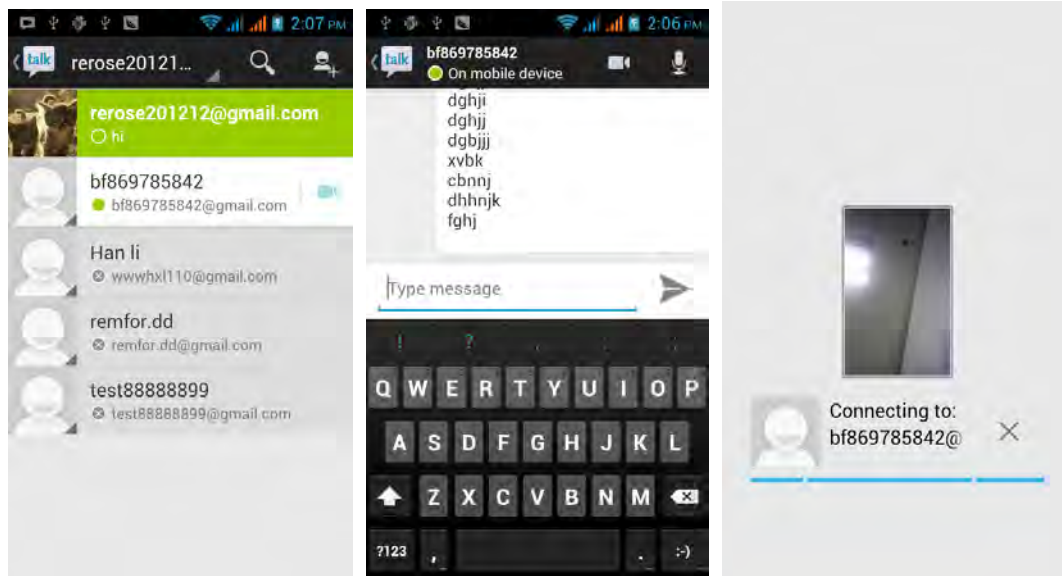

Click  It with a friend voice chat.

Note: If you can't log in, just check the password and account name is correct, and the network is connected.

4.3 Facebook

These are third party applications; using these functions will cost GPRS charges as per the Service Provider. If you don't have a SIM card, you must open the WLAN.

 
Click  in main menu> Facebook




Note: If you can't log in, just check the password and account name is correct, and the network is connected.

4.4 Nimbizz

Click  in main menu > Nimbizz

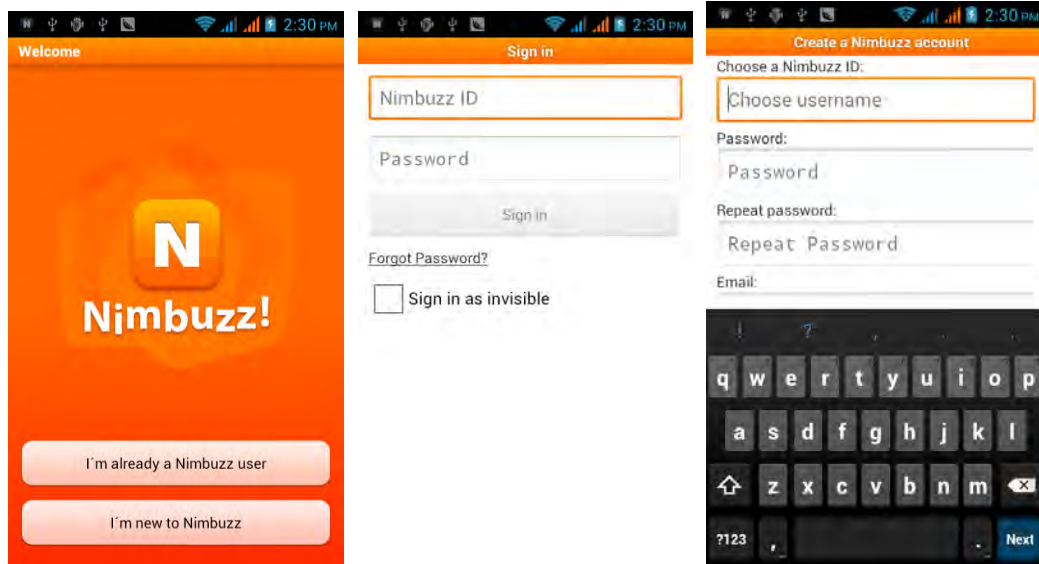



Click  enter login interface.

 If you do not have this account, you can click  and create a new account.

Note: If you can't log in, just check the password and account name is correct, and the network is connected.


4.5 Google+, Messenger

  Chat tool, You can also share photos to your friends.

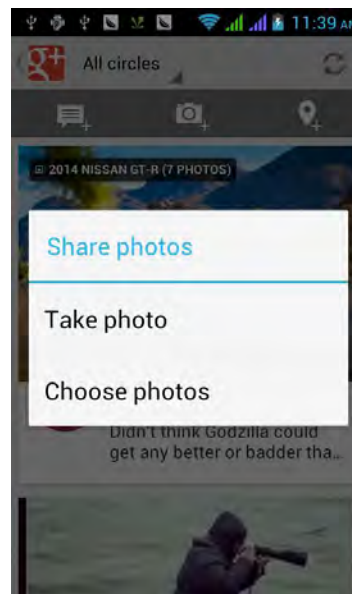
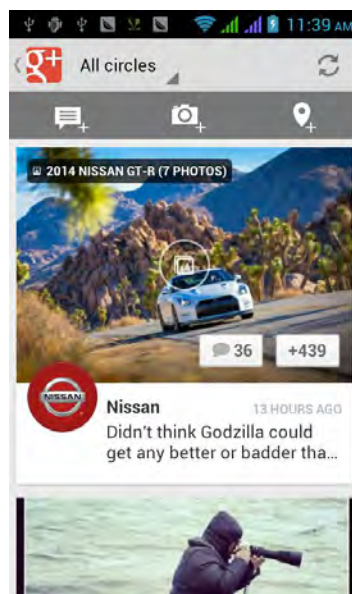


Click  in main menu > Google+




Click  you can write information to share with your friends.


Click  You can take pictures of the photos in the album or choose to share with your friends.

  
Click  You can share your position to your friends

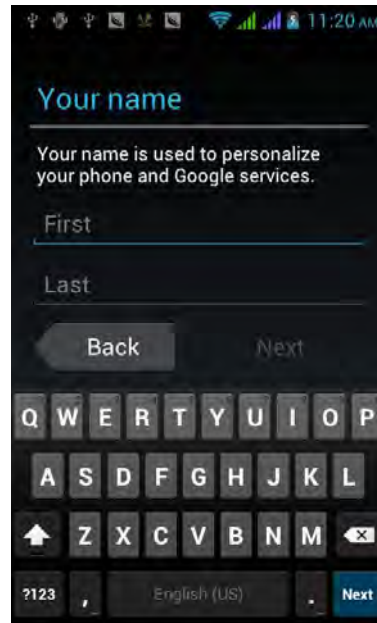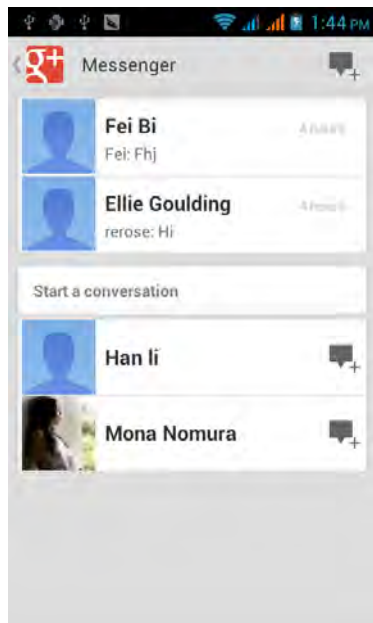

Click  in main menu > messenger

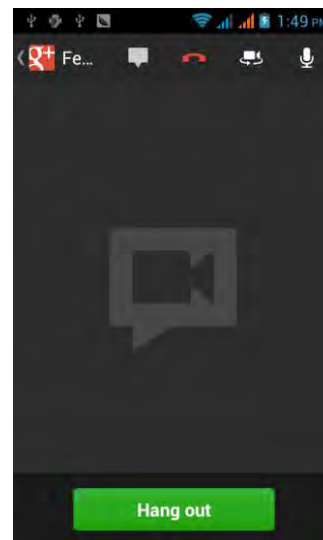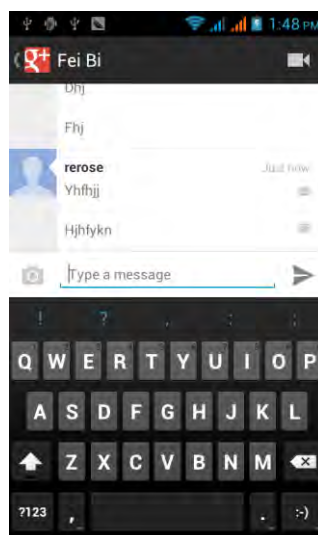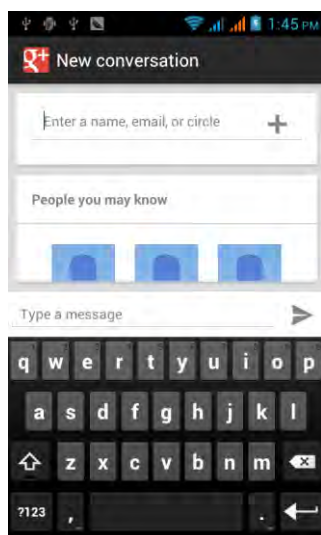   

Click  > new conversation, you can build a new dialogue with your friends

Choose a friend to start a conversation and Click , You can tell a friend video calls. More important, Can switch video and only voice chat.

Note: If you can't log in, just check the password and account name is correct, and the network is connected.

4.6 Play Music, AajTAK, Headlines, Saavn

Multimedia tools, you can listen to music and Play video online.

4.7 Documents to Go, Adobe Reader, Flash Player settings

You can open a variety of formats, Such as word, ppt, doc, xls, PDT swf etc.

4.8 Games

Fruit Ninjafree, Alpine Boarder Lite, Angry Birds Racing Moto, Temple Run

4.9 Play Store

You can download the application again.

5 Use and Maintenance

Far from any liquid, do not put your mobiles in water, raining or expose in any wet places.

Far from extreme cold or hot, avoid expose the mobile in below 10°C or above 45 °C.

Far from dust and dirt, do not put mobile in dust, dirt, sandy, food and other improper physical environment.

Please use dry and soft cloth to clear mobile, do not use alcohol or other kinds of cleanser

Use carefully and prevent mobile from falling.

6 Technical Information

Weight: 228.4 gram (with battery)

Size Length: 131mm xWidth: 93mm xDepth: 11mm

Battery: 2500mAh

Networks: GSM 900/1800 MHz

*SAR Value: **** -GSM 900MHz; **** -DCS 1800MHz;etc*

Model: Aqua Style

Weight: 228.4gram (with battery)

Lithium Battery

Model: BR 911

Nominal voltage: 3.7v

Nominal: 4.2v

Capacity rating: 2500mAh

Continuous standby time:300-350hrs*

Continuous calling time: 2(36)-3.5(26) hrs

** Depending on the network*

Operation Temperature: -10~+55 °C

The operation time of the battery depends on conditions such as:

- Transmitting power level*
- Signal (distance between the phone and the base station)*
- Network parameters defined by the operator*
- Phone use (WAP, games, SMS)*
- Charging procedure used*

Exclusions:

Subject to the exclusions contained below:

- 1. Damage due to the improper use.*
- 2. User does not follow the manual.*

Explanation:

The company has the final right of the explanation for this document.

Software upgrades will not be announced.

All pictures are for reference only in the instruction book; please refer to the actual phone.

Disclaimer

© Intex. All rights reserved.

Features and specifications are subject to change without prior

notice. Certain mobile phone features may not be activated by your service provider, and / or their network setting may limit the feature's functionality. Services and some features such as GPRS, email may be dependent on the network, SIM card, as well as on the compatibility of the devices used and content formats supported and may require network/service subscription/solutions. Data transfers speeds are network dependent. Always contact your service provider for details or help. Talk and standby time is quoted in digital mode and are approximate; battery performance and the signal reception depend on network configuration, signal strength, type of SIM card, operating temperature, features selected as well as voice, data and other application usage pattern. The phones supports Bluetooth, A2DP, in order for Bluetooth devices to communicate with one another, they must utilize the same Bluetooth Profile. To determine the profiles supported by other Intex products, visit www.intextechnologies.com, for other devices, contact their respective manufacturers. Always demand for original Intex mobile phones to protect against buying tinkered and/or used, refurbished or tampered phones. The warranty is applicable only for Intex phones; the company is not responsible for any loss or theft. Always use Intex original Enhancements (including

batteries) for safety. The use of any other type may invalidate and approval or warranty applying to the mobile phone and may be dangerous. The phone is designed to operate using Li-ion batteries approved by the phone manufactures. Using non approved batteries with the phone may result in poor performance and damage to the phone or its enhancements. The display and products visualization here are illustrative purposes only; Display / color of the phone may differ from that shown on the manual. All features, functionality and other product specifications are based on the latest available information and are correct at the time of printing; however such product specifications are subject to change without notice. Copyrights are reserved. Intex is the trademark of INTEX TECHNOLOGIES (INDIA) LTD. which is registered. The unauthorized copying of copyrighted material is not legalized is inimical to the provisions of the copyright laws of India and other countries.

INFORMATION UNDER E-WASTE (MANAGEMENT AND HANDLING) RULES, 2011

For disposal of e-waste, please call our helpline no. or visit our website.

E-waste Helpline no. 1800-103-8822

We

blink:

http://intexttechnologies.com/window_self/Waste%20Disposal.html

Do's for disposal of product

Always drop your used electronic products, batteries, and packaging materials after the end of their life in nearest collection point or collection center

Separate the packaging material according to responsible waste disposal options and sorting for recycling.

The battery can easily be removed from the product for recycling.

Don't of disposal of equipment

Never dump E-waste in garbage bins or municipal solid waste stream.

Do not dispose of your product as unsorted municipal waste.

Do not throw used batteries into household waste.

Do not dispose damaged or leaking Lithium Ion (Li-Ion) battery with normal household waste.



Information on the consequences of improper handling, accidental breakage damage and improper recycling of the end of life product

If batteries are not properly disposed of, it can cause harm to

human health or the environment.

Placing of batteries or devices on or in heating devices, such as microwave ovens, stoves, or radiators and improper disposal of batteries may lead to explosion.

If the battery terminals are in contact with metal objects, it may cause a fire.