

A92



WELCOME

Welcome to the Micromax family. Congratulations on becoming a proud owner of the Micromax A92 Android phone. Your A92 device offers you the following exciting features and much more:

- **Android 4.1.2 Platform:** Your A92 comes packaged with Android 4.1.2 OS meaning that your Mobile phone is based on a versatile operating system.
- **5.0 Megapixel Camera:** The 5.0 Megapixel camera allows you to take crisp and sharp high quality pictures and videos any time.
- **1 GHz Dual Core Processor:** To give you speed in handling your applications
- **5 Inch Capacitive Touch screen:** Gives you an intuitive and friendly Interface allowing you to operate your phone with finesse.
- **Pinch Zoom Feature:** You can use the pinch zoom command to magnify images and web pages displayed on your interface.
- **Intelligent User Interface:** The Intelligent and highly intuitive User interface makes your access to the features a smooth ride.
- **Memory Card Support:** Expandable up to 32 GB, it lets you store and back up audio and video files.
- **Wi-Fi:** The Wi-Fi features lets you connect wirelessly and seamlessly with your Wi-Fi network.
- **Bluetooth:** Lets you exchange files and information with Bluetooth enabled devices.

THE ANDROID ADVANTAGE

An Android™ Phone can perform many of the same functions as a computer and you can customize it to your own needs. For example, you can add and remove applications or upgrade existing applications to improve the functions. At Android market, you can download a range of applications and games from an ever growing collection. You can also integrate applications on your android phone with other applications and with online services that you use.

READ ME FIRST

- Please read all safety precautions and this manual carefully before using your device to ensure safe and proper use.
- The descriptions in this manual are based on the default settings of your device.
- Available features and additional services may vary by device, software, or service provider.
- Applications and their functions may vary by country, region, software or hardware specifications. Micromax is not liable for performance issues caused by third-party applications.

DISCLAIMERS:

- Talk and Standby time are affected by Network preferences, type of SIM card, and individual usage patterns.
- Specifications are subject to change without prior notice. Services and some features may be dependent on the network, or service content

provider.

- Images shown in this User Guide are for representation only. Other product logos and company names mentioned/used herein may be trademarks or trade names of their respective owners.
- The functions explained or listed in this manual may differ from the actual functions appearing in the device. In such a case, the latter shall govern.
- Content in this user manual may differ based on software provided by service providers or carriers, and is subject to change without prior notice.
- Micromax reserves the right to make modifications to the content in this user guide without any prior notice.

INSTRUCTIONAL ICONS

Before you start, please familiarize yourself with the icons you will see in this manual:



Information: Provides useful information



Warning: Situations that could cause injury to yourself or others



Caution: Situations that could cause damage to your device or other equipment



Tips to help you with the features.

CONTENTS

WELCOME	2
THE ANDROID ADVANTAGE	3
READ ME FIRST	3
DISCLAIMERS:	3
INSTRUCTIONAL ICONS.....	4
CONTENTS	5
PHONE LAYOUT	8
ICONS AND INDICATORS	9
INSERT SIM CARD.....	9
INSERT MEMORY CARD	10
TURN THE PHONE ON AND OFF	11
CHARGE THE BATTERY	12
LOCK/UNLOCK YOUR PHONE	12
USING THE TOUCH SCREEN	13
TOUCH AND HOLD	13
DRAG AN ITEM	14
SCROLL	15
SWIPE.....	15
USING THE PINCH ZOOM.....	16
DOUBLE-TAP.....	16
CHANGE THE ORIENTATION	17
TOUCH THE LAUNCHER ICON TO OPEN THE MAIN MENU.....	17

PLACING AND RECEIVING CALLS	18
MAKE A CALL.....	18
CONFERENCE CALL.....	19
MAKE AN INTERNATIONAL CALL.....	20
END A CALL	20
DISABLE PHONE CALLS	20
SCREEN LOCK	21
USING THE HANDSET'S KEYS	21
THE HOME SCREEN	22
SWITCH BETWEEN HOME SCREENS.....	22
REARRANGE ITEMS ON THE HOME SCREEN	22
CUSTOMIZE HOME SCREEN	23
WORKING WITH MENUS	24
MENU ICONS	24
CONTEXT MENU	24
OPTIONS MENUS	25
MANAGING NOTIFICATIONS	26
OPEN THE NOTIFICATIONS PANEL	26
TOOLKITS.....	27
MESSAGING	28
CREATE AND SEND MULTIMEDIA MESSAGE	29
FORWARD A MESSAGE	29
LOCK A MESSAGE	30
USING THE ONSCREEN KEYBOARD	30
USE VOICE COMMAND.....	31

MULTIMEDIA	31
CAMERA	31
GALLERY	32
MUSIC	33
COPY SONGS FROM YOUR PC	34
FM RADIO	34
RECORD SOUND	34
CONNECT TO NETWORKS AND DEVICES	34
CONNECT TO THE INTERNET	34
PAIR WITH BLUETOOTH DEVICES	36
MANAGE ACCOUNTS	37
WHY USE A GOOGLE ACCOUNT	37
START GMAIL	38
GOOGLE SEARCH	38
SYNCHRONIZE CONTACT LIST	39
APPLICATIONS	39
MAPS	39
SAFETY PRECAUTIONS	40
TAKING CARE OF YOUR DEVICE	42
COPYRIGHT	44
INDEX	45

PHONE LAYOUT



ICONS AND INDICATORS

Icons

Indicators



Signal strength indicator



New missed calls



USB is connected



The headphone is being used



New message

Icons

Indicators



Alarm has been set



Wi-Fi networks available



Bluetooth is on



Battery level



 
Airplane mode is activated

INSERT SIM CARD

When you subscribe to a cellular service, you will receive a Subscriber Identity Module (SIM) card, with subscription details, such as your personal identification number (PIN) and optional services.

To insert SIM card(s):

1. Switch off the mobile phone and remove the rear cover and battery.
2. Insert the SIM card correctly in the card slot(s) (See figure below).

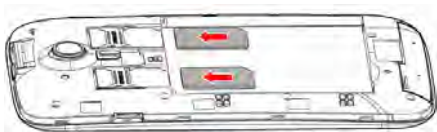

3. Finally insert the battery and replace the rear cover of the mobile phone.



Please keep the SIM Card out of the reach of small children.

 


The card and the contacts are vulnerable to damage due to scratching or bending. Therefore, be careful when using, inserting or removing the cards

INSERT MEMORY CARD

To store additional multimedia files, you must insert a memory card.

1. Power off the mobile phone, and then remove the rear cover and battery.
2. Insert the memory card into the slot.

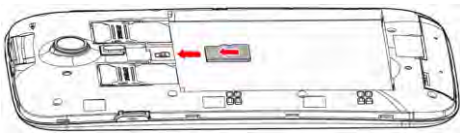

3. Finally insert the battery and the rear cover of the mobile phone.



Use only compatible memory cards approved by Micromax with this device. Incompatible memory cards may damage the card or the device and corrupt the data stored in the card.

TURN THE PHONE ON AND OFF

Switch On: Press and hold the Power key for a few seconds.

Switch Off: Press and hold the power key and select switch off.

If the phone lock has been activated, you need to enter the password to unlock.



If the SIM card has been inserted in the phone, and the related PIN code protection is activated, you need to enter the required password to unlock.



Warning: If you enter three wrong PIN codes in a row, the SIM card will be locked and you need to enter the PUK code to unlock. Both the PIN code and PUK code are provided by the network operator.

CHARGE THE BATTERY

Before using the device for the first time, you must charge the battery. You can charge the device with a travel adapter or connecting the device to a PC with a USB cable.



Tip: You can also use a compatible USB charger to charge your battery.



Use only Micromax approved chargers and cables. Unapproved chargers or cables can cause batteries to explode or damage your device.



We suggest you charge the battery for 4 hours continuously for the first time.

LOCK/UNLOCK YOUR PHONE

You can lock the phone using Pattern lock, PIN, Password or Face Unlock. Go to **Settings>Security>Screen lock** to set your preference.

To unlock the phone, do one of the following:

- Press and hold the Power key. The LCD shows up a with a lock icon.
- Slide the lock icon towards the unlock icon to unlock the phone.
- If the phone lock has been activated, you need to enter the unlock code.

Using Pattern Lock

Pattern Lock is a security feature you can enable on your phone to prevent it from unauthorized access. You can draw a pattern by connecting the dots (as shown below).



USING THE TOUCH SCREEN

You can use the touch screen in the following ways:

TOUCH AND HOLD

Touch and hold an item. An action occurs depending on the situation.



DRAG AN ITEM

Touch and hold an item and move your finger on the screen until you reach the target position.

 


Tap and hold the item, and slide your finger across the screen. The item follows your finger.

You can generally drag items on the home screen.

SCROLL

Quickly slide your finger across the surface of the screen, (without dragging an item). For example, slide the screen up or down to scroll a list.

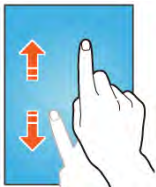

SWIPE

 
Place a finger on the screen, and steadily slide your finger in the desired direction.



For example, when you are viewing a picture, to view the next picture, swipe left.

USING THE PINCH ZOOM

You can open any image or web page and then use your thumb and index finger to zoom the display through the pinch gesture as illustrated below.

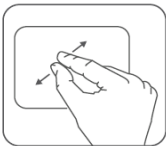

DOUBLE-TAP

Tap quickly twice on a webpage, map, or other screen to zoom. For example, double-tap a section of a webpage in Browser to zoom that section to fit the width of the screen. You can also double-tap to control the Camera zoom, in Maps, and in other applications.



CHANGE THE ORIENTATION

On most screens, the orientation of the screen changes as you rotate it. You can turn this feature on and off. You can change the screen orientation by rotating the handset.

TOUCH THE LAUNCHER ICON TO OPEN THE MAIN MENU


You can add an application icon to the Home screen by pressing and holding it until it vibrates and enters Home screen and then release your finger.

PLACING AND RECEIVING CALLS






 
You can dial a phone number or touch a number in your contacts.

You can also place a call from the Call log or messages.

MAKE A CALL

1. Tap the  icon on main menu or the home screen to dial the desired number.
2. Tap on any of the Phone, Call Log or Contacts tab to make a call.
3. Tap on the contact to dial the number.
4. Press the **Volume Up/ down** keys on the left side to adjust the call volume.

In Call Options

- Touch the  icon to add another person to the call.
- Touch the  icon to mute your voice so that the phone's MIC will not transmit voice to the other end. You can resume transmitting your voice by pressing the  icon again.
- Touch the  icon to hold the call. Touch the icon again to resume the call.
- Touch the  icon to listen via the speaker.
- Touch the  icon for DTMF inputs.



- End the call by pressing the  icon.

CONFERENCE CALL

Your device supports conference calls (network service) between select number of participants, including yourself.



If you dial or accept a new call when you are already on a call, you can or merge the calls into a conference call.


1. Place a call to the first participant.
2. When you are connected, touch the  icon and dial the number. The first participant is put on hold. You can also place the next call, using the phone tab, the Call log, or your contacts.
3. When you are connected, touch  icon. The participants are added to the conference call.

4. You can also swap calls by tapping on  icon.

Note: You may need to contact your service provider to activate conference calling feature on your SIM card.

MAKE AN INTERNATIONAL CALL


To dial an international number, touch and hold the ‘o’ key from the dial pad to enter the Plus (+) symbol, and then enter the international country prefix, followed by the phone number

1. Touch the  icon to dial the number.
2. Press the **Volume Up/ down** keys on the left side to adjust the call volume.

END A CALL

While during a call, touch the  icon.

DISABLE PHONE CALLS

- Some locations may require you to turn off your mobile, Wi-Fi, and Bluetooth wireless connections.
- Press and hold the **Power** button and then choose **Airplane Mode**.
- Drag notification panel down then touch the  icon.




SCREEN LOCK

You can lock the screen using Pattern, PIN or Password lock.


- To lock, short press the Power key.
- To unlock, turn on the screen by pressing the Power key. Drag the lock icon towards unlock icon. You can also draw a pattern or provide a password or PIN.

USING THE HANDSET'S KEYS

The phone's buttons offer a lot of functions and shortcuts.

Button	Press	Press and hold
	Back: Opens the previous screen you were working on. If the onscreen keyboard is open, closes the keyboard	
	Menu: Opens a menu with items that affect the current screen or Application.	
	Home: Open the Home screen, If you are viewing the left or right Extended Home screen, opens the central Home screen.	Opens the most recently used applications.

THE HOME SCREEN

- When you start up, the home screen opens.
- The main screen is your starting point to access all the features on your phone.
- Swipe left or right on the home screen to display the next home screen.
- Touch the launcher icon  at the bottom of the screen to view all installed applications.

SWITCH BETWEEN HOME SCREENS

You can shift between the home screens as shown below;



REARRANGE ITEMS ON THE HOME SCREEN

You can rearrange items on the home screen as shown below;



CUSTOMIZE HOME SCREEN

When the device is in idle mode, you will see the idle screen. From the idle screen, you can view indicator icons, widgets, shortcuts to applications, and other items. You can add applications, shortcuts, widgets, and other items to any part of the Home screen or can change the wallpaper.

Add Widgets and icons to home screen

You can customize the idle screen by adding shortcuts to applications or items in applications, widgets, or folders. To add items to the idle screen, enter Launcher and long press and hold an application till the screen vibrates, and then release your finger hold.

Rearrange or Remove Widgets and Icons on your Home Screen

- The idle screen has multiple panels. Scroll left or right to the panels

on the idle screen.

- Long press and hold the widget or icon you want to move. Once the device vibrates, don't release your hold on the icon. Drag the widget or icon to a new location on the screen.
- Press and hold on an icon till the device vibrates, and drag the widgets or icon to the 'Remove' icon to remove.

WORKING WITH MENUS

The phone provides you with **Context** menus and **Options** menus for accessing the features in an intuitive way.

MENU ICONS

You have the following menu icons to easily let you access its important features:



Opens the dialer



Opens messaging




Opens the main menu

 


Opens the call contacts

CONTEXT MENU

You can open context menu by touching  on any screen.


Not all screens have context menus. If you touch  on a screen that has no context menu, nothing happens.

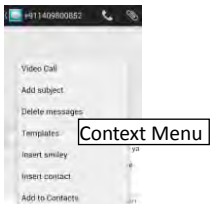

OPTIONS MENUS

Options menus contain tools that apply to specific items on the screen. You can open an option by touching and holding an item on the screen. Not all items have options menus.

 When you touch and hold some items on a screen, an Options menu opens.

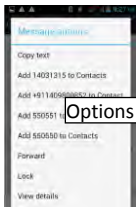


MANAGING NOTIFICATIONS

Notification icons inform you of new messages and events.

When you receive a notification, its icon appears in the status bar, along with a summary that appears only briefly.

OPEN THE NOTIFICATIONS PANEL

 Drag the status bar down from the top of the screen as shown below.

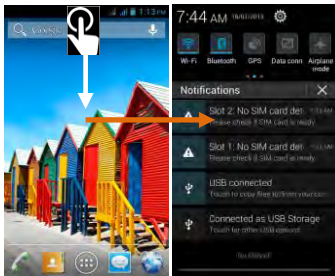

The Notifications panel displays your network provider's name and a list of your current notifications.

Respond to Notifications

1. Open the notification panel and touch a notification to respond to it.
2. What happens next depends on the notification.

Close Notifications Panel

Drag the tab at the bottom of the Notifications panel to the top of the screen. Or just press the back button. The panel also closes when you touch a notification to respond to it.

TOOLKITS

Open the Notifications panel and then tap on the following icons to


access and choose various tools available on your handset.







From the notifications panel, you can use the following options:

- Wi-Fi: Activate or deactivate the WLAN connection feature.
- Bluetooth: Activate or deactivate the Bluetooth wireless connection feature.
- GPS: Activate or deactivate the GPS feature.
- Data connection: Switch on/off data connection on your handset.
- Airplane mode: Turn on/off airplane mode.

MESSAGING

 
- You can use Messaging to exchange text messages and multimedia messages with your friends.
- A Message becomes an MMS if you send it to an email address, or add multimedia media file(s).
- You can also press the  key and open the context menu to work on messages and their settings.

CREATE AND SEND MULTIMEDIA MESSAGE


1. Touch  icon to compose a message.
2. Enter or select a mobile phone number.
3. Touch the composition text box and enter your message body.
4. You can also touch  icon to add a contact from the contact list.
5. Touch  icon to attach various types of attachments.
6. Touch  icon to send the multimedia message.

FORWARD A MESSAGE

1. Open a message and then touch and hold that message in a message conversation window.
2. The 'Options menu' will open up.
3. Tap on '**Forward**' to forward the message.



Touch to forward the message.

4. Add a contact.
5. Touch  icon to send the message.

 
LOCK A MESSAGE

You can lock a message so it won't be deleted if you reach your storage limits.

1. Touch and hold message in a message window.
2. Touch **Lock message** in the menu that opens. Unlock a message by touching and holding it and then touch **Unlock message**.


USING THE ONSCREEN KEYBOARD



Some applications display the keyboard by default. In others, you touch a text field where you want to enter text, to open the keyboard.

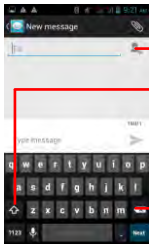

Tap this icon to select desired contact from phonebook


Touch once to capitalize the next letter you type. Touch and hold for caps.

 Use the  icon to erase characters

- After typing, press  button to close the keyboard.
- Press the symbols key  to switch between numbers and symbols keyboard.
- Touch and hold the text field to open a menu and to copy/cut texts.

USE VOICE COMMAND

Menu > Voice Search

1. Use voice commands to access various useful features on your handset.
2. Tap on  icon.
3. Issue your desired voice command to the phone.


MULTIMEDIA

CAMERA


Your camera's pictures and videos are stored in the SD card or phone memory. You can copy pictures and videos from the SD card to a PC and vice versa.



Take a Picture or video

- Touch the Camera icon in the main menu.
- Adjust the exposure and other settings as you wish.
- Point the camera at the subject.
- Touch the  icon on the screen to capture images.

Shoot Videos

- Touch the video icon.
- Adjust the quality, effect, and other settings if you wish.
- Point the lens to the scene you want to capture
- Touch the  icon to start recording.

GALLERY


You can use the Gallery to view pictures and play videos and share files.

1. Touch the Gallery icon in the main menu or in camera mode.

2. Touch an album to open and view its contents.
3. Touch a picture or a video in an album to view it and even share with your friends.

Share an Album

Open the main Gallery window.

1. Touch and hold an album/picture.
2. Check or uncheck the albums you want to share.
3. Tap on the  icon.



You can share via E-mail, Bluetooth, Gmail, messaging and so on.

MUSIC

You can easily transfer your favorite music from your PC to the SD card and experience a whole world of interesting and melodious music.

Touch the intuitive buttons and icons on the phone in music interface to enjoy the features of your music player.

Press the phone's volume up/down keys on the left side of the mobile phone to adjust the volume.

	<i>You can use an SD card to enhance the storage capacity for your various multimedia files such as music, photos emails and so on.</i>
	<i>Notes, tips, or additional information</i>

COPY SONGS FROM YOUR PC

Just connect the handset to your PC using the USB cable and transfer your favorite songs.

FM RADIO

You can listen to your favorite FM channels using the inbuilt FM receiver of your phone. You can listen to FM radio stations using your device - just plug in a headset, and select a station.

1. Touch the intuitive buttons and icons on the phone in Radio interface to enjoy the features of your inbuilt FM radio.
2. Press the phone's volume up/down keys on the left side of the mobile phone to adjust the volume.

RECORD SOUND

Menu > Sound recorder

Tap the  icon to start recording. Tap the  icon to stop the recording.

CONNECT TO NETWORKS AND DEVICES

Your phone can connect to a variety of networks and devices, including Internet, Wi-Fi, GPRS, Bluetooth, devices, such as headsets. You can also transfer files to/from your PC through the data cable.

CONNECT TO THE INTERNET

To configure your Internet:

1. Go to **Settings> Wireless & Networks >More > Mobile Networks> Access point names**.
2. Select the access point name or change the access point name for your Internet connectivity as provided by the service provider of your SIM card.
3. By default, your network provider sends the access point name settings via SMS, or it comes with your SIM card. You may need to install these settings. After this, you can choose from the listed access point names. If the access point names are not listed by default, please contact your network provider for the same.
4. After you have selected or configured the access point name, go to **Settings> SIM Management** and enable data connection to enable Internet connection.

Connect to Internet via your Phone

You can use your A92 as a modem and connect your PC or laptop to the Internet when required. You can do this via:

- USB Tethering
- Wi-Fi Hotspot

Access Internet via USB Tethering

You need to insert an internet enabled SIM card in your phone.

1. Connect your A92 to your computer through the USB cable.
2. Go to **Settings> Wireless & networks>More> Tethering> USB Tethering**.

The driver installation window will pop up on your PC or laptop.

3. Install the drivers as suggested.

You can now start using the Internet service via your A92.

Note: Your mobile operator will charge you based on your GPRS data usage.

Access Internet via Wi-Fi Hotspot

You need to insert a Data Service enabled SIM card on your phone to use your A92 as a router.

1. Go to Menu > Settings> Wireless & networks>More> Tethering & Portable hotspot.
2. Configure your Wi-Fi hotspot as suggested.

Make sure your computer has Wi-Fi. After connecting to the Wireless network, you can use the GPRS service from your A92.

Note: Your mobile operator will charge you based on your GPRS data usage.

PAIR WITH BLUETOOTH DEVICES

1. Go to **Settings > Wireless & networks> Bluetooth**.
2. If Bluetooth is off, check **Bluetooth** to turn it on. Your phone scans and displays the Bluetooth devices in range.
3. If the device you want to pair with is not in the list, make it discoverable.
4. If your phone stops scanning before you make the other device discoverable, touch '**SEARCH FOR DEVICES**'.

5. Touch the ID of the other device in the list in Settings to pair them. If you are prompted to for a password, enter any password on one device and enter the same password you entered in the other device to be paired, If the pairing is successful, your phone connects to the device.

MANAGE ACCOUNTS

You can set up a corporate, Google account etc on your device. You can do this by tapping **Settings> Accounts> Add Account:**

You may also be able to add other kinds of accounts, depending on your application.

WHY USE A GOOGLE ACCOUNT

Your Google Account lets you take full advantage of Google applications and services that you may want to use, such as Gmail, Maps, Navigation, and various applications.

- ▶ **Never lose your contacts again.** When you sign in to your phone with a Google account, all the contacts you associate with that account in the People app are automatically backed up. As a result, they're always accessible through your Gmail account from any computer.
- ▶ **Synchronize and back up everything.** Whether you draft an email, add a contact's phone number, add an event to your calendar, or take a photo, your work gets backed up continuously by Google and synchronized with any computer where you use the same Google Account.
- ▶ **Access from anywhere.** Check your latest calendar, email, text messages, or social stream, wherever you are, no matter what

computer or mobile device you're using.

- ▶ **Keep your stuff secure and available.** Google works round the clock to protect your personal data from unauthorized access and to ensure that you get it when you need it, wherever you need it.
- ▶ **Use other Google services.** Your Google Account also lets you take full advantage of any other Google apps and services that you may want to use, such as Gmail, Google Maps, Navigation, Android Market, YouTube, Google Talk, Messaging, and many more.

START GMAIL

You can use Gmail to read and write email from any mobile device or browser. All your email is always up to date and available no matter where you check it from.

But Gmail is not just about email. Your Gmail name and password signs you into to all Google apps and services, including Calendar; People, for keeping track of your contacts; Picasa, for storing and organizing your pictures; Google Reader, for keeping up with your online reading; Google Documents, for working with documents, spreadsheets, or drawings; and much more.

GOOGLE SEARCH

Google Search can help you find anything you need on the web.

Touch the  icon on the **Apps** screen to access Google search

SYNCHRONIZE CONTACT LIST

Settings> Accounts>Add Account

You can either add a new account or can use existing account.

1. Enter your **Email ID** and **Password** and tap **Next**.
2. Enter/edit the domain/username and server if required for corporate account.
3. Choose the account options that display and tap **Next**.

Follow the suggested steps,

Your contacts synchronization will be complete in a few seconds.

To auto-sync an existing account:

1. Tap on an existing account.
2. Tap **Sync Contacts**. (All phone contacts will be copied to that email account with details).

For this feature to work, you need to have Internet connectivity via your SIM or Wi-Fi. If your Sync does not proceed as expected, check whether data option is set to ON.

APPLICATIONS

Your phone comes with a host of applications to make your life easier and more convenient. Explore the various applications and the features that come with your A92 handset and enjoy the advantage.

MAPS

Select **Menu > Maps**.

You can:

- Find cities, streets, and services
- Find your way with turn-by-turn directions
- Synchronize your favorite locations and routes between your phone and the Maps internet service

SAFETY PRECAUTIONS



Remember to comply with legal requirements and local restrictions when using the phone, for example, in airplanes, petrol stations, hospitals.



Your Phone's radio waves may interfere with the functioning of inadequately shielded medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external Radio Frequency. Switch off your device when regulations posted instruct you to do so.



Always keep the phone and accessories out of reach of small children. Small parts such as the SIM card, dust cap, lens ring and lens cap as well as the microSD card can be dismantled and swallowed by small children.



Do not place the phone near to electromagnetic data carriers such as credit cards and floppy disks. Information stored on them could be lost.



Permanent hearing loss may occur if you use earphones or headphones at high volume. You can adapt over time to a higher volume, which may sound normal but can be damaging to your hearing. Set your volume to a safe level. If you experience discomfort or buzzing in your ears, reduce the volume or discontinue use of your earphones or headphones.



Ring tones, info tones and hands-free talking are reproduced through the loudspeaker. Do not hold the phone to the ear when it rings or when you have switched on the hands-free function.



The mains voltage (V) specified on the power supply unit must not be exceeded. Otherwise the charging device may be damaged. The power supply must be plugged into an easily accessible AC mains power socket when charging the battery. The only way to turn off the charging device after charging the battery is to unplug it.



You may only open the phone to replace the battery, SIM and microSD card. You must not open the battery under any circumstances. All other changes to this device are strictly prohibited and will invalidate the warranty.



The phone may cause interference in the vicinity of TV sets, radios and PCs.



Only use Micromax specified batteries and charging devices. All batteries can cause property damage, injury or burns if a conductive material such as jewelry, keys or beaded chains

touch exposed terminals. Exercise care in handling any charged battery, particularly when placing it inside your pocket, purse or other container with metal objects. Do not dispose of batteries in fire as they may explode.



1) Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit.

2) Please put the phone safely in the phone stand. Do not put it onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.



Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone during a flight.



Professional service: The phone must be installed or repaired by no other personnel than professionals. You are likely to suffer a huge risk when you install or repair this phone by yourself, which also goes against the warranty rules.

TAKING CARE OF YOUR DEVICE

Your device is a product of superior design and craftsmanship and should be handled with care. The following suggestions will help you protect your phone.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery without turning on the device, wipe it with a dry cloth and take it the service center.
- Do not store the device in high or cold temperature. High

temperatures can shorten the life of electronic devices and damage batteries.

- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not attempt to open the device other than as instructed in this guide. Repairing this phone by yourself other than our authorized service agents/centers goes against the warranty rules.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.
- Location: The socket-outlet shall be installed near the equipment and shall be easily accessible.

Battery Recommendations

- Please put the battery in a cool and well-ventilated place out of direct sunlight. We recommend you to charge the battery at room temperature range.
- Batteries have life cycles. If the time that the battery powers equipment becomes much shorter than usual, the battery life is at an end. Replace the battery with a new battery of the same make and specification.
- Use manufacturer approved batteries, chargers, accessories and supplies. Micromax will not be held responsible for user's safety when using unapproved accessories or supplies.

- Do not discard the battery with household trash. Please dispose of used battery according to your local environmental laws and guidelines.
- Warnings on Battery:
 - (a) Please use appointed battery in case of explosion risk.
 - (b) Please dispose of lifeless battery under guidance.

Recycle your Phone



The WEEE logo (shown at the left) appears on the product (battery, handset, and charger) to indicate that this product must not be disposed off or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste.

Collection and proper recovery of your electronic waste equipments at the time of disposal will allow us to help preserve the environment. Recycling of the electronic waste equipment will ensure safety of human health and environment. For more information on best practices for disposal of electronic and electrical waste, please visit to our web site: www.micromaxinfo.com/weee.php.

Note: Micromax will not bear any responsibility for any incompliance with the above mentioned guidelines or improper usage of the mobile phone.

COPYRIGHT

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior

written permission of Micromax is strictly prohibited.

INDEX

Android™, 3	Multimedia, 31
Bluetooth, 36	Notifications, 27
Camera, 2, 31	Pinch Zoom, 2
Disclaimers, 3	Screen Lock, 21
Gallery, 32	Search, 38
Gmail, 38	SIM, 9
Google, 38	Songs, 34
Internet, 34	video, 32
Keyboard, 30	Voice, 31
Micromax, 4	