



RogueTM

P O R T A B L E A l l D i g i t a l
M O B I L E P H O N E

User Manual

**Please read this manual before operating your
phone, and keep it for future reference.**

Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Samsung Telecommunications America (STA), LLC

Headquarters:	Customer Care Center:
1301 E. Lookout Drive	1000 Klein Rd.
Richardson, TX 75082	Plano, TX 75074
Toll Free Tel:	1.888.987.HELP (4357)
Internet Address:	http://www.samsungusa.com

© 2009 Samsung Telecommunications America, LLC is a registered trademark of Samsung Electronics America, Inc. and its related entities.

Do you have questions about your Samsung Mobile Phone?

For 24 hour information and assistance, we offer a new FAQ/ARS System (Automated Response System) at:

www.samsungtelecom.com/support

GH68-22542A

Printed in U.S.A.

Open Source Software

Some software components of this product incorporate source code covered under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), OpenSSL License, BSD License and other open source licenses. To obtain the source code covered under the open source licenses, please visit:

<http://www.samsungnetwork.com/Home/opensource>.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

Table of Contents

Section 1: Getting Started4

Understanding this User Manual	4
Notes and Tips	4
Using the Battery	4
Inserting and Removing Your Memory Card (purchased separately)	9
Memory Card Formatting	11
Turning Your Phone On and Off	13
Setting Up Voicemail	13

Section 2: Understanding Your Phone14

Features of Your Phone	14
Closed View of Your Phone	15
Back View of Your Phone	16
Side View of Your Phone	17
Open View of Your Phone	18
Event Status Bar Icons	22
Event Status Bar and Event Manager	22
Care and Use of the Touch Screen	24
Dialog Boxes	25

Section 3: Touch Screen Navigation26

Widgets	29
Widget Bar Navigation	32
Keyboard Navigation	34
Menu Outline	34

Section 4: Call Functions 38

Making a Call	38
Ending a Call	38
Three-way Calling	39
Answering a Call	40
Call In-Progress Options	40
Recent Calls	41
Roaming	44
TTY	44
Voice Commands	45

Section 5: Understanding Your Contacts 51

Contacts Icons	51
Adding a Contact	52
Adding Pauses	55
Contact List	56
Editing an Existing Contact Entry	56
Deleting a Contact Entry	57
Backup Assistant	57
Contact Groups	57
Speed Dialing	61
Favorites	62
Emergency Contacts	63
My Name Card	64
Finding My Phone Number	65

Section 6: Selecting Text Entry Modes	66
Entering Text Using the QWERTY Keyboard	66
Entering Text using Touch Screen Keypad	69
Section 7: Messaging	73
Types of Messages	73
Changing Message Settings	73
Creating and Sending Text Messages	74
Creating and Sending Picture Messages	76
Creating and Sending Video Messages	78
Creating and Sending Voice Messages	79
Receiving New Messages	81
Quick Reply	85
Messages Folder	86
Voicemail	95
Visual Voice Mail	95
Mobile IM	96
Email	97
Chat	98
Section 8: Changing Your Settings	99
My Verizon	99
Tools	99
Bluetooth Menu	99
Sound Settings	104
Display Settings	106
Touch Settings	109
Phone Settings	110

Call Settings	117
Memory	120
USB Mode	121
Phone Info	122
Set-Up Wizard	122
Section 9: Media Center	123
Media Center	123
Music & Tones	123
Games	127
Browser	127
Browse & Download	128
Extras	128
Section 10: Music	129
Inserting and Removing the microSD card	129
Memory Card Formatting	129
Music & Tones	129
Section 11: Camera and Camcorder	135
Using the Camera	135
Using the Camcorder	143
Section 12: Tools	149
Voice Commands	149
Calculator	149
Calendar	151
Alarm Clock	152
Stop Watch	154
World Clock	154

Notepad	155	Potentially Explosive Environments	183
Sketch Pad	156	Emergency Calls	184
Timer	157	FCC Notice and Cautions	184
USB Mass Storage	157	Other Important Safety Information	185
File Viewer	158	Product Performance	185
Section 13: Browser	159	Availability of Various Features/Ring Tones	186
Accessing the Browser	159	Battery Standby and Talk Time	187
Navigation Using the Browser	159	Battery Precautions	187
Accessing a URL Address	164	Care and Maintenance	188
Using Favorites	164	Section 15: Warranty Information	190
Browser Settings	166	Standard Limited Warranty	190
Using your History	166	Index	194
About Browser	167		
RSS Feeds	167		
Flash Content	168		
Section 14: Health and Safety Information	170		
Health and Safety Information	170		
Warning Regarding Display	171		
Samsung Mobile Products and Recycling	171		
UL Certified Travel Adapter	171		
Consumer Information on Wireless Phones	172		
Road Safety	177		
Responsible Listening	179		
Operating Environment	181		
Using Your Phone Near Other Electronic Devices	181		
FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices	181		

Section 1: Getting Started

Understanding this User Manual

The chapters of this manual generally follow the same order as the menus and sub-menus in your Samsung Rogue™. A robust index for quick reference to most features begins on page 194.

Also included is important safety information that you should know before using your Rogue™. Most of this information is near the back of the guide, beginning on page 170.

Notes and Tips

Throughout this guide are icons and text that are set apart from the rest. These are intended to point out important information, quick methods for activating features, to define terms, and more. The definitions for these methods are as follows:

- **Notes:** Explain alternative options within the current feature, menu, or sub-menu.
- **Tips:** Provide quick or innovative methods for performing functions related to the subject at hand.
- **Important!:** Points out important information about the current feature that could affect performance, or even damage your phone.

This section allows you to start using your Rogue™ after activating your service, setting up your voicemail, contacting customer support, or getting an understanding of how this manual is put together.



Using the Battery

Note: This phone comes packaged with a partially charged rechargeable standard Li-Ion battery and wall charger.

You must fully charge the battery before using your phone for the first time. A fully discharged battery requires up to 4 hours of charge time.

Important!: Although the phone can be used while the battery is charging, the battery must be fully charged before first use, otherwise you could damage the battery.

Battery Indicator

The battery indicator in the upper-right corner of the display indicates battery power level. Four bars  indicate a full charge, while an empty icon  indicates an almost empty battery. Two to three minutes before the battery becomes too low to operate, a blinking empty battery icon appears and a tone sounds. If you continue to operate the phone without charging, it will shut down.

Using A Non-Supported Battery

Samsung handsets do not accept the use of a non-supported battery.

When using a non-supported battery, you will hear a series of beeps and you will see a warning message that indicates:

“NON-SUPPORTED BATTERY. SEE USER GUIDE”

If you receive this warning, battery charging has been disabled.

Samsung charging accessories (i.e. travel adapter, and cigarette lighter adapter) will only charge a Samsung-approved battery.

Note: When using a non-supported battery the handset can only be used for the duration of the life of the battery and cannot be recharged.



Important!: Using a non-supported battery may cause damage to your Rogue™. Use a Samsung supported battery only.

Installing the Battery

1. Press down at the top of the battery cover, and slide the battery cover back and lift up to remove.



2. Insert the top end of the battery into the phone housing using the directional arrow printed on the battery. The gold contacts at the battery end must align with contacts on the phone. Push bottom end of the battery down until it snaps into place.

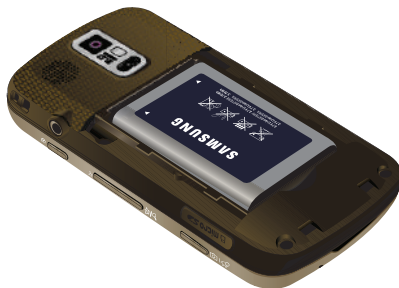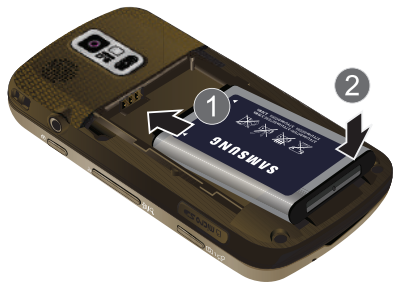

3. Insert the top of the battery cover down into the corresponding slots (positioned on each side of the cover). Push down on the bottom of the battery cover and push it up until it snaps into place.




Removing the Battery

1. Push the top of the battery cover forward. Lift the bottom of the battery cover to remove it.



-
2. Lift the battery from the bottom end and remove.

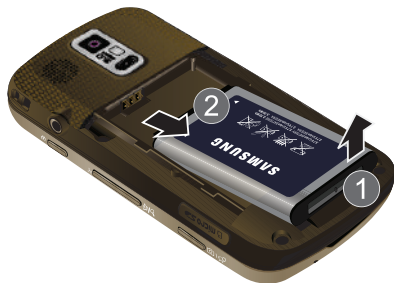

3. Insert the top of the battery cover down into the corresponding slots (positioned on each side of the cover). Push down on the bottom of the battery cover and push it up until it snaps into place.



Inserting and Removing Your Memory Card (purchased separately)

Installing the Memory Card

1. Pull the microSD card cover out and turn to expose the card slot.



2. Push the microSD card into the slot until it locks into place.





Removing the Memory Card

1. Pull the microSD card cover out and turn to expose the card slot.
2. Push in on the memory card to release the lock and remove memory card from the memory card slot.



Memory Card Formatting

Formatting a microSD™ Card using your Rogue™

1. Insert the microSD™ memory card.
2. From the Home screen, touch  MENU →  **Settings & Tools.**
3. Scroll the screen up and touch **9. Memory → 3. Card Memory → 9. Format Card.**
4. At the **Format card?** pop-up, touch **Yes** to continue, or **No** to cancel the operation.

Formatting a microSD™ Card using your PC

For best playback of songs stored to the microSD™ memory card, you should reformat your memory card with PC format FAT32.

Note: Any content currently stored on the microSD™ memory card will be lost when this procedure is performed.

1. Insert the microSD™ memory card into an SD card adapter.
2. Insert the SD card adapter into the SD card reader slot.
3. Plug the SD card reader into a USB port on your PC.

4. On your PC, go to your **My Computer** directory and highlight the drive that represents the SD card reader.
5. Right click and select the **Format** option.
6. Under the **File System** option, select **FAT32** and click the **Start** button.
7. Your microSD™ memory card will be reformatted.

Note: Your Rogue™ can support microSD™ memory cards with a capacity of 16GB maximum.

8. Remove the microSD™ card from the SD card reader and insert it back into your phone. The **My Music** directory will automatically be created on the microSD™ memory card the first time that you access V Cast Music I Rhapsody/My Music/Sync Music from your phone.


Charging the Battery

Your Rogue™ is powered by a rechargeable standard Li-ion battery. Only use Samsung-approved charging devices and batteries. Samsung accessories are designed to maximize battery life. Using other accessories may invalidate your warranty and may cause damage.

Wall Charger

The wall charger is a convenient, light-weight charger that rapidly charges your Rogue™ from any 120/ 220 VAC outlet.

1. Turn the connector cover to access the charger port.
2. Insert the travel charger adapter end into the charging port on the left side of the Rogue™.

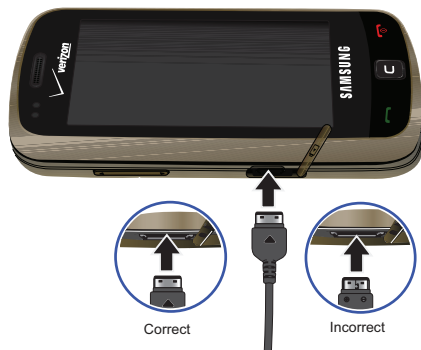


3. Plug the wall/USB charger into a standard AC wall outlet.



When the Rogue™ is completely charged (the battery icon becomes still), unplug the adapter from the power outlet.

Turning Your Phone On and Off








- ▶ Press and hold the **Power/End** key  to turn the phone's power on or off.

Setting Up Voicemail







Voicemail allows callers to leave voice messages, which can be retrieved any time.

Note: Once your voicemail account has been set up, you can use the voicemail selection 5 (under the Messaging menu) to view details of voice messages in your voicemail box.

Voicemail Setup*

1. From the Home screen, touch  **Dial Pad**.
2. Touch and hold  or touch     from the touch keypad or QWERTY keyboard, or dial your wireless phone number from any touch-tone phone.
3. When the recorded announcement begins, touch  to interrupt (if applicable).
4. An easy-to-follow setup tutorial will begin. Follow the instructions to set up your new password and record a greeting.

Listening to Voicemail

1. Touch and hold  or touch    .
2. Enter your password followed by  key.
3. Follow the recorded prompts to listen to messages, change administrative options, and so on.

*Airtime and long distance charges apply. IN Calling minutes do not apply to voicemail setup or retrievals.

Section 2: Understanding Your Phone



This section outlines key features of your phone. It also displays the screen and the icons that are displayed when the phone is in use.

Features of Your Phone

- Full color WVGA (480 x 800) AMOLED (Active Matrix Organic LED) Touch Screen with a slide-out QWERTY keyboard
- High Speed Data (EVDO 1x - Rev A Capable Technology)
- Global Positioning (GPS) Technology with VZ NavigatorSM
- V CAST Music with Rhapsody® and V CAST Video Capable
- Personal Tools (Calculator, Calendar, Alarm Clock, Stop Watch, World Clock, and Notepad)
- Full HTML Browser
- Messaging Services (Standard and Enhanced TXT Messaging, Picture Messaging, Video Messaging, Voice Messaging, Mobile and Corporate Email, and Mobile Instant Messenger)
- 3.0 Megapixel Camera and Camcorder with Flash and Auto Focus
- Advanced Speech Recognition with Dictation
- Speakerphone
- microSDTM Memory Card Slot (up to 16GB capacity)

- Advanced photo features and functionalities (photo river, photo editor, dynamic canvas, panoramic photos)
- Video editor
- Business card reader
- File Viewer (Word, Excel, Powerpoint and PDF)
- Bluetooth® 2.1 + EDR Wireless Technology **

Note: **The Samsung RogueTM supports the following Bluetooth profiles:

Headset, Handsfree, Bluetooth Stereo Support for Music, Phonebook Access, Basic Printing, Basic Imaging, Object Push for vCard, File Transfer and Serial Port. Go to www.verizonwireless.com/bluetoothchart. To view supported profiles on your device:  Menu →  Settings & Tools → Bluetooth Menu → Settings → Supported Profiles.


Closed View of Your Phone



Phone External Features

1. **Main LCD/Touch Screen:** Displays all the information needed to operate your phone.
2. **Send key:** Press to answer an incoming call or to dial a number. Press the key once to access the recent call log.
3. **Clear key:** Press to return to the previous menu or screen.
4. **Earpiece:** Allows you to hear the other caller.
5. **End/Power key:** Powers the phone On or Off. Press to end a call or to return to the Home screen from any menu, sub-menu or options menu.
6. **Microphone:** Allows the other caller to hear you clearly when you are speaking to them.

Back View of Your Phone

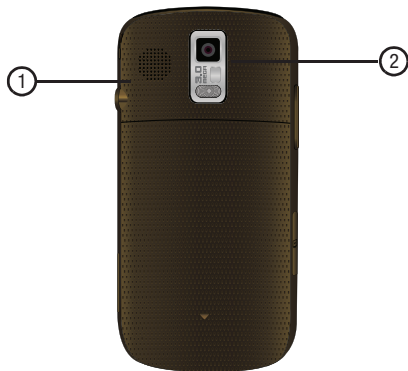

Phone External Features

1. **Speaker:** Music, ringtones and sounds are heard through the speaker.
2. **Camera lens:** Allows you to take photos.

Side View of Your Phone



1. **Volume key:** From the Home screen you can adjust the master volume or adjust the voice volume during a call. To mute the ringer during an incoming call, press the volume key up or down. Also, press and hold the key to activate Sound Off mode/Normal mode.

2. **Power Port:** Used to plug in the charging adapter.
3. **Lock/Unlock key:** Locks/unlocks display with a short press when power is On. Activates the backlight.
4. **3.5 mm Headset Jack:** Allows you to plug in your standard music headphones (for listening to music only) or an optional headset for safe and convenient conversations.
5. **Voice Recognition key:** Press to activate voice recognition features.
6. **Speakerphone/Zoom key:** Press to activate speakerphone. Press and hold to increase and decrease size of web content.
7. **Camera/Camcorder key:** Press to activate the camera, or press and hold to activate the camcorder.
8. **microSD™ Memory Card Slot:** Allows you to insert a microSD™ memory card to add additional memory and storage capacity.

Open View of Your Phone

This touch screen phone also offers the convenience of a slide-out QWERTY keyboard. To access the keyboard, rotate the phone 90 degrees to the left and slide the phone up.



When you slide the phone open, the display rotates from a portrait viewing mode to a landscape viewing mode.

QWERTY Keyboard Features





1. **QWERTY keyboard:** Provides an alphanumeric character keyboard layout.
2. **Fn key:** The **Fn (Function)** key, toggles to access the orange symbols on the QWERTY keyboard. The **Fn** icon will appear on the top annunciator line of the display when function is On. (For more information regarding the annunciator line, see page 20.)
3. **Shift key:** Toggles the casing for alphabet characters between mixed case, uppercase and lowercase. Case will remain as selected until the Shift key is pressed again. Except for “Abc” mode, which only capitalizes the first character, then switches back to “abc”. From the Home screen press to open the New Text Message screen.
4. **Space key:** Allows you to add spaces between words and characters.
5. **Directional keys:** Allows you to navigate through the phone menu options.
6. **OK key:** Press when navigating through a menu to accept the highlighted choice, or perform an action in an application.

7. **Enter key:** Press to perform the function highlighted in the menu or submenu. Press to enter spaces between lines of text.
8. **Backspace key:** Deletes characters from the display when you are in text entry mode.

Home Screen Layout



Understanding the Home Screen

1. The **Annunciator Line**, which is the top line of your phone's display, shows icons that indicate network status, battery power, signal strength, connection type and more.
2. The **Widget Bar Tab** displays the Widget Bar when touched. The Widget Bar allows you to quickly access menu items.
3. The **Dialer** button  allows you to access the touch keypad for dialing numbers.
4. The **Contacts** button  allows you to access your Contact list.
5. The ERI banner indicates the service provider.
6. The **Event Status Bar** illuminates the icons to indicate recent events or status changes. Touch this bar to access the **Event Manager** screen. See "Event Status Bar and Event Manager" on page 22.
7. The **Menu** button  allows you to access the **Main Menu** screen.
8. The **Message** button  allows you to open the Messaging menu.

Annunciator icons



Airplane Mode: Appears when Standalone Mode is on. When on, all RF functions for your phone are disabled, and you cannot use your phone to place or receive calls.



Roaming: Your phone is outside your home area. While roaming, another wireless provider may be handling your call. The service rate for the call may be higher than those made from within your home area. Please refer to Verizon Wireless for roaming rates.



EV signal strength: Appears when your phone is using the EVDO protocol. Appears when your phone is on and indicates the current signal strength. More bars indicate a stronger signal.



1X signal strength: Indicates your phone is using the CDMA 1X protocol. Appears when your phone is on and indicates the current signal strength. More bars indicate a stronger signal.



EV1X signal strength: The EVDO/1X protocol is capable of high-speed broadband data (3G). Appears when your phone is on and indicates the current signal strength. More bars indicate a stronger signal.



D signal strength: Appears when your phone is receiving digital data. Appears when your phone is on and indicates the current signal strength. More bars indicate a stronger signal.



SSL: Indicates the secure socket layer is actively transmitting your communications over the internet in an encrypted format.



Voice Privacy: Prevents eavesdropping over a CDMA traffic channel.



No Service: Your phone cannot find a signal because you're outside a service area. You cannot make or receive calls. Wait for a signal or move to an open area to find a signal. This indicator always appears when you first turn on your phone and disappears once service is located.



Voice Call: Indicates a call in progress.



Data Call: Indicates a data call in progress.



Dormant: Indicates no incoming or outgoing data.



E911: Indicates Global Positioning Service (GPS) for 911 is set to On for emergency calls only.



Location On: Global Positioning Service is set to On for location and 911 calls.



Battery Level: More bars indicate a greater charge. When the battery is low, an empty battery icon flashes and the phone sounds an alert, which indicates your phone is about to shut down.



TTY: Indicates that TTY is enabled.



Bluetooth On: Indicates that Bluetooth wireless technology is turned on.



Bluetooth Connected: Indicates Bluetooth wireless technology is turned on and is paired with another Bluetooth-enabled device.



Bluetooth Active: Indicates that Bluetooth wireless technology is connected to another device and receiving or pushing data.

Event Status Bar Icons



Vibrate On: Your phone vibrates upon receiving a call.



Speakerphone: Your phone switches to speakerphone instead of earpiece.



Missed Calls: Your phone displays this icon when calls are missed.



Message: Indicates that Bluetooth wireless technology is connected to another device and receiving or pushing data.



Calendar Appt: Your phone displays this icon when you have a calendar event scheduled.



Voicemail: You've received a voicemail message, page or web alert message. You have one or more unread voicemail messages in your voicemail box. (Only applicable on the Verizon Wireless Network.)



Alarm On: Indicates that your phone has an alarm set.



All Sounds Off: The ringer is silenced for all alerts, incoming calls, and incoming messages.



Alarm Only: Your phone will only ring when the set alarm sounds.

Event Status Bar and Event Manager

The Event Status Bar is an area that displays in the Home screen to inform you of calendar events, missed calls, or when new messages have been sent to the phone.

The Event Status bar appears on the bottom of the Home screen display.



If an icon is illuminated in color, it indicates a recent event for that function. Touching on the bar opens the Event Manager menu.

The following is a description of these onscreen notification icons:



Volume: The level of the ringer is set between Low and High in five incremental stages: Low, Medium Low, Medium, Medium High, and High.



Alarm Only: Your phone will only ring when the set alarm sounds.



Vibrate Only: Your phone vibrates upon receiving a call, a new message or voicemail, or when an alarm has been set.



All Sounds Off: All sounds have been disabled, including alarms.



New Messages: This icon is illuminated when you receive a new message.



Voicemail: This icon is illuminated when you receive a voicemail message or there is one or more unread voicemail messages in your voicemail box. (Only applicable on the Verizon Wireless Network.)



Missed Calls: This icon is illuminated when you have missed calls.



Calendar Appt: This icon is illuminated when you have any events scheduled within the next 24 hours.



 
Speakerphone On: You can hear the other party in a call through the speaker.






Speakerphone Off: You can hear the other party through the earpiece.

Event Manager Menu

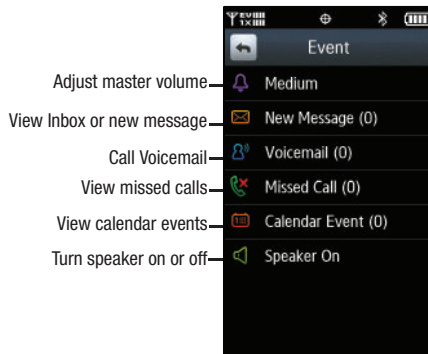The Event Manager menu offers easy access to common functions. Touch the icons or text in the Event Manager menu to perform the action shown in the illustration below.



Backspace Button

The  button erases or clears numbers, text, or symbols within the text fields. If you enter an incorrect character, touch  to backspace (and delete) the character. To erase the previous word in a sentence, touch and hold .

End Button

The  button and  is used to end a call.


Answer Button

The  button and  is used to activate or answer calls.

Call Button

Enter a number and touch  to make a call.

Return Button

Touch  to exit from the current menu and return to the previous screen.

Clear key

- Press  to exit from the current menu and return to the previous screen.
- Press and hold  or press  to return to the Home screen.

Care and Use of the Touch Screen

Warning: Your touch screen responds best to a light touch from the pad of your finger or a non-metallic stylus. Using excessive force or a metallic object when pressing on the touch screen may damage the tempered glass surface and void the warranty. See “Warranty Information” on page 190.

The precautions below should be followed when using the touch screen.

- Hands and fingers must be clean and dry. The touch screen is sensitive. Do not use excess force when using the touch screen. Sensitivity levels for the touch screen are adjustable. For more information, refer to “*Touch Settings*” on page 109.
- Do not sit or place heavy objects on the touch screen as damage may occur. Do not drag or scratch the touch screen with any sharp objects.
- Avoid extreme conditions (excess temperatures and humidity) when the phone is in use. Keep chemicals away from your phone that may damage or change the phone’s appearance and functionality.
- Use a soft, clean, dry cloth to wipe the display and remove fingerprints.

Dialog Boxes

Dialog boxes prompt for action, inform you of status, or warn you of situations such as low memory. Dialog boxes and their definitions are outlined below.

- **Choice** -Example: "SAVE MESSAGE?"
- **Confirm** -Example: "ERASE ALL MESSAGES?"
- **Performing** -Example: "SENDING..." "CONNECTING..."
- **Completed** -Example: "MESSAGE SENT"
- **Information** -Example: "NEW MESSAGE"
- **Error** -Example: "SYSTEM ERROR!"
- **Warning** -Example: "BATTERY LOW," "MEMORY FULL!"

Section 3: Touch Screen Navigation

This section explains the navigation between functions for your Samsung Rogue™. It also includes an outline of all the available menus associated with your phone.





Note: Throughout the Rogue™ User Manual, instructions apply to **Touch Screen Navigation**, except where noted.

Locking and Unlocking the Display

To lock the Rogue™,

- ▶ Press  (on the right side of the phone).

To unlock the Rogue™,

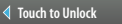- ▶ When the Rogue™ is locked, press any external key to illuminate the display.
- ▶ When the Rogue™ is locked, press  (on the right side of the phone) to unlock.
- ▶ Also if the display is locked,   displays. Touch the **Lock icon**  to unlock.




Because this is a touch screen phone, keeping the phone in Lock mode may prevent the unintentional use of the Rogue™, and prevent unnecessary battery drainage. However, Auto Lock can be disabled under Touch Settings.

Navigating through Menus

As you navigate through a menu, options display on the screen as scrollable lists. The menu options buttons (located at the bottom of most screens, provide access to additional screen options).


To navigate a scrollable list:

1. From the Home screen, touch  **MENU**.
2. Touch an onscreen option.
3. From the available list of options you can either:
 - Touch an onscreen entry to activate it.
 - Firmly press and slide your finger up or down the screen to scroll through lists of menu items.

Note: Tapping or touching individual entries on the list opens the list entry.



Note: When scrolling through a list (see below) make sure not to touch or press individual entries on the list as this will open the list entry.

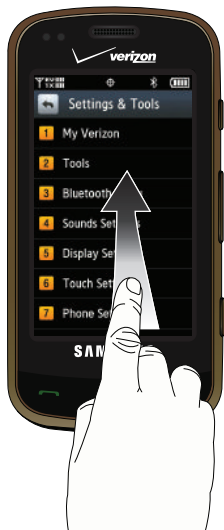


Using the Accelerator Tab

Within the Contacts list (sorted alphabetically), the **Accelerator** Tab allows to quickly “thumb through” the alphabetical listing of entries by first letter (A → B → C, etc...). The **Accelerator** Tab is located along the left side of the screen.



Scrolling Through Field Entries

Some screens will ask you to assign a value to an onscreen field by either touching the up/down selection arrows or by quickly sliding through these values by using your fingertip. An example of these actions can be found on the Alarm page.

1. Touch  → **Settings & Tools** → **Tools** → **Alarm Clock** → **Alarm 1** or **Touch On**.
2. Touch the **Time** field and then adjust the hour and minutes values by using either the up/down input arrows or by quickly sliding your fingertip over the numbers.



Widgets

The Widget Bar provides quick access to programs, menus, and widgets. This bar (located at the left of the Home screen) gives you information at a glance and provides easy access to frequently used tools such as (Alarm, Birthday, Bluetooth, Calculator, Calendar, Clock, Date, Dice, Facebook, Games, My Favorites, My Pictures, My shortcuts, My Verizon, MySpace, Notepad, Personal Banner, Photobucket, Sketch Pad, Tutorial, Twitter, Widget Settings, and YouTube).



 
You can easily customize the Widget Bar by dragging the Widget on the Home Screen to undock the Widget. You can then drag

the Widget to your preferred position back to the Widget Bar to dock the Widget.

Adding and Deleting Widgets

To select which items are displayed or hidden within the Widget Bar:

1. From the Home screen, touch  **Menu** → 
Settings & Tools → **5. Display Settings** → **3. Widgets**.

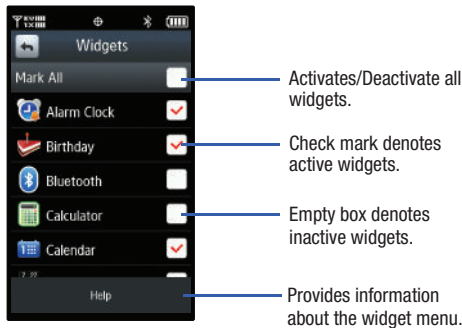

2. The following table contains a description of each available widget, its function, and how to navigate to that particular application. If the application is already described in another section of this user manual, a cross reference is then provided.



Alarm Clock: allows you to access alarm settings.

- For more information, refer to *“Alarm Clock”* on page 152.



Birthday: displays an onscreen alert for birthdays occurring during the month. It also indicates birthdays occurring one week prior to the current date and three weeks after the current date. These dates have been previously entered for an entry within the Contact List in the Birthday field.



Bluetooth: from this application you can activate Bluetooth and configure it so other Bluetooth devices can see your device by name.

- For more information, refer to *“Bluetooth Menu”* on page 99.



Calculator: allows you to use a built-in calculator.

- For more information, refer to “*Calculator*” on page 149.



Calendar: allows you to access the Calendar feature.

With the Calendar feature, you can:

- View the calendar by month, week, or day.
- Set schedules and note anniversaries.
- For more information, refer to “*Calendar*” on page 151.



Clock: displays the current day, date and time. Simply touch the Clock icon to customize the clock format.



Date: displays the current day and date.



Dice: allows access to the Dice game. Simply touch the Dice widget to begin playing.



Facebook: allows you to access the Facebook mobile website. Simply touch the Facebook widget to go directly to the site.



Games: allows access to gaming applications. Simply touch the Games widget to access games.



My Favorites: allows quick access to your 11 favorite contacts. Simply touch the desired contact to access.

- For more information, refer to “*Favorites*” on page 62.



My Pictures: allows you to view the list of preloaded and downloaded images or wallpapers, images received in messages and saved to your device, or a photo taken by the camera. You can then assign an image as the current wallpaper.

- For more information, refer to “*Using the Camera*” on page 135.



My Shortcuts: allows quick access to up to 11 of your favorite applications or menus.



My Verizon: allows quick access to My Verizon and your Verizon Wireless account information online. You can surf the web, setup Favorites or choose from available applications.



MySpace: allows you to access the MySpace mobile website. Simply touch the MySpace widget to go directly to the site.



Notepad: allows you to quickly capture thoughts, reminders, ideas and phone numbers. Simply touch the Notepad widget to access the Notepad.



Personal Banner: allows you to create your own personalized greeting that appears in the Home screen. Simply touch the Personal Banner widget to go to the Personal Banner screen.



Photobucket: allows you to access the Photobucket mobile website. Simply touch the Photobucket widget to go directly to the site.



Sketch Pad: allows you access the Sketch Pad application. Simply touch the Sketch Pad widget to create free hand sketches.



Help: provides access to information for various functions and features. Simply touch the Tutorial widget to access.



Twitter: allows you to access the Twitter mobile website. Simply touch the Twitter widget to go directly to the site.



Widget Settings: allows you to customize the Widget Bar. Simply touch the Widget Setting widget to go to the Widget menu.



YouTube: allows you to access the YouTube mobile website. Simply touch the YouTube widget to go directly to the site.

Widget Bar Navigation

Many widgets can be used directly from the Widget Bar without dragging them onto the Home screen or simply drag the widgets to the desktop to use the application or feature, then drag it back to the Widget Bar when you are finished.


Accessing the Widget Bar

1. Tap the Widget Bar tab, located on the left side of the main display, to open the Widget Bar.
2. Tap the Widget Bar tab again to close the Widget Bar.

Undocking Widgets

You can easily customize the Widget Bar by either keeping them docked within the bar itself or undocking them by dragging them anywhere on your Home screen.


1. Touch and hold the widget (1).
2. While still holding the icon, in a single motion, drag it over to the new location and release your finger from the screen (2). The widget is now located on the Home screen.

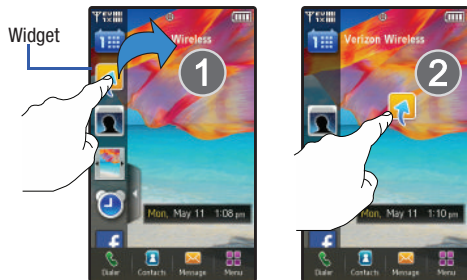

Rearranging Widgets

You can also customize the Widget Bar by arranging the location of your current widgets. This can help you place your frequently used (favorite) widgets at the top of the list.

1. Touch and hold the widget (1).
2. While still holding the icon, in a single motion, drag it away from the Widget Bar (2) then drag it back into its new location in the list.

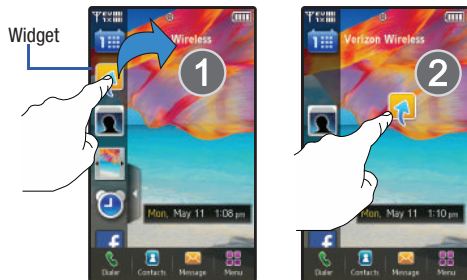

Activating a Widget

1. Locate your widget (whether it is still docked in the Widget Bar or on the Home screen).
2. Touch the widget to activate.

Scrolling Through the Widget Bar



Although the Widget Bar contains a number of widgets, only six widgets are visible at a time.

- Use your fingertip to scroll up and down along the Widget Bar.

Tip: Flick the screen up or down motion to quickly scroll through the list.

Keyboard Navigation

Access menus using the slide-out QWERTY keyboard.

1. From the Home screen, touch  **MENU**. The first of several menus appear in the display.
2. Touch the various icons to browse phone menus.
3. Touch the menu item text to enter the main menu or sub-menu appearing in the display or press the corresponding number (1-9) or special character (press fn to enter -, *, #) keys to access the sub-menu. You can press the directional keys  to scroll in a menu or long text screen.

Menu Outline

The following list shows the menu structure and indicates the number assigned to each option.



Contacts

- 1: New Contact
- 2: Contact List
- 3: Backup Assistant
- 4: Groups
- 5: Speed Dials
- 6: Favorites
- 7: In Case of Emergency
- 8: My Name Card



Messaging

- 1: New Message
 - 1: TXT Message
 - 2: Picture Message
 - 3: Video Message
 - 4: Voice Message
- 2: Messages
- 3: Drafts
- 4: Voicemail
- 5: Visual Voice Mail

- 6: Mobile IM
- 7: Email
- 8: Chat
- 9: Settings
- 0: Erase Options
 - 1: Erase Inbox
 - 2: Erase Sent
 - 3: Erase Draft
 - 4: Erase All



Recent Calls

- 1: Missed
- 2: Received
- 3: Dialed
- 4: All
- 5: View Timers



Browser



Media Center

- 1: Music & Tones
 - 1: V CAST Music | Rhapsody
 - 2: Get New Ringtones
 - 3: My Ringtones

- 4: My Music
- 5: My Sounds
- 6: Sync Music

2: Picture & Video

- 1: V CAST Videos
- 2: Get New Pictures
- 3: My Pictures
- 4: My Videos
- 5: Take Picture
- 6: Record Video
- 7: OnlineAlbum
- 8: Video Wizard
- 9: Biz Card Reader

3: Games

4: Browser

5: Browse & Download

6: Extras

7: Info

- 1: App. Memory
- 2: Phone Memory
- 3: View Log
- 4: Help

My Music

VZ Navigator

Email

Settings & Tools

1: My Verizon

2: Tools

1: Voice Commands

2: Calculator

1: Normal

2: Tip

3: Converter

1: Temperature

2: Length

3: Weight

4: Area

5: Volume

6: Currency

3: Calendar

4: Alarm Clock

5: Stop Watch

6: World Clock

7: Notepad

8: Sketch Pad

9: Timer

0: USB Mass Storage

*: File Viewer

3: Bluetooth Menu

4: Sounds Settings

1: Master Volume

2: Call Sounds

3: Alert Sounds

1: TXT Message

2: Multimedia Message

3: Voicemail

4: Emergency Tone

5: Missed Call

6: Device Connect

4: Keypad Sounds

5: Digit Dial Readout

6: Service Alerts

7: Power On/Off

5: Display Settings

1: Banner




- 1: Personal Banner
- 2: ERI Banner
- 2: Backlight
- 3: Widgets
- 4: Wallpaper
- 5: Fonts
- 6: Clock Format
- 7: Transition Effect
- 6: Touch Settings
- 7: Phone Settings
 - 1: Airplane Mode
 - 2: Voice Commands
 - 3: Language
 - 4: QWERTY Action
 - 5: Location
 - 6: Current Country
 - 7: Security
 - 1: Edit Codes
 - 1: Phone Only
 - 2: Calls & Services
 - 2: Restrictions
 - 1: Location Setting
 - 2: Calls
 - 3: Messages
 - 4: Dial-Up Modem

- 3: Phone Lock Setting
- 4: Lock Phone Now
- 5: Restore Phone
- 8: System Select
- 9: NAM Select
- 0: Quick Search
- *: Motion Detection
- 8: Call Settings
- 9: Memory
 - 1: Save Options
 - 2: Phone Memory
 - 3: Card Memory*
- 0: USB Mode
- *: Phone Info
 - 1: My Number
 - 2: SW/HW Version
 - 3: Icon Glossary
 - 4: Software Update
 - 1: Status
 - 2: Check New
- #: Set-Up Wizard

Section 4: Call Functions

This section describes how to make, answer or end a call.

Making a Call

1. From the Home screen, touch . The touch keypad displays.
2. Touch the numbers to call using the touch keypad and touch . Remember to include necessary long distance codes.
— or —- 1. Open slide of phone.
- 2. From the Home screen, touch  and enter the phone, or Vanity number using the QWERTY keypad.


Note: Phone numbers may be entered in either numeric or alphabetic mode using the QWERTY keyboard, but will be converted to numeric when dialed or saved.



3. Touch .

Note: If the number(s) entered is a speed dial location, the phone number associated with that location will be dialed.

Ending a Call

Follow the steps below to end a call.

1. If the backlight is off, press the  **Clear** key to illuminate the display and unlock your device.

Note: If the backlight is on but the display is locked, press the  **Lock/Unlock** key to unlock the display, or touch the **Lock icon** .


2. Press the  **End/Power** key or touch the  button to disconnect the call.



Three-way Calling

You can combine two, two-party calls into one three-way call. Follow the steps below for making three-way calls.

Making a Three-way Call

1. Follow the steps for “Making a Call” on page 38 or “Answering a Call on page 40.
2. While your call is in-progress with the first participant, dial the second phone number.

Note: If the dial pad is turned off, touch  before dialing the second number.

3. Touch . When the second participant answers, the second call is connected.
4. Touch . The call becomes active with three participants.

Making Calls Using Contacts

A contact is an entry that you have created to store names, numbers, and other information for people or groups of interest. For more information, refer to “Adding a Contact” on page 52.

1. From the Home screen, touch  **Contacts**.



Note: Press the phone button to the right of the Contact name on the **CONTACT LIST** screen, a call will be placed to that number.

2. Touch the name of the contact. Touch the desired phone number (mobile, home, work, etc.) to dial.

Note: If the desired phone number is not visible, use the scrolling method to view additional phone numbers.

Answering a Call

When you receive an incoming call:

- Touch **Answer** or press  to answer the call.
- Touch **Ignore** to send the call to voicemail.
- Touch **Quiet** or press the  Volume key to silence the ringer.
- Touch **Ignore + TXT** to ignore the call and send a TXT message to the caller.

Answering Call-Waiting Calls

When you receive a call while on a call:

- Touch **Answer** to answer the incoming call, while the original caller is placed on hold.
- Touch **Switch Call** to return to your original call.

Call In-Progress Options

Access numerous menus and features even while in a call. The following icons appear in the in-call screen:

Note: If the call is disconnected while accessing the Call-In Progress Options, the options disappear from the display and the Rogue™ eventually returns to the Home screen.




Touch **Speaker On** to turn on the speakerphone function during a call. Touch **Speaker Off** to turn the speaker phone function off.




Touch **Mute** to mute the call. Touch **Unmute** to unmute the call.



Touch **Bluetooth** to open the Bluetooth menu. Touch  to return to the in-call screen.

- For more information, refer to “Bluetooth Menu” on page 99.



Touch **Notepad** to open the notepad menu. Touch  to return to the in-call screen.

- For more information, refer to “Notepad” on page 155.




Touch **Whisper Mode** when speaking softly or when the caller cannot hear your voice clearly. This mode is useful in meetings or public places.



Touch **End Call** to disconnect a call.

Dialer

Touch **Dialer** to display the Dialpad. Press  to return to the in-call screen.

Contacts

Touch **Contacts** to view you Contact List. To call a contact while in a call simply touch the contacts number.

- For more information, refer to “*Understanding Your Contacts*” on page 51.

Options

Touch **Options** while in a call to perform additional functions. The following options appear in the display:

- **New TXT Message:** Allows you to create a new text message.
- **Recent Calls:** Displays your recent incoming, missed and outgoing calls.
- **Bluetooth Menu:** Displays the Bluetooth menu.
- **Main Menu:** Displays the Main menu.
- **Voice Privacy:** Prevents eavesdropping over a CDMA traffic channel.

Recent Calls

Dialed, missed, and received calls are saved in Recent Calls, including a set of timers for these calls. These categories are listed below.

- **Missed:** Displays any missed calls.
- **Received:** Displays any received calls that were answered.
- **Dialed:** Displays all outgoing calls made from your Rogue™.
- **All:** Displays all missed, received, and outgoing calls made from your Rogue™.
- **View Timers:** Displays amount of time for: Last Call, All Calls, Received Calls, Dialed Calls, Roaming Calls, Transmit Data, Received Data, Total Data, Last Reset, Lifetime Calls, and Lifetime Data Counter.

Call History Icons

When you view All Recent Calls, an icon to the left of the number indicates the type of call.



Indicates a received call that was answered.




Indicates a dialed call.




Indicates a received call that was missed.

Viewing Recent Call History

Recent Calls retains information such as the duration, date and time, and whether the call was missed, received or dialed. It also retains information about the timers that accrue data of these calls.


1. From the Home screen, press .
2. Touch the **Recent Calls** drop down arrow.
3. Touch a call location (i.e. **All Calls**, **Missed Calls**, **Received Calls**, or **Dialed Calls**).

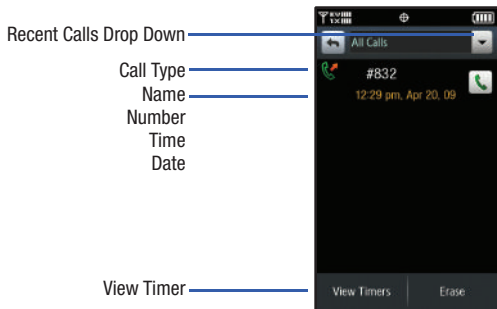


4. The following call information displays:

- **Call History Drop Down:** Touch the drop down arrow to the right to view the call logs from the various options screens. Choose from: All Calls, Missed Calls, Received Calls, or Dialed Calls.
- **Call Type:** The title bar displays if the call is a missed, dialed, or received.
- **Name:** If the caller is in your Contacts list, their name is listed here as well as the appropriate icon to indicate Mobile 1, Mobile 2, Home, Work, or Fax. This option only appears if the caller is in your Contacts list. If the caller is not in your Contacts list, No Name appears.
- **Number:** Displays the telephone number.
- **Date:** The date of the call.
- **View Timer:** Displays the duration of All Calls, Received Calls, Dialed Calls and Roaming Calls.

 
Making Calls Using Call History

1. From the Home screen, press .
2. Find the number by touching the drop down arrow to view the call logs various options screens. Choose from: **Calls**, **Missed Calls**, **Received Calls**, or **Dialed Calls**.

3. Touch  next to the desired phone number (or entry name if already in your Contact List).


or

From the entry's **Details** page, touch Call or press .

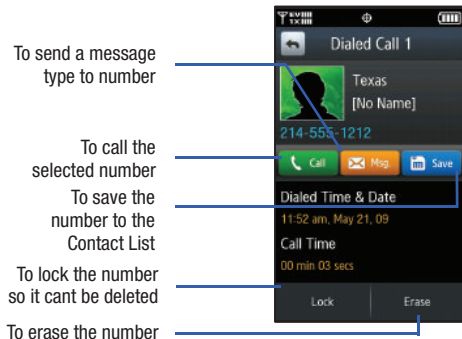


Note: If the phone number is saved in your Contacts, the icon to the left of the number will be represented by the appropriate icon (**Mobile**, **Work**, **Home**, etc.).

Deleting Call History Entries

1. From the Home screen, press .
2. Touch the **Recent Calls** drop down menu to touch a call category (**All Calls**, **Missed Calls**, **Received Calls**, or **Dialed Calls**).
3. Find the entry that you want to delete and touch it.
4. Touch **Erase**.
5. At the **Erase entry?** pop-up, touch **Yes** to continue, or **No** to cancel the operation.

Roaming

What is Roaming?

Your Rogue™ can roam on other compatible digital networks. Roaming occurs when you travel outside a pre-designated coverage area. The roaming icon  displays when roaming is active. Extra charges may apply when making or receiving calls.

Note: Some features may be unavailable while roaming.



Roaming Options

The following roaming options are available:

- **Home Only** - Your Rogue™ is available for normal operation only in the designated coverage area.
- **Automatic:** The preferred roaming list is used to acquire service.



Note: Contact Verizon Wireless for information regarding preferred systems.

To change your Roaming option, follow these steps:

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **7. Phone Settings**.
2. Scroll the screen up and touch **8. System Select**. To make your selection, touch **Home Only** or **Automatic** roaming options.


TTY

Your Rogue™ is fully TTY compatible. Connect the TTY equipment to the headset jack, which is located on the top of your Rogue™. Before you can use your Rogue™ with a TTY device, you'll need to enable TTY functions in the Rogue™.

1. From the Home screen, touch  **MENU** →  **Settings & Tools**.
2. Scroll the screen up and touch **8. Call Settings**.
3. Touch the **TTY Mode** drop down menu.
4. A warning appears in the display stating “**Enabling TTY will disable headset audio. Continue?**”
Touch **Yes** to proceed to TTY MODE screen. Touch **No** to return to **Call Settings** menu.
5. Touch to select one of the following options:
 - **TTY Full**
 - **TTY + Talk (VCO)**
 - **TTY + Hear (HCO)**
 - **TTY Off**
6. You are returned to the **Call Settings** menu.

Voice Commands

Voice Commands is advanced speech recognition software that can be used to activate a wide variety of functions on your Rogue™. Voice Commands software automatically voice activates all contacts for voice dialing and searching, no pre-recording or training needed. Speak phone numbers naturally to dial, and use voice commands to navigate phone menus.

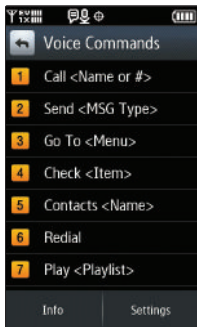

- From the Home screen, press the  **Voice Commands** button (on the right side of the phone).

The following is a list of functions you can perform using Voice Commands speech recognition on your phone.


- **Call <Name or #>:** Dial by saying a Name in your Contacts List, a Name and a Location (home, work, mobile) or the phone number.
- **Send <MSG Type>:** Send a text, picture, or video message to a number or to someone in your Contacts List.
- **Go To <Menu>:** Open any application installed on your device.

- **Check <Item>:** Provides details of your phone status, Voicemail, Messages, Missed Calls, Time, Signal Strength, Battery Level, Volume Level, Balance, Minutes, Payment, and My Number.
- **Contacts <Name>:** Open the contact record for a matched name in your Contacts List.
- **Redial:** Allows you to call the last number dialed.
- **Play <Playlist>:** Opens the My Music menu, or plays songs in a playlist or all songs if requested.
- **My Verizon:** Provides information about your Verizon Wireless account.
- **Help:** Provides a helpful tutorial on how to use Voice Commands.

Call <Name or #>

Digit Dial allows you to dial any phone number by simply speaking the digits into the Rogue™. No training is necessary, and Digit Dial is programmed to understand natural speech.

Note: You may need to train the speech recognition to understand Contact names that you speak.

1. From the Home screen, press the  **Voice Commands** button (on the right side of the phone).

2. After a brief pause, a list of optional commands appears in the display and the audio prompt "Please say a command" plays through the speakerphone. Say "Call" at a distance of 3-12 inches from the phone in a natural voice.
3. "Please say the name, number, voicemail or last number" plays through the speaker.
4. To use Digit Dialing, say the area code and number you want to dial into the microphone, clearly and naturally.
— or —
To use Name Dialing, say the name of one of your Contacts you want to dial.

Note: The entry for Name Dialing must be stored in your Contact list.

5. The number or name you said is repeated through the speaker and your phone dials the number.
6. If Voice Commands is not sure of the number you said, a list of possible matches appears in the display.
7. You're asked to confirm the correct number as Voice Commands displays the results.
 - Say "**Yes**" to confirm the number.

- Say "**No**" to reject the number.
- Say "**Exit**" to exit the Voice Command.
- Say "**Repeat**" to have the selected number read one more time.



Note: In case various numbers are displayed, "**Which Number?**" will display in the **Listening** menu option.

8. The location is repeated through the speaker and your phone dials the number.

Send <Msg Type>

Send Text, Picture or Video

Use the following steps to send a text, picture or video message with Voice Commands.

1. From the Home screen, press the   **Voice Commands** button (on the right side of the phone).
2. A list of commands appears in the display and the audio prompt "Please say a command" plays through the speakerphone, if it is enabled.
3. Say "Send Text" or "Send Picture" or "Send Video" at a distance of 3-12 inches from the microphone.
"Please say the name, number, or group" plays through the speakerphone.

4. Say the name exactly as it is displayed in your Contacts list, or say the phone number of the recipient.

Note: In case various numbers are displayed, “**Which Number?**” will display in the **Listening** menu option.



5. The contact name or number appears in the To: field. For more information on how to complete the text, picture or video message, see “*Creating and Sending Text Messages*” on page 74, “*Creating and Sending Picture Messages*” on page 76 or “*Creating and Sending Video Messages*” on page 78.

Goto <Menu>

The “Go To” command allows you to access a menu within the Rogue™ (for example, “Go to Contacts”). If no menu option is stated, a list of options will be provided.

Opening Menus and Applications



To begin navigation of menu items on your Rogue™ or to open select applications using Voice Commands, perform the following:

1. From the Home screen, press the   **Voice Commands** button (on the right side of the phone).

2. A list of commands appears in the display and the audio prompt “Please say a command” plays through the speakerphone.
3. To begin navigation of menu items, say “Go To” at a distance of 3-12 inches from the microphone. The menu list displays and a prompt of “Which shortcut?” plays through the speakerphone.
4. Say the application name or menu item you would like to open.

Check <Item>


Checking Phone Status

1. From the Home screen, press the   **Voice Commands** button (on the right side of the phone).
2. A list of commands appears in the display and the audio prompt “Please say a command” plays through the speakerphone.
3. Say “Check” at a distance of 3-12 inches from the microphone. “Which status item?” plays through the speakerphone. Valid “Check” commands are:

- **Status:** Displays and announces all of the available status indicators in sequence.
 - **Voicemail:** Displays the number of new voicemail messages.
 - **Messages:** Displays and announces the number of new voicemail, TXT, and Picture messages.
 - **Missed Calls:** Displays the missed call log.
 - **Time:** Displays and announces the current time.
 - **Signal Strength:** Displays and announces the current EVDO and 1x signal strength levels.
 - **Battery Level:** Displays and announces the current battery level.
 - **Volume:** Displays and announces the current master volume setting.
 - **Balance:** Calls #BAL.
 - **Minutes:** Displays and sends a free text message to your phone with the minute information.
 - **Payment:** Calls #PMT for payment information.
 - **My Number:** Displays and announces your telephone number.
4. The option spoken opens.


Contacts <Name>

To perform a name lookup, you'll need to have some entries in your Contacts list.

1. From the Home screen, press the  **Voice Commands** button (on the right side of the phone).

2. A list of commands appears in the display and the audio prompt "Please say a command" plays through the speakerphone.
3. Say "Lookup" or "Contacts" at a distance of 3-12 inches from the microphone. "Please say the name" plays through the speakerphone.
4. Say the name exactly as it is displayed in your Contacts list. The contact name appears in the display with other information that you've entered for that contact.

Redial


1. From the Home screen, press the  **Voice Commands** button (on the right side of the phone.)
2. A list of commands appears in the display and the audio prompt "Please say a command" plays through the earpiece or speakerphone.
3. In a single command, after the beep, say "Redial".
4. The last number dialed is redialed.

Play <Playlist>

Play

Play launches the **My Music** menu screen. Options are listed in the following order:


Genres, Albums, Playlist, Play All, Artists, Songs, Inbox and Shuffle.

1. From the Home screen, press the  **Voice Commands** button (on the right side of the phone).
2. A list of commands appears in the display and the audio prompt "Please say a command" plays through the speakerphone.
 - If you say "Play", the **My Music** menu launches.
 - If you say "Play" followed by a playlist name, songs on the playlist will begin to play.
 - If you say "Play All", all songs will play in alphabetical song title order.

My Verizon



Using Voice Commands, you can check your Verizon Wireless account status by Voice Command.

Note: This feature launches the browser to your account page, and requires a data plan and is subject to Verizon Wireless data coverage.

1. From the Home screen, press the  **Voice Commands** button (on the right side of the phone). A list of commands appears in the display and the audio prompt "Please say a command" plays through the speakerphone.
2. Say, "My Verizon" at a distance of 3-12 inches from the phone in a natural voice.
3. The phone's web browser will launch and display your account information. For details on using your browser, see "*Browser*" on page 159

Help

Provides helpful information on how to use Voice Commands.

1. From the Home screen, press the   **Voice Commands** button (on the right side of the phone). A list of commands appears in the display and the audio prompt "Please say a command" plays through the speakerphone.
2. Say, "Help" at a distance of 3-12 inches from the phone in a natural voice. The tutorial appears in the display.

Section 5: Understanding Your Contacts

This section allows you to manage your contacts by storing their name and number in your Address Book.

Contacts Icons

The following table shows the various contact icons.



Picture ID: Add an image to associate with the contact entry.



Name icon: Enter the name for the entry in this field.



Mobile 1 icon: Enter a mobile number for the entry in this field.



Home icon: Enter a home number for the entry in this field.



Work icon: Enter the work number for the entry in this field.



Email 1 icon: Enter an email address for the entry in this field.



Group icon: Select an available group to associate with the entry in this field.



Ringtone icon: Select a ringtone to associate with the entry in this field.



Mobile 2 icon: Enter a secondary mobile number for the entry in this field.



IM Screen Name icon: Enter an IM name.

Note: The name entered in this field will populate in the associated Instant Messaging application when Send IM is selected from View Contact->Options with the IM Screen Name highlighted.



Fax icon: Enter a fax number for the entry in this field.



Email 2 icon: Enter an Email address for the entry in this field.



Street: Enter the street address for the contact.



City: Enter the city for the contact.



State: Enter the state for the contact



Zip Code: Enter the zip code for the contact.



Country: Enter the country for the contact.



Birthday: Enter the birthday for the contact.



Notes icon: Enter a note for the entry in this field.

Adding a Contact

When you add information to your Contacts, you can add it as a new entry or as an existing entry.


Method 1

Creating a new Contact from the Home screen

1. From the Home screen, touch  **Contacts** →





New Contact.

2. Touch the **Image** icon and assign a picture to the new entry by choosing one of the following:
 - **My Pictures:** Allows you to insert a picture that has been saved to My Pictures.
 - **Take Picture:** Allows you to capture a photo to insert as the contacts picture.
3. Touch the **Name** input field. Enter a name for the entry using the touch keypad or the QWERTY keyboard. After entering the name, touch  .
4. Touch the appropriate field (**Mobile 1**, **Home**, **Work**, **Email 1**, etc.) to input a number. Once highlighted, use the touch keypad or QWERTY keyboard to enter required information.
5. When you're finished entering information for the entry, touch  to save the entry to your Contacts.

Method 2

Adding a number to a new or existing Contact from the Home screen

You can add new numbers to the Contacts by simply entering the number into the Dial Pad, then following the necessary prompts to complete the process.




1. From the Home screen, touch  .
2. Enter the phone number using the touch keypad or QWERTY keyboard, then touch  . You're prompted to select from **Add New Contact**, **Update Existing**, or **Notepad**.
3. Touch **1. Add New Contact** to enter the number as a new contact, touch **2. Update Existing** to update an existing contact, or touch **3. Notepad** to save the entry to a new note.

Note: If you saved the entry in Notepad, the number can be viewed in Notepad under Settings & Tools. For more information, refer to "Notepad" on page 155.




4. If you selected **Update Existing**, proceed to Step 9. If you selected **Notepad**, proceed to step 13.
5. If you selected **Add New Contact**, the following types are available.

-  **Mobile1**

-  **Mobile2**
-  **Home**
-  **Work**
-  **Fax**



6. Touch the desired entry type (**Mobile 1**, **Mobile 2**, **Home**, **Work**, etc.).
7. Touch the **Name** field to enter a name for the entry using the touch keypad. Touch  if you wish to select a different method of text entry, such as T9 Word, Abc, ABC, 123, or Symbols. Touch  to exit the Name field.
8. When you're finished entering information for the entry, touch  . The entry is saved to your Contacts.
9. If you selected **Update Existing**, the Contact List opens.
 - Touch and then slide the Accelerator Tab to the letter range corresponding to the first letter of the entry's first name. (The list is alphabetized by the first letter.) or

- Using the QWERTY keyboard, enter enough letters to identify the entry. Once you've located the entry to update, touch the entry to access the Update Existing display.

10. Touch the contacts name.
11. Touch the desired contact number type to store the number.
12. Touch  to save the updated entry.
13. If you selected **Notepad**, the Notepad opens with the phone number entered into the **Add New Note** screen. Type in any additional text and touch  to save it.
14. Go back to Step 2 if you also want to add this number to a new or existing contact, or press the  **Clear** key to return to the Home screen.

Method 3


Creating or Updating Contacts Using Call History

1. From the Home screen, press .
2. Scroll through the list of calls and touch the number to add to your Contact List or to update your Contact List.
3. Touch . The **Save** menu displays with two options:

- **Add New Contact**
- **Update Existing**

For **Add New Contact**, the following types are available:

-  **Mobile1**
-  **Mobile2**
-  **Home**
-  **Work**
-  **Fax**

4. (If you selected **Update Existing**, proceed to step 9.)
5. Touch the desired entry type (**Mobile 1**, **Mobile 2**, **Home**, **Work**, or **Fax**).
6. To enter a name for the entry, touch the **Name** field using the touch keypad or QWERTY keyboard. Touch  if you wish to select a different method of text entry, such as

T9 Word, Abc, ABC, 123, or Symbols. When you have completed entering the name, touch the appropriate number field (Mobile1, Mobile2, Home, Work, or Fax).


7. To assign the contact to a Group, touch the **Group** field and touch the desired category (Business, Colleague, Family, Friends) and touch **Done**.

Note: No more than 10 contacts may be added to any group.

8. When you're finished entering information for the entry, touch **Save**. The entry is saved to your Contacts List.
9. If you selected **Update Existing** from the Recent Calls list, a list of existing contacts displays. Select the contact to update from the list.
10. On the Update Existing screen, touch the field to update. The Edit Contact screen displays. The information from the recent call is entered in the selected field. While you are on this screen, you may also update other fields. When finished, touch **Save**.

Adding Pauses

Calls to automated systems often require a password or account number. Instead of manually entering numbers each time, store the numbers to your Contacts along with special characters called pauses.


1. From the Home screen, touch  **Dialer**.
2. Enter the phone number up to where you want to add the pause. Wait using the touch keypad, then touch **Options**.
3. Touch **1. Add 2-Sec Pause** (a "p" appears in the display) or **2. Add Wait** (a "w" appears in the display).
 - **Add Wait:** A hard pause stops the calling sequence until further input from you.
 - **Add 2-Sec Pause:** A two-second pause stops the calling sequence for two seconds and then automatically sends the remaining digits.
4. After your entry, touch **Save**.
5. Continue with Method 2, Step 4 for **Adding a number to a new or existing Contact from the Home screen**.

Note: Entering multiple Add Pauses extends the length of a pause. For example, two consecutive Add Pauses cause a total pause time of four seconds. Keep in mind pauses count as digits towards the 48-digit maximum.

Contact List

Finding a Contact Entry

From the Home screen, you can quickly open the Contacts list.

1. From the Home screen, touch  **Contacts**.
2. Press and then slide the **Accelerator Tab** to the letter range corresponding to the first letter of the entry's first name.
(The list is alphabetized by the first letter.)










Accelerator Tab

3. Touch the  **Phone icon** to call.



Note: With the QWERTY keyboard open, the cursor will be placed in the **Find** field. You may enter part or all of the Contact name to see a filtered list.

Note: Alternately, you can find a Contact name using **Quick Search**. For more information, see “*Searching for a Menu Item*” on page 115.

Editing an Existing Contact Entry

1. From the Home screen, touch  **Contacts**.
2. Touch the desired contact list entry and touch .
3. Touch the name, number, Email address, or other field that you wish to edit.
4. Touch  to backspace and delete numbers, text, or symbols, or touch and hold  to erase everything in the highlighted field.
5. Use the touch keypad or QWERTY keyboard to re-enter numbers, text, or symbols.
6. When you're finished editing the entry, touch .
7. Touch  to save your changes.
8. Press  to return to the contact list.

Deleting a Contact Entry

1. From the Home screen, touch  **Contacts**.
2. Touch the desired contact list entry.
3. Touch .
4. A confirmation message appears. Touch **Yes** to delete the entry from the Contact List. Touch **No** to stop the process.

Backup Assistant

Backup Assistant is a wireless service that saves a copy of your phone's address book to a secure web site. If your phone is lost, stolen or damaged, Backup Assistant can restore your saved address book to a new phone - wirelessly! Schedule daily backups save your information manually or automatically! Login to your web account and get full access to your address book. You can view, print, add, delete and edit contacts. Changes are sent to your phone with one click!



Visit <http://www.verizonwireless.com/backupassistant>. Standard TXT messaging rates apply. Backup Assistant is free for My Verizon subscribers.

Contact Groups

You can place Contact entries into categories, called “**Groups**.” Groups allow you to search your Contacts faster, quickly send messages to one or more group members, and more.



Note: By default, new entries to your Contacts are placed into the No Group category unless a specific group category is selected.


View Groups

1. From the Home screen, touch  **MENU** →  **Contacts** → **4. Groups**. The following groups appear in the display:
 - **Business**
 - **Colleague**
 - **Family**
 - **Friends**
2. Touch the desired group.

Add a New Member to a Group

Once you have selected the desired group, you can add Contacts from your Contact List to that group, using the following procedure:

1. From the Home screen, touch  **MENU** →  **Contacts** → **4. Groups** and touch a group name.

The current members of that group display. If there are no members, a banner displays: **NO GROUP MEMBERS**.
2. Touch , and the list of Contacts displays.




3. Touch the entry or entries to add to the group, then touch **Done**. The list of members of the Group display.

Note: A maximum of ten members can be assigned to a group.

Remove an Entry from a Group

1. From the **Groups** menu, touch the group name.
The current members of that group display.
2. Touch **Remove Members**.
3. To select a member to erase, touch the entry. A checkmark is added to the member.
4. When the member(s) to remove are selected, touch **Done**. A confirmation message appears. Touch **Yes** to remove the entry; touch **No** to stop the process.

Move an Entry to Another Group





1. From the Home screen, touch  **MENU** →  **Contacts** → **2. Contact List**. The Contact List displays.
2. Touch an entry in the Contact List and the information for that Contact displays. This includes the Group that the contact is assigned to.
3. Touch **Edit**. The Edit Contact screen displays.
4. Scroll to locate the  **Group** field and touch the entry field.
5. The following groups display:

Note: Touch **Mark All** to add the member to each group.

- **Business**
 - **Colleague**
 - **Family**
 - **Friends**
6. Touch the desired group. A checkmark is added to the group.
 7. Touch **Done**. The contact information has been saved with the new Group information.

Create a New Group



In addition to the four groups already in your Samsung Rogue™, you can create additional groups (a maximum of 25). New group names must be within a 32-character limit.



1. From the Home screen, touch  **MENU** →  **Contacts** → **4. Groups**. Your existing groups appear in the display.
2. Touch . The **Enter New Group** screen displays.
3. Using the touchpad or the QWERTY keyboard, enter the name of the new group.
4. Touch . The Groups list now displays the new group added.

Send a Text Message to Members of a Group



Use this feature to send a message to as many as 10 members of a group at once.

Note: Text messaging availability varies when roaming off the Verizon Wireless Network.

1. From the Home screen, touch  **MENU** →  **Contacts** → **4. Groups**. Your existing groups appear in the display.




2. Touch  beside the desired group name → **New TXT Message**.
3. Touch a contact name to select it, or touch **Mark All** to select all contact names in the list. A check mark will appear beside the contact's number.
4. Touch . The **Send TXT Message** header displays.


Note: You can mark up to 10 members of a group for message distribution.

5. Enter the content of your message using the touch keypad or the QWERTY keyboard and touch .
6. To send the text message, touch .


Send a Picture Message to Members of a Group

Note: Only available within Verizon Wireless Enhanced Services Area.

1. From the Home screen, touch  **MENU** →  **Contacts** → Touch **4. Groups**. Your existing groups appear in the display.
2. Touch  beside the desired group name → **New Picture Message**.





3. Touch a contact name to select it, or touch **Mark All** to select all contact names in the list. A check mark will appear beside the contact's number.
4. Touch . The **Send New Message** header displays.

Note: You can mark up to 10 members of a group for message distribution.

5. Touch the following entry fields:
 - **Text:** Add text to the Picture Message.
 - **Picture:** Add an image from the My Pictures gallery to the message.
 - **Sound:** Add sound to the Picture Message.
 - **Subject:** Add a subject to the Picture Message.
 - **Name Card:** Attach a Name Card or an entry in your Contacts to the message.
6. Once you've finished adding the desired content to your Picture Message, touch .

Send a Video Message to Members of a Group

Note: Only available within Verizon Wireless Enhanced Services Area.




1. From the Home screen, touch  **MENU** →  **Contacts** → **4. Groups**. Your existing groups appear in the display.
2. Touch  beside the desired group name → **New Video Message**.
3. Touch a contact name to select it, or touch **Mark All** to select all contact names in the list. A check mark will appear beside the contact's number.
4. Touch .

Note: You can mark up to 10 members of a group for message distribution.

5. Touch the following entry fields:
 - **Text:** Add text to the Video Message.
 - **Video:** Add an image from the My Videos gallery to the message.
 - **Subject:** Add a subject to the Video Message.
 - **Name Card:** Attach a Name Card or an entry in your Contacts to the message.

- Once you've finished adding the desired content to your Video Message, touch .

Send a Voice Message to Members of a Group

- From the Home screen, touch  **MENU** →  **Contacts** → **4. Groups**. Your existing groups appear in the display.
- Touch  beside the desired group name → **New Voice Message**.
- Touch a contact name to select it, or touch **Mark All** to select all contact names in the list. A check mark will appear beside the contact's number.
- Record and save your message. The saved recording will be automatically inserted into the message.
- The **New Voice Message** header displays.

Note: You can mark up to 10 members of a group for message distribution.

- Touch the following entry fields:
 - Text:** Add text to the Video Message.
 - Subject:** Add a subject to the Video Message.

- Name Card:** Attach a Name Card or an entry in your Contacts to the message.



- Once you've finished adding the desired content to your Voice Message, touch .

Speed Dialing




Speed dialing allows you to touch and hold a key (or keys) to dial the number associated with those key(s). There are two types of speed dialing; **1-touch**, and **2-touch dialing**.

Note: 1-Touch and 2-Touch, dialing allows you to call numbers stored in your Contact List quicker.
Memory location 001 is reserved for voicemail.



1-touch dialing


Call phone numbers assigned to memory locations 002 - 009 by touching and holding the any of the 2 - 9 keys. For example, to speed dial the number assigned to location 2, touch  to access the touch keypad, then you must touch and hold  until the name and number appear in the display and the number is dialed.

2-touch dialing

Call phone numbers assigned to keys 010 through 099 by touching  **Dialer** to access the touch keypad, and briefly touching the first key, then touching and holding the second key. For example, to speed dial the number assigned to 013, briefly touch , then touch and hold  until the number dials.




Assign a speed dial location

1. From the Home screen, touch  **MENU** →  **Contacts** → **5. Speed Dials**. The Speed Dials screen displays with the first available number at the top of the list.
2. Touch the number you wish to assign to the speed dial location by entering the location number using the touch keypad.
The **SET SPEED DIAL** screen displays.
3. Touch the entry you want to assign to that speed dial location.



4. A confirmation message appears. Touch **Yes** to assign the entry to the Speed Dial list. Touch **No** to stop the process.
5. Continue to assign speed dial entries or press and hold the  **Clear** key on the front of the phone to return to the Home screen.

Favorites

Favorites allows you to save your most frequently accessed contacts for quick access.



1. From the Home screen, touch the  **My Favorites** widget.
2. Touch .
3. At the **Add favorite from** pop-up, touch **Contacts** to add members from your contacts list, or **Groups** to add members from your groups.
4. Touch the contact(s) or group member you would like to add and touch .

Removing a Favorite

1. From the Home screen, touch the  **My Favorites** widget.
2. Touch  (in the lower right corner).
3. Touch **Remove All** to place a checkmark alongside all Favorites entries or touch the Favorites entry you would like to delete and touch **Done**.
4. At the **Remove favorite?** pop-up, touch **Yes** to continue, or **No** to cancel the operation.


Emergency Contacts

Assigning an Emergency Contact - From Contacts



1. From the Home screen, touch  **MENU** →  **Contacts** → **7. In Case of Emergency**. The Emergency Contacts screen displays **Contacts 1**, **Contacts 2**, **Contacts 3** and **Personal Info**.

Note: Use the **Personal Information** option to enter information such as illnesses, allergies, and other detail information.



2. Touch either **Contacts 1**, **Contacts 2** or **Contacts 3**. The  and  entries are displayed.

3. Touch  to add an emergency number from your contacts list. Touch a Contact to assign the contact.



Assigning an Emergency Contact with a New Contact

1. Repeat steps **1** through **3** in the previous section. See “Assigning an Emergency Contact - From Contacts” on page 63.
2. Touch  to enter a new contact as an emergency number. Enter Contact information then touch . The Emergency Contact is added and is displayed in the Contact List in red font.

Unassigning an Emergency Contact



1. From the Home screen, touch  **MENU** →  **Contacts** → **7. In Case of Emergency**.
2. Touch the Emergency Contact to unassign.

Note: Emergency contacts are displayed in red font.

3. Touch  and touch .
4. The Emergency Contact screen displays with the contact removed.

My Name Card

My Name Card allows you to create a virtual business card. Once completed, you can send the card to recipients as a vCard attachment.

1. Open your device in landscape mode, from the Home screen, touch  **MENU** →  **Contacts** → **8. My Name Card**.
2. Touch each field, and enter information in the field as desired. Use the touch keypad or the QWERTY keyboard to enter information.

Note: A check mark appears to the left of selected contacts.




3. When finished, touch  to save the Name Card.

Sending Contact Information (vCard) to another Bluetooth-enabled phone

You can send individual contacts or your entire contact list to or from another device that is Bluetooth enabled*.

Note: *If Bluetooth is not powered on, or your Rogue™ is not paired with another device, see “Turning Bluetooth On or Off” on page 101.

Important!: Not all Bluetooth devices will accept a name card.



1. From the Home screen, touch  **Contacts** →  → **Send Name Card** → **5. Bluetooth**.
2. Touch a contact name to select it, or touch **Mark All** to select all contact names in the list. A check mark will appear beside the contact's number. Touch .
3. Touch the destination device.

Note: If your Rogue™ is not paired already with the destination device, follow the instructions on p.90 for Bluetooth Search.

4. The “**CONNECT TO <DEVICE NAME>?**” prompt displays. Touch **Yes**.
5. Confirm the name card transfer by selecting the appropriate key on the other device if prompted.
6. When the information is exchanged, a message will appear that the transfer is complete.

Note: ** All information will be transferred except for group name, ringtone, and Emergency contact reference.

Sending a Name Card (vCard) from Groups



1. From the Home screen, touch  **MENU** →  **Contacts** → **4. Groups**. Your existing groups appear in the display.
2. Touch the desired group name → **Options** → **Send Name Card** → **Touch a message type**.
3. Touch a contact name to select it, or touch **Mark All** to select all contact names in the list. A check mark will appear beside the contact's number. Touch **Done**.

Note: If creating a **Voice Message**, you must first record and save your message. The saved recording will be automatically inserted into the message.

4. Populate appropriate fields.
5. Once you've finished adding the desired content to your message, touch **Send**.

Finding My Phone Number

My Number displays the ten-digit number assigned to your Rogue™.

1. From the Home screen, touch  **MENU** →  **Settings & Tools**.

2. Scroll the screen up and touch *. **Phone Info**.
3. Touch **1. My Number**. The mobile device, phone number, and mobile identification number are displayed.

Section 6: Selecting Text Entry Modes

This section outlines how to select the desired text input mode when entering characters into your Samsung Rogue™.

Entering Text Using the QWERTY Keyboard

Your device provides convenient ways to enter words, letters, punctuation, and numbers whenever you are prompted to enter text (for example, when entering information into a field, surfing the Web, and Text Messaging).

To access the QWERTY keyboard

1. Firmly grasp the front and back of your Rogue™ with both hands.






In a single motion, use your thumbs to slide the top section of the device up to open, as shown in the following illustration.



The built-in slider QWERTY keyboard supports quick and easy text input, just as you would when using a computer's keyboard. When you display a screen where you can enter text, use the keyboard to enter different character types:






Function: Allows you to use characters displayed at the top of the QWERTY keys. Examples: <, >, *, \$, @, #, ?

- Press  once to toggle from letters to orange special characters on the QWERTY keyboard. When Function is ON, the  icon will appear on the top annunciator line of the display.
- Press  twice to lock the keyboard in Fn mode. When Function is LOCKED, the  icon will appear on the top annunciator line of the display.
- Press  once more to return to Abc mode.



Shift: Toggles the casing for alphabet characters between initial case, uppercase and lowercase.

- Press  once to toggle from Abc to ABC.
- Press  twice to toggle from ABC to abc.
- Press  three times to toggle from abc to Abc.



Backspace: Deletes the previous character.





Enter: Moves the insertion point to the next line in a message.

The keyboard provides dual-use keys labeled with alphabetic characters and numbers on the lower half and symbols on the upper half. Press the key combination corresponding to the character you want to enter.


Entering Characters

Characters can be entered using either Uppercase or Lowercase.

1. Slide out the QWERTY keyboard and enter your text. By default the Rogue™ is in Initial case and characters then revert back to lowercase.
2. Press the desired text key.
 - For example, to enter the word "Sam", type the keyboard sequence below.
 - If you make a mistake and enter the wrong character, press  to erase a single character. Press and hold  to erase an entire word.



Sam

3. To enter all uppercase characters, press  to maintain all consecutive characters in uppercase.



SAM

Entering Numbers


The keyboard can be used to enter numbers, letters, and symbols. Although these keys default to text (letters), numbers can be input by simply pressing the key associated with the number you want to enter.



11:30

Entering Symbols

Symbols can be entered from the keyboard (using the  key).

1. Position the cursor where you want the symbol to appear within your message.
2. Press  and then press the key for the symbol you wish to insert. This method uses the symbols etched on the corresponding QWERTY key.



Sam@

Entering Smileys

Smileys can be entered from the keyboard. Smileys are entered into text messages to communicate feelings such as pleasure, approval or humor. (Examples: :) , ;) , <3):



=]

Note: You may also create your own quick text. While in the QUICK TEXT screen, touch **New**. Compose a quick text and touch **Save**. Your new quick text is added to the top of the selection list.

Entering Text using Touch Screen Keypad

Changing Text Input Mode

When using your phone, you often need to enter text, such as when storing a name in your Contacts List, creating your personal greeting or scheduling events on your calendar. You can enter alphanumeric characters by using your phone's keypad.

1. In portrait mode, from a screen where you can enter text, touch the text entry field.
2. From the onscreen keypad, touch **Abc** to change the Text Input mode.

Example: Writing a text message.

1. To change the text input mode, touch the **Text Input Mode** button (bottom left button) and select one of the following options:
 - T9 Word
 - Abc
 - ABC
 - 123
 - Symbols

2. Touch the text mode you desire. The entry mode button changes to reflect the mode that you selected. For example, if you selected **1. T9 Word**, the entry mode button will display **T9 Word**.

Note: Text Entry Mode **T9 Word**, **Symbols**, or **123** is not available in landscape mode.

Text Input Icons

T9 Word

T9 Word: allows you to key in any character using single keystrokes.

ABC

All uppercase: allows you to enter uppercase characters. Ex: **HI THERE.**

Abc

Initial uppercase: allows you to enter initial text in uppercase and all consecutive characters of the same word as lower case. Ex: **Hi there.**

abc

All lowercase: allows you to enter text as lower case. Ex: **hi there.**

123

Numeric: allows you to enter numbers. Ex: **123**

Symbols

Symbols: allows you to insert symbols.

Touch Screen Keypad Icons



Directional key: Allows you to navigate through the message content.



Hide/Display keypad: Allows you hide and display the keypad.



Backspace: Deletes the previous character.

Shift ↑

Shift: Toggles the casing for alphabet characters between initial case, uppercase and lowercase. Case will remain as selected until the Shift key is pressed again.

Next →

Next: Only displays when you are in T9 Word mode. Allows you to cycle through words that are related to the keystrokes entered.

Space ↵

Space: Allows you to add spaces between words and characters.

Using T9 Word

T9 Word is a predictive text input mode that allows you to key in any character using single keystrokes. This text input mode is based on a built-in dictionary.

1. Touch the Text Input Mode button at the bottom of the screen and touch and select **T9 Word**. When in T9 Word mode, start entering a word by touching the corresponding keys. Touch each key only once for each letter.

ABC	mno	ghi	tuv	pqrs
B	o	g	u	s

The word that you are typing displays on the screen. It may change with each consecutive key that you touch.

2. Enter the whole word before editing or deleting the keystrokes.

Using Abc Mode

To use ABC mode, use the corresponding keys to enter your text.

- Touch the Text Input Mode button at the bottom of the screen and select **Abc**, then touch the key labeled with the letter you want:
 - Once for the first letter, twice for the second letter, and so on.
 - To shift case in ABC mode, touch **Shift**. There are 3 cases: Initial capital, Caps lock, and Lower case.

Note: By default, the first letter of an entry is capitalized and all consecutive letters are kept in lowercase (unless you touch the Shift key). After entering a character, the cursor automatically advances to the next space after two seconds or when you enter a character on a different key.


Using 123 Mode

The Numeric mode enables you to enter numbers into a text message.

- Touch the Text Input Mode button at the bottom of the screen and select **123**, then touch the keys corresponding to the digits you want to enter.

Using Symbols


Symbol mode enables you to insert symbols and punctuation marks into text.

1. Touch the Text Input Mode button at the bottom of the screen and select **Symbols**, then touch the desired symbol key.
2. To display more symbols, touch **1/5**.
3. To clear a symbol entered touch .
4. Touch **Done** to return the text field.

Using Domain Extensions

Domain mode allows you to enter preloaded domain extensions such as @, .com, .net, .edu, @hotmail.com, @gmail.com, and @verizon.com.

Note: The Domain Extension icon display only when the To: field is highlighted.

1. To enter a domain extension in the **1 (To:)**, touch  → select an extension → **Done**.
2. Touch **1/3** to cycle through the Domain Extensions.

Section 7: Messaging


This section explains how to send or receive different types of messages. It also includes the features and functionality associated with messaging.


Types of Messages

Your phone is capable of sending Email, text, picture, video, and voice messages. Send messages by simply entering the Email address or the phone number of the recipient in the To: <.....> or Send To field when creating a new message.

Changing Message Settings

This menu allows you to define settings for messages sent or received on your phone. To access your message settings, use the following steps:

1. From the Home screen, touch  **Message** → **9. Settings**. Choose from the following options:
 - **Message View:** Select either View by Time (allows you to view message by time of receipt.) or View by Contact (allows you to view message by recipients.)
 - **Entry Mode:** Sets the default entry mode for messaging. Choose from T9 Word, Abc, ABC or 123.
 - **Auto Save Sent:** Saves all messages sent. Choose from: On, Off, or Prompt.

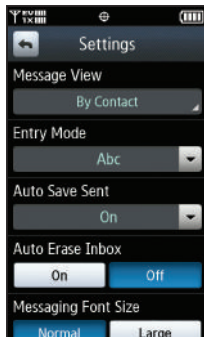





- **Auto Erase Inbox:** Erases the oldest message of the same type (Text or Picture) when the maximum number of received messages of that type is exceeded in the Inbox. For example, When the Inbox exceeds 100 text messages, the first message in the list is replaced with the next incoming message. Picture messages are replaced when the phone's memory is full. Choose from On or Off.
- **Messaging Font Size:** Allows you to set the messaging font size for messages received.
- **TXT Auto View:** Automatically displays the text message when received. Choose from On or Off.
- **Multimedia Auto Receive:** Automatically receives picture, video, and voice messages into your inbox. Choose from On or Off.
- **Quick Text:** Displays 19 pre-loaded phrases for Text Message, Picture Message and Video Message.
 - **New** creates a new quick text phrase or touch
 - **Move** changes the order of quick text phrases.
 - **Erase** erases a quick text phrase.
- **Voicemail Setting:** Enter the Voicemail phone number to be dialed (if other than the default value of *86).
- **Callback #:** Allows you to use or edit the number assigned to your handset. Choose from On or Off.
- **Signature:** Adds the signature text to each message sent. Choose from On or Off.

- **Domain Extensions:** Allows you to **Edit** (to edit touch the domain extension.) or **Erase** any of seven pre-loaded domain extensions or create a **New** domain extension.
- **Preferred Email:** Allows you to set the default email client.


Creating and Sending Text Messages


 
You can send text messages to another mobile phone or to an Email address. For more information about entering text in messages, see “*Entering Text Using the QWERTY Keyboard*” on page 66.


1. Open your device in landscape mode, from the Home screen, touch  **Message → 1. New Message → 1. TXT Message.**
2. In the **To:** field:
 - Touch  to add a recipient from your Contacts List.
 - Touch  to add a recipient from your All Calls log.
 - Touch  to add a recipient from a Favorites entry.

- Enter a phone number, contact name or Email address of the recipient. If you have contacts stored in the Contact List, you will see a list of partially matched names in the drop down box. Touch the contact entry or number.

Note: If you do not select an option from the menu touch  to return to your message.


3. Press the  Directional key down to move to the **Text** field. In the Text field, compose your message using the keypad.

Note: At any point while entering text, press the  key to access the orange special characters on the keyboard. (The  icon will appear on the top line of the display.)

4. Touch  to display additional options. Touch the desired option to perform the function, or to enter its sub-menu:
- **Paste Text:** Allows you to paste copied text into the text field.
 - **Save As Draft:** Save the message to your Draft folder.
 - **Insert Quick Text:** Choose from 19 pre-loaded phrases.

- **New** creates a new quick text phrase or touch
- **Move** changes the order of quick text phrases.
- **Erase** erases a quick text phrase.

- **Add:** Allows you to add a graphic, animation, sound, name card, or Spanish symbols.
- **Copy Text:** Allows you to copy and paste text into the text field. To copy text, slide your finger across the text to highlight and touch **Copy**. Touch **Options** → **Paste Text** to paste the copied text into the text field.
- **Edit Text Format:** Choose size, alignment, style, text color, and text background.
- **Sending Options:** Send the message with a High or Normal priority or choose to display your callback number in the body of the message.
- **Cancel Message:** Cancels the message and allows you to save it in the Drafts folder.

Note: If you do not select an option from the menu touch  to return to your message.





5. To send the message, touch  **SEND**.

Creating and Sending Picture Messages


Note: Only available within Verizon Wireless Enhanced Services Area.

Picture Messages combines text, picture, and sound. This is also known as Multimedia Messaging (MMS).


Note: Sliding the QWERTY keyboard open immediately after taking a picture opens a New Picture Message screen.



1. Open your device in landscape mode, from the Home screen, touch  **Message** → **1. New Message** → **2. Picture Message**.
2. In the **To:** field:
 - Touch  to add a recipient from your Contacts List.
 - Touch  to add a recipient from your All Calls log.
 - Touch  to add a recipient from a Favorites entry.

- Touch  to post to a blog from your Online Album.
- Enter a phone number, contact name or Email address of the recipient. If you have contacts stored in the Contact List, you will see a list of partially matched names in the drop down box. Touch the contact entry or number.

Note: If you do not select an option from the menu touch  to return to your message.

Note: Once you have entered a recipient(s) in the 1 (To:) field the remaining fields are optional.

3. Press the  Directional key down to move to the **Text** field. In the Text field, compose your message using the keypad.

Note: At any point while entering text, press the  key to access the orange special characters on the keyboard. (The  icon will appear on the top line of the display.)

4. Touch **Options** to display additional options. Touch the desired option to perform the function, or to enter its sub-menu:




- **Paste Text:** Allows you to paste copied text into the text field.
- **Preview:** Shows the message before it is sent.
- **Save As Draft:** Saves the message to your Draft folder.
- **Insert Quick Text:** Choose from 19 pre-loaded phrases.
 - **New** creates a new quick text phrase or touch
 - **Move** changes the order of quick text phrases.
 - **Erase** erases a quick text phrase.
- **Copy Text:** Allows you to copy and paste text into the text field. To copy text, slide your finger across the text to highlight and touch **Copy**. Touch **Options** → **Paste Text** to paste the copied text into the text field.
- **Add Slide:** Allows you to insert multiple pictures into a picture message.
- **Remove Slide:** Remove a slide from your message.
- **Priority Level:** Sends the message with a High or Normal priority.
- **Cancel Message:** Cancels the message and allows you to save it in the Drafts folder.
- **Spanish Symbols:** Inserts Spanish symbols such as Ñ.

Note: The **Remove Slide** option is available only when at least one picture has been inserted into the picture message.

Note: If you do not select an option from the menu touch **Close** to return to your message.

5. Press the  Directional key down to move to the **Picture** field and press  **Enter**. Touch the image you want to insert into the message and touch **Add**.

To capture a new image:




- Touch the **Camera** button to take a new picture.
 - Press  **Camera/Camcorder** key to capture the image.
 - Touch  to save and insert the image into your message.
6. You are automatically moved to the **Sound** field. Press  **Enter** to open the **My Sounds** menu. Touch the sound you want to insert into the message or touch **Record New** to record a new sound.
7. You are automatically moved to the **Subject** field. Using the keypad enter the subject of your message.


- Press the  Directional key down to move to the **Name Card** field. Press  **Enter** to select **My Name Card** or an entry from your **Contacts** list. Follow the prompts and touch to insert.
- Once all fields are complete, touch  **SEND**.

Creating and Sending Video Messages

You can send video messages to another mobile phone or to an Email address.


Note: Sliding the QWERTY keyboard open immediately after taking a video opens a New Video Message screen.

- Open your device in landscape mode, from the Home screen, touch  **Message** → **1. New Message** → **3. Video Message**.
- In the **To:** field
 - Touch  to add a recipient from your Contacts List.
 - Touch  to add a recipient from your All Calls log.



- Touch  to add a recipient from a Favorites entry.
- Touch  to post to a blog from your Online Album.
- Enter a phone number, contact name or Email address of the recipient. If you have contacts stored in the Contact List, you will see a list of partially matched names in the drop down box. Touch the contact entry or number.

Note: If you do not select an option from the menu, touch  to return to your message.

Note: Once you have entered a recipient(s) in the 1 (To:) field, the remaining fields are optional.

- Press the  Directional key down to move to the **Text** field. In the Text field, compose your message using the keypad.

Note: At any point while entering text, press the **Fn** key to access the orange special characters on the keyboard. (The **Fn** icon will appear on the top line of the display.)

4. Press the  Directional key down to move to the **Video** field and press  **Enter** to add a video. Touch the video you want to insert into the message (the video is played back) and touch **Add**.

To record a new video:

 
- Touch **Camcorder** at the bottom of the display to record a new video.
 - Press  **Camera/Camcorder** key to start recording.
 - Touch  to pause if needed. After completing your recording.
 - Touch  to end the recording.
 - Touch  to save and insert the video into your message.
- 5. You are automatically moved to the **Subject** field. Using the keypad enter the subject of your message.
- 6. Press the  Directional key down to move to the **Name Card** field. Press  **Enter** to select **My Name Card** or an entry from your **Contacts** list. Follow the prompts and touch to insert.





7. Once all fields are complete, touch  **Send**.

Creating and Sending Voice Messages

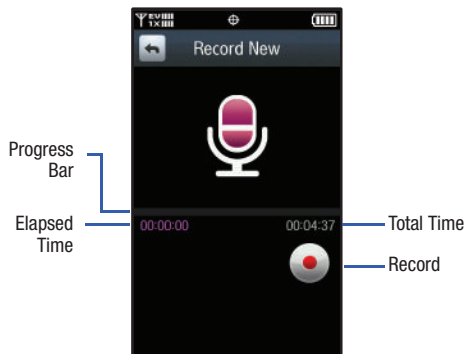You can send voice messages to another mobile phone or to an Email address.





1. Open your device in landscape mode, from the Home screen, touch  **Message** → **1. New Message** → **4. Voice Message**.



2. Touch  to start recording. Touch  **Pause** if needed. After completing your recording, touch  **STOP** to end the recording and touch .

Note: While recording, the number to the right is an indicator of the time remaining for your recording.


3. In the **To:** field:

- Touch  to add a recipient from your Contacts List.
- Touch  to add a recipient from your All Calls log.
- Touch  to add a recipient from a Favorites entry.
- Touch  to post to a blog from your Online Album.


- Enter a phone number, contact name or Email address of the recipient. If you have contacts stored in the Contact List, you will see a list of partially matched names in the drop down box. Touch the contact entry or number.



Note: If you do not select an option from the menu touch  to return to your message.

Note: Once you have entered a recipient(s) in the 1 (To:) field the remaining fields are optional.





4. Touch  **Enter** to move to the **Voice** field. Your voice recording is shown.

Note: To remove the recording, touch the **Voice** field → **Remove**. Touch **Change** to replace the recording.

5. Press the  Directional key down to highlight the **Text** field. In the text field, compose your message using the keypad.

Note: At any point while entering text, press the  key to access the orange special characters on the keyboard. (The  icon will appear on the top line of the display.)

6. Touch **Options** to display additional options. Touch the desired option to perform the function for the option, or to enter its sub-menu:
 - **Paste Text:** Allows you to paste copied text into the text field.
 - **Review:** Shows the message before it is sent.
 - **Save As Draft:** Save the message to your Draft folder.
 - **Insert Quick Text:** Choose from 19 pre-loaded phrases.
 - **New** creates a new quick text phrase or touch
 - **Move** changes the order of quick text phrases.
 - **Erase** erases a quick text phrase.
 - **Copy Text:** Allows you to copy and paste text into the text field. To copy text, slide your finger across the text to highlight and touch **Copy**. Touch **Options** → **Paste Text** to paste the copied text into the text field.
 - **Priority Level:** Save the message with a High or Normal priority.
 - **Cancel Message:** Cancels the message and allows you to save it in the Drafts folder.
 - **Spanish Symbols:** Inserts Spanish symbols such as Ñ.

7. Press the  Directional key down to highlight **Subject** field, using the keypad enter the subject of your message.
8. Press the  Directional key down to highlight the **Name Card** field. Press  **Enter** to select **My Name Card** or an entry from your **Contacts** list. Follow the prompts and touch to insert.
9. Once all fields are complete, touch  **SEND**.

Receiving New Messages

While text messages from other phones are delivered directly to your phone, Picture messages, Video Messages, Voice Messages and Email will be stored in the Inbox of the message server and the server will alert you to new messages. Therefore you need to retrieve new messages to your phone and read them on the phone.


Receive Messages While in a Call

1. When you receive a message while in a call, the **NEW TXT MESSAGE** or **NEW MULTIMEDIA MESSAGE** pop-up box appears in the display. Touch **View Now** or **View Later**.


Note: Only text messages can be viewed during a call. Multimedia messages cannot be downloaded during a call.

Touch the unopened message. The **Inbox** screen appears first with information about the message.

View a Text, Picture, Video or Voice Message Later

1. When you receive a new Text, Picture, Video or Voice message that you would like to view later, touch **View Later**. The message will be stored in the Inbox.
2. To view the stored message, from the Home screen, touch  **Message**.
3. Touch **2. Messages**.

Receiving a Text Message

1. When you receive a new message, touch **View Now** or **View Later** (For more information, refer to “View a Text, Picture, Video or Voice Message Later” on page 82.)
2. While viewing a message touch  to display the available options. Options are dependent on the message type:
 - **Forward:** Forwards the message to another recipient.

- **Reply w. Copy:** Replies to the received message with a text message and allows you to send a copy of the message to another contact.
 - **Save Quick Text:** Saves the text received in the message to the Quick Text list.
 - **Lock/Unlock:** Locks or unlocks the entry to prevent accidental deletion.
 - **Add To Contacts:** Saves the number of the sender to your Contacts as a new entry or add to an existing entry.
 - **Messaging Font Size:** Allows you to select the font size of the message being viewed. Select Normal or Large.
 - **Extract Addresses:** Displays all Contact Numbers, Email Addresses and URLs extracted from the opened message.
 - **Message Info:** Provides the following information: From (also provides the date and time the message was received), Callback #, Priority, Message Type, Size and Attachments (if any).
3. With the message open, touch  to return a message to the sender or touch  to delete the message from the Inbox.

Receiving Picture Messages

Note: For the option Reject to appear in the display when you receive a Picture Message, Pic-Voice Auto Receive mode must be set to Off in

the Message Settings menu. The default Pic-Voice Auto Receive value is set to On.

1. When you receive a new message, touch **View Now** or **View Later** (the message is saved to your Inbox where you can view it later.)
2. After loading, the image (and text if any) contained in the Picture Message appears in the display.
3. Scroll the screen up to view the entire picture or message if necessary.
4. Touch **Mute** **Mute/Unmute** (while an attached sound bite is playing), or **Options**. The following options may appear in the display:
 - **Play Again:** Replays the sound bite attached to a Picture Message.
 - **Forward:** Forward the message to another recipient.
 - **Reply w. Copy:** Replies to the received message with a text message and allows you to send a copy of the message to another contact.
 - **Erase:** Deletes the message. Only displays in menu when a sound bite isn't attached to the message that was sent.
 - **Save Picture:** Saves the picture in a Picture message to My Pictures.

- **Save As Ringtone:** Saves the sound bite received with the message as a ringtone.
 - **Save Sound:** Saves the sound received with the message.
 - **Save Quick Text:** Saves the text received in the message to the Quick Text list.
 - **Save Name Card:** Saves the attached name card to your Contact List.
 - **Lock/Unlock:** Locks or unlocks the entry to prevent accidental deletion.
 - **Add To Contacts:** Save the number of the sender to your Contacts as a new entry or add to an existing entry.
 - **Extract Addresses:** Displays all Contact Numbers, Email Addresses and URLs extracted from the opened message.
 - **Message Info:** Provides the following information: From and Callback #, Priority, Message Type, Size and Attachment(s) name and size.
5. With the message open, touch **Reply** to return a message to the sender or touch **Erase** to delete the message from the Inbox.

Receiving Video Messages

Note: For the option **Reject** to appear in the display when you receive a Video Message, Multimedia Auto Receive mode must be set to Off in the

1. When you receive a new message, touch **View Now** or **View Later** (the message is saved to your Inbox where you can view it later.)
2. Scroll the screen up to view the entire picture or message if necessary.
3. Touch **Mute** **Mute/Unmute** (while an attached sound byte is playing), or **Options** . The following options may appear in the display:
 - **Play Again:** Replays the Video Message.
 - **Forward:** Forward the message to another recipient.
 - **Reply w. Copy:** Replies to the received message with a text message and allows you to send a copy of the message to another contact.
 - **Save Video:** Saves the video in a Video message to My Videos.
 - **Save Quick Text:** Saves the text received in the message to the Quick Text list.
 - **Save Name Card:** Saves the attached name card to your Contact List.
 - **Lock/Unlock:** Locks or unlocks the entry to prevent accidental deletion.

- **Add To Contacts:** Save the number of the sender to your Contacts as a new entry or add to an existing entry.
 - **Message Info:** Provides the following information: From and Callback #, Priority, Message Type, Size and Attachment(s) name and size.
4. With the message open, touch **Reply** to return a message to the sender

Receiving Voice Messages

Note: For the option Reject to appear in the display when you receive a Voice Message, Pic-Voice Auto Receive mode must be set to Off in the Message Settings menu. The default Pic-Voice Auto Receive value is set to On.

1. When you receive a new message, touch **View Now** or **View Later** (the message is saved to your Inbox where you can view it later.)
2. After loading, the recording (and text if any) contained in the Voice Message appears in the display.
3. Scroll the screen up to view the entire picture or message if necessary.
4. Touch **Mute** **Mute/Unmute** (while an attached sound byte is playing), or **Options**. The following options may appear in the display:
 - **Play Again:** Replays the Voice Message.
 - **Forward:** Forward the message to another recipient.
 - **Reply w. Copy:** Replies to the received message with a text message and allows you to send a copy of the message to another contact.
 - **Erase:** Deletes the message. Only displays in menu when a sound byte isn't attached to the message that was sent.

- **Save As Ringtone:** Saves the sound byte received with the message as a ringtone.
 - **Save Sound:** Saves the sound received with the message.
 - **Save Quick Text:** Saves the text received in the message to the Quick Text list.
 - **Save Name Card:** Saves the attached name card to your Contact List.
 - **Lock/Unlock:** Locks or unlocks the entry to prevent accidental deletion.
 - **Add To Contacts:** Save the number of the sender to your Contacts as a new entry or add to an existing entry.
 - Extract Addresses:
 - **Message Info:** Provides the following information: From and Callback #, Priority, Message Type, Size and Attachment(s) name and size.
5. With the message open, touch **Reply** to return a message to the sender.

Quick Reply

Quick Reply is available in landscape and portrait mode when the message view is By Contact (default setting) or by time. When viewing a received message, simply begin typing to quickly reply to the message.

Note: The text field will not display until you begin typing.

Messages Folder

When your phone receives a Text, Picture, Video, or Voice message, it places it in your Messages folder.

Note: To quickly view all messages in the Inbox, Sent, or Drafts folders, open one message and touch and slide the message left to view the next message or touch and slide the message right to view the previous message.

Messages

The Messages folder displays when the Message view is by contact.

Note: Messaging menu depends upon the Messages View setting. For more information, refer to “*Changing Message Settings*” on page 73.

Messages view by contacts

Message View by Contact groups all messages sent to or received from a contact in one combined Messages folder.

Note: From the Messaging menu, you can quickly switch the Messages View by scrolling up and touching **0. Settings** and touching the **Message View** drop down menu and touch **Contacts**.

Messages View is By Contact, displays all messages sent and received from a Contact sorted by time.

1. From the **Messaging** menu.
2. Touch **2. Messages**.
3. Touch one of the following options:
 - **New** creates a new TXT Message, Picture Message, Video Message, or Voice Message.
 - **Sort** arranges your TXT Message, Picture Message, Video Message, or Voice Message by (i.e. most recent first), name, or size.
 - **Erase** erases a message or messages.
4. Touch the Contact name or number whose messages you want to view.

Inbox

The Inbox folder displays when the Message view is by time.

Note: Messaging menu depends upon the Messages View setting. For more information, refer to “*Changing Message Settings*” on page 73.

Messages view by time

Note: If **Messages View is By Time**, then you will see all received messages in your Inbox folder and all sent messages in your Sent folder in reverse chronological order.

Message View by time separates received and sent messages into the Inbox and Sent folder.

1. From the **Messaging** menu.
2. Touch **2. Inbox**.
3. Touch the message that you wish to view.
4. While viewing a message touch **Options** to display the available options. Options are dependent on the message type:
 - For Text Messages, the following options may appear in the display:
 - **Forward**: Forwards the message to another recipient.
 - **Reply w. Copy**: Replies to the received message with a text message and allows you to send a copy of the message to another contact.
 - **Save Quick Text**: Saves the text received in the message to the Quick Text list.
 - **Lock/Unlock**: Locks or unlocks the entry to prevent accidental deletion.
 - **Add To Contacts**: Saves the number of the sender to your Contacts as a new entry or add to an existing entry.
 - **Messaging Font Size**: Allows you to select the font size of the message being viewed. Select Normal or Large.
 - **Extract Addresses**: Displays all Contact Numbers, Email Addresses and URLs extracted from the opened message.

- **Message Info**: Provides the following information: From (also provides the date and time the message was received), Callback #, Priority, Message Type, Size and Attachments (if any).
- For Picture Messages, the following options may appear in the display:
 - **Play Again**: Replays the sound byte attached to a Picture Message.
 - **Forward**: Forwards the message to another recipient.
 - Reply w. Copy:
 - **Erase**: Deletes the message. Only displays in menu when a sound byte is attached to the message that was sent.
 - **Save Picture**: Saves the picture sent in a Picture message to My Pictures.
 - **Save As Ringtone**: Saves the sound byte received with the message as a ringtone.
 - **Save Sound**: Saves the sound byte received with the message in My Sounds.
 - **Save Quick Text**: Saves the text received in the message to the Quick Text list.
 - **Save Name Card**: Saves the attached name card to your Contact List.
 - **Lock/Unlock**: Locks or unlocks the entry to prevent accidental deletion.
 - **Add To Contacts**: Save the number of the sender to your Contacts as a new entry or add to an existing entry.
 - **Extract Addresses**: Displays all Contact Numbers, Email Addresses and URLs extracted from the opened message.

- **Message Info:** Provides the following information: From (also provides the date and time the message was received), Callback #, Priority, Message Type, Size and if a Picture, Sound or Name Card were included in the message.
- For Video Messages, the following options may appear in the display:
 - **Reply:** Replies to the received message.
 - **Forward:** Forwards the message to another recipient.
 - **Save Video:** Saves the video received with the message in My Videos.
 - **Save Quick Text:** Saves the text received in the message to the Quick Text list.
 - **Save Name Card:** Saves the attached name card to your Contact List.
 - **Lock/Unlock:** Locks or unlocks the entry to prevent accidental deletion.
 - **Add To Contacts:** Save the number of the sender to your Contacts as a new entry or add to an existing entry.
 - **Message Info:** Provides the following information: From (also provides the date and time the message was received), Callback #, Priority, Message Type, Size and if a video or Name Card were included in the message.
- For Voice Messages, the following options may appear in the display:
 - **Play Again:** Replays the sound byte attached to a Picture Message.
 - **Forward:** Forwards the message to another recipient.

- **Erase:** Deletes the message. Only displays in menu when a sound byte is attached to the message that was sent.
- **Save As Ringtone:** Saves the sound byte received with the message as a ringtone.
- **Save Sound:** Saves the sound byte received with the message in My Sounds.
- **Save Quick Text:** Saves the text received in the message to the Quick Text list.
- **Save Name Card:** Saves the attached name card to your Contact List.
- **Lock/Unlock:** Locks or unlocks the entry to prevent accidental deletion.
- **Add To Contacts:** Save the number of the sender to your Contacts as a new entry or add to an existing entry.
- **Message Info:** Provides the following information: From (also provides the date and time the message was received), Callback #, Priority, Message Type, Size and if a Picture, Sound or Name Card were included in the message.

5. For Picture, Video and Voice messages, touch **Reply** to reply to the message.

Note: When the Inbox exceeds 500 text messages, the first message in the list is replaced with the next incoming message. Picture messages are replaced when the phone's maximum memory is reached. For information on how to set Auto Erase and Auto Receive see *"Changing Message Settings"* on page 73.

Sent


Your phone stores messages in the Sent folder, when Messages View is By Time, regardless of whether the message was successfully transmitted.

Review Messages in the Sent Folder

1. From the Home screen, touch  **Message** →

2. Messages.

2. Touch the thread you wish to review then touch a message within the thread.

3. While viewing the message, touch  to display options listed. Options are dependent on the type of message:

- For Text Messages, the following options may appear in the display:
 - **Forward:** Forwards the message to another recipient.
 - **Lock/Unlock:** Locks or unlocks the entry to prevent accidental deletion.
 - **Save Quick Text:** Saves the text sent in the message to the Quick Text list.
 - **Add To Contacts:** Adds the sender's information to your contact list.
 - **Messaging Font Size:** Allows you to select the font size of the message being viewed. Select Normal or Large.

- **Message Info:** Provides the following information: Send To Number (also provides the date and time the message was sent), Priority, Message Type, Size, Status, and Cause Code.
- For Picture Messages, the following options may appear in the display:
 - **Play Again:** Replays the sound in the message.
 - **Forward:** Forwards the message to another recipient.
 - **Erase:** Deletes the message. Only displays in menu when a sound byte is attached to the message that was sent.
 - **Lock/Unlock:** Locks or unlocks the entry to prevent accidental deletion.
 - **Save Quick Text:** Saves the text sent in the message to the Quick Text list.
 - **Add To Contacts:** Adds the sender's information to your contact list.
 - **Message Info:** Provides the following information: Send To Number (also provides the date and time the message was sent), Priority, Message Type, Size, Attachment(s) (if a Graphic, Sound or Name Card was attached), Status and Cause Code.
- For Video Message, the following options may appear in the display:
 - **Forward:** Forwards the message to another recipient.
 - **Resend:** Allows you to resend the message.
 - **Lock/Unlock:** Locks or unlocks the entry to prevent accidental deletion.
 - **Save Quick Text:** Saves the text sent in the message to the Quick Text list.

- **Add To Contacts:** Adds the sender's information to your contact list.
- **Message Info:** Provides the following information: Send To Number (also provides the date and time the message was sent), Priority, Message Type, Size, Attachment(s) (if a Video or Name Card were included in the message), Status, and Cause Code.
- For Voice Messages, the following options may appear in the display:
 - **Play Again:** Replays the sound in the message.
 - **Forward:** Forwards the message to another recipient.
 - **Erase:** Deletes the message. Only displays in menu when a sound byte is attached to the message that was sent.
 - **Lock/Unlock:** Locks or unlocks the entry to prevent accidental deletion.
 - **Save Quick Text:** Saves the text sent in the message to the Quick Text list.
 - **Add To Contacts:** Adds the sender's information to your contact list.
 - **Message Info:** Provides the following information: Send To Number (also provides the date and time the message was sent), Priority, Message Type, Size, Attachment(s) (if a Sound or Name Card was attached), Status and Cause Code.

Note: If no sound file is attached to the message, touch **Erase** to delete the message. Touch **Mute/Unmute** to mute/unmute a sound byte attached to the picture message.


4. Touch the option to perform the function.

5. While viewing the message, touch **3. Erase** to delete the message from the Sent folder. Highlight **Yes** to delete, or **No** to return to the Erase menu.



Drafts

Draft messages are those that have been composed but have not yet been sent. You can return to the Drafts folder at any time to view, edit, or send a draft message.

Create a Draft Text Message




1. Open your device in landscape mode, from the Home screen, touch  **Message → 1. New Message.**
2. Select the type of message you want to create.
3. Enter the phone number of the recipient, then touch the **Text** field.
4. Compose your message using the keypad, touch **Options**. A pop-up menu appears in the display.
5. Touch **1. Save As Draft**. A confirmation message appears in the display and your message is saved to the Drafts folder.

View and Edit Draft Messages

1. Open your device in landscape mode, from the Home screen, touch  **Message** → **3. Drafts**.
2. Touch the message you wish to view, then touch .

Note: For **Text** messages, the message opens in the **To** field.

For **Picture** and **Voice** messages, the message opens in the **Text** field.

3. Touch the phone number or Email address to edit, if necessary.
4. In the **Text** field, press  to delete any characters in the display, if desired. Press and hold  to erase all characters in the field.
5. Touch . A pop-up menu appears in the display with the options listed.
 - For Text Messages the following options may appear in the display:
 - **Paste Text:** Allows you to paste copied text into the text field.
 - **Save As Draft:** Save the message to your Draft folder.
 - **Insert Quick Text:** Displays 19 pre-loaded phrases for Text Message, Picture Message and Video Message.
 - New** creates a new quick text phrase or touch
 - Move** changes the order of quick text phrases.

- **Erase** erases a quick text phrase.
- **Copy Text:** Allows you to copy and paste text into the text field. To copy text, slide your finger across the text to highlight and touch **Copy**. Touch **Options** → **Paste Text** to paste the copied text into the text field.
- **Edit Text Format:** Allows you to change text size, alignment, style, color, and background color.
- **Sending Options:** Send the message with a High or Normal priority or choose to display your callback number in the body of the message.
- **Cancel Message:** Cancels the message and allows you to save it in the Drafts folder.
- For Picture-Video Messages the following options may appear in the display:
 - **Paste Text:** Allows you to paste copied text into the text field.
 - **Preview:** Allows you to preview the message.
 - **Save As Draft:** Save the message to your Draft folder.
 - **Insert Quick Text:** Displays 19 pre-loaded phrases for Text Message, Picture Message and Video Message.
 - New** creates a new quick text phrase or touch
 - Move** changes the order of quick text phrases.
 - Erase** erases a quick text phrase.
 - **Copy Text:** Allows you to copy and paste text into the text field. To copy text, slide your finger across the text to highlight and touch **Copy**. Touch **Options** → **Paste Text** to paste the copied text into the text field.

- **Add Slide:** Allows you to insert multiple pictures into a picture message.
- **Priority Level:** Sends the message with a High or Normal priority.
- **Cancel Message:** Cancels the message and allows you to save it in the Drafts folder.
- **Spanish Symbols:** Inserts Spanish symbols such as Ñ.

• For Voice Messages the following options may appear in the display:

- **Paste Text:** Allows you to paste copied text into the text field.
- **Review:** Allows you to preview the message.
- **Save As Draft:** Save the message to your Draft folder.
- **Insert Quick Text:** Displays 19 pre-loaded phrases for Text Message, Picture Message and Video Message.


New creates a new quick text phrase or touch

Move changes the order of quick text phrases.

Erase erases a quick text phrase.

- **Copy Text:** Allows you to copy and paste text into the text field. To copy text, slide your finger across the text to highlight and touch **Copy**. Touch **Options** → **Paste Text** to paste the copied text into the text field.
- **Priority Level:** Send the message with a High or Normal priority.
- **Cancel Message:** Cancels the message and allows you to save it in the Drafts folder.
- **Spanish Symbols:** Inserts Spanish symbols such as Ñ.

6. Touch the desired option to perform the function.

7. Press the  Directional key down to highlight the following fields for **Picture Messages** and touch **Options** to display the associated options:

- **Picture:** Insert a picture clip.

Note: The **Remove Slide** option is available only when at least one picture has been inserted into the picture message.


- **Preview:** Allows you to preview the message.
- **Save As Draft:** Save the message to your Draft folder.
- **Add Slide:** Allows you to insert multiple pictures into a picture message.
- **Priority Level:** Sends the message with a High or Normal priority.
- **Remove Slide:** Remove the slide in focus from your message.
- **Remove Picture:** Remove the picture in focus from the current slide in your message.

Note: If you remove a picture from a slide (and there are 2 or more slides), you will be asked if you want to remove the slide if you don't attach a new picture for that slide. You can move between slides by highlighting the "Slide" field and pressing Directional keys left or right to select the desired slide.

- **Cancel Message:** Cancels the message and allows you to save it in the Drafts folder.
- **Sound:** Insert a sound byte.

Note: Press  to add a new sound byte.

- **Preview:** Allows you to preview the message.
- **Save As Draft:** Save the message to your Draft folder.
- **Add Slide:** Allows you to insert multiple pictures into a picture message.
- **Priority Level:** Save the message with a High or Normal priority.
- **Remove Slide:** Remove the attached slide from your message.
- **Cancel Message:** Cancels the message and allows you to save it in the Drafts folder.
- **Subject:** Insert the subject of your message.

Note: Press  to add the orange special characters on the keypad in the message.

- **Paste Text:** Allows you to paste copied text into the text field.
- **Preview:** Allows you to preview the message.
- **Save As Draft:** Save the message to your Draft folder.
- **Insert Quick Text:** Displays 19 pre-loaded phrases for Text Message, Picture Message and Video Message.
 - New** creates a new quick text phrase or touch
 - Move** changes the order of quick text phrases.
 - Erase** erases a quick text phrase.
- **Add Slide:** Allows you to insert multiple pictures into a picture message.


- **Priority Level:** Save the message with a High or Normal priority.
- **Remove Slide:** Remove the attached slide from your message.
- **Cancel Message:** Cancels the message and allows you to save it in the Drafts folder.
- **Spanish Symbols:** Inserts Spanish symbols such as Ñ.
- **Name Card:** Insert and name card.

Note: Press  to add a name card.

- **Preview:** Allows you to preview the message.
- **Save As Draft:** Save the message to your Draft folder.
- **Add Slide:** Allows you to insert multiple pictures into a picture message.
- **Priority Level:** Save the message with a High or Normal priority.
- **Cancel Message:** Cancels the message and allows you to save it in the Drafts folder.

8. Highlight the following fields for **Voice Messages** and touch to display the following options:

- **Voice:** Shows the voice recording number/name if attached. Touch the left soft key to Record a new voice message.
- **Text:** Insert text to send with your voice message.

Note: Press  **Fn** to add the orange special characters on the keypad in the message.

- **Paste Text:** Allows you to paste copied text into the text field.

- **Review:** Allows you to preview the message.
- **Save As Draft:** Save the message to your Draft folder.
- **Insert Quick Text:** Displays 19 pre-loaded phrases for Text Message, Picture Message and Video Message.

New creates a new quick text phrase or touch


Move changes the order of quick text phrases.

Erase erases a quick text phrase.

- **Copy Text:** Allows you to copy and paste text into the text field. To copy text, slide your finger across the text to highlight and touch **Copy**. Touch **Options** → **Paste Text** to paste the copied text into the text field.

- **Priority Level:** Sends the message with a High or Normal priority.
- **Cancel Message:** Cancels the message and allows you to save it in the Drafts folder.
- **Spanish Symbols:** Inserts Spanish symbols such as Ñ.

- **Subject:** Insert the subject of your message.

Note: Press  to add the orange special characters on the keypad in the message.

- **Paste Text:** Allows you to paste copied text into the text field.
- **Review:** Allows you to preview the message.
- **Save As Draft:** Save the message to your Draft folder.
- **Insert Quick Text:** Displays 19 pre-loaded phrases for Text Message, Picture Message and Video Message.

New creates a new quick text phrase or touch

Move changes the order of quick text phrases.

Erase erases a quick text phrase.

- **Priority Level:** Sends the message with a High or Normal priority.
- **Cancel Message:** Cancels the message and allows you to save it in the Drafts folder.
- **Spanish Symbols:** Inserts Spanish symbols such as Ñ.
- **Name Card:** Insert and name card.

Note: Press  to add a name card.

- **Review:** Allows you to preview the message.
- **Save As Draft:** Save the message to your Draft folder.
- **Priority Level:** Sends the message with a High or Normal priority.
- **Cancel Message:** Cancels the message and allows you to save it in the Drafts folder.

9. Touch the desired option to perform the function.

10. Once you've returned to the message composer, touch



SEND to send the message, if desired.

Erase Options

You can erase unlocked messages in your Inbox, Drafts folder, or Sent folder. Locked messages are not erased.


To erase messages:

1. From the **Messaging** menu, touch **0: Erase Options**.
2. The following options are available:
 - **1. Erase Inbox:** Erases unlocked messages in your Inbox.
 - **2. Erase Sent:** Erases unlocked messages in your Sent folder.
 - **3. Erase Drafts:** Erases unlocked messages in your Drafts folder.
 - **4. Erase All:** Erases unlocked messages in all message folders (Inbox, Drafts and Sent).

Voicemail






Note: Standard Text Messaging charges do not apply.

Receive Voicemail Messages

When you receive a new voicemail message you'll hear a sound and the Event Status bar appears in the display with the Voicemail icon  illuminated.



1. Touch **Listen Now** or **Listen Later**.

Listen to Voicemail messages

- From the Home screen, touch  and touch and hold  to dial voicemail and retrieve your message(s).
– or –
- From the Home screen, touch  **Message →**
- 4. Voicemail →**  (at the bottom of the display) or .

Visual Voice Mail

Visual Voice Mail gives you a quick and easy way to access your voicemail. Find exactly the message you are looking for without having to listen to every voicemail message first. Visual Voice Mail makes it quick and easy to choose the voicemails you want to listen to first. You can also send out your own Visual Voice Mail messages to select recipients.

1. From the Home screen, touch  **Message →**
- 5. Visual Voice Mail.**
2. The Visual Voice Mail information message plays. Touch  to proceed to the next screen.
3. After the application is downloaded, touch **Yes** to run the application.

4. The first time that the Visual Voice Mail application is accessed, you will be asked “Do you want to use Visual Voicemail as the preferred way of checking voicemail?”. If you touch **OK** with “Yes” highlighted, then the Voicemail Setting screen will display for you to set your preference for which key(s) should access Visual Voice Mail with one touch.

- **Visual Voicemail:** Touch Visual Voicemail or call Voicemail # when you touch and hold 1.
- **Call Voicemail #:** Enter the Voicemail phone number to be dialed (if other than the default value of *86).

Note: The **Voicemail Setting** can be changed anytime by doing the following from the Home screen: Touch **Message** → **Settings** → **Voicemail Settings**.

Mobile IM

The Instant Messaging function allows you to send and receive instant messages using one of the following communities:

- AOL® Instant Messenger™
- Windows Live Messenger
- Yahoo!® Messenger

Note: You must first create the Instant Message account on the computer before accessing it on your phone.

Using Mobile IM


1. Open your device in landscape mode, from the Home screen, touch  **Message** → **6. Mobile IM**.
2. Touch your instant message community. Use the on-screen application specific functions and options to use the instant message applications.

Email

Send, receive and view Email using **Mobile Web Mail**, **Mobile Email** or **Corporate Email (RemoSync)**.

Setting up your Default Email Client

Preferred Email allows you to set your default Email client.

1. Open your device in landscape mode, from the Home screen, touch  **Message → 7. Email**. Choose from the Email options:
 - Mobile Email
 - Corporate Email
 - Mobile Web Mail

Mobile Email

1. Touch **Mobile Email**.
2. Follow the on-screen prompt for subscribing to Mobile Email.

Note: Subscription rates apply for Mobile Email.

3. Touch to select one of the following Email providers:
 - Yahoo!® Mail
 - Windows Live Mail
 - AOL®
 - AIM®
 - Verizon.net
 - Other
4. Use the on-screen application specific functions and options to use the Email applications.

Corporate Email (RemoSync)

RemoSync™ offers employees the tools to stay more productive by doing business directly from their phone. Using Microsoft® Exchange ActiveSync®, RemoSync connects devices directly to Microsoft Exchange servers, giving users real-time access to email, contacts, calendars and tasks.

Note: This service is a paid service which must be pre-registered and then activated through your service provider prior to usage.

1. Touch **Corporate Email**.
2. You will be asked to confirm the monthly subscription charge. **Yes** is highlighted, touch to continue.
3. Once the application is installed successfully, **Yes** is highlighted. Touch to run the application.
4. After you have read the RemoSync introduction, touch to configure your account.

Chat

Join wireless chat rooms from your phone. Send text messages and icons to many chat room participants or launch one-on-one (private) chat rooms. To access a chat room from the browser:

1. Open your device in landscape mode, from the Home screen, touch  **Message → 8. Chat**.

- MySpace
- Facebook
- Twitter
- Match.com
- Lavalife
- Friendz
- MocoSpace
- Flirtable
- Crush or Flush
- Buzzbox



Section 8: Changing Your Settings

This section explains the settings for your Samsung Rogue™. It includes display settings, security settings, and extra settings associated with your Rogue™.

Note: All instructions on accessing or changing the features will begin from the **SETTINGS AND TOOLS** menu.

My Verizon

The My Verizon menu connects to the Verizon Wireless Mobile Web where you can setup Favorites, choose from the available applications or other available services.

1. From the Home screen, touch  **MENU** → 
Settings & Tools → 1. My Verizon.

Tools

The Tools menu provides the ability to access the following menus:

- Voice Commands: For more information, refer to *“Voice Commands”* on page 45.
- Calculator: For more information, refer to *“Calculator”* on page 149.
- Calendar: For more information, refer to *“Calendar”* on page 151.
- Alarm Clock: For more information, refer to *“Alarm Clock”* on page 152.

- Stop Watch: For more information, refer to *“Stop Watch”* on page 154.
- World Clock: For more information, refer to *“World Clock”* on page 154.
- Notepad: For more information, refer to *“Notepad”* on page 155.

Bluetooth Menu

About Bluetooth

Bluetooth is a short-range wireless communications technology capable of exchanging information over a distance of about 30 feet without requiring a physical connection.

Unlike infrared, you don't need to line up the devices to beam information with Bluetooth. If the devices are within a range of one another, you can exchange information between them, even if they are located in different rooms.

Note: When connected to your Bluetooth headset, touch the multi-function key on the headset to use Voice Commands's Voice Dial feature.

Bluetooth Service Profiles

The Bluetooth specification is a protocol that describes how the short-range wireless technology works, where individual profiles describe the services supported by individual devices. Profiles reduce the chance that different devices will not work together.

Your Rogue™ supports the following Bluetooth profile services:




- Voice Calls are supported using the following, depending on the accessory:
 - **HSP** - Headset
 - **HFP** - Hands-free profiles*
- Transfer Object allows sending an **OPP** - Object Push Profile which allows transfer of vCard (i.e., Contact information) between devices.
- Bluetooth Stereo uses **A2DP** - Advanced Audio Distribution Profile and **AVRCP** - Audio/Video Remote Control Profile.
- Printing is supported using **BIP** - **Basic Imaging or BPP** - Basic Printing Profiles.
- Automobile Kits can use any of the following: **HFP** - Hands-free or **PBAP** - Phone Book Access Profiles*.
- Connectivity Connections (i.e. computer) are supported using **SPP** - Serial Port (connecting two BT devices).

* For vehicle/accessory compatibility, go to www.verizonwireless.com/bluetoothchart. Phone does not support all Bluetooth OBEX profiles.

The following Bluetooth options are available:

Bluetooth Settings



The Bluetooth wireless technology settings menu provides the ability to view and change the device name, show the visibility, and set the security for the device.


1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **3. Bluetooth Menu**.
 2. Touch . The Bluetooth menu displays with the following options:
 - **My Phone Name**: Allows you enter a customized name.
 - **Discovery Mode**: Allows other users to see your accessibility. Select **On** for other devices to see your device, or **Off** for no visibility.
-
- Note:** After selecting **On**, users have one minute to see your accessibility, after which Discovery Mode will automatically default back to **Off**.
-
- **Supported Profiles**: Displays a list of supported Bluetooth profiles. Touch a profile to view a description.
 - **Auto Pairing**: Allows you to pair devices without entering a passcode.
3. Touch to make your selection.

Turning Bluetooth On or Off


When the Bluetooth radio is turned on, you can use the Bluetooth features available. When the Bluetooth radio is turned off, you cannot send or receive information via Bluetooth.

To save battery life or in situations where radio use may be prohibited, such as airline traveling, you can turn off the Bluetooth wireless technology.

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **3. Bluetooth Menu**.
2. Touch the onscreen Phone icon to turn Bluetooth On or Off.

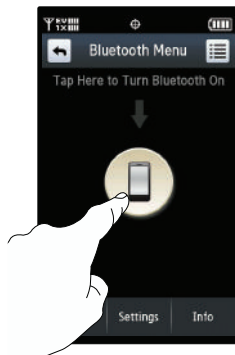

Bluetooth Inactive

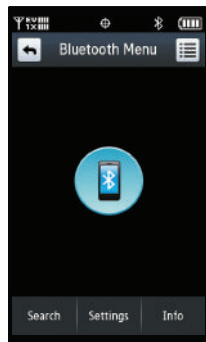



Bluetooth Active

Note: If Bluetooth is turned on, the  Bluetooth icon displays in the top line of the display.

Search

This option searches for a recognized Bluetooth wireless technology device.

1. From the Home screen, touch  MENU →  **Settings & Tools** → 3. **Bluetooth Menu**.


Note: The list icon in the upper right corner allows you to change the screen information appearance to a list format.

2. Touch **Search**.

Note: If you have NOT already activated Bluetooth on your Rogue™, the message: “**TURN BLUETOOTH POWER ON?**” displays. Touch **Yes** to activate or **No** to exit.

3. The prompt: “**Place device you are searching in discoverable mode.**” is shown. Activate your Bluetooth device and touch

 **OK**.

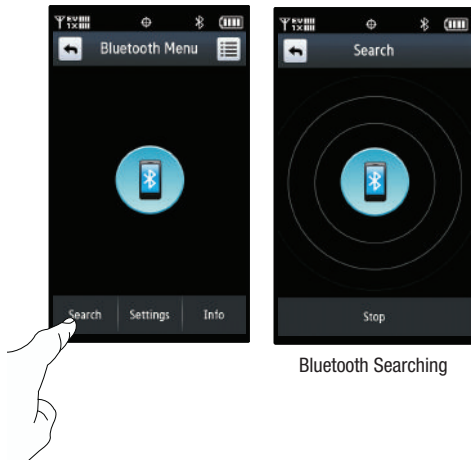


4. Detected Bluetooth devices then appear as buttons on the Bluetooth page.




Note: If multiple devices are discovered, touch the device button to display device information.

5. Drag and drop the device button onto the Bluetooth Active button.

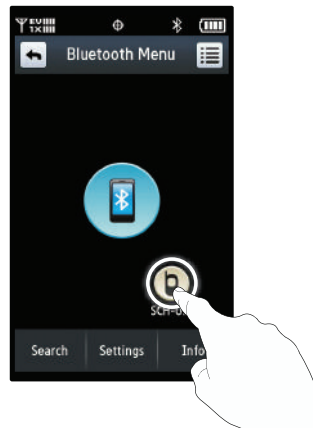

Drag and drop the discovered device onto the bluetooth icon.



Note: Tapping the device displays an option to pair with another device.

6. The phone automatically attempts to send a passkey of “0000” to a hands-free device and shows the message “**ATTEMPTING TO AUTO PAIR**”. If the default passkey is not successful, the phone will display the message “**AUTO PAIR FAILED. ENTER PASSKEY**”. (If you are attempting to pair with a car kit, be sure to clear any error message on the car kit display first.) Enter the correct passkey for the device you want to pair using the touch keypad or QWERTY keyboard. Enter the passkey on the other Bluetooth device, if necessary.
7. Touch **Done** to pair the devices. Once connected, the **Bluetooth Connected** icon  appears in the upper half of the display.


Sound Settings

Provides options to customize the phone's sounds.




Master Volume

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **4. Sound Settings**.
2. Touch **1. Master Volume**.


Note: You can test the volume level by touching the volume level button at the bottom of the screen.

3. Touch the volume level you desire and touch  (in the upper left corner) to return to the menu.



Call Sounds

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **4. Sound Settings**.
2. Touch **2. Call Sounds**.
3. Touch the **Call Ringtone** field to view a list of pre-loaded ringtones. Touch  (at the bottom of the display) to download a ringtone application.

4. Touch the **Call Vibrate** field, then touch to select **Off** or **Vibrate Type 1-3**

Touch the **Call Alert** drop down menu, select one of the following and touch  (in the upper left corner) to return to the menu. Choose from **Ring Only**, **Caller ID + Ring**, or **Name Repeat**.


Alert Sounds

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **4. Sound Settings**.
2. Touch **3. Alert Sounds**. For the following options, you can set the tone for the message alerts.
 - **TXT Message**: Allows you to set a notification for TXT message.
 - **Multimedia Message**: Allows you to set a notification for Picture-Video message.
 - **Voicemail**: Allows you to set a notification for Voicemail Message.
 - **Emergency Tone**: Allows you to set the alert for emergency dialing. The options for emergency tone are:
 - **Alert**: Phone plays the Emergency Dialing tone except when the master volume setting is Vibrate or All Sounds Off.




Note: If Emergency Tone is set to **Alert** and Master Volume is set to **Vibrate**, the handset will vibrate after emergency dialing.
If Emergency Tone is set to **Alert** and the master Volume is set to **All Sounds Off**, the handset will not sound after emergency dialing.

– **Vibrate**: phone will vibrate only and will not play the Emergency Dialing tone.




Note: If Emergency Tone is set to **Vibrate** and Master Volume is set to **All Sounds Off**, the handset will not sound after emergency dialing.

- **Off**: phone will not play the Emergency Dialing tone or vibrate.
 - **Missed Call**: Allows you to set a notification for missed calls.
 - **Device Connect**: Allows you to set a notification when you connect to a device.
- 3.
 4. Touch to make your selection and touch  (in the upper left corner) to return to the menu.

QWERTY keypad



1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **4. Sound Settings**.
2. Touch **4. Keypad Sounds**.
3. Touch the QWERTY keypad volume level you desire and touch  (in the upper left corner).

Digit Dial Readout

1. From the Home screen, touch  MENU →  **Settings & Tools** → 4. **Sound Settings**.
2. Touch 5. **Digit Dial Readout**.
3. Touch **On** or **Off** and touch  (in the upper left corner) to return to the menu.




Note: If Readout Mode is turned on, the entered characters will automatically be read out to the user irrespective of this setting.

Service Alerts

4. From the Home screen, touch  MENU →  **Settings & Tools** → 4. **Sound Settings**.
5. Touch 6. **Service Alerts**. For the following options, you can turn the Service Alert **On** or **Off**:
 - **ERI:** Sounds an alert when you go into and out of your coverage areas.
 - **Minute Beep:** While on a call your phone beeps after every minute of usage.
 - **Call Connect:** Sounds an alert when a call is connected and when a call has ended.

6. Touch to make your selection and touch  (in the upper left corner).

Power On/Off

1. From the Home screen, touch  MENU →  **Settings & Tools** → 4. **Sound Settings**.
2. Touch 7. **Power On/Off**. You can set the sounds for Power On and Power Off to either **On** or **Off**.
3. Touch  (in the upper left corner) to return to the menu.



Display Settings

Provides options to customize the phone's display screen.

Banner


Banner allows you to create your own personalized greeting that appears in Home screen, or you can display the network to which you are subscribed.

To create a personal banner:

1. From the Home screen, touch  MENU →  **Settings & Tools** → 5. **Display Settings**.
2. Touch 1. **Banner**.
3. Touch 1. **Personal Banner** to create a customized banner for your handset.

Note: Personal Banner shows up only if the Widget is dragged onto the Home screen.




Note: Touch and hold  to erase an existing banner, if necessary.

4. Enter a word or short phrase (18 characters or less) to appear in the Home screen using the touch keypad or the QWERTY keyboard.
5. Touch .

Note: The Personal Banner widget  must be dragged onto the Home screen to be displayed.

To turn on an ERI banner:




Note: The ERI Banner displays network information.

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **5. Display Settings**.
2. Touch **1. Banner**.
3. Touch **2. ERI Banner**. Touch **On** or **Off**.
4. Touch the **Color** field and touch a font color.
5. Touch  (in the upper left corner) to return to the menu.

Backlight

Set the backlight for the display or touch keypad to remain on for a specified period of time.

Note: Prolonged backlight use drains your battery faster. The backlight setting also determines how long the screen will be illuminated before it locks.

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **5. Display Settings**.
2. Touch **2. Backlight**. Touch the field to change the following settings:
 - **Screen Backlight:** Can be set to 7 seconds, 15 seconds, 30 seconds, 60 seconds.
 - **Keypad Backlight:** Can be set to 7 seconds, 15 seconds, 30 seconds, Always On.
 - **Brightness:** Can be set to Auto (predefined setting) or Manual (customized setting). For Manual, touch and drag the Level slider to the brightness level you desire (range is 0-5).
3. Touch  (in the upper left corner) to return to the menu.



Widgets

Allows you to select which widget will appear docked within the Widget Bar on the Home screen.

For more information, refer to “*Widgets*” on page 29.

Wallpaper

This menu allows you to change the background image displayed on the Home screen.

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **5. Display Settings**.
2. Touch **4. Wallpaper**.
3. Touch picture source drop-down list and choose from one of the following:
 - **All Pictures** (includes images stored both on the phone and microSD card), **Phone**, or **Memory Card**.
 - The onscreen images will update according to the image files currently located within the selected location.
 - Each image contains an associated icon that indicates not only the image location but also the image type.






Indicates a preloaded image provided by Verizon Wireless. These image types cannot be deleted or altered.






Indicates an image taken using the camera and is located on the microSD card.

— or —

- Touch  (located at the bottom of the screen) to be directed to an online store where you can purchase additional images. For more information, refer to “*Get New Pictures*” on page 126.
 - Touch Camera to capture an image.
4. Touch an image and touch .
 5. Slide your thumb left to right (forward) or right to left (back) to view other images. For more information, refer to “*Viewing Options*” on page 141.
 6. Touch  (in the upper left corner) to return to the menu.



Fonts

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **5. Display Settings**.

2. Touch **5. Fonts**.
3. Touch the **Dial Font Size** field and select **Normal** or **Large**.
4. Touch the **Menu Font Style** field, select a font type and touch  (in the upper left corner) to return to the menu.



Clock Format

This menu allows you to have time displayed in digital, analog or dual clock format.

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **5. Display Settings**.
2. Touch **6. Clock Format**.
3. Touch the desired Clock Format.



Transition Effect

Allows you to activate/deactivate the default transition effect (wipe) during transitions between menu/options pages.

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **5. Display Settings** → **7. Transition Effect**.
2. Touch either **On** (activate) or **Off** (deactivate).

Touch Settings



Touch Settings let you set options for: Auto Lock, Vibrate Level, Sound, Volume Level and Calibration.

3. From the Home screen, touch  **MENU** →  **Settings & Tools** → **6. Touch Settings**.
4. The following settings display:
 - **Auto Lock:** Allows you to turn Auto Lock On or Off.
 - **Vibrate Level:** Allows you to set the vibration level for the touch screen.
 - **Sound:** Allows you to set the sound for the touch to Beep, Glossy, or Click.
 - **Volume Level:** Allows you to set the volume level for the touch sound.
 - **Calibration:** Allows you to re-align the touch screen when the device is not responding accurately to screen touch.

Phone Settings



Airplane Mode

With **Airplane Mode** on, all RF functions for your Rogue™ are disabled, and you cannot use your Rogue™ to place or receive calls.

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **7. Phone Settings**.
2. Touch **1. Airplane Mode**. Touch **On** or **Off**.

Note: Turning On Airplane Mode will disable all wireless communications. Including the ability to send and receive Text Messages, Video Messages, Voice Messages and Picture Messages. All connected Bluetooth devices are still functional.



Voice Commands

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **7. Phone Settings**.
2. Touch **2. Voice Commands**. The following options appear:
 - **Confirm Choices:** Allows you to choose if the Command System prompts you with a list of potential matches. Touch **Automatic**, **Always Confirm**, or **Never Confirm**.
 - **Sensitivity:** Touch one of the following options for speech recognition sensitivity: **More Sensitive**, **Automatic** and **Less Sensitive**.

- **Adapt Voice:** Allows you to adapt digit dialing and name dialing to your voice.
- **Prompts** Allows you to select the following settings for Voice Command prompts:
 - Touch the Mode field to select the readout mode. Touch **Prompts**, **Readout + Alerts**, **Readout**, or **Tones Only**.
 - Touch the Audio Playback field and select audio playback to play through the **Speakerphone** or through the **Earpiece**.
- **Dictation:** Provides a helpful tutorial on how to use VoiceMode.
- **TXT Msg Readout:** Reads out the text in a TXT message. Touch **On** or **Off**.
- **Key Setting:** Allows you to select the method the Voice Command menu can be accessed.
- **About:** Provides information about the VoiceMode software.

Language



Change the display language from English to Spanish or vice versa.

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **7. Phone Settings**.
2. Touch **3. Language**.
3. Touch the desired language.

QWERTY Action

QWERTY Action allows you to open the TXT Msg composer, Contact search or notepad directly by entering characters into the landscape Home screen.

Note: To use Quick Search in landscape mode, set QWERTY Action to Off.



1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **7. Phone Settings**.
2. Touch **4. QWERTY Action**. The following options appear in the display:
 - Off
 - TXT Message
 - Contacts
 - Notepad
3. Touch the desired option.

Location

Note: This feature is only available on the Verizon Wireless network.



The Location Global Positioning Service (GPS) setting identifies your location to the network. You can fully enable this setting or

set GPS to work only in the case that you dial 911 from your Rogue™.

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **7. Phone Settings**.
2. Touch **5. Location**. The following options appear in the display:
 - **Location On:** GPS location setting is on wherever the feature is available.
 - **E911 Only:** GPS location setting is on whenever you dial 911 only.
3. Touch the desired option.



Current Country

The **Current Country** menu allows you to select your current location.

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **7. Phone Settings**.
2. Touch **6. Current Country**.
3. If your current location is not highlighted, touch and drag the **Accelerator** Tab to the letter range corresponding to the first letter of the country's name.
4. Touch the country's name.



Security

The **Security** menu allows you to lock your Rogue™, set restrictions, and other security options.

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **7. Phone Settings**.
2. Touch **7. Security**.
3. Enter the lock code (factory settings are the last four digits of your telephone number) using the touch keypad or the QWERTY keyboard. The following options appear in the display:
 - **Edit Codes:** Allows you to change the Lock Code for Phone Only Lock or Calls & Services.
 - **Restrictions:** Allows you to restrict the Location Setting (Lock/Unlock Setting), Calls (Outgoing or Incoming calls), messages (Outgoing or Incoming messages) and dial-up modems (Allow or Block).
 - **Phone Lock Setting:** Allows you to set the phone to Unlocked or lock the phone On Power Up.
 - **Lock Phone Now:** Allows you to lock the handset.
 - **Restore Phone:** All settings are reset to factory default settings and all user data is erased including pictures, videos, music, messages, contacts, and downloaded applications stored on the phone.

Edit Codes



The default lock code is the last four digits of your phone number. **Edit Code** allows you to change to a lock code of your preference.

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **7. Phone Settings**.
2. Touch **7. Security**. You're prompted to enter the lock code. The default lock code is the last four digits of your telephone number.
3. Enter the **Lock Code**. Several security options appear in the display.
4. Touch **1. Edit Codes**. The following options display:
 - **Phone Only:** Allows you to edit the lock code for only the handset.
 - **Calls & Services:** Allows you to edit the lock code for all Calls & Services. Touch an option.
5. At the “**ENTER NEW CODE**” prompt, enter the new lock code.
6. You're prompted to confirm the new lock code.
7. At the “**RE-ENTER NEW CODE**” prompt, re-enter lock code.

“PHONE ONLY CODE SET” or “CALLS & SERVICES CODE SET” message appears in the display confirming that your lock code was changed.

Note: Your Rogue™ does not allow you to view the lock code for security reasons. If you change the lock code, record the new code.

Restrictions

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **7. Phone Settings**.
2. Touch **7. Security**. You're prompted to enter the lock code. The default lock code is the last four digits of your telephone number.
3. Enter the **Lock Code**. Several security menus appear in the display.
4. Touch **2. Restrictions**.
5. Enter the **Calls and Services Code**. The default calls and services code is the last four digits of your telephone number.

The following options display:



- **Location Setting:** Options are Lock Setting and Unlock Setting.

- **Calls:** Options are Incoming Calls and Outgoing Calls.
- **Messages:** Options are Incoming Messages and Outgoing Messages.
- **Dial-Up Modem:** Options are Allow All and Block All.

6. Touch to make your selection.



Phone Lock Setting

Phone Lock Setting restricts the use of your Rogue™ with the exception of emergency outgoing calls to 911. You have to unlock the Rogue™ to place or receive a call.

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **7. Phone Settings**.
2. Touch **7. Security**. You're prompted to enter the lock code. The default lock code is the last four digits of your telephone number.
3. Enter the **Lock Code**. The security menu appears in the display.
4. Touch **3. Phone Lock Setting**. The following options display:
 - **Unlocked:** If locked, unlocks the device or phone, depending on your selection.
 - **On Power Up:** The Lock Code is required whenever you power up the phone.

5. Touch to make your selection.



Lock Phone Now

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **7. Phone Settings**.
2. Touch **7. Security**. You're prompted to enter the lock code. The default lock code is the last four digits of your telephone number.
3. Enter the **Lock Code**. The security menu appears in the display.
4. Touch **4. Lock Phone Now**.


Your phone returns to the Home screen. To unlock, touch **Unlock** at the bottom of the Home screen and enter the security code at the prompt.

Restoring Your Phone Memory to Factory Condition

Restore Phone returns all setup options to their factory default.



1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **7. Phone Settings**.
2. Touch **7. Security**. You're prompted to enter the lock code. The default lock code is the last four digits of your telephone number.
3. Enter the **Lock Code**. The security menu appears in the display.
4. Touch **5. Restore Phone**. A prompt appears in the display asking if you wish to restore default settings and erase all user data including pictures, videos, music, messages, contacts, and downloaded applications stored on the phone.
5. Touch **Yes** to reset and restore default settings, or touch **No** to return to the Security list.

Warning!: Choosing the **Restore Phone** option will return your Rogue™ to the default settings and erase all user data including pictures, videos, music, messages, contacts and downloaded applications stored on the phone.

Note: After your Rogue™ power cycles back on, you must enter *228 and press  to re-program your phone number.



System Select

The **System Select** menu allows you to set your roaming options. For more information, refer to “*Roaming Options*” on page 44.

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **7. Phone Settings**.
2. Scroll the screen up and touch **8. System Select**. The following options appear:
 - **Home Only** Your phone is available for normal operation only in the designated coverage area.
 - **Automatic** The preferred side carrier roaming list is used to acquire service.
3. Touch to make your selection.

NAM Select




Your Rogue™ provides the option of selecting between two NAMs (Number Assignment Modules) or phone numbers. Select either NAM1 or NAM2.

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **7. Phone Settings**.

2. Scroll the screen up and touch **9. NAM Select**. The options **NAM1** and **NAM2** appear in the display.
3. Touch to make your selection.

Quick Search


Quick Search is an easy way to locate Menu items or you can search for contacts stored in your Contact List.

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **7. Phone Settings**.
2. Scroll the screen up and touch **0. Quick Search**.
3. Touch options **On** (activate Quick Search) or **Off** (deactivate Quick Search) in the **In Portrait Mode** field.
4. Touch options **On** (activate Quick Search) or **Off** (deactivate Quick Search) in the **In Landscape Mode** field.
5. Touch  (in the upper left corner) to return to the menu.

Searching for a Menu Item




Note: Quick Search must be turned on to perform the procedures listed below.

1. From the Home screen, touch  **Dialer**.

2. Press the **first three** numeric keys that correspond to the letters of the menu name. For example, to search for the **Messaging** menu, you would enter: **6** mno, **3** def, and **7** pqrs.
3. Touch the  **Menu** icon. The menu name will appear in the display. Touch the menu name to open.

Searching for a Contact



Note: Quick Search must be turned on to perform the procedures listed below.

1. From the Home screen, touch  **Dialer**.
2. Press the **first three** numeric keys that correspond to the letters of the contacts name. For example, to search for "Patricia" you would enter: **7** pqrs, **2** abc, and **8** tuv.
3. Touch the  **Contacts** icon. The contact name will appear in the display. To place a call, touch the  icon beside the contact name.

Motion Detection


Motion Detection allows you to set your phone to respond to the following actions:

- Temporarily mute the ringer by flipping the phone face down on a hard surface during an incoming calls.
- Snooze a ringing alarm by flipping the phone face down on a hard surface.

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **7. Phone Settings**.
2. Touch ***. Motion Detection**.
3. Touch **On** or **Off**.



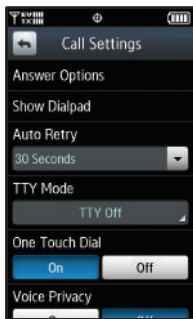

Call Settings

The **Call Settings** menu allows you to select the method for answering incoming calls, setting redial options, setting data options, voice privacy, and more.





Answer Options

The **Answer Options** menu allows you to select the method for answering incoming calls.


1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **8. Call Settings**.
2. Touch **Answer Options**. The following options appear in the display:
 - **Slide Open**: Calls are answered when you open the slide.
 - **Any Key**: Calls are answered when you touch the  button, or when you press any key on the QWERTY keyboard with the slide open.
 - **Auto w/ Handsfree**: Calls are answered automatically with a 5 second delay.
3. Touch an answering calls option and touch  (in the upper left corner) to return to the menu.

Show Dialpad

Show Dialpad allows you select your dialpad option for the following:




1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **8. Call Settings**.
2. Touch **Show Dialpad**. Touch one of the following options:

- Always On
- Voicemail
- Toll Free
- Number

3. Touch a dialpad option and touch  (in the upper left corner) to return to the menu.

Auto Retry

Auto Retry automatically redials voice/data calls after a preset period of time.




1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **8. Call Settings**.
2. Touch the **Auto Retry** drop down menu. The following options appear in the display:
 - 10 Seconds
 - 30 Seconds
 - 60 Seconds
 - Off
3. Make your selection and touch  (in the upper left corner) to return to the menu.

TTY Mode

Before you can use your Rogue™ with a TTY device, you'll need to enable TTY functions in your Rogue™. For more information, refer to "TTY" on page 44.

One Touch Dial

This option to enables or disables the speed dialing feature.



1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **8. Call Settings**.
2. Touch **One Touch Dial**.
3. Touch **On** or **Off** and touch  (in the upper left corner) to return to the menu.

For more information, refer to "Speed Dialing" on page 61.

Voice Privacy

Note: This feature is only available on the Verizon Wireless network.




Voice Privacy when enabled turns on advanced voice encryption. Voice privacy can be set to **On** or **Off**.

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **8. Call Settings**.

2. Scroll the screen up and touch **Voice Privacy**. The following options appear in the display: **On** and **Off**
3. Touch to select an option.




Select Port

Use this menu to select a USB or Bluetooth port, or no port connection.

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **8. Call Settings**.
2. Scroll the screen up and touch the **Select Port** drop down menu.
3. Select **NULL**, **USB**, or **BLUETOOTH**, and then touch  (in the upper left corner) to return to the menu.




Port Speed

Use this menu to select connection port speed.

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **8. Call Settings**.
2. Scroll the screen up and touch the **Port Speed** drop down menu.
3. Select **19200**, **57600**, **115200**, **230400**, or **460800**, and then touch  (in the upper left corner) to return to the menu.



DTMF Tones

Use this menu to set DTMF settings to **Normal**, or **Long**.

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **8. Call Settings**.
2. Scroll the screen up and touch **DTMF Tones** drop down menu. The following options appear:
 - **Normal**: Select for a normal tone.
 - **Long**: Select for an extended tone.
3. Touch an option and touch  (in the upper left corner) to return to the menu.

Assisted Dialing

Assisted Dialing allows easy dialing of international calls while roaming in another country.

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **8. Call Settings**.
2. Scroll the screen up and touch **Assisted Dialing** and the **On** button.
3. Touch the **Reference Country** drop down and set your **Reference Country** to your home location.

4. Touch  and enter the following information and touch **Save** or touch **Reset** to return to the default settings.

- **Country Code**
- **IDD Prefix**
- **NDD Prefix**
- **Area Code**
- **National Number Length**

Memory

The Memory menu allows you to manage your **Save Options** (for Pictures, Videos, and Sounds) on your **Phone Memory** or **Card Memory**. You can also set the memory usage for pictures, videos, music, sounds, and ringtones on your Rogue™ and microSD™ card.

1. From the Home screen, touch  **MENU** →  **Settings & Tools**.
2. Scroll the screen up and touch **9. Memory**. The following options are available:
 - **Save Options:** You can set your Pictures, Videos, and Sounds to be saved to either phone memory or card memory.

- **Phone Memory:** Allows you to see the memory usage for everything stored on your phone. The following options are available:
 - **Memory Usage:** Displays the current memory usage and allocation figures for the various applications and folders stored on the phone. These include: Available, Used, Total, My Pictures, My Videos, My Ringtones, My Music, My Sounds, Applications, and Multimedia Msg.
 - **My Pictures:** Pictures you have saved from a Picture message, downloaded via the “Media Center” application, or taken using your phone.
 - **My Videos:** Video Clips you have saved from a Video message, downloaded via the “Media Center” application, or taken using your phone.
 - **My Ringtones:** Ringtones you have downloaded via the “Media Center” application.
 - **My Music:** Music you have downloaded directly from the V CAST Music catalog or music you have transferred from your PC using Sync Music.
 - **My Sounds:** Sounds you have downloaded, recorded using your phone, or saved from a Picture message with Sound attached.
 - **My Contacts:** The Contacts list on your phone.
 - **Move All To Card:** Allows you to move pictures and other movable files to the memory card. (Memory card must be inserted for this option.)



Note: Your Rogue™ does not come with a microSD™ memory card. A card must be purchased as an accessory. See your service provider for more information.

- **Card Memory:** Allows you to see memory usage of everything stored on your microSD™ card. The following file options are available for the removable microSD™ memory card:
 - **Card Memory Usage:** Displays the current memory usage and allocation figures for the various applications and folders stored on the card. These include: Available, Used, Total, My Pictures, My Videos, My Music, and My Sounds.
 - **My Pictures:** Pictures you have saved from a Picture message or taken using your phone.
 - **My Videos:** Video Clips you have saved from a Video message or taken using your phone.
 - **My Ringtones:** Ringtones you have downloaded.
 - **My Music:** Music you have downloaded directly from the V CAST Music catalog or music you have transferred from your PC using Sync Music.
 - **My Sounds:** Sounds you have recorded using your phone or saved from a Picture message with Sound attached.
 - **My Contacts:** The Contacts list on your phone.
 - **Move All To Phone:** Allows you to move pictures and other movable files from the memory card to the phone's internal memory.

- **Format Card:** Allows you to format your memory card so that it is able to store information. For more information, refer to “*Memory Card Formatting*” on page 11.

USB Mode

Your Rogue™ has the ability to automatically detect connection of a Samsung USB data cable from your computer to the phone. USB Mode also allows you to transfer data files like MS Office docs, and PDFs.

1. From the Home screen, touch  **MENU** →  **Settings & Tools.**
2. Scroll the screen up and touch **0. USB Mode.**
3. Touch one of the following options:

- **Media Sync Mode:** When the USB data cable is connected, your device is ready to sync media like music, pictures, and videos from your PC to the microSD memory card inserted in your phone.




Note: Media Sync Mode will not appear as an option if you do not have a memory card inserted in your phone's microSD card slot.

- **Modem Mode:** Allows the use of the Verizon Wireless Mobile Office kit to utilize your handset as a modem for your computer. This may require additional service activation available through Verizon Wireless.

- **Ask On Plug:** You will be asked to select the USB mode each time the USB data cable is connected from your phone to the USB port of your computer.



Phone Info

The **Phone Info** menu allows you to view the software and hardware information, your assigned number, and an icon glossary for your Rogue™.

1. From the Home screen, touch  **MENU** →  **Settings & Tools**.
2. Scroll the screen up and touch *. **Phone Info**.
3. Touch **1. My Number** to display the Mobile Device and the Mobile Identification numbers.
4. Touch **2. SW/HW Version** to view the version of software, PRL, ERI, Browser, Media Center, MSUI, Hardware, and MEID on your phone.
5. Touch **3. Icon Glossary** to view the list of icons with a brief description.
6. Touch **4. Software Update** to check the status of your phone's software and to check for view new software updates that you can download for your phone.
7. Touch  (in the upper left corner) to return to the menu.

Set-Up Wizard

Set-up Wizard allows you to quickly set nine parameters: Calls Sounds, Ringtone, Vibrate Level, Tone Level, Feedback Tone, Wallpaper, Menu Font, Dial Font, and Main Clock.

1. From the Home screen, touch  **Menu** →  **Settings & Tools**.
2. Scroll the screen up and touch #. **Set-Up Wizard**.
3. Follow instructions on the screen to select your preference for Call Sounds, Ringtone, Vibrate Level, Tone Level, Feedback Tone, Wallpaper, Menu Font, Dial Font and Main Clock.
4. Touch the option you want to activate and touch **Next** at the bottom of the screen.
5. If you want to skip a setting without activating touch **Next** to move to the next option.
6. Touch **Done** when finished.



Section 9: Media Center

This section describes how to download and play music, tones, and video. It also outlines how to take, record and store images and videos, sounds, and ringtones using your Samsung Rogue™.

Note: All instructions on accessing or changing the features will begin from the **Media Center** menu.

Media Center

The Media Center menu provides sub-menus to Music & Tones, Picture & Video, Games, Internet Browser, Browse & Download and Extras. You can also view memory info to see how much space you've used (and have left) for stored media. Use the following steps for each **Media Center** sub-menu.

1. From the Home screen, touch  **MENU** →  **Media Center** to access the various downloads and application options.

Note: Before downloading any music, tones, pictures, videos, games, etc., check the available phone memory. See “Memory” on page 120.




Music & Tones

This menu allows you to get new tunes and tones, record new sounds, and set tunes and tones as your ringtone. It also allows you to access your music files.




For more information, refer to “*Music & Tones*” on page 129.

Get New Ringtones

You can use this option to download new ringtones from the Internet.

1. From the Home screen, touch  **MENU** →  **Media Center** → **1. Music & Tones** → **2. Get New Ringtones**.
2. Touch **Get New Applications** at the bottom of the display.
3. You are connected to the **Get New Applications** catalog and presented with available provider ringtone applications.
4. Press and hold the  **Clear** key on the front of the phone to return to the Home screen.



My Ringtones

1. From the Home screen, touch  **MENU** → 
Media Center → **1. Music & Tones** → **3. My Ringtones**.
2. Touch **Get New Ringtones** at the bottom of the display to access the Media Center catalog to download new ringtones. Or if you have already downloaded ringtones, touch your selection.
3. Press and hold the  **Clear** key on the front of the phone to return to the Home screen.

My Music









The Music Player can be used to play music files that you have downloaded from the V CAST Music I Rhapsody catalog or that you have transferred from your PC using Sync Music.

My Sounds

1. From the Home screen, touch  **MENU** → 
Media Center → **1. Music & Tones** → **5. My Sounds**.
2. Touch a sound and touch and drag your finger left to right or right to left to cycle through sounds list.
3. Touch **Set As**, to set the selected sound as your device **Ringtone**, **Contact ID** and/or an **Alert Tone**.

4. Touch **Send** to send the sound in a message.
5. Touch **File Info** for detail information about the sound.

Recording a Sound




1. From the Home screen, touch  **MENU** → 
Media Center → **1. Music & Tones** → **5. My Sounds**.
2. Touch **Record New** at the bottom of the display or touch a preloaded sound.
3. Touch **For Voice Message** if you are recording a new Voice Message or touch **To Save as Sound File** if you would like to save the recording to **My Sounds**.
4. Touch  to start recording.
Touch  to pause record. After completing your recording, Touch  to end the recording.
Touch  to playback the recorded sound.
Touch  to adjust the volume during playback.
5. Touch  **Save** to save recording to **My Sounds** and/or to send a **Voice Message**.

V CAST Video

V CAST, the next generation wireless technology that unveils a whole new multimedia experience at your fingertips, provides access to vibrant, full-color content from some of the biggest names in entertainment. V CAST is your link to video on demand, which allows you to view or download video clips that contain breaking news, sports highlights, weather and more.

Note: To access and download videos, you must have the  icon displayed.



Browsing, Selecting and Playing Video Clips

1. From the Home screen, touch  MENU → 
Media Center → 2. Picture & Video → 1. V CAST Videos.
2. Touch the video category of your choice. You will need to touch several selection menus before seeing a screen with video titles on it.
3. On a video title screen, you may touch  to do one of the following:
 - **Home:** return to Home screen of Video Player.
 - **Search:** to find specific artist or video title.
 - **Manage Subscription:** to add or remove premium subscription.
 - **Alerts:** if possible for that title.

- **Save Video:** if possible.
- **About:** displays the version number of the V CAST video software.
- **Video Info:** displays information about the selected video.

4. To view a video, touch the title.

Downloading a Video Clip





1. From the Home screen, touch  MENU → 
Media Center → 2. Picture & Video → 1. V CAST Videos.
2. Touch the video category of your choice. You may need to touch several selection menus before seeing a screen with video titles on it.
3. Touch a video title that you want to download and save.
4. You will see a pop-up notification similar to the following:
"The first time you view this clip, you will be charged (payment amount). If you have previously viewed this clip, you will not incur any additional charges. Proceed?" Touch **"Yes"** or **"No"**.
5. If you touch **Yes** to proceed, you will see the message **Downloading - %** with the percentage of completion. If you decide to cancel the download in-progress, touch **Cancel**.

6. Once the download is completed, At the **Download Complete. Play video now?** pop-up, touch **Yes** to continue, or **No** to return to the **V CAST Videos** menu.









Note: When you see the **Download Complete. Play video now?** pop-up, the video has been saved in the **My Videos** folder.

Note: Not all video content available can be downloaded to your Rogue™. However, all content is available for viewing.

Deleting Video Clips



1. From the Home screen, touch  **MENU** → 
Media Center → **2. Picture & Video** → **4. My Videos**.
2. From the thumbnail view, touch  → **1. Erase**.
3. Touch the appropriate video thumbnail(s) to mark for deletion, and touch .
4. At the **Erase Video?** pop-up, touch **Yes** to continue, or **No** to cancel the operation.

Configure Alerts for New Video Clips

1. From the Home screen, touch  **MENU** → 
Media Center → **2. Picture & Video** → **1. V CAST Videos**.
2. Touch to select the **V CAST Videos** categories you want to configure an alert.
3. Choose a sub-category, if applicable, then touch .
4. Touch **Alerts** → **Configure Alerts**.
5. Open the slide, press the  Directional key down or to highlight the appropriate alert and press .
6. Press the  Directional key up and read the subscription terms, and then highlight **Save** and press  or touch .



Note: Fees apply for text messages/alerts both sent and received.

Get New Pictures


1. From the Home screen, touch  **MENU** → 
Media Center → **2. Picture & Video** → **2. Get New Pictures**. Follow the on-screen prompts to download pictures and wallpaper from the Media Center server. Appropriate subscription charges may apply.

 
Games

Select from several fun and interesting applications or a broad category of games that you can play on your phone.



1. From the Home screen, touch  MENU → 
Media Center → 3. Games. The pre-loaded games list displays:

- Dice
- Need for Speed Undercover
- Resident Evil: Degeneration
- Tetris

Note: Touch  to view additional options: View Properties, Lock/Unlock, Erase, Upgrade Check.

2. Touch to select the game you wish to play or touch  at the bottom of the display to browse and download additional games.
3. Choose the charge, either **Subscription** or **Unlimited**. Follow in screen prompts to apply.




Browser


1. From the Home screen, touch  MENU → 
Media Center → 4. Browser.
2. The VZW Home portal is launched and a pop up screen with available applications displayed.
3. Touch to browse the categories.
4. Once the desired category is selected, touch to enter the category list.

Note: For a description of the Browser command bar buttons, and main functions in the browser, see “*Browser*” on page 159.

Browse & Download

Download applications that keep you in touch with the world, keep you organized, and help you find the coolest spots.




1. From the Home screen, touch  **MENU** → 
Media Center → 5. Browse & Download.
2. Touch to select the application you wish to download or touch  at the bottom of the display to browse and download additional applications.

Note: Touch  to view additional options: View Properties, Lock/Unlock, Erase, Upgrade Check.

3. Follow on screen subscription prompts. The download process begins.
4. At the **App Installed successfully?** pop-up, touch **Yes** to run it, or **No** return to category list.

Note: The **Browse & Download** menu will display all downloaded applications, with the most current download first.

Extras

1. From the Home screen, touch  **MENU** → 
Media Center → 6. Extras.
2. Touch to select the application you wish to download or touch  at the bottom of the display to browse and download additional applications.
3. At the **App Installed successfully?** pop-up, touch **Yes** to run it, or **No** return to category list.

Section 10: Music

This section describes how to use the Music Player to play downloaded music files. There are also instructions on how to create, update and delete playlists.

Inserting and Removing the microSD card

For more information, refer to *“Inserting and Removing Your Memory Card (purchased separately)”* on page 9.

Memory Card Formatting

Formatting a microSD™ Card using your Rogue™

For more information, refer to *“Formatting a microSD™ Card using your Rogue™”* on page 11.

Formatting a microSD™ Card using your PC

For more information, refer to *“Formatting a microSD™ Card using your PC”* on page 11.

Music & Tones

V CAST Music with Rhapsody®

(Subscription, Wireless and PC Downloads)

V CAST Music with Rhapsody® is a digital music service that lets you listen to millions of songs from thousands of artists. Discover new and old favorites in an extensive music catalog. Download V CAST Music with Rhapsody® to sync tracks, albums, and playlists to your new compatible phone, while managing your existing PC music library all in one place.

*Purchase songs on your wireless device**

When you purchase music from your wireless device, you also get a second copy that can be downloaded to your PC from the V CAST with Rhapsody software.

Note: *Per-song charges apply.

System Requirements: Windows Vista, or XP

V CAST Music with Rhapsody is compatible with Windows® XP and Windows Vista™ operating systems, with Windows Media Player 10 or higher. MAC OS and Linux are not supported.

Download Music to your PC

1. Open V CAST Music with Rhapsody. Don't have V CAST Music with Rhapsody? Download it for free at www.verizonwireless.com/music.
2. Sign in.
3. Once logged in you can either purchase songs/albums or add subscription music to your library.

To purchase music:

- Browse the catalog and select the track or album you wish to purchase.
- Re-enter your password.
- Confirm the purchase and the download will begin shortly.


To add subscription music:

Note: V CAST Music with Rhapsody monthly subscription required.




- Add music to your collection by simply dragging and dropping it to My Library or, if connected, your V CAST Music with Rhapsody subscription capable device (both found under Sources). This can also easily be done by clicking on the Add button next to each song.
4. To play the song or album, you can find it by selecting the My Library tab.

Sync your music from your PC to your V CAST Music wireless device

Sync your music from your PC to your **V CAST Music with Rhapsody® (Subscription, Wireless and PC Downloads)** wireless phone. This option allows you to transfer music files from your PC. In order to use this option, you must install **V CAST Music with Rhapsody®** on your PC.

1. Open V CAST Music with Rhapsody. Don't have **V CAST MUSIC with Rhapsody**? Download it for free at: www.verizonwireless.com/music
2. Plug in the USB cable to your phone and connect it to a USB port on your PC.
3. From the main screen on your phone, the “**SYNC MUSIC V CAST MOBILE PHONE**” display appears. Your phone should display the message: “**Connected**”.
4. Drag and drop the song(s) you want to sync from My Library, to your V CAST mobile phone, listed under the Sources tab.
5. Once synchronization is complete, press the  **End/Power** key and disconnect the USB cable.

Downloading Music from VCAST Music | Rhapsody directly to your phone

1. From the Home screen, touch  **MENU** →  **My Music** → **SHOP**. You are connected to the **V CAST MUSIC with Rhapsody** store.
2. Select a music category (**What's New**, **Features**, **Browse**, **What's Next**, **Recom'nd**, or **Download**).
3. Touch the artist of the song you want to download and touch the song you want download.
4. Touch **Preview** to hear a 20 second preview of the song.
5. Touch **Buy** to purchase the song.
6. At the **CONFIRM PURCHASE** touch **Buy This Song** to accept the terms of the purchase.
7. Touch **Download Now** to download the song. You will have the option to download to your **Phone Memory** or **Memory Card** (recommended). After choosing a location for the song, the downloading screen will appear.
8. Touch **Play This Song** to play the downloaded song immediately if desired or touch  to return to the previous screen.


My Music

The Music Player can be used to play music files that you have transferred from your PC. You can play your music with the slide open or closed.



Note: The display may lock. The lock icon will appear in the top line of the display. To unlock press the  Unlock button on the upper right side of the Rogue™.

Playing Music

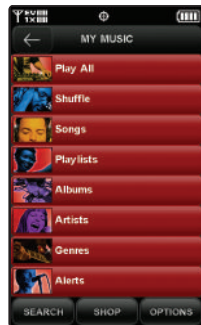

1. From the Home screen, touch  **MENU** →  **My Music**.
2. The **MY MUSIC** screen appears in the display. Touch the option you want to select. The following options appear in the display:
 - **Play All:** This option selects all songs for playback.
 - **Shuffle:** This option will re-sort a playlist order.



- **Songs:** This option organizes your songs by song title. To add a song to a playlist, touch the  **Options** icon and select **Add to playlist** to add the song into a selected playlists.
- **Playlists:** This option allows you manage your music files. See “Playlist” on page 133.
- **Albums:** This option organizes your songs by album title. Even if you only have one song from an album, a folder for the album will display.
- **Artists:** This option organizes your songs by artist.
- **Genres:** This option organizes your songs by music type (genre). For example, Folk, Rock, Country, Classical, Soul, Unknown and so on. Each folder will contain all songs within that genre.
- **Alerts:** This repository is where alert notifications are received when new music from a selected artist is available for download.
- **Search:** Allows you to search for music stored on your phone by artist, album, song title or playlist.
- **Shop:** Takes you to the VCAST Music with Rhapsody® catalog. From here, you can browse, purchase and download music.
- **Options:** The following options displays:
 - **Scan memory card for new music:** Updates your music library with music on your memory card.
 - **Sync Music:** Allows you to sync music from your PC to your phone.
 - **Help:** Provides information about the music player and its features.




3. Touch **Songs** and touch the  **Options** icon beside the song, the following options appear in the display:
 - **Add to playlist:** Add song to playlist.
 - **Listeners also liked:** Displays music of artist that are similar in genre.
 - **Move song:** Allows you to move music files to your microSD card (sold separately). This option only displays when a microSD card is inserted.
 - **Lock song:** Locks the selected file to prevent accidental deletion.
 - **Erase song:** Erases the selected file.
 - **Erase all songs:** Erases all songs.
 - **Song Info:** Displays Title, Artist, Album, Genre, Copyright, Length, Size, Bit Rate, Format and License
 - **Scan memory card for new music:** Updates your music library with music on your memory card.
 - **Rebuild Music Database:** refreshes library database.
4. Touch the song you want to play the song.
5. During song playback, touch the  **Options** icon, the following options appear in the display:


Note: The song playing will automatically stop playing when this is done. To resume playing of the song, touch .

- **Play All:** Selects all songs for playback.
 - **Repeat:** Replays the song automatically after it completes.
 - **Shuffle:** Re-sorts the current playlist order.
 - **My Music:** Displays stored songs.
 - **Shop:** Allows you to shop for music.
 - **Listeners also liked:** Displays music other listeners reviewed and liked.
 - **Help:** Displays the help menu.
6. During song playback, press  to advance to the next song track in the current playlist, or press  to skip to the previous song track.






Playlist

Creating a Playlist





1. From the Home screen, touch  **MENU** →  **My Music** → **Playlists**.
2. Tap the empty field and enter the name of the playlist and touch **Done** (if you entered the text in portrait mode) or press  (if you entered the text in landscape mode.)
3. To Add individual songs simply touch the song(s) to add to the new playlist or touch **Mark All** to add all the songs in your library to the new playlist and touch **Done**.

4. To return to the Home screen, press the  **End/Power** key.

Editing a Playlist




1. From the Home screen, touch  **MENU** →  **My Music** → **Playlists**.
2. Touch the  **Options** icon beside the playlist you would like to edit. Touch **Edit playlist**.
3. To remove a song from the playlist, touch to highlight the song and touch **Remove**.
4. To change the order of the songs in your playlist, highlight a song and touch **Move**. Then touch and drag the song up or down in the music list to move the song in the playlist order. When you are finished, touch .
5. To **Add** individual songs simply touch the song(s) to add to the new playlist or touch **Mark All** to add all the songs in your library to the new playlist and touch **Done**.
6. To return to the Home screen, press the  **End/Power** key.

Renaming a Playlist

1. From the Home screen, touch  MENU →
 **My Music → Playlists.**
2. Touch the  **Options** icon beside the playlist you would like to rename. Touch **Rename playlist.**
3. Tap the empty field and enter the new name of the playlist and touch **Done** (if you entered the text in portrait mode) or press  (if you entered the text in landscape mode.)

Deleting a Playlist

Note: This operation erases the playlist only. It does not erase the songs in the playlist.

1. From the Home screen, touch  MENU →
 **My Music → Playlists.**
2. Touch the  **Options** icon beside the playlist you would like to rename. Scroll up and touch **Erase playlist.**
3. At the **Erase this playlist?** pop-up, touch **Yes** to continue, or **No** to cancel the operation.

Import songs from an audio CD

1. On your computer, launch **V CAST Music with Rhapsody.**
2. Insert an audio CD into your computer's CD ROM drive.
3. The names of all the tracks on the CD are listed in the window. (You may need to enter artist name and other information for the tracks.)
4. Select the tracks you want to import by clicking the check box next to them.
5. Click on the "**Import CD**" button.

The songs you selected are imported to **V CAST Music with Rhapsody.**

Section 11: Camera and Camcorder

This section explains how to use the camera on your phone. You can take photographs and shoot video by using the built-in camcorder functionality. Your 3.0 megapixel camera produces photos in JPEG format.





Important! Do not take photos of people without their permission.
Do not take photos in places where cameras are not allowed.
Do not take photos in places where you may interfere with another person's privacy.

 
Using the Camera

Taking Photos


Taking pictures with your device's built-in camera is as simple as choosing a subject, pointing the camera, then pressing the camera key.

Note: When taking a photo in direct sunlight or in bright conditions, shadows may appear on the photo.

1. Press the **Camera/Camcorder** key  to activate the camera mode.
— or —
From the Home screen, touch  **Menu** → 
Media Center → **2. Picture & Video** → **5. Take Pictures**.
2. Using the phone's main display screen as a viewfinder, adjust the image by aiming the camera at the subject.
3. Press the **Camera/Camcorder** key  to take picture. (The picture will automatically be stored within your designated storage location. If no microSD is installed, all pictures will be stored on the Phone.) For more information, refer to “*Camera Options*” on page 136.

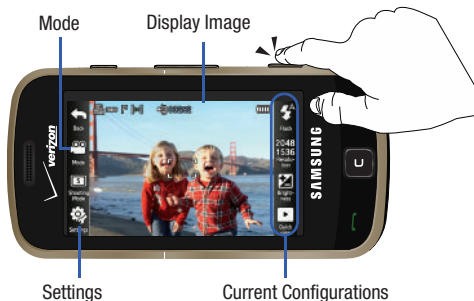

Note: Immediately after taking a photo, open the device in landscape mode to automatically start a new picture message with the photo taken attached. For more information, refer to “Creating and Sending Picture Messages” on page 76.

4. If desired, before taking the photo, you can touch onscreen icons to access various camera options.
5. Press  to return to the picture viewer.

Camera Options

Camera options are represented by icons across both sides of the screen.



Back: allows you to return to the Home screen.



Mode: allows you to switch to camcorder mode.



Shooting mode: allows you to set the shooting mode. Options are:

- **Single:** takes a single photo and view it before returning to the shooting mode.
- **Multi shot:** takes a succession of consecutive photos by pressing and holding the Camera key.
- **Panorama shot:** takes photo by taking an initial photo and then adding 7 additional images for a total of 8 images, which can be combined together. The guide box lets you view the area where the second part of the panoramic picture should fall within.

- **Mosaic shot:** allows you to piece together several photos to create a mosaic. There are 18 mosaic templates to choose from.
- **Frame shot:** allows you to choose a custom frame border for your image. Choose from one of the 18 available frames. Touch the frame to assign.



Settings: allows you to customize your camera settings. Choose the following options and touch .



Camera tab:

- **Timer:** allows you to set a time delay before the camera takes the photo or the camcorder begins recording video. Options include: Off, 3 seconds, 5 seconds, or 10 seconds.
- **Autoshot:** allows you to set On or Off.
- **Auto Focus:** allows you to set to Normal, Macro, or Off.
- **Quality:** allows you to set the image quality to: Fine, Normal, or Economy.
- **Effects:** allows you to change the color tone or apply special effects to the photo. Options include: Normal, Black & White, Antique, Aqua or Negative.

- **Contrast:** allows you to set the contrast level.
- **Saturation:** allows you to set the saturation level.
- **Sharpness:** allows you to set the sharpness level.
- **White Balance:** allows you to set this option from the following choices: Auto, Sunny, Cloudy, Fluorescent, or Tungsten.
- **ISO:** Auto, ISO 100, ISO 200 and ISO 400.
- **Metering:** allows you to set how the camera measures or meters the light source: Average, Center, Spot.



Settings tab:

- **Guidelines:** allows you to turn the guidelines On or Off.
- **Review:** allows you to activate the instant review feature where images are displayed immediately after review (On or Off).
- **Ready Sound:** allows you to select a tone to play when you press the Camera/Camcorder key.
- **Shutter Sound:** allows you to select a tone to play when the camera's shutter opens and closes. Sound selections are Off, Shutter, OK or Melody.

- **Memory:** allows you to configure the default storage location for images/videos as either Phone or Memory Card (if inserted).



Flash: allows you to set the camera flash to Off, Auto, Only This Shot or On.



Resolution: allows you to set the image size to either: 2048x1536, 1920x1080, 1600x1200, 1280x720, 1024x768, 800x480, 640x480 or 320x240.




Brightness: allows you to adjust the brightness level by moving the slider across the page.







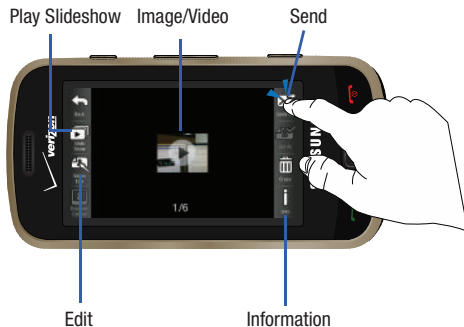


Quick view: allows you to access the options page for a selected image/video. Options include: Play slideshow, Edit, Information, Send, Set as, Delete, and Return to previous page.

After you have taken a photo or shot a video, you can access various options from the Pictures/Video Folder page.









► Touch one of the available options after taking a photo:

- **Back** (⬅️): takes you back to the previously active camera or camcorder page where you can take another photo or shoot a new video.
- **Send via** (✉️): lets you send the currently active image as part of a new multimedia message, or to an external device via Bluetooth.

- **Set as** (): allows you to assign the current image as either your current Wallpaper, or as a display image used by a specific entry within your Address Book.
- **Erase** (): erases the currently selected image/video.
- **Save** (): saves the currently selected image/video.
- ▶ Touch **Quick view** () in Camera/Camcorder mode and touch one of the available options:
 - **Back** (): takes you back to the previously active camera or camcorder page where you can take another photo or shoot a new video.
 - **Slide Show** (): to play the available images (from the Pictures folder) within a slideshow. Touch the Up/Down arrows to set the duration of each onscreen image.
 - **Picture Edit** (): allows you to edit the current image using any of the following:
 - **Effect**: allows you to choose from among several effects.
 - **Revision**: allows you to adjust image Brightness manually or select preloaded Brightness settings.
 - **Merge**: allows you to merge two photos.
 - **Copy & Paste**: allows you to copy a complete photo or a section of a photo and paste in another photo by resolution.
 - **Resize**: allows you to **Resize** your photo.
 - **Rotate/Flip**: allows you to **Rotate**, and **Flip** the image.
 - **Save**: allows you to save changes.

Note: **Set As** is not an available feature when the camcorder mode is active.

- **Dynamic Canvas** (): allows you to select a color, then handwrite a message onto the current image. Touch  to store the new changes.
 - **Back**: returns you to the previous screen.
 - **Pen**: allows you to set the tool for entering handwritten text or shapes.
 - **Thickness**: allows you to set the line thickness of handwritten text and shapes.
 - **Color**: allows you to set the color of handwritten text or shapes.
 - **Motion**: allows you to add animation to handwritten text.
 - **Preview**: allows you to preview photo before its saved.
 - **Save**: allows you to save changes.
 - **Erase**: allows you to erase unwanted content.
- **Send via** (): lets you send the currently active image as part of a new multimedia message, or to an external device via Bluetooth.
- **Set as** (): allows you to assign the current image as either your current Wallpaper, or as a display image used by a specific entry within your Address Book.
- **Erase** (): erases the currently selected image/video.
- **Information** (): displays file information such as name, format, size, resolution, etc.

My Pictures

Allows you to view and manage pictures stored in your device.

1. From the Home screen, touch  **Menu** → 
Media Center → **2. Picture & Video** → **3. My Pictures**.

If you touch **Options** before selecting a photo, the following options appear:

- **Erase:** Allows you to erase selected picture files.
- **Slide Show:** Allows you to create a slide show with selected pictures.
- **Print:** Allows you to print selected photo.
- **Move:** Allows you to move selected pictures that are not locked from the phone's internal memory to a memory card, or from a memory card to the phone's internal memory.

Note: The **Move** option is only visible when a memory card is inserted.


- **Lock/Unlock:** Allows you to lock selected pictures to prevent accidental deletion. Unlock, allows you to unlock selected pictures.
2. Touch a photo to view the picture. Touch **Options** to select from the appropriate options.

Dynamic Canvas

Magnify

Full Screen

Additional Options

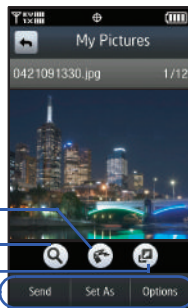

If the photo is one of the **pre-loaded** photos, the following options are available:

- **Take Picture:** Activates the camera.
- **File Info:** Name, File Size, Resolution, Copyright, Date and Time.

If the photo is one that you have taken using the Camera function, or have downloaded, the following options are available:

- **Erase:** Deletes the photo from your My Pictures folder.
- **Take Picture:** Activates the camera.
- **Print:** Allows you to print selected photo.


- **Move to Card:** Allows you to move the select photo to the inserted microSD card.
- **Move to Phone:** Allows you to move the select photo from the inserted microSD card onto the phone.
- **Lock/Unlock:** Allows you to lock selected pictures to prevent accidental deletion. Unlock, allows you to unlock selected pictures
- **Edit:** Allows you to edit the selected picture. Options are:
 - **Effects:** Select: Normal, Grayscale, Sepia, Green, Blue, Sketch Effect, Emboss, Soft-Glamorous, Soft-Elegant, Soft-Charismatic, Spring Sun, Dawn, Fright, Cinema-Normal, Cinema-Black & White or Cinema-Old.
 - **Revision:** Allows you to revise your picture. Options are: Brightness, Saturation, Sharpness or Blur.
 - **Merge:** Allows you to merge two pictures.
 - **Copy & Paste:** Allows you to copy a specific part of a picture as a shape, and paste it onto a new picture with a white background.
 - **Resize:** Allows you to resize the selected picture. Options are: (1024x768), (800x600), (640x480) or (320x240).
 - **Rotate/Flip:** Allows you to rotate the selected picture in incremental steps or flip the picture either horizontally or vertically.
- **Rename:** Allows you to rename the selected picture.
- **File Info:** Provides the date, time, resolution, size and rights to the selected picture.

3. Touch to make your selection.


Viewing Options

When viewing photos you can choose from three viewing types. Simply touch the viewing option icon beside the drop down menu to cycle through the options.

Viewing Option icon

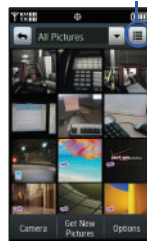

Grid

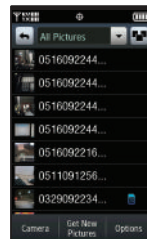

List

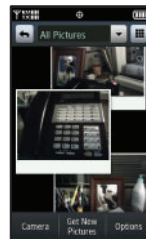






Photo River*

- * With the device closed, when viewing photos in Photo River simply turn the Rogue™ in landscape mode to activate the Photo River. Tilt the device left or right to scroll through photos. Touch the photo you would like to view and/or edit. When viewing a photo in full screen view, you can use your finger to flick as well as tilt the device to scroll through photos.

Assigning an Image to an Address Book Entry

1. From the Home screen, touch  **Menu** → 
Media Center → **2. Picture & Video** → **3. My Pictures**.
2. Touch the image you would like to assign.
3. Touch **Set As** → **Picture ID** → touch an onscreen entry to assign the image.




Assigning an Image as a Wallpaper

1. From the Home screen, touch  **Menu** → 
Media Center → **2. Picture & Video** → **3. My Pictures**.
2. Touch the image you would assign.
3. Touch **Set as** → **Wallpaper**.


Make a Slide Show

Make Slide Show allows you create a slide show with selected pictures.



Note: To create a slideshow, you must have a minimum of 4 pictures and a maximum of 18.


1. From the Home screen, touch  **MENU** → 
Media Center → **2. Picture & Video** → **3. My Pictures**.
2. To make a slide show of the pictures, touch .

3. Touch **2. Slide Show**.
4. Touch **Make Slide Show**.
5. Touch select the desired pictures (minimum of four pictures), or touch **Mark All**. A slide show can use up to 18 photos.
6. Touch .

The selected photos are shown in the Make Slide Show display. Touch  for the following:

- **Remove:** allows you to remove photos from the slide show.
- **Settings:** allows you to set the following settings for the slide show:
 - **Slide Effects:** lets you select: None, Random, Dissolve, Single Sliding Door Close, Zoom Out, Full Wipe Vertical, Push Up, Pair Sliding Door Open, Vertical Blind, Full Wipe Horizon, or Eraser.
 - **Duration:** allows you to set how long each photo displays: 1, 2, or 3 seconds.
 - **Frame Effect:** lets you select: None, Balloon, Shining rose, Star, Heart, Rectangular, Spotlight, or Soap bubble.

7. Touch , enter the name of the slide show where prompted, using either the touch keypad or the QWERTY keyboard, and touch .




 
In the **MY PICTURES** screen, a slideshow icon  will appear in the lower left corner of a thumbnail view of the picture containing the slide show. Touch the picture with the slideshow icon to view the slideshow.


Using the Camcorder

In addition to taking photos, the camera also doubles as a camcorder allowing you to also record, view, and send videos.



Recording Video

Tip: When shooting video in direct sunlight or in bright conditions, it is recommended that you provide your subject with sufficient light by having the light source behind you.

1. From the Home screen, touch  **MENU** →  **Media Center** → **2. Picture & Video** → **6. Record Video.**
– or –
Press and hold the **Camera/Camcorder** key  to activate the camcorder mode.
2. Using the phone's main display screen as a viewfinder, adjust the image by aiming the camera at the subject.
3. Press the **Camera/Camcorder** key  again to begin shooting video.

4. Touch  to stop the recording and save the video file to your Videos folder.

Note: Immediately after recording a video, open the device in landscape mode to automatically start a new video message with the video recorded attached. For more information, refer to “*Creating and Sending Video Messages*” on page 78.

5. Once you have completed recording your video, touch  (in the center of the video) to play back your video for review.
6. Press  to return to the viewer.

Camcorder Options

Camcorder options are represented by icons across both sides of the screen.



Back: allows you to return to the Home screen.




Mode: allows you to switch to camera mode.



Recording Mode: allows you to set the recording mode to either: For Send (limited by MMS size restrictions.), For Save (limited only by available space on destination location).



Settings: allows you to customize your camera settings. Choose the following options and touch .



Camcorder tab:

- **Timer:** allows you to set a time delay before the camera takes the photo or the camcorder begins recording video. Options include: Off, 3 seconds, 5 seconds, or 10 seconds.
- **Quality:** allows you to set the image quality to: Fine, Normal, or Economy.
- **Effects:** allows you to change the color tone or apply special effects to the photo. Options include: None, Black & White, Antique, Aqua or Negative.
- **White Balance:** allows you to set this option from the following choices: Auto, Sunny, Cloudy, Fluorescent, or Tungsten.



Settings tab:

- **Review:** allows you to activate the instant review feature where images are displayed immediately after review (On or Off).
- **Start Sound:** allows you to set to Off, Beep, Look here:, or 1,2,3!
- **End Sound:** allows you to set to Off, OK, Beep-beep-beep, or Melody.
- **Audio Recording:** allows you to record audio while recording video. Selecting Off, temporarily mutes the microphone and records only video.
- **Memory:** allows you to configure the default storage location for images/videos as either Phone or Memory Card (if inserted).



Flash: allows you to set the camera flash to Off, Auto, Only This Shot or On.



Camcorder Resolution: allows you to set the video size.



Brightness: allows you to adjust the brightness level by moving the slider across the page.




Quick view: allows you to access the options page for a selected image/video. Options include: Play slideshow, Edit, Information, Send, Set as, Delete, and Return to previous page.

Camcorder Options after a Video is Taken

After you have shot a video, you can use various options that appear as icons on the screen. Touch an icon to activate the function.

► Touch one of the available options:

Note: **Set As** is not available when the camcorder mode is active.

- **Back** (

My Videos

 
My Videos allows you to review videos taken with the camcorder feature or downloaded and stored into your phone and/or microSD™ card. Video clips you save are stored in **My Videos**. You can access video clips without launching the **V CAST Videos** application and delete your saved video clips directly.

1. From the Home screen, touch  **MENU** →  **Media Center** → **2. Picture & Video** → **4. My Videos**.

If you touch **Options** before selecting a video, your options are:

- **Erase:** Allows you to erase selected video files.
- **Move:** Allows you to move selected videos that are not locked, from the phone's internal memory to a memory card or, from a memory card to the phone's internal memory.
- **Lock/Unlock:** Allows you to lock selected videos to prevent accidental deletion or unlock selected videos.

2. Once you have selected the video to play touch **Options**, your options are:

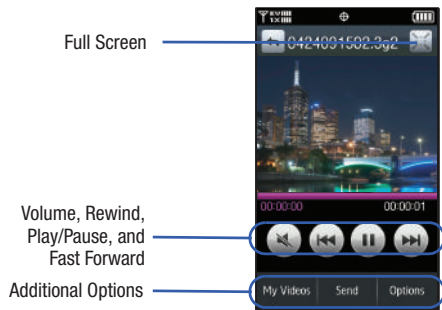


- **My Videos:** Takes you back to the My Videos folder.
 - **Erase:** Allows you to erase the selected video file.
 - **Move to card:** Allows you to move the video to a memory card.
 - **Lock/Unlock:** Allows you to lock selected videos to prevent accidental deletion or unlock selected videos.
 - **Rename:** Allows you to rename the video.
 - **File Info:** Shows information about the duration, date and time video was recorded, resolution that the video was recorded at, and the size of the file.
3. Touch play to play the video.

Viewing Options

When viewing videos, you can choose from three viewing types. Simply touch the viewing option icon beside the drop down menu to cycle through the options.

Viewing Option icon

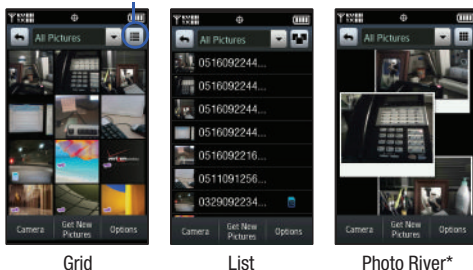



* With the device closed, when viewing videos in Photo River simply turn the Rogue™ in landscape mode and tilt the device left or right to scroll through videos. Touch the video you would like to view and/or edit. When viewing a video, touch the Fast Forward key to view to the next video.



Online Album

Stores pictures and videos to your VZW Online Album.

Note: You must first setup your account on the Verizon Wireless website: www.verizonwireless.com before establishing a connection.

1. From the Home screen, touch  **MENU** → 
Media Center → **2. Picture & Video** → **7. Online Album**. The VZW Online Album sign-on screen displays.
2. Enter your **Mobile Number** and **Password** → touch **LOGIN**. You are now connected to your online album.





Video Wizard

1. From the Home screen, touch  **MENU** → 
Media Center → **2. Picture & Video** → **8. Video Wizard**.
2. To add a video touch **Add File**. The following options appear in the display:
 - My Pictures
 - My Videos
 - Take Picture
 - Record Video
3. Tap the option that contains the file you would like add → touch a file type → **Add**.
4. Tap the file added in the **Add File** field to view editing options.
 - **Preview**: allows you to preview the file.
 - **Copy**: allows you to copy the file to the next clip.
 - **Change Order**: allows you to change the order of the added files. Change Order display only when multiple files have been added.
 - **Split**: allows you split a video at a specific time interval.
 - **Insert Text**: allows you to add text to your file(s).
 - **Erase**: deletes the file.
 - **Trim**: allows you to cut specific sections of your video.
 - **Effects**: allows you to change the color tone or apply special effects to the file.
5. If a video was added touch the sound file underneath to view options:
 - **Erase**: deletes the sound from the video.
 - **Replace**: allows you to replace the sound with a sound byte from My Sounds.
 - **Volume**: allows you to adjust the default sound setting.
6. After editing touch **Options**:
 - **Reset**: allows you to start a new project.

- **Resolution:** allows you to set the video size.
 - **Help:** provides access to information for about Video Wizard.
7. Touch **Save**. At the **Save As?** pop-up, touch **Project** to save the file as a project that you can revisit at a later date or touch **Video** to save the file to the **My Videos** folder or touch **Cancel** to cancel the operation.

Biz Card Reader

Biz Card Reader allows you to take a photo of a business card, extract the information from the card, and save it as a new contact in your Contact List.

1. From the Home screen, touch  **MENU** →  **Media Center** → **2. Picture & Video** → **9. Biz Card Reader**.
2. Center the business card within the frame.
3. Press the **Camera/Camcorder** key  to take the photo.
4. Your device recognizes the name card and converts it to contact format.
5. Touch  to save in your contact list.

Section 12: Tools

The topics covered in this section allow you to schedule appointments, view the calendar, set an alarm, view time zones, take notes, and perform simple math calculations.





Voice Commands





For more information, refer to “Voice Commands” on page 45.


Calculator

Allows you to perform simple mathematical calculations.

Normal

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **2. Tools** → **2. Calculator** → **1. Normal**. The **Calculator** opens.
2. Enter the first number in your equation using the touch keypad or QWERTY keyboard. Numbers can be up to eight digits total.
3. Touch  to clear a single number or equation or touch  to clear the entire data entered.
4. Touch the function keys to set the type of calculation that you wish to perform. Your choices are as follows:



-  **Addition**
-  **Subtraction**
-  **Multiplication**
-  **Division**

5. Use the touch keypad to enter the second number into your equation.
6. Touch  to perform the calculation and view the results.

Tip

Calculates the tip and how much each person should pay.


Note: The following steps outline tip calculations using the touch keypad.

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **2. Tools** → **2. Calculator** → **2. Tip**. The **Tip Calculator** opens.
2. Touch each field to populate:

- **Bill:** enter the amount of the bill and touch **Done** .
 - **Tip:** enter tip percentage and touch **Done** .
 - **Split:** enter the amount of people paying and touch **Done** .
3. The calculator will display the tip, total bill including the tip, and the share of the bill for each person.
 4. To clear all fields, touch **Reset** .


Converter

The Converter provides several conversion categories.

1. From the Home screen, touch  **MENU** → **Settings & Tools** → **2. Tools** → **2. Calculator** → **3. Converter**. The following categories are displayed:
 - Temperature
 - Length
 - Weight
 - Area
 - Volume
 - Currency
2. Touch the desired category type.

There are three fields at the top of the display: category type (1), sub-category type (2), with the units of measure or money, and the entry field (3).

The units of measure for the conversion (4), is near the bottom of the display.

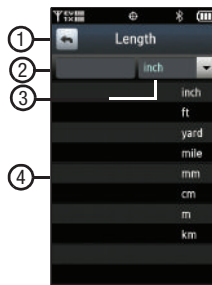



3. At the second field, (sub-category), touch the drop down menu to choose a unit of measure or money. At the fourth field, choose a unit for the conversion.
4. Touch the entry field. Using the touch keypad, enter the amount and touch **Done** . The amount will display at the fourth field. When using the QWERTY keyboard, you do not need to touch the entry field. Enter the value using number keys. The amount will display automatically.

Calendar

Allows you to keep your agenda convenient and easy. Simply store your appointments and your phone will alert you with a reminder you set.








Note: Any event scheduled within the next 24 hours will cause the Calendar icon to be illuminated on the Event Status bar, and will appear on the Event Manager screen.

Add a new event

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **2. Tools** → **3. Calendar**. The calendar appears in the display with the current date highlighted.
2. To view available options, touch **Options**. A menu displays that contains the following menu items.
 - **Weekly:** View the current week.
 - **Go to Today:** View today's events.
 - **Erase Old:** Select a past event to delete.
 - **Erase All:** Delete all events in your calendar.
3. Select an option or touch **Close**.
4. At the calendar display, touch **Add** to add a new event.

5. Touch the field below **Appointment Name**. Enter the name in the field using the touch keypad or the QWERTY keyboard and touch **Done**. Touch the following fields to enter the appropriate information:
 - **Start Date:** Enter the start date for the event.
 - **Start Time:** Enter the start time for the event.
 - am/pm: Select from am or pm for the start time.
 - **End Date:** Enter the end date for the event.
 - **End Time:** Enter the end time for the event.
 - am/pm: Select from am or pm for the end time.
 - **Recurrence:** Select the frequency of the event.
 - **Alert:** Sets the alarm for the event. Select from Tone, Vibrate, or Light Only.
 - **Reminder:** Set a reminder before the event. Select Off, Once, Every 2 Minutes, Every 15 Minutes.
 - **Alert Time:** Set the Alert Time to sound before the event takes place.
6. Fill in and select event details by touching the field and making your selections.
7. Touch **Save**. The event is saved.

View an event




1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **2. Tools** → **3. Calendar**. The calendar displays.
2. Touch to select the date containing the event that you wish to view. The events for that day are displayed.
3. Touch the event you wish to open. The event information displays.
4. To edit the event, touch .
5. Make all of the necessary edits by touching the desired fields and touch .
6. To see the selected date in a month view, touch  and touch **1. Monthly**.
7. To see the selected date in a week view, touch  and then touch **2. Weekly**.
8. To erase the current event, touch  then touch **3. Erase Old** to erase old events or **4. Erase All** to erase all events both old and current. At the **Erase all event?** pop-up, touch **Yes** to erase, or **No** to cancel the operation.


Alarm Clock

Your phone has an alarm clock that can be set to go off once, or reoccur daily at a specific time. Once set, the alarm clock is easy to change or turn off.




Note: Any event scheduled within the next 24 hours will cause the Calendar icon to be illuminated on the Event Status bar and will appear on the Event Manager screen.

Set An Alarm

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **2. Tools** → **4. Alarm Clock**. The following options appear in the display:
 - **Alarm 1**
 - **Alarm 2**
 - **Alarm 3**
2. Touch **On** to enable alarm.
3. Touch the **Time** field. Enter the alarm time using the touch keypad and tap .
4. Touch the **Frequency** field. The following options are available:
 - **Once:** The alarm sounds only once, at the time specified.
 - **Daily:** The alarm sounds every day at the time specified.

- **Mon-Fri:** The alarm sounds Monday through Friday at the time specified.
 - **Weekends:** The alarm sounds Saturday through Sunday at the time specified.
5. Touch the **Ringer** option. Select **Tone**, **Vibrate**, or **Light Only**.
 6. If you selected **Tone**, **VZW Default Tone** is the default ringer tone. Touch **VZW Default Tone** to select a different tone from **My Ringtones**. Touch a ringer option to select a tone.
 7. When all fields have correct information entered, touch  to save your settings.

Disable an alarm before it sounds


1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **2. Tools** → **4. Alarm Clock**. The **Alarm Clock** menu displays.
2. Touch the alarm that you wish to turn off.
3. Touch  to reset the alarm.

Alternately, you can touch **Reset** in the **Reset All** section of the display to reset all alarms without first selecting a desired alarm.

Snooze

When an alarm sounds, a menu screen displays that allows you to either turn the alarm off or to have the alarm ring again after 5 minutes. To use the snooze feature, follow these steps:



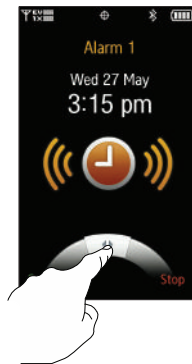


1. Set one of your phone's 3 alarms. For more information, refer to "Set An Alarm" on page 152.
2. When an alarm sounds, touch **Snooze** or **Stop**. To snooze, touch **Snooze** to set it to ring again after 5 minutes. Or, touch **Stop** to turn the alarm off. The alarm turns off and the Home screen displays.



Tip: When an alarm sounds, slide the slider to the left to **Snooze** or to the right to **Stop** an alarm.





Stop Watch

This feature allows you to use a stopwatch. You can use it to measure total elapsed time and splits.

1. From the Home screen, touch  MENU →  **Settings & Tools** → **2. Tools** → **5. Stop Watch**. The **Stop Watch** appears in the display.
2. Touch  to start the stopwatch. Touch  to record split times.
3. Touch  to stop stopwatch.
4. Touch  to erase recorded stopwatch time.
5. Touch  (in the upper left corner) to exit Stop Watch and return to the Tools menu.



World Clock

World Clock allows you to view the time of day or night in any part of the world.



1. From the Home screen, touch  MENU →  **Settings & Tools** → **2. Tools** → **6. World Clock**.
2. The Current Time displays. Touch . The following options display:
 - **Save**: allows you to save you settings.
 - **Set as 2nd Clock**: sets the time according to the city chosen.
 - **Daylight Saving**: sets the Daylight Savings time option.
3. Touch and drag the onscreen map to find the desired global region.
4. Touch a representative city from a desired area. If the city area is then correctly highlighted in red, your selection was accurately read and you can touch .

Notepad


Allows you to add, read, edit and erase notes.


1. From the Home screen, touch  MENU →  **Settings & Tools** → 2. **Tools** → 7. **Notepad**.

If you have any stored notes, they appear as a list in the display. If this is your first time in Notepad, **No Notes** displays.

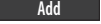



2. To add a new note, touch  then enter the note using the touch keypad or the QWERTY keyboard.
3. While entering a note, touch  to display a menu with the following text entry modes:
 - **T9Word**

Note: T9Word text entry option is only available when using the touch keypad. T9Word is not available when using the QWERTY keyboard.




- **Abc**
 - **ABC**
 - **123**
 - **Symbols**
4. Touch a text entry mode or touch  to exit the menu.

5. When you're finished entering details for the note, touch . The note is saved.

Review and Edit Notes



1. From the Home screen, touch  MENU →  **Settings & Tools** → 2. **Tools** → 7. **Notepad**.
The **Notepad** menu opens. If you have any stored notes, they appear as a list in the display.
2. To edit a note, touch the note in the list. Touch  to make changes. Make your changes to the note and touch  to save changes.


Erase, Add New and Lock Notes

1. From the Home screen, touch  MENU →  **Settings & Tools** → 2. **Tools** → 7. **Notepad**.
The **Notepad** menu opens. If you have any stored notes, they appear as a list in the display.
2. Touch the note in the list you want to erase and touch . A confirmation window displays, touch **Yes** to erase the note.

Sketch Pad

Allows you to “doodle” directly onto the display, modify and then either store or send the artwork to a target recipient.

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → 2. Tools → 8. Sketch Pad.

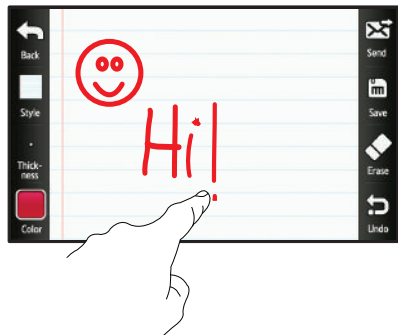

2. To draw, touch and hold your finger on the display and simply move your hand in a writing or drawing motion.

Sketch Pad Icons

Use the following options to create and edit a sketched message or drawing.



Back: returns you to the previous menu. If there is content on the sketchpad at the **Save Sketch?** pop-up, touch **Yes** to continue, or **No** to cancel the operation.



Style: allows you to select a sketchpad style.



Thickness: allows you to control the width of the lines used for doodling.



Color: allows you to select a font color.



Send: allows you to send doodled image as a picture message.



Save: allows you to save the image to My Pictures or to your storage card.





Erase: allows you to erase doodled image on the display.



Undo: allows you to undo the previous entry.

Timer

You can use this menu to set a countdown timer. Use a timer to count down to an event based on a preset time length (hours, minutes, and seconds).

1. From the Home screen, touch  **MENU** →  **Settings & Tools** → **2. Tools** → **9. Timer**.
2. Select a countdown time length for the alert by setting the Hours, Minutes, and Seconds value.





Note: Touching and holding down the arrows (up or down) increases the speed at which the numbers scroll through each reel.

3. Touch **Start** begin the timer and touch **Stop** to pause the timer.

USB Mass Storage

1. Insert your storage card (purchased separately) into the microSD slot.

2. Plug in the USB cable (purchased separately) to your phone and connect it to a USB port on your PC.
3. From the Home screen, touch  **MENU** →  **Settings & Tools** → **2. Tools** → Scroll the screen up → **0. USB Mass Storage**.

Note: You cannot make or receive calls when using USB Mass Storage.

4. On your PC, you should see a popup window for Removable Disk. Select the desired action (such as Manage Music using Rhapsody or Open folder to view/copy files) and click **OK**.
5. After copying selected files from your PC to the microSD card inserted in your phone, touch **DISCONNECT** on the phone to restore phone service, and touch **Yes** to confirm.



File Viewer

File Viewer allows you to view documents on your microSD card in the following format:

- Microsoft® Word (v2003 & 2007)
- Microsoft® Excel (v2003 & 2007)
- Microsoft® PowerPoint (v2003 & 2007)
- Adobe® PDF
- ASCII documents
- HTML documents
- Images: JPG, BMP, GIF, PNG, TIF

Note: The size of file that can be viewed is limited to available phone memory. Also, since this is a simple file viewer, it may be difficult to view very detailed files (e.g. spreadsheets or docs with several lines per page).

1. Insert your storage card (purchased separately) into the microSD slot.
2. If the files you wish to view are not already be stored on your microSD card, please refer to previous section (USB Mass Storage) for how to copy files from your PC to the microSD memory card.

3. Open your device and touch  **MENU** →  **Settings & Tools** → **2. Tools** → Scroll the screen up →

*. **File Viewer.**

4. Highlight the desired file and touch **VIEW** to view the file, or Erase to erase the highlighted file.
5. While the file is being viewed, touch **Options** to do one of the following:
 - **Zoom:** Zooms in to fit the screen. Press Next to see the next page if there is more than one page in the file. Press to return to normal view.
 - **Full View:** Rotates the page to fill the entire screen (if page orientation is different from screen orientation). Press the Right/Left directional keys to see next/previous page (if more than one page).
6. Press to return to normal view.
 - **File Info:** Displays the Name and Size of the file. Press or to return to the file viewer.
 - **Search:** Jumps to the first page with the text entered in the search box.
7. Press LIST or to return to the list of files, or press to exit.

Section 13: Browser

Your phone is equipped with a full HTML which allows you to access the Internet. This section explains how to access the browser services, and navigate the browser.

Accessing the Browser

► From the Home screen, touch  MENU →  Browser.

Navigation Using the Browser

Navigation within web pages is all driven via touch points on the screen.

Browser Window Overview





Back: returns you to the previous web page.



Forward: moves you forward to the next web page when multiple sites or links to sites have been accessed.



Reload: reloads the current page with updated information.



Fullscreen View: allows the page to be displayed in a fullscreen view either in a portrait or landscape orientation. No toolbars are visible. Touch again to exit fullscreen view.



Home: returns you to the currently assigned homepage.



Magnify: launches the magnification slider that allows you to zoom a web page either in or out.



Favorites: accesses and displays the bookmarks assigned as favorite web pages.



Manage Windows: allows you to open multiple web pages in one browser session. Up to 5 windows can be opened.



- **Add Web Favorites:** launches the View Favorites menu. Touch a favorite to Edit, Delete or Set As Home.
- **Find on Page:** allows you to search the content of a web page.
- **Subscribe:** allows you to subscribe and receive news feeds of regularly changing content. Also easily stay informed by retrieving the latest content from sites you are interested in. For more information, refer to “*RSS Feeds*” on page 167.
- **News Feed:** allows you to view, subscribe to, update, add and browse additional options associated with news feeds. For more information, refer to “*RSS Feeds*” on page 167.
- **Search:** loads the search page.
- **History:** gives you a history of previously accessed web sites.
- **Display Mode:** choose from Standard, Page Overview, Fixed Width, or Text Only options.
 - Standard: displays a standard Browser screen with portrait and landscape page navigation.

- Page Overview: displays the entire screen in the display. Move the highlighted frame to the part of the webpage you would like to zoom in and view.
 - Fixed Width: displays the complete Browser in the display. Only portrait page navigation.
 - Text Only: displays only text and excludes images used in the Web page.
 - **Send URL:** opens a New TXT Message screen and allows you to send the current URL.
 - **Settings:** allows you to change browser options.
 - Home Page: allows you to set the URL for the home page.
 - JavaScript: Turns JavaScript On/Off.
 - Touch Sound: allows you to set the touch sound for the display when it's touched.
 - Security: sets the security parameter when searching the web.
 - Zoom Default: allows you to set the zoom percentage when zooming in on a web page.
 - Manage Memory: deletes specific or all internet files from your device temporary memory. It is important that these files are deleted as some of these file can store personal information which can pose a security risk if not properly managed.
 - Restore Defaults: restores factory default settings.
 - FLASH Plug-in: allows you to view allows you to view FLASH inside of a web page. For more information, refer to “Flash Content” on page 168.
 - **Information:** gives you current Web Page and Browser Information.
 - **Copy Text:** allows you to copy and paste text.
-
- Note:** The **Paste** option only displays when text has been copied.
-

Changing the Orientation of the Web page

The Rogue™ comes equipped with an orientation detector that can tell if the phone is portrait or landscape orientation. The slide does not have to be open to view content in landscape mode.



Portrait Mode



Landscape Mode

► From within any active web page, change the orientation:





- Turn the phone on its side and slide the display up to see a landscape/widescreen view of the current page.
- Close the slide and turn the phone upright to see a portrait view of the current screen.

Viewing the Page in Full Screen Mode

By default, only the Navigation Toolbar and Screen View icons are displayed on the screen. The Screen View button can be used to either reveal the Web Toolbar or remove it to reveal more of the current page.

Magnifying the current page

From an active page you can toggle the view by touching the Screen View button.

1. Touch  from the web toolbar of the current web page.
 - Touch the magnification slider (at the bottom when in landscape or on the right when in portrait) and drag to one side or another to zoom in or out.
 - Touch  to zoom into the page or  to zoom out. This enlarges or shrinks the size of the displayed page in increments.
 - Press and hold  (on the right side of the phone) to zoom into the page or to zoom out.

Tip: Tap the display twice to zoom in or zoom out.

Scrolling Within a Web Page

As with other menu items and pages on your phone, scrolling requires that steady directional pressure be applied onscreen via your fingertip.



To scroll up or down a Web page

- Touch and slide your finger either up or down on the screen.



To move around a Web page:

- Touch and drag across the screen in any direction.

Note: The page must be magnified enough so there are unseen areas to where you would move. If the page is already being displayed in its entirety, you will not be able to move around it.

Accessing the Web Toolbar

From an active page you can toggle the view by touching the Screen View button.

- Touch  to change the view to Fullscreen without Toolbars. This view maximizes the viewable area of the current page. Touch  again to minimize the view and make the Web Toolbar visible.

Selecting Onscreen Items

- Touch an onscreen item or hyperlink.


Links, which are displayed as underlined and colored text, allow you to jump to other Web pages, select special functions, or even activate an application.

Entering Text Into a Search or Text Field

1. Touch the onscreen text field. The cursor begins blinking.
2. Begin entering your text.

For more information, refer to “*Entering Text Using the QWERTY Keyboard*” on page 66.

Returning to the Previous Page

- ▶ Touch  from the left of the Navigation Toolbar's Address bar.




Moving to the Next Page

- ▶ Touch  from the left of the Navigation Toolbar.

Returning to the Homepage

- ▶ Touch  to return to the homepage.

Accessing a URL Address

1. Open your device in landscape mode, from the Home screen, touch  **MENU** →  **Browser**.
2. Touch the **URL Address** field and use the QWERTY keyboard, to enter the target Web address. The **http://** prefix is pre-inserted into the text string.
3. Press  to launch the new web page.

Using Favorites

While navigating through the Internet you can bookmark a site to quickly and easily access it at a future time. The URLs (web site addresses) of the bookmarked sites are stored in the Web


Favorites folder, where you can use the six preset favorites and store your own favorite URLs.

Accessing a Web Site Using Favorites



- ▶ Open your device in landscape mode, from the Home screen, touch  **MENU** →  **Browser** →  **Web Favorites**. Touch a bookmark item from the Favorite list.

Adding Favorites



1. Open your device in landscape mode, from the Home screen, touch  **MENU** →  **Browser**.
2. Touch the **Enter URL Address** field and use the QWERTY keyboard to input the desired web address. Press  to launch the new web page.
3. Touch  **Web Favorites**.
4. Touch **Add Current** to store the new Web Favorites entry.

Note: From the browser screen, you can also touch  **Menu** → **Add Web Favorites**.


Editing Web Favorites

1. Open your device in landscape mode, from the Home screen, touch  **MENU** →  **Browser** →  **Favorites**.

Note: Preloaded entries cannot be edited.

2. Touch .
3. Touch the URL Address you would like to edit.
4. Touch the **Title** field, **URL Address** field or **Folder** field and use the QWERTY keyboard to update the information.
5. Touch  to save the changes to the entry.

Deleting a Favorite

1. Open your device in landscape mode, from the Home screen, touch  **MENU** →  **Browser** →  **Favorites**.

Note: Preloaded entries cannot be deleted.

2. Touch .

3. Place a checkmark adjacent to those editable entries you wish to choose for deletion.

— or —








Touch **Delete All** to place a checkmark alongside all deleteable fields.

4. Touch .

Creating a Favorites folder

1. Open your device in landscape mode, from the Home screen, touch  **MENU** →  **Browser** →  **Favorites** → **Create Folders**.
2. Enter the name of your new folder and touch .




Copying a URL or Text to a Message

1. Open your device in landscape mode, from the Home screen, touch  **MENU** →  **Browser** →  **Menu** → ***. Copy Text**.

2. Highlight the text you want to copy and touch  and press .
3. From the Home screen, touch  **Message** → **1. New Message** → **Message Type (Text, Picture, Video, or Voice.)**

4. In the **Text** field of the message. Touch **Options** → 1.
Paste Text.
5. Continue the creation of the remaining message. For more information, refer to “*Messaging*” on page 73.

Sending a URL

A selected URL can also be sent as a file attachment within a new text message but also transmitted to any paired Bluetooth device that can receive the data.

1. Open your device in landscape mode, from the Home screen, touch  **MENU** →  **Browser** → 
→ 8. **Send URL.**
2. Scroll down and touch the **To:** field to use the onscreen QWERTY keyboard to enter the recipients phone number, email address, or name (if in your contact list.)
3. Continue the creation of the remaining message. For more information, refer to “*Messaging*” on page 73.

Browser Settings

To configure the parameters on the onboard browser, use the Browser Settings page.

- Open your device in landscape mode, from the Home screen, touch  **MENU** →  **Browser** →  →
9. **Settings.**


For more information, refer to “*Browser Window Overview*” on page 159.

Using your History

The History list provides you with a list of the most recently visited web sites. These entries can be used to quickly return to a previously unmarked web pages without the need to retype the entire address.


Accessing your History List

1. Open your device in landscape mode, from the Home screen, touch  **MENU** →  **Browser.**

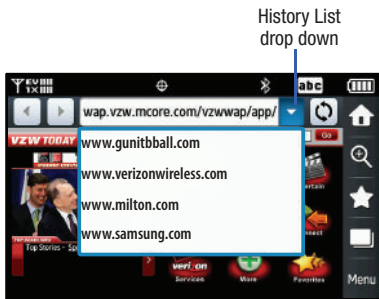

- From the Navigation Toolbar (at the top of the web page) touch the History List drop down arrow to reveal the current stored list of visited web sites.

– OR –

Touch  (at the bottom right) → **6. History** to see visited web sets in folders sorted by date.

- Touch an entry from the list to automatically be taken to the selected web site.

About Browser



The **About Browser** option gives the browser software version information.

- Open your device in landscape mode, from the Home screen, touch  **MENU** →  **Browser** →  **Menu** → **0. Information** → **Browser Information**.
- Once finished, press  to return to the browser window.

RSS Feeds

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is also called a feed, web feed, or channel, contains either a summary of content from an associated web site or the full text. RSS makes it possible for people to keep up with their favorite web sites in an automated manner that is easier than checking them manually.

To add an RSS feed, you must first be on a website that supports RSS.




- Open your device in landscape mode, from the Home screen, touch  **MENU** →  **Browser** → open the website you would like to receive RSS feed.
- Touch **Menu** → **3. Subscribe**.

Note: If 3. **Subscribe** is not available, then the website does not support RSS feeds.


3. Enter your **Title** → The URL is automatically populated in the URL field → scroll up and assign a folder if desired →

 Save .

4. Touch one of the following buttons to display additional options:

- Touch  to update your news feed.
- Touch  to add a news feed.
- Touch  to display additional options:
 - **Create Folder:** allows you to create folders to sort your news feeds.
 - **Move:** allows you to move news feeds from one folder to another.
 - **Copy:** allows you to copy news feeds and paste them in a desired folder.
 - **Erase:** deletes selected or all news feeds.
 - **Send URL:** allows you to send a URL via text message.
 - **Auto Update:** allows you to set your news feeds to update automatically.
 - **Feeds Info:** provides detailed information about the selected news feed.
 - **Help:** provides information about various functions and features.

5. To view, touch a news feed to open and touch the feeds you would like to view.

Tip: Touch  (at the bottom of the display) while viewing a selected news feed to view the complete article on the website.

Flash Content

Rogue™ has FlashLite engine that supports Flash content with the following Codecs:

- video codec: sorenson, on2
- audio codec: mp3

Unsupported Flash media

Error messages may result in the following circumstances:

- "Temporarily unable to load Flash content" - This message displays when the sever does not respond within in a certain time.
- "Not supported in this content" - This message displays when the flash player does not support the rewind feature while flash contents play.
- "Temporarily out of memory" - This message displays when the flash contents requires more memory than what is available.
- "Unsupported Flash Contents" - This message displays when the flash contents requires a higher version of Flash.
- "Insufficient Memory" - This message displays when the web page or contents requires more memory resouce than what is available.

- "Script processing time is required. Continue?" - This message displays when the web page or contents requires more than 3 secs of processing time.
- "Failed to load media" - This message displays when the streaming contents contains errors.

Section 14: Health and Safety Information

This section outlines the safety precautions associated with using your phone. These safety precautions should be followed to safely use your phone.

Health and Safety Information

Exposure to Radio Frequency (RF) Signals

Certification Information (SAR)

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. government.

These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE).

In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of

absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg).

The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each model phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For body worn operation, this phone has been tested and meets FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body.

Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The FCC has granted an Equipment Authorization for this mobile phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. The maximum SAR values for this model phone as reported to the FCC are:

- Head: 1.36 W/Kg.
- Body-worn: 0.673 W/Kg.

SAR information on this and other model phones can be viewed online at <http://www.fcc.gov/oet/ea>. To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed somewhere on the case of the phone.

Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone. Additional product specific SAR information can also be obtained at www.fcc.gov/cgb/sar.

Warning Regarding Display

The display on your handset is made of glass or acrylic and could break if your handset is dropped or if it receives significant impact. Do not use if screen is broken or cracked as this could cause injury to you.

Samsung Mobile Products and Recycling

Samsung cares for the environment and encourages its customers to recycle Samsung mobile phones and genuine Samsung accessories.

Go to: <http://www.samsung.com/recycling> for more information.

UL Certified Travel Adapter

The Travel Adapter for this phone has met applicable UL safety requirements. Please adhere to the following safety instructions per UL guidelines.

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE.

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS.

DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

FOR CONNECTION TO A SUPPLY NOT IN NORTH AMERICA, USE AN ATTACHMENT PLUG ADAPTOR OF THE PROPER CONFIGURATION FOR THE POWER OUTLET. THIS POWER UNIT IS INTENDED TO BE CORRECTLY ORIENTATED IN A VERTICAL OR HORIZONTAL OR FLOOR MOUNT POSITION.

Consumer Information on Wireless Phones

The U.S. Food and Drug Administration (FDA) has published a series of Questions and Answers for consumers relating to radio frequency (RF) exposure from wireless phones. The FDA publication includes the following information:

What kinds of phones are the subject of this update?

The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called "cell," "mobile," or "PCS" phones. These types of wireless phones can expose the user to measurable radio frequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies.

When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at

far lower power levels, and thus produce RF exposures well within the FCC's compliance limits.

Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless

phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user.

In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones.

Base stations are thus not the primary subject of the safety questions discussed in this document.

What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radio frequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of

the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phones RF exposures.

However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of

animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years' follow-up may be needed to provide answers about some health effects, such as cancer.

This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF).

FDA has been a leading participant in the World Health Organization international Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs

around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations.

CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products - and at this point we do not know that there is - it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

- If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source

of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was

strictly precautionary; it was not based on scientific evidence that any health hazard exists.

Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit.

Do wireless phone accessories that claim to shield the head from RF radiation work?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing

more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike "hand-free" kits, these so-called "shields" may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption. In February 2002, the Federal Trade Commission (FTC) charged two companies that sold devices that claimed to protect wireless phone users from radiation with making false and unsubstantiated claims.

According to FTC, these defendants lacked a reasonable basis to substantiate their claim.

What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested

wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a compatible phone and a compatible hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations (Updated 12/1/2006):

- FCC RF Safety Program:
<http://www.fcc.gov/oet/rfsafety/>
- Environmental Protection Agency (EPA):
<http://www.epa.gov/radiation/>
- Occupational Safety and Health Administration's (OSHA):
<http://www.osha.gov/SLTC/radiofrequencyradiation/index.html>
- National Institute for Occupational Safety and Health (NIOSH):
<http://www.cdc.gov/niosh/homepage.html>
- World Health Organization (WHO):
<http://www.who.int/peh-emf/>

- International Commission on Non-Ionizing Radiation Protection:
<http://www.icnirp.de>
- Health Protection Agency:
<http://www.hpa.org.uk/radiation>
- US Food and Drug Administration:
<http://www.fda.gov/cellphones>

Road Safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features, such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
2. When available, use a hands-free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.

3. Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voicemail answer it for you.
4. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
5. Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility, driving safely.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies.
9. Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency number.

"The wireless industry reminds you to use your phone safely when driving."

For more information, please call 1-888-901-SAFE, or visit our web-site www.ctia.org.

Important! If you are using a handset other than a standard numeric keypad, please call 1-888-901-7233.

Provided by the Cellular Telecommunications & Internet Association.

Responsible Listening

Caution! Avoid potential hearing loss.

Damage to hearing occurs when a person is exposed to loud sounds over time. The risk of hearing loss increases as sound is played louder and for longer durations. Prolonged exposure to loud sounds (including music) is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cellular telephones, at high volume settings for long durations may lead to permanent noise-induced hearing loss. This includes the use of headphones (including headsets, earbuds, and Bluetooth or other wireless devices). Exposure to very loud sound has also been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound and distorted hearing.

Individual susceptibility to noise-induced hearing loss and potential hearing problem varies. Additionally, the amount of sound produced by a portable audio device varies depending on the nature of the sound, the device settings, and the headphones that are used. As a result, there is no single volume setting that is appropriate for everyone or for every combination of sound, settings and equipment.

You should follow some commonsense recommendations when using any portable audio device:

- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to you can hear what you are listening to.
- Do not turn the volume up to block out noisy surroundings. If you choose to listen to your portable device in a noisy environment, use noise-cancelling headphones to block out background environmental noise. By blocking background environment noise, noise cancelling headphones should allow you to hear the music at lower volumes than when using earbuds.
- Limit the amount of time you listen. As the volume increases, less time is required before your hearing could be affected.

- Avoid using headphones after exposure to extremely loud noises, such as rock concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.
- Do not listen at any volume that causes you discomfort. If you experience ringing in your ears, hear muffled speech or experience any temporary hearing difficulty after listening to your portable audio device, discontinue use and consult your doctor.

You can obtain additional information on this subject from the following sources:

American Academy of Audiology

11730 Plaza American Drive, Suite 300

Reston, VA 20190

Voice: (800) 222-2336

Email: info@audiology.org

Internet: <http://www.audiology.org>

National Institute on Deafness and Other Communication Disorders

National Institutes of Health

31 Center Drive, MSC 2320

Bethesda, MD 20892-2320

Email: nidcdinfo@nih.gov

Internet: <http://www.nidcd.nih.gov/>

National Institute for Occupational Safety and Health (NIOSH)

395 E Street, S.W.

Suite 9200

Patriots Plaza Building

Washington, DC 20201

Voice: 1-800-35-NIOSH (1-800-356-4647)

1-800-CDC-INFO (1-800-232-4636)

Outside the U.S. 513-533-8328

Email: cdcinfo@cdc.gov

Internet: <http://www.cdc.gov>

1-888-232-6348 TTY

Internet: <http://www.cdc.gov/niosh/topics/noise/default.html>

Operating Environment

Remember to follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger.

When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder if you are using an external antenna).

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Implantable Medical Devices

A minimum separation of six (6) inches should be maintained between a handheld wireless phone and an implantable medical device, such as a pacemaker or implantable cardioverter defibrillator, to avoid potential interference with the device.

Persons who have such devices:

- Should ALWAYS keep the phone more than six (6) inches from their implantable medical device when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the implantable medical device to minimize the potential for interference;
- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place;
- Should read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your wireless phone with such a device, consult your health care provider.

For more information see:

<http://www.fcc.gov/oet/rfsafety/rf-faqs.html>

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids.

The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.


The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. T4 is the better/higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use.

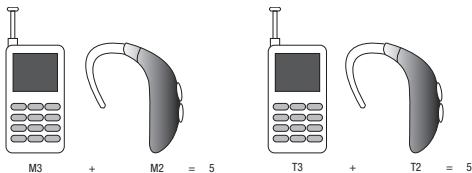

In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This is synonymous for T ratings. This should provide the hearing aid user with "normal usage" while

using their hearing aid with the particular wireless phone. "Normal usage" in this context is defined as a signal quality that is acceptable for normal operation.

The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules.

The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your phone off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You

should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch your phone off in any facility where posted notices require you to do so.

Potentially Explosive Environments

Switch your phone off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch the phone off while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.


Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. If the phone is not on, switch it on.
2. Key in the emergency number for your present location (for example, 911 or other official emergency number).
Emergency numbers vary by location.
3. Press .

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

Restricting Children's access to your Phone

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

FCC Notice and Cautions

FCC Notice

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association:

NFPA (National Fire Protection Agency)

1 Batterymarch Park

Quincy, Massachusetts

USA 02169-7471

Internet: <http://www.nfpa.org>

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment, and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Other Important Safety Information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.

- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch your phone off before boarding an aircraft. The use of wireless phone in aircraft is illegal and may be dangerous to the aircraft's operation.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Product Performance

Getting the Most Out of Your Signal Reception

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal.

If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

If your phone is unable to find a signal after searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key.

Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Maintaining Your Phone's Peak Performance

For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- To ensure that the Hearing Aid Compatibility rating for your phone is maintained, secondary transmitters such as Bluetooth and WLAN components must be disabled during a call.
- If your phone is equipped with an external antenna, hold the phone with the antenna raised, fully-extended and over your shoulder.
- Do not hold, bend or twist the phone's antenna, if applicable.
- Do not use the phone if the antenna is damaged.
- If your phone is equipped with an internal antenna, obstructing the internal antenna could inhibit call performance.
- Speak directly into the phone's receiver.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it is inoperable, call Customer Care for service.

Availability of Various Features/Ring Tones

Many services and features are network dependent and may require additional subscription and/or usage charges. Not all features are available for purchase or use in all areas. Downloadable Ring Tones may be available at an additional cost. Other conditions and restrictions may apply. See your service provider for additional information.

Battery Standby and Talk Time

Standby and talk times will vary depending on phone usage patterns and conditions. Battery power consumption depends on factors such as network configuration, signal strength, operating temperature, features selected, frequency of calls, and voice, data, and other application usage patterns.

Battery Precautions

- Avoid dropping the cell phone. Dropping it, especially on a hard surface, can potentially cause damage to the phone and battery. If you suspect damage to the phone or battery, take it to a service center for inspection.
- Never use any charger or battery that is damaged in any way.
- Do not modify or remanufacture the battery as this could result in serious safety hazards.
- If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Follow battery usage, storage and charging guidelines found in the user's guide.
- Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Do not use incompatible cell phone batteries and chargers. Some Web sites and second-hand dealers, not associated with reputable manufacturers and carriers, might be selling incompatible or even counterfeit batteries and chargers. Consumers should purchase manufacturer or carrier recommended products and accessories. If unsure about whether a replacement battery or charger is compatible, contact the manufacturer of the battery or charger.
- Misuse or use of incompatible phones, batteries, and charging devices could result in damage to the equipment and a possible risk of fire, explosion, leakage, or other serious hazard.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.

- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).
- Do not place the phone in areas that may get very hot, such as on or near a cooking surface, cooking appliance, iron, or radiator.
- Do not get your phone or battery wet. Even though they will dry and appear to operate normally, the circuitry could slowly corrode and pose a safety hazard.
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Do not permit a battery out of the phone to come in contact with metal objects, such as coins, keys or jewelry.
- Do not crush, puncture or put a high degree of pressure on the battery as this can cause an internal short-circuit, resulting in overheating.

- Dispose of used batteries in accordance with local regulations. In some areas, the disposal of batteries in household or business trash may be prohibited. For safe disposal options for Li-Ion batteries, contact your nearest Samsung authorized service center. Always recycle. Do not dispose of batteries in a fire.

Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.

- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, a stove or a radiator. The phone may explode when overheated.
- If your phone is equipped with an external antenna, use only the supplied or an approved replacement antenna. Unauthorized antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

Section 15: Warranty Information

Standard Limited Warranty

What is Covered and For How Long?

SAMSUNG TELECOMMUNICATIONS AMERICA, LLC ("SAMSUNG") warrants to the original purchaser ("Purchaser") that SAMSUNG's Phones and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Leather Case	90 Days
Holster	90 Days
Other Phone Accessories	1 Year

What is Not Covered? This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abuse, neglect, unusual physical, electrical or electromechanical stress, or modification of any part of Product, including antenna, or cosmetic damage; (b) equipment that has the serial number

removed or made illegible; (c) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal use; (d) malfunctions resulting from the use of Product in conjunction with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (e) defects or damage from improper testing, operation, maintenance, installation, or adjustment; (f) installation, maintenance, and service of Product, or (g) Product used or purchased outside the United States or Canada.

This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

What are SAMSUNG's Obligations? During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized phone service

facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or comparable substitute proof of sale showing the date of purchase, the serial number of Product and the sellers' name and address. To obtain assistance on where to deliver the Product, call Samsung Customer Care at 1-888-987-4357. Upon receipt, SAMSUNG will promptly repair or replace the defective Product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product. Repaired/replaced leather cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Product will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment shall become the property of SAMSUNG.

If SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

WHAT ARE THE LIMITS ON SAMSUNG'S WARRANTY/LIABILITY?

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY

OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

- THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;
- WARRANTIES OF TITLE OR NON-INFRINGEMENT;
- DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;
- THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR
- COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN. SOME STATES/PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM THE USE

OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES, OR FOR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME STATES/PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE/PROVINCE TO PROVINCE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND STATES PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS. THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT

IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRDPARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

Precautions for Transfer and Disposal

If data stored on this device is deleted or reformatted using the standard methods, the data only appears to be removed on a superficial level, and it may be possible for someone to retrieve and reuse the data by means of special software.

To avoid unintended information leaks and other problems of this sort, it is recommended that the device be returned to Samsung's Customer Care Center for an Extended File System (EFS) Clear which will eliminate all user memory and return all settings to default settings. Please contact the **Samsung Customer Care Center** for details.

Important! Please provide warranty information (proof of purchase) to Samsung's Customer Care Center in order to provide this service at no charge. If the warranty has expired on the device, charges may apply.

Customer Care Center:

1000 Klein St.

Plano, TX 75074

Toll Free Tel: 1.888.987.HELP (4357)

Samsung Telecommunications America, LLC:

1301 East Lookout Drive

Richardson, Texas 75082

Phone: 1-800-SAMSUNG (726-7864)

Important! If you are using a handset other than a standard numeric keypad, dial the numbers listed in brackets.

Phone: 1-888-987-HELP (4357)

©2009 Samsung Telecommunications America. All rights reserved.

No reproduction in whole or in part allowed without prior written approval. Specifications and availability subject to change without notice.

Numerics

1-touch dialing 61

2-touch dialing 62

A

Accelerator Tab 56

Accelerator tab 28

Adding a Contact 52

Adding a Contact

Method 1- Creating a new Contact

from the Home screen 52

Method 2- Adding a number to a

new or existing Contact from the

Home screen 52

Method 3- Creating or Updating

Contacts Using Call History 54

Airplane Mode 110

Alarm clock

snooze 153

turn off the alarm 153

Answer options 117

Applications

Using the Camcorder 143

Using the Camera 135

Auto retry 118

B

Battery

charging 11

indicator 4

removing 7

Biz Card Reader 148

Bluetooth 99

search 102

service profiles 100

settings 100

turning on/off 101

Browse & Download 128

C

Calendar

add a new event 151

Call Functions

answering a call 40

Recent Calls 41

roaming 44

Viewing Recent Call History 42

Call history

calls using 42

definition 41

deleting entry 43

icons 41

new contact 54

updating existing contact 54

Camcorder 143

Camcorder Options 143

Options after a Video is Taken 145

Shooting Video 143

Camera

Options 136

Settings 137

Taking Pictures 135

Camera Options

Shooting mode 136

Change lock code 112

Clock Format 109

Command Keys 19

Contacts

deleting a contact entry 57

editing an existing contact entry 56

speed dialing 61

Copying a URL 165
Create a New Group 59
Creating and Sending Picture Messages
76
Creating and Sending Video Messages
78
Current Country 111

D

Dial Font Size 108
Dialing
 one-touch 61
 two-touch 62
Dialog Boxes 25
Disable alarm 153
Display
 backlight 107
 Banner 106
 language 110
Display Settings 106
Display settings
 Banner 106

E

Emergency Contacts
 Assigning an Emergency Contact
 from Contacts 63

 Assigning an Emergency Contact
 with a New Contact 63
Ending a call 38
Extras 128

F

Favorites
 Adding Contact or Group Member
 62

Finding My Phone Number 65

Flash Content 168

Full Screen Mode 162

G

Games 127
Get New Picture 126
Get New Ringtones 123
Getting Started 4
 understanding this user manual 4
Groups
 move entries from/to 58
 send messages to 59
 send Picture msg to 59
 viewing 57

H

HAC 181

Health and Safety Information 170

I

Icons

 alarm only 23
 display 20
 vibrate mode 23

Indicator

 1X signal strength 20
 Battery Level 21
 Bluetooth Active 21, 22
 Bluetooth Connected 21
 Bluetooth On 21
 D signal strength 21
 Data Call 21
 Dormant 21
 E911 21
 EV signal strength 20
 EV1X signal strength 20
 Location On 21
 No service 21
 Roaming 20
 Speakerphone Off 23
 Speakerphone On 23

- SSL 21
- TTY 21
- Voice Call 21
- Voice Privacy 21
- Installing the Battery** 5
- Internet Browser** 127
- K**
- Keyboard Navigation** 34
- L**
- Language setting** 110
- Lock code, changing** 112
- Lock phone** 113
- M**
- Making a call** 38
- Making a Three-way Call** 39
- Media Center** 123
- Memory Card**
 - Installing 9
 - Removing 10
- Memory Card Formatting** 129
- Menu Navigation**
 - menu outline 34
- microSD Card**
 - formatting 11, 129

- Mode**
 - call answer 117
- Motion Detection** 116
- M-Ratings** 182
- Music & Tones** 123
- My Music** 124, 131
- My Name Card** 64
 - sending contact information (vCard)
 - to another Bluetooth-enabled phone 64
- My Ringtones** 124
- My Sounds** 124

- N**
- Non-Supported Battery** 5
- Notepad**
 - erase, add new and lock notes 155
 - review and edit notes 155
- Notes and tips** 4
- Notes, description** 4
- O**
- One Touch Dial** 118
- Online Album** 147

- P**
- Pause** 55
 - hard pause 55

- two-second pause 55
- Phone Info** 122
- Phone Safety** 181
- Phone Settings** 110
 - NAM select 115
 - quick search 115
 - restoring phone memory 114
 - system select 115
- Photo River** 141
- Playlist**
 - creating a playlist 133
 - editing a playlist 133
- Q**
- Quick Search** 115
 - searching for a contact 116
 - searching for a menu item 115
- R**
- Reviewing sent** 89
- Roaming**
 - definition 44
 - options 44
- RSS Feeds** 167

S

SAR values 170

Security

edit lock code 112

lock phone 113

voice privacy 118

Security settings 112

Sending a URL 166

Sent, reviewing messages 89

Set an alarm 152

Settings 99

backlight 107

Display settings 106

edit lock code 112

language 110

lock phone 113

security settings 112

Tools 99

Set-Up Wizard 122

Snooze 153

Sound Settings 104

Sounds

Alert Sounds 105

Call Sounds 104

Power On/Off 106

Service Alerts 106

Speed dial, assigning 62

SSL

icon 21

Standard Limited Warranty

190

T

Three-Way Calling 39

Tip, description 4

Tools 99

Alarm Clock 99, 152

Calculator 99, 149

Calendar 99, 151

Camera 135

converter 150

Notepad 99, 155

Stop Watch 99, 154

Tip, calculator 149

view an event 152

Voice Commands 99, 149

World Clock 99, 154

U

Touch Settings 109

Transition Effect 109

T-Ratings 182

TTY Mode 44, 118

Turning Your Phone On and Off 13

Two-touch dialing 62

UL Certification 171

Understanding Your Contacts 51

Understanding Your Phone 14

features of your phone 14

URL

Copying to Message 165

Entering Manually 164

Sending 166

USB Mode 121

Using Favorites

Accessing a Web Site Using

Favorites 164

Adding Favorites 164

Deleting a Favorite 165

Editing Web Favorites 165

Using the Battery 4

V

**V CAST Music with Rhapsody® (PC
Subscription, Wireless and Downloads)**
129

V CAST Video

- browsing/playing clips 125
- configuring alerts 126
- deleting clips 126
- description 125
- downloading clips 125

Video clips 125

Video Wizard 147

View an event, calendar 152

Voice Commands

- digit dial 45
- name lookup 48
- phone status 47
- Send Text, Picture or Video 46

Voice privacy 118

Voicemail

- Listen to voicemail messages 95
- listening to 13
- setting up 13

W

Wallpaper 108

Warranty Information 190

Widget

- Activation 34

Widgets 108

- Accessing 32
- Rearranging 33
- Undocking 33