



## Quick Start Guide

 
5.0 Smart Phone

### Key Introduce:

Welcome you choose to use this phone, you can read this manual to understand the use of this phone, taste of the function and simple operation method.

This manual is only as product guidance, doesn't mean that the configuration of the software and hardware of products, products and accessories may vary by region, involves the pictures for reference only, in kind prevail.

The phone is suitable for GSM/GPRS/EDGE/WCDMA/HSDPA network environment, some functions need to network operators or service provider of support, please consult local network operators.

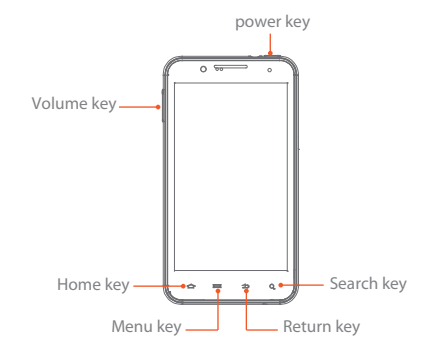

**power key**  
Long pressing to make phone power-on and power-off vice versa.

**Volume key**  
Pressing to adjust audio volume.

**Home key**  
Clicking on any interface, the direct return to the standby interface; long press on any interface, the eight most recently used menu.

### Menu key

Clicking to popup the complete menu option.

 
**Return key**  
Clicking to return to the higher level menu.

### Search key

In different interface, search related information (in the main menu interface, long pressing this key Web search engines; In the address book interface, long pressing a contact search.)

The phone is suitable for GSM/GPRS/EDGE/WCDMA/HSDPA network environment, some functions need to network operators or service provider of support, please consult local network operators.


**Installation UIM/SIM card**  
(1)Please insert your USIM/SIM according to the direction indicated.

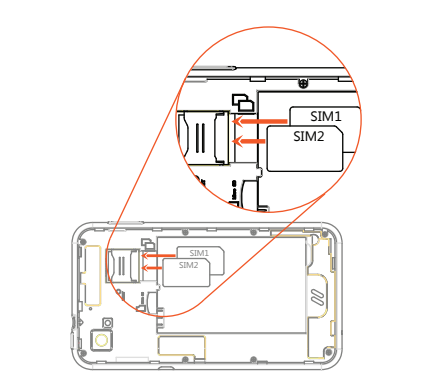

### About memory card

**Important information:** Please take out your memory card (Micro SD card) after powering off your phone, otherwise will cause system problem. The Micro SD card can be extended to more storage space. Suggest using standard Micro SD card like SanDisk, Kingston and other popular vendor's to prevent incompatibility. And be sure to put it far from the children because s the card is one tiny accessory.

 **(1)Installation memory card:** Insert the card with the golden contact side down according to the direction indicated, and press it down gently till you hear a "KA...".

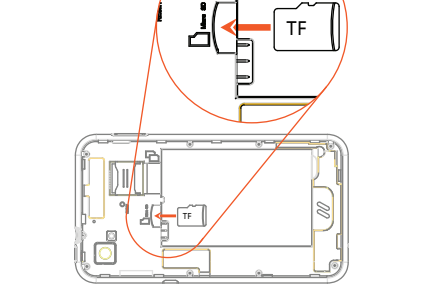

**(2)Remove the memory card:** Press down the MicroSD card, MicroSD card will automatically pop up and then remove the MicroSD card.

### For the battery

Use the travel charger to charge the battery:

(1)The USB data cable and travel charger is connected.  
(2)Connect the Mini USB port to the phone, and connect the Travel Charger to an electric outlet.

(3)Normal charging, the battery status icon will be displayed. End-of-charge display full status.

(4)Remove the Travel charger and USB cable.

If the battery is new, the first fully charging must be more than 10 hours to get the best performance.

Run out of battery, please charging, over-discharge damage to the battery.

Smart phone during charging a slight heat is a normal phenomenon.

 
This product only supports the use of a dedicated charger, others will not make it fully charged.

If the phone is automatically power off because the power has been used up, it need some longer charging time to be powered on again, this is normal.

**Power-on and power-off**  
Confirm this phone with the battery and the battery has enough power, hold down the Power Key for about 3 seconds, can be Power-on or Power-off operation.


### Unlock the screen and lock screen

You can drag to right to unlock and enter the main interface; drag to left to the cameraiicon, you can unlock and enter into the function module. To lock the screen in any interface, you simply press the Power Key, the phone can enter into the sleep mode.

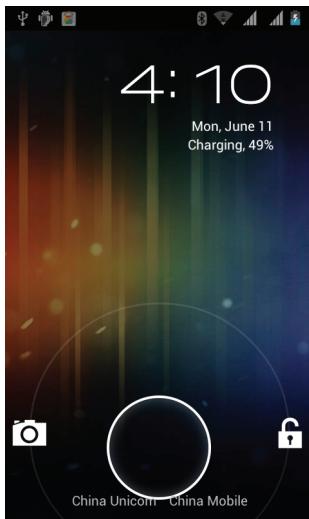

### Enter into the main interface

 
Unlock the main interface, all your installed programs will be displayed on the desktop. You can click on the icon to open the corresponding program, can also the press and hold to drag the icon to sort. If you want to uninstall the application, drag the icon to the top delete.

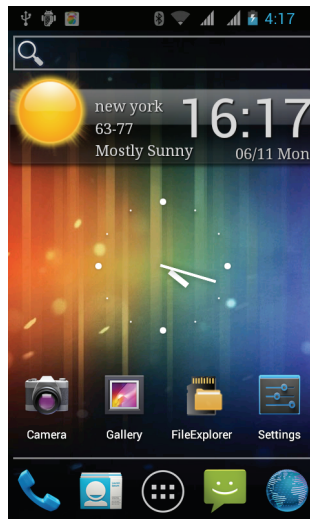

### Manage contacts


In Contacts, you can save and view the contact name, phone number and e-mail address, etc.

 If the first use please choose the way of importing contacts, you can choose to importing contacts from the SIM card or the SD card, you can also directly create a new contact.

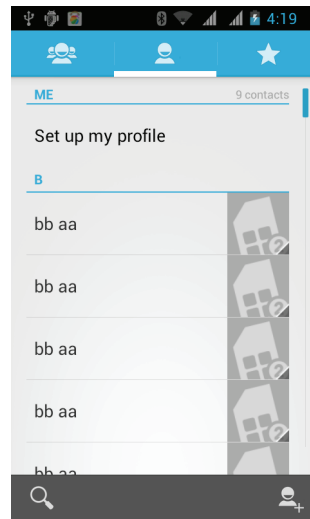


### Calling

 You can use the keyboard to calling. Can also press the Search Key to enter the search interface, search for contacts. The phone supports the search for a contact name the first letter of the alphabet, part of the alphabet, spelling, and telephone number, the search results sorted in accordance with the matches and contact frequency optimization. Call log of missed calls appeared in the state bar, showing the number of rings and the strange phone numbers.

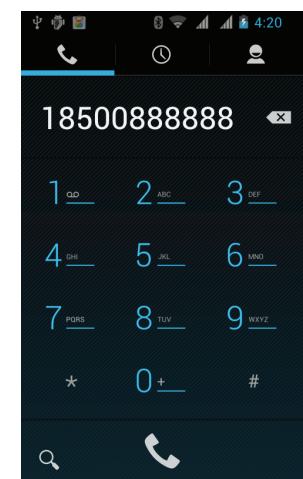


### Send message

 Write messages, you can once add one or more recipients, the content of messages support sending a text, emotions, pictures, video, audio, and so on. If you are driving, meetings, interviews and other important occasions, you can use the messages templates to quickly send.

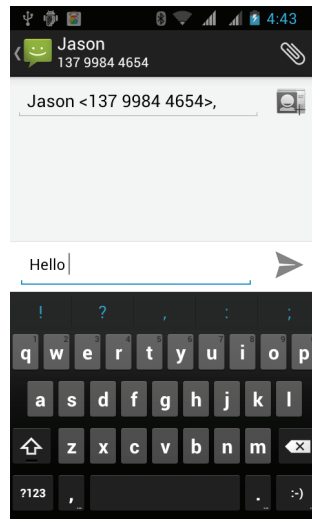

### Write e-mail

 
You can set up your e-mail account with the people's smartphone to send and receive e-mail, new e-mail will receive a reminder.

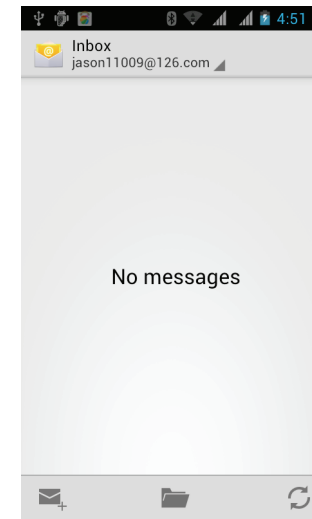

### Take pictures or video


Before using camera, remember to install memory card which will provide space to store your taken pictures.

 You can set the camera mode, press the Camera Key to take pictures. Can also switch to camera mode, video recording.

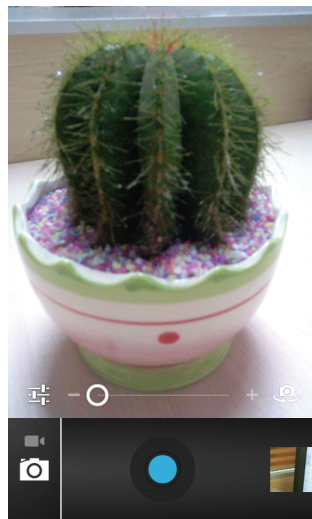

### Picture

 The procedures supports folder path based, you can toggle through double click or two fingers to zoom on a single picture and slide left or right to switch on one or the next picture, click the picture can show or hide the Menu control project.

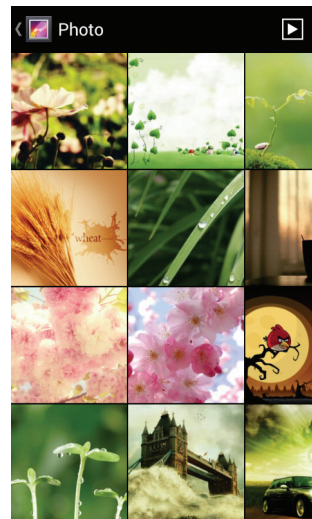


For more product information,  
Please pay attention to the people's smart phone.  
The people's smart phone at any time to improve,  
the manual with the diagram for reference only.

### Songs

 The music player supports playback of local music, support to play songs by song name, artist, album, playlist mode. In the music player, you can put the like songs set to ringtones.

In the music player, press the side Keys to adjust the playback volume.

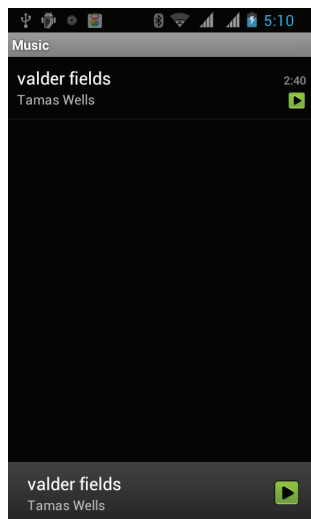

### Videos

 
You can easily use the video player to play your favorite video files.

In the application menu, you can click the video you want to play to enter into the video player. In the play, press the side Keys to adjust the video volume. The video during play, you can pause, or drag the progress bar for the video.




### Internet

The browser supports double-click or two fingers to adjust the page size. Quickly access to the frequently used Web sites through the web site navigation. Support the operation of the multi-window, you can click on the window to switch pages.

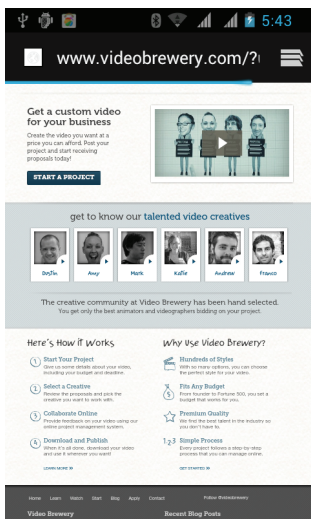


### View notice

 When you have a phone or message notification, you can slide down from the status bar to view the notification details. The status bar at the top right of the Settings button, you can quickly enter the setup functions, the corresponding operation.

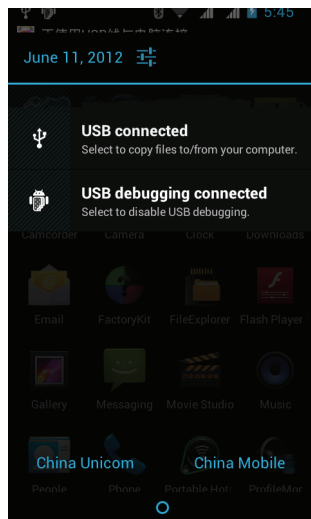


### Switch multi-tasking

 People's smart phone supports running multiple tasks at the same time and switch back and forth on the multi-tasks, you only need to press the "Menu Key" in the unlocked state, select the program you want to switch.

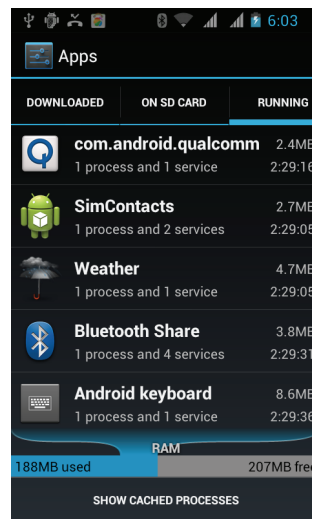


### Replacement of wallpaper

 In the main screen interface, press the "Menu Key" to open the menu. Click after the wallpaper, select the static wallpaper, dynamic wallpaper, or a gallery. Drag the wallpaper thumbnail, select your favorite pictures, click on the desktop wallpaper.

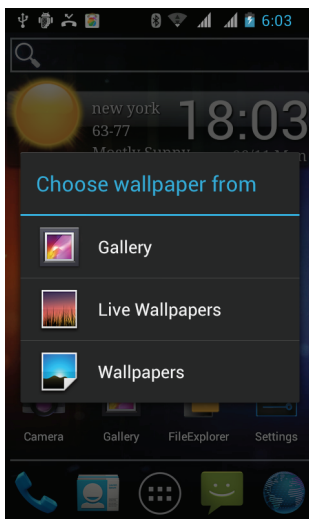


### Add Desktop Gadgets

 In the main screen interface, click the main menu to open the widget and select the widgets you want to add, save it to the main screen.

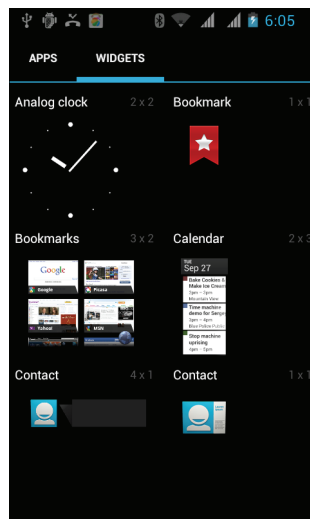


### Bluetooth connection

 In the application menu, click Settings> Wireless and networks> Bluetooth Settings. Click the Bluetooth turned on and search. The native display the Find a list of devices. Click the necessary equipment, matching or enter the device password (default password is 0000) paired with the device. The Bluetooth is turned on, the Bluetooth indicator will be displayed in the status bar.

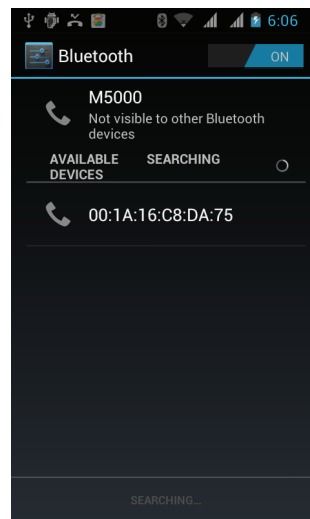

### Wi-Fi

 In the application menu, tap Settings> Wireless Network> Wi-Fi settings. Click the Wi-Fi turned on and search. If the Wi-Fi is turned on, press the Menu key to open the menu Options> Scan. The unit will list the search within the network. Click to connect to the network, click connect. If necessary, enter the wireless password and other information, click the connection. When the unit is connected to the network, the wireless indicator will be displayed in the status bar of this phone.

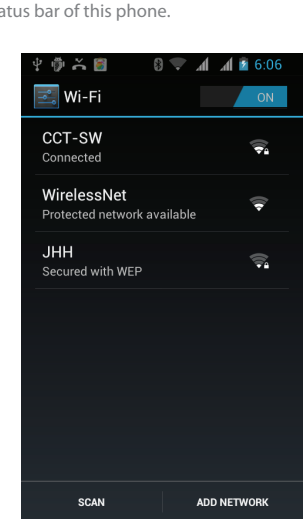


### System Tools

Document management (connected to the computer)  
Click the File Manager menu, enter the phone memory interface, you can view the inside content. Connected to the computer: using the data cable to connect the phone and computer, touch the notification bar pull down, click on the USB is connected, click to open the USB storage device and to determine, and then open the removable disk in my computer, you can copy of the music and movie files, etc. After the operation, click on the phone, turn off the USB storage device, unplug the USB cable connected to a computer.




### Traffic monitoring

 Open flow monitoring surveillance network data use after, provide beyond the maximum flow to be automatic broken network function, support setup network access permissions.

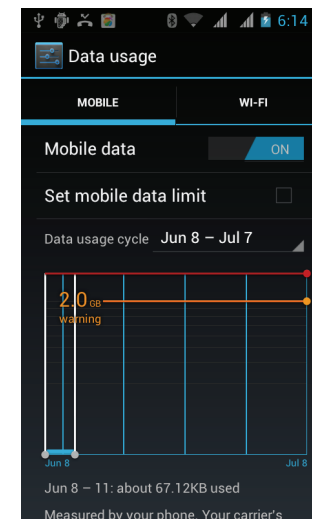

### Backup

 After the T card and the SIM card are inserted, you can back up your contacts to the T card or the SIM card, the backup can restore all the data.

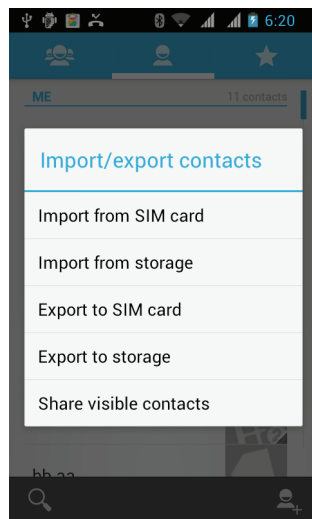

### Convenient gadget

AlarmClock Weather Recorder  
Stopwatch Calendar Calculator

