


ALL RIGHTS RESERVED

S Mobility Ltd ©2012. All rights are reserved. No part of this document can be reproduced without permission. All trademarks and brand names mentioned in this publication are property of their respective owners. While all the efforts have been made to ensure the accuracy of contents in this manual, we presume no responsibility for errors or omissions or statements of any kind, whether such errors are omissions or statements resulting from negligence, accidents, or any other cause.

We operate a policy of continuous development and reserve the right to make changes, modifications and improvements to the device, device features/specifications or any of its parts without prior notice. Your device may have preinstalled bookmarks and links for third party internet sites and may allow you to access third party sites. These are no affiliated with Spice, and Spice does not endorse or assume liability for them. If you access such sites, take precautions for security or content.

The limited warranty does not cover user manuals or any third party software, settings, content, data or links, whether included/ downloaded in the product, whether included during installment, assembly, shipping or any other time in the delivery chain or otherwise and in any way acquired by you.

To the extent permitted by applicable law(s), Spice does not warrant that any Spice software will meet your requirements, will work in combination with any hardware or software applications provided by a third party, that the operations of the software will be uninterrupted or error free or that any defects in the software are correctable or will be corrected.

 *User's Manual is provided just to guide the user about the functionality of the device. This does not seem to be any certificate of technology. Some functions may vary due to modifications and up-gradations of software or due to printing mistake.*

SAFETY PRECAUTIONS

Please read the following safety guidelines before using the device.

- Do not use the phone while you are driving.
- Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them.
- Keep your phone and its accessories away from children.
- Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. People having active medical implants should keep their cell phone at least 15 cm away from the implant.
- Permanent hearing loss may occur if you use earphones or headphones at high volume.
- Use a wireless hands-free system (headphone/ headset) with a low power Bluetooth emitter.
- Make sure the cell phone has a low SAR.
- Keep your calls short or send a text message (SMS) instead. This advice applies specially to children adolescents and pregnant women.
- Use cell phone when the signal quality is good.

Notice:

- Do not dismantle the device or accessories otherwise, manufacturer is not liable to pay for damages as the device and accessories are not covered by warranty.
- Use only original batteries and charging devices.
- Please back up your important data timely and keep them properly. The company is not liable for any failure to call or loss of data due to mis-operation, poor signal or power cut, etc.
- All the screens in this manual are for reference only, and some contents actually displayed may depend upon the presetting of the service provider or the network operator, or the SIM card. If any functions referred to in this manual are different from those of your device, please follow your device.
- Do not put use it in a place with flammable gas such as a petrol pumps. The temperature recommended for using the device is 5-35°C. Do not touch the charger, power cable or socket with wet hands. This may cause an electric shock.



If your phone or any of its accessories do not function normally, then please visit your nearest authorized service facility. The qualified personnel will assist you, and if necessary, will arrange for the service.

SAR (Specific Absorption Rate)

Your device conforms to the Indian guidelines for exposure to radio waves. The limits are given in terms of a unit referred to as the Specific Absorption Rate (SAR), which is a measure of the amount of radio frequency energy absorbed by the body when using a mobile phone. The SAR value as per the Indian guidelines standard is 1.6 Watts per kg (Watt/kg), averaged over a 6 minutes period and taken over a volume containing a mass of 1 gram of human tissue. The highest SAR value of this device when tested is (0.609 Watt/kg).

TABLE OF CONTENTS

ALL RIGHTS RESERVED.....	1
SAFETY PRECAUTIONS.....	2
TABLE OF CONTENTS.....	4
WHAT'S IN THE BOX?.....	7
1. UNDERSTANDING YOUR DEVICE.....	8
1.1 GENERAL INFO.....	8
1.2 DEVICE OVERVIEW.....	9
2. GETTING STARTED.....	10
2.1 INSTALLING CARDS & BATTERY.....	10
2.2 POWERING ON/OFF THE DEVICE.....	12
3. BASIC OPERATIONS.....	13
3.1 CALLING.....	13
3.2 MESSAGING.....	15
3.3 CONTACTS.....	18
3.4 EMAIL.....	20
3.5 BROWSER.....	21
4. HOME SCREEN.....	22
4.1 STATUS BAR.....	23
4.2 APPLICATION TAB.....	24
4.3 CUSTOMIZING SCREEN.....	25
5. MULTIMEDIA.....	27
5.1 MUSIC PLAYER.....	27
5.2 CAMERA.....	28
5.3 VIDEO PLAYER.....	29
5.4 GALLERY.....	29
5.5 FILE MANAGER.....	30
5.6 SOUND RECORDER.....	30
6. NETWORK.....	32
6.1 WI-FI.....	32
6.2 3G.....	33
6.3 BLUETOOTH.....	34

7. SETTINGS	35
7.1 SIM MANAGEMENT	35
7.2 WIRELESS & NETWORKS.....	35
7.3 AUDIO PROFILES	35
7.4 DISPLAY	35
7.5 STORAGE.....	36
7.6 BATTERY	36
7.7 APPLICATIONS	36
7.8 ACCOUNTS & SYNC.....	36
7.9 LOCATION	36
7.10 SECURITY	37
7.11 LANGUAGE AND INPUT	37
7.12 BACKUP & RESET	37
7.13 DATE AND TIME	37
7.14 SCHEDULE POWER ON/OFF	38
7.15 ACCESSIBILITY	38
7.16 ABOUT PHONE	38
8. APPLICATIONS & UTILITIES	39
8.1 CALCULATOR.....	39
8.2 CLOCK	39
8.3 M TRACKER.....	39
8.4 GMAIL	39
8.5 GOOGLE SEARCH	40
8.6 LOCAL.....	40
8.7 MAPS	40
8.8 NAVIGATION	40
8.9 TOI(TIMES OF INDIA)	41
8.10 NIMBUZZ FOR SPICE	41
8.11 RAIL YATRA.....	41
8.12 SPICE GANG.....	41
8.13 TALK	41
8.14 YOU TUBE.....	42
8.15 FACEBOOK	42
8.16 WHATSAPP DOWNLOAD	42
8.17 DOCUMENTS TO GO	42
8.18 DHINGANA	43

8.19 VAULT	43
8.20 NQ MOBILE SECURITY.....	43
8.21 PLAY STORE.....	43
8.22NEWS & WEATHER	43
9. SPECIFICATIONS.....	45
10. SUPPORT AND CONTACT	46
ENVIRONMENTAL CONCERN.....	47

WHAT'S IN THE BOX?

Your package comes with the following items. If any of these is missing, please contact your retailer

- Device
- USB Cable
- Adapter
- User's Manual
- Headset
- Battery
- Warranty Card

1. UNDERSTANDING YOUR DEVICE

1.1 GENERAL INFO

Spice Mi-500 is a multi SIM phone that encloses features, such as **Andriod version 4, Wi-Fi, 1 GHz Dual Core Processor, 5.0 MP Auto focus Camera**, etc. This phone is provided with two SIM slots for two different SIM cards. The SIM card inserted in the slot1 is called Master SIM, and the other one in the slot2 is known as Slave SIM. You can select to operate SIMs as per your personal and professional needs.



1.2 DEVICE OVERVIEW



Position of Keys

1. Earpiece	2. Touch Screen
3. Left soft Key	4. Back Key
5. Home Key	6. Earphone Jack
7. Power Key	8. USB Connector
9. Side Keys	10. Camera
11. Flash light	12. Speaker

2. GETTING STARTED

2.1 INSTALLING CARDS & BATTERY

Please switch off your device before inserting or removing the battery/SIM card or memory card.

Installing SIM Card and Battery

Your device is provided with two SIM slots for two different SIM cards. In order to install battery and SIM card in the device, please follow the steps mentioned below:

- Remove the back cover of the device.
- Hold the device with the front facing downwards; pull the battery cover.
- Insert the SIM cards in the device.
- Attach the battery.
- Push the battery cover until it clicks into place.

 


Installing Memory Card

Your device supports T-Flash card, which is a multimedia memory card used to multiply the memory of the device. The T-flash card is small and should be pulled out and installed carefully and prudently in order to avoid any kind of damage. Please follow the steps mentioned below to install the

memory card in the device:

- Switch off your device.
- Remove the battery cover.
- Slide the T-Flash card into the slot.
- Attach the battery.
- Push the battery cover until it clicks into place.



Charging the Battery

The device prompts a warning tone and message stating insufficient battery when the battery power is low.

Please follow the instructions mentioned below to charge your device:

- Plug the connector of the charger into the jack of the device.
- Plug the charger into a standard AC wall outlet.

Charging.....  Fully Charged..... 

You must fully charge the battery before using the device for the first time. It is recommended to charge the battery for three hours before using the device for the first time.

2.2 POWERING ON/OFF THE DEVICE

 
Turning On the Device

After installing the SIM cards and charging the battery, you are now ready to turn on your device.

- Long press and hold the Power Key to turn on the device.
- The first screen that appears is known as the home/idle Screen.
- Drag the lock icon sideways to unlock the screen.
- If the screen turns off, then press the Power Key to turn on the display.

Turning Off the Device

- Press and hold the Power Key for 5 seconds.
- A pop-up window appears, select Power off.
- Select OK to confirm.

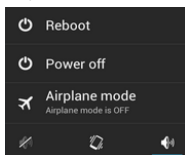

Automatic Customer Registration

After 4 hours of usage a SMS from the device will be sent automatically for the customer registration.




Standard SMS charges apply.

3. BASIC OPERATIONS



3.1 CALLING



To Make Calls

If the icon  appears on the screen, then you can make or receive calls.

To make a call, please follow the steps mentioned below:


- Enter the Main Menu, select Phone.
- Enter the phone number using the on-screen keyboard.

 Tap  to erase a wrong number. Tap and hold it to erase the entire number.

- After entering phone number, tap .
- To end the call, tap .



Answer/Reject an Incoming Call

When you receive an incoming call, a notification message appears on the screen. In order to accept the call, drag  towards right. If you wish to

reject the call, drag  towards left.

Other Options during the call

To put a call on hold

If you are having a call conversation and there is another incoming call, select hold to put the first call on hold. To unhold the call, select unhold.

To set up conference calls

- If you are already having a call conversation, select Hold to put the call on hold.
- Select Add Call to make another call. .
- After connecting to the second call, select merge calls to set up the conference call.

Manage other voice call features


During a call, please select:

 
- Mute: to mute/unmute the microphone.
- Hold: to hold the call.
- Speaker: to open loud speaker.
- Add Call: add/make another call.
- Dial pad: use the dial pad.

3.2 MESSAGING

Your device features, sending and receiving of SMS (Short Message Service) and MMS (Multimedia Message Service). Go to Main Menu and then select Messaging.

Creating a Message

- Tap Compose new message.
- In To field; enter the recipient's phone number.
- Type message in the Type to compose field.
- Tap  to Send.

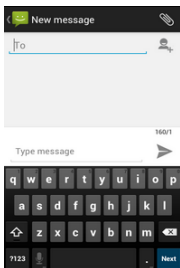

Receiving and Managing Messages


When you send and receive messages to/from a contact, these messages are grouped as a message thread. A message thread looks like an exchanged conversation.

To reply to a text message

- Enter the Main Menu, select Messaging.
- Select a message thread to open it.
- Select Type to compose to enter your message.

- Click  to Send.

To forward a text message

- Enter the Main Menu, select Messaging.
- Tap to view a message thread.
- Press and hold a message to view the message options.
- Select Forward.
- In the To field, enter the recipient's phone number.
- Click  to Send.

To delete all text messages

- Enter the Main Menu, select Messaging.
- Tap Menu > Delete all threads.
- All the messages will be deleted.

To copy message text


You can use this function to copy the text from a message to a new message you are composing.

 
- Enter the Main Menu, select Messaging.
- Select a message thread to open it.
- Press and hold the message to view the submenu options.
- Select 'Copy text'.
- Go to Compose new message.
- Press and hold Type to compose.
- Select 'Paste' to paste the copied text to your new message.

MULTIMEDIA MESSAGE

A Multimedia message or MMS can contain letters, an image, an audio or video file. To create and send a MMS, please follow the steps mentioned below:

- Enter the Main Menu, select Messaging.
- Select Compose new message.
- Select Menu > Add subject.

- In the To field, enter the recipient's phone number or email address and enter the Subject.
- To insert a picture or video file, tap  > Attach.
- To insert text, tap Type to Compose, and then enter your message.

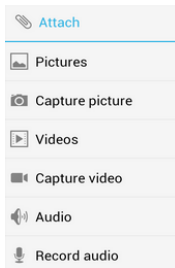


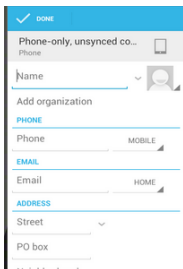 
3.3 CONTACTS

Contacts refer to the phonebook that lets you store names, phone numbers, e-mail addresses and other information. You can save information such as name, picture, phone numbers, e-mail addresses, etc for each contact listed in your Contacts menu.

To add a Contact

- Enter the Main Menu select Phone.
- Enter number > Tap Menu > Add to contact > Create New contact.
- Select the storage
- You can enter contact information such as name, phone number, email address etc, if you select storage as "Phone".
- Tap Done to save the contact.

Tip: Or enter the Main Menu and select Contacts, tap  create New contact.



To import contacts

- Enter the Main Menu select Contacts.
- Tap Menu > Import/Export.
- Select to import contacts from Phone/ Phone storage/ SIM Card/ SD Card.
- Select a particular source to import the contacts from.

- Select Next.
- Select the destination, such as Phone to copy contacts to.
- Select Next.
- Select "Select All" to import all contacts or mark the required contacts.
- Select Copy.

3.4 EMAIL

Your device allows you to compose, read and send emails.

Setting up an Email Account

- Enter the Main Menu, tap Email.
- Enter your Email address and Password.
- Tap Next. The device will automatically retrieve email settings.
- Enter Name and Account display name.
- Tap Done.

3.5 BROWSER

Browser is a tool which enables you to access the Internet.

To open a web page

- From the Main Menu, select Browser.
- Tap the address bar.
- Type the URL and select Go.
- Tap Menu to access more functions, such as bookmarks, history and other browser related settings.

To scroll the page

 
- Use finger gestures to scroll up or down.
- To scroll left or right, tap and swipe your finger towards right/left.

To set the Home page

- While viewing a web page, tap Menu > Settings > General > Set home page.
- Enter the URL of page that you want to set as home page and select Ok.





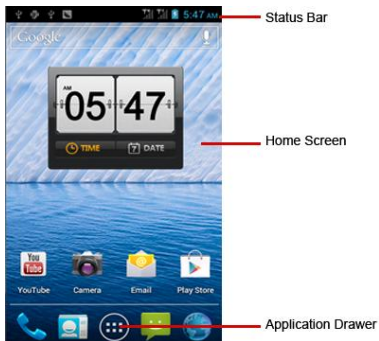



4. HOME SCREEN

From Home screen, you can quickly access common features, view notifications of missed calls, received messages and check connection status.



4.1 STATUS BAR

The Status bar icons indicate different types of information. The table below lists various icons that might appear on the status bar of the device.

	Network intensity of SIM card 1 or SIM card 2
	Battery level of the device
	New short message
	Missed call notification
	Call in progress
	USB connected
	Headset is plugged in
	Bluetooth is activated

4.2 APPLICATION TAB

 
Tap Application Drawer to access applications and settings of the device. The Application tab enables you to access the Main Menu and choose among the various utilities/ features available in the device.



Application Drawer

4.3 CUSTOMIZING SCREEN

The device features a touch screen with idle displays and access to utilities at just one-touch. So swipe right or left to navigate through various screens accessing your favorite features without entering the main menu. Each screen can be customized by adding various widgets, shortcuts and folders.

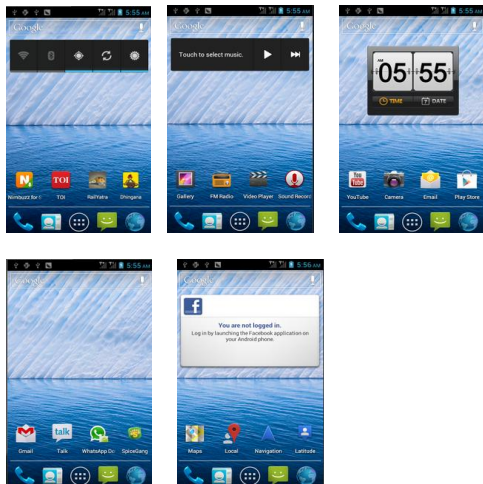

Shortcuts

In order to add a shortcut on the screen:

- Long press on the desired application to add on the screen.

Widgets


Save time with live updates right on Home screen and get all of your personalized updates at one place.

Setting the wallpaper

You can customize the wallpaper of your Home screen with default wallpaper or with pictures taken from your device.

- In the idle mode, tap Menu Key > Wallpaper.
- Select your desired wallpaper from the various options:
- Gallery
- Live Wallpapers
- Video Wallpaper
- Wallpapers

Rotating Your Mobile Phone Screen


- The orientation of most screens will change to landscape or portrait view when you rotate your phone sideways.
- On the Home screen, tap  > Settings > Display > Auto-rotate screen to disable this function.

5. MULTIMEDIA

 
Your device features various multimedia options, such as Music Player, Camera and Video Player.

5.1 MUSIC PLAYER

Use the Music player to play music files. The songs saved in your SD Card can be played using the Music Player of the device.

- Tap  select Application tab
- Select Music

The songs are categorized by Artist, Albums and Songs. You can make your favorite playlist by long pressing on a song and selecting Add to Playlist.

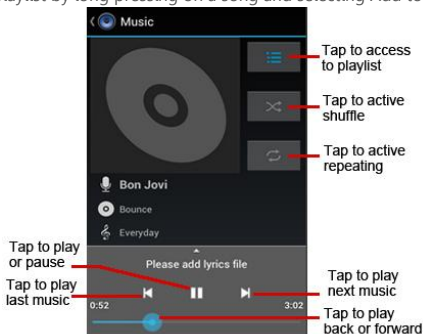


5.2 CAMERA

Your device is equipped with camera and camcorder, which enables you to capture photos and videos. The rear camera is 5.0 megapixels.



Capturing an Image

 - Select Camera. The screen will automatically switch to landscape view.

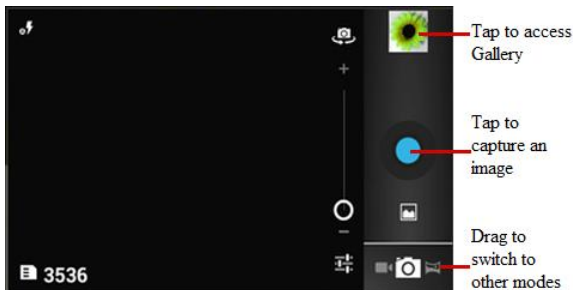
- Aim the phone at the subject, then tap  to take the shot.




Capturing a Video

- Select Camera. Switch to video mode.
- Aim the phone at the subject.
- To start recording, select .
- To stop recording, select .

Capturing Panorama

- Select Camera. Switch to Panorama mode.
- Aim the phone at the subject, then tap  to take the shot.

 
Capturing Auto scene detect

- Select Camera. Switch to Auto scene detect mode.
- Aim the phone at the subject, then tap  to take the shot.

5.3 VIDEO PLAYER

You can view/play your videos stored on your SD Card through the Video Player.

Tap  select Application tab > Videos player the videos on the memory card.

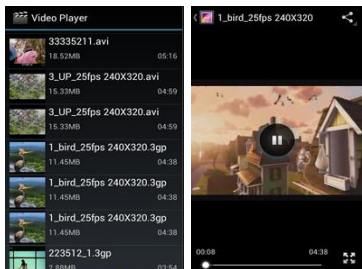


5.4 GALLERY

You can view the captured images, recorded video clips, and downloaded images in the Gallery.

The picture folder and video folder will be displayed.

 
Select to view the camera pictures or camera videos. The images or videos will be displayed in thumbnails.

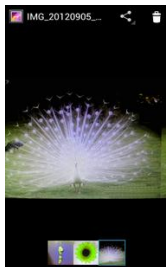


5.5 FILE MANAGER

You can browse, open and manage the data saved in the Device and Memory card by accessing the File Manager sub-menu. The device provides a certain space for users to manage files and supports the T-Flash card. You can use the file browser to conveniently manage various directories and files on the T-Flash card.

5.6 SOUND RECORDER

 You can use the sound recorder to record sounds and also select to save the recordings in your phone. Tap  select Application tab > Sound Recorder. When in the sound recorder interface, press menu key to select recording mode.

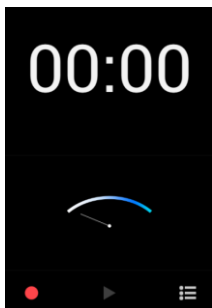


5.7 FM RADIO

You can use your phone to listen to FM radio stations once the original Headset is plugged into the connector. Please press the side key to adjust music volume. Tap the (■/▶) to play/stop the FM radio. Tap the (◀▶) to search the channels.

6. NETWORK

6.1 WI-FI

Connect to a wireless network to browse Internet.

- Enter Main Menu and tap Settings.
- Tap 'ON' to activate Wi-Fi.
- Tap  Wi-Fi > Network notification to start detecting networks. The available networks will then be listed.
- Tap Add Wi-Fi network to add a connection.

Note:

- If the device before the connection is successful, the equipment information will be saved in the pop-up window selected connection, select forget to remove device information.
- If the device does not encrypt selected connection in the pop-up window to connect.
- If the device is encrypted, the pop-up window will appear, enter the password.
- Network connection is successful; the status bar icon appears Wi-Fi connection.

6.2 3G

The device supports WCDMA protocol. Please make sure that you device is turned off, then insert or remove the SIM card.

Settings > Wireless & Networks > More > Mobile Networks > 3G Service

- Power off insert USIM or SIM card
- Power on
- Open setting, select Wireless & Networks, tap 'More'
- Select mobile network ,enter 'access point names' interface
- Select a card
- Touch menu button, select New APN;
- Set as below:
- Name: (any name like airtel);
- APN: airtelgprs.com;
- Touch menu button, select save;
- Go back to access point names interface, confirm the new APN selected.

6.3 BLUETOOTH

You can transfer data, such as music to other device using Bluetooth. Search the device and accept/transfer data. The received data is automatically stored in the directory.

- Access Settings by entering the main menu
- Check Bluetooth to turn on Bluetooth
- To make your device discoverable, select bluetooth settings and check discoverable.

7. SETTINGS

Select Settings to view and adjust the settings of your device. The Settings menu is categorized into: Wireless & networks, Audio profiles, Display, Storage, Battery, Apps, Accounts & Sync, Location services, Security, Storage, Language & input, Backup & reset and System.

7.1 SIM MANAGEMENT

Your device supports two SIM cards, which can be managed by accessing the SIM Management sub-menu. You can view/change the roaming settings of the cards using this menu.

7.2 WIRELESS & NETWORKS

Access this sub-menu to change/view the Wi-Fi, Bluetooth, Mobile Networks and VPN settings. Please refer to network section for detailed information on Wi-Fi and bluetooth.

7.3 AUDIO PROFILES

Your device provides four pre-defined user profiles that allow the operations of the device to best suit the environment you are in. The profiles are General, Silent, Meeting and Outdoor. Press the Menu Key to add reset the default profiles.

7.4 DISPLAY

With this function you can configure the display characteristics of the device including brightness, Auto-rotate screen, etc.

7.5 STORAGE

View and manage the data storage of your device:

Total Space and Available Space: Lists the amount of space on the microSD card installed in your device and the amount you have used to store photos, videos, music, and other files.

Un-mount SD Card: Un-mounts the microSD card from your device so that you can format the card or safely remove it when the device is on.

Available Space: The amount of internal phone storage used by the operating system, its components, applications (including those you downloaded), and their permanent and temporary data.

7.6 BATTERY

You can check the battery status of the device by accessing this sub-menu.

7.7 APPLICATIONS

This sub-menu enables you to manage all the installed, running and applications saved in the device memory and SD card. You can remove and manage installed applications, view and control running applications, allow installation of non Spice build in market applications.

7.8 ACCOUNTS & SYNC

Use the Accounts & Sync to add, remove, and manage your Google and other supported accounts. You also use these settings to control how and whether all applications send, receive, and sync data on their own schedules, and whether all applications can synchronize user data automatically.

7.9 LOCATION

Your device supports Global Positioning System. The settings related to the location, EPO and AGPS can be configured using this sub-menu.

7.10 SECURITY

You can protect your device from unauthorized users by setting the PIN code or entering a password.

Enable or Disable SIM card PIN

When PIN code is enabled, you are required to enter the PIN code before making a call.

- Go to Application Drawer > Settings > Security.
- On the SIM card lock tab, select Set up SIM card lock.
- Select a SIM card.
- Tap Lock SIM card to use PIN. Check to enable, uncheck to disable.
- Enter the current PIN code.
- To change the PIN code, select Change PIN.
- Enter the old PIN code.
- Enter the new PIN code and confirm.

Setup Screen Lock

You can set up a lock for your screen in form of Pattern, PIN code or password.

- Go to Settings > Security
- Set up screen lock
- Select a desired form (Slide, Face Lock, Pattern, PIN code or password)

7.11 LANGUAGE AND INPUT

Use the Language & Keyboard settings to select the language for the text on your device and for configuring the onscreen keyboard, including words that you've added to its dictionary.

7.12 BACKUP & RESET

You can use the Privacy settings to manage your personal information, such as backup of the data, automatic restore and factory data reset.

7.13 DATE AND TIME

You can select to set date, time and time zone using this sub-menu.
Use Automatic unless you need to override the network values.
Use 24-hour format: Select to set 24-hour formats on or off.
Select Date format: Select from a variety of formats.

7.14 SCHEDULE POWER ON/OFF

You can set the time for auto power on /off. Do turn the status on before using that function, and then the time.

7.15 ACCESSIBILITY

You can use the Accessibility settings to configure any accessibility plug-ins you have installed on your device.

7.16 ABOUT PHONE

You can view system information Including System updates, Status, Battery use, Legal information, Model number, Android version and so on.

8. APPLICATIONS & UTILITIES

For your entertainment purpose, your device is provided with several interesting games, applications and utilities. Please ensure that you have GPRS setting in your device to access the applications. Contact your operator for GPRS settings.

8.1 CALCULATOR

Calculator helps you perform basic arithmetic functions, such as addition, subtraction, multiplication and division.

8.2 CLOCK

The clock function gives you an access to alarm clock.

- Tap Application Tab to enter the Main Menu
- Select Clock
- Select from the various options available, select Alarm
- Tap Menu key to add alarm and change/view the Settings.

8.3 M TRACKER

Now do not panic, even if your handset is misplaced. The Mobile Tracker feature in Mi-500 allows you to keep a track of your handset if it is lost. Just activate Mobile Tracker application and assign the numbers, so that if you lose your handset, you can receive a warning SMS on those pre-defined numbers.

8.4 GMAIL

Gmail is Google's web-based email service. Google Mail is configured when you first set up your device. Depending on your synchronization settings, Google Mail on your device is automatically synchronized with your Google

Mail account on the web.

Go to Main Menu > Gmail.

Select Create or Sign in your Google account.

Follow the on screen instructions to login or create your Gmail username and password.

Once logged in, you can begin reading and sending emails from your Gmail account.

8.5 GOOGLE SEARCH

Now your device enables you to find anything anywhere with Google Search. Please ensure that you have GPRS activated on your SIM card before using this service. Just type your query in the search bar and press Go. The result page will open up.

8.6 LOCAL

Places helps you discover nearby places you'll love. Quickly search for Restaurants, Cafes, Bars and other places, while on the go. Places also makes it easy to quickly rate the places you visit. By rating places you'll get place recommendations based on the places you like and recommendations from your friends.

8.7 MAPS

Maps is Google's mapping service to search for places of interest.

8.8 NAVIGATION

Do not manipulate this application while driving. Traffic data is not real-time, and directions may be wrong, dangerous, prohibited, or involve ferries. Walking routes may be missing sidewalks or pedestrian paths.

8.9 TOI(TIMES OF INDIA)

It is a third party news service. Please ensure that you have GPRS settings in your device to open TOI. Contact your operator for GPRS settings.

8.10 NIMBUZZ FOR SPICE

Nimbuzz, another path-breaking innovation is available exclusively to the users of Spice Mobiles. Nimbuzz is a common IM platform that allows one to chat, message and send files on the move. This service is common for most of the commonly used IM portals including Skype, MSN, yahoo, ICQ, AIM, Google talk – one log-in, one contact list for all accounts.

8.11 RAIL YATRA

Rail Yatra is an application to help you track your Train PNR's, Check Seat availability, Train schedule, Train Names. It is based on the SMS 139 service of Spice.

8.12 SPICE GANG

SpiceGang has different content categories from where you can download wallpapers, play GPRS games, get sports update, connect to your friends and do much more. All services within Spice Gang are GPRS based services. Please contact your operator for GPRS settings.

8.13 TALK

Google Talk is Google's instant messaging program.

To sign in to Google Talk

Go to Main Menu > Talk.

Select Create or Sign in your Google account.

Follow the on screen instructions to login or create your Gmail username and password.

Once logged in, you can begin using Google Talk and View friend's list, Add friends to friend's list, sign out and view terms and privacy.

8.14 YOU TUBE

YouTube is an online video streaming service that allows you to view, search, and upload videos.

To start using YouTube

Tap the Application Tab to enter Main Menu > Select YouTube.

Videos are grouped into various categories. Tap a category to see the available videos for that category.

Select a video to play it.

8.15 FACEBOOK

Facebook is a very popular social networking site around the world giving people the power to share and make the world more open and connected. Millions of people use Facebook everyday to keep up with friends uploads an unlimited number of photos, share links and videos, and learn more about the people they meet. Please ensure that you have GPRS settings in your device to open Facebook. Contact your operator for GPRS settings.

8.16 WHATSAPP DOWNLOAD

Access the menu to download the WhatsApp directly. Download the application and enjoy chatting with your friends and colleagues over network. This messenger is a smartphone messenger which allows you to enjoy unlimited conversations. Download the latest version of WhatsApp by clicking the WhatsApp Downloader and chat with your friends anytime anywhere. It is a third party network based application; please contact your operator.

8.17 DOCUMENTS TO GO

This application allows you to view various files on your device. Just save your document in the memory card and view those through Documents To Go application.

8.18 DHINGANA

It is 3rd party application. Listen to unlimited songs for FREE from different languages or genres like Hindi, Oldies, Marathi, Tamil, Telugu, Malayalam, Punjabi, Bhojpuri, Bhajans, Ghazals, Pop, Remixes, Relaxation, Meditation and many more. Please ensure that you have activated GPRS/3G data pack to enjoy the service maximum.

8.19 VAULT

Now protect your device from unauthorized access by using this application. The app enables you to protect your call logs; images and other card content from unauthorized use.

8.20 NQ MOBILE SECURITY

Your device is pre-loaded with NQ Mobile Security Antivirus, which protects your device from malwares, spywares and viruses. The application blocks virus and Trojans and uninstalls malicious apps to protect your phone from hacking.

8.21 PLAY STORE

Play store allows you to find and download applications and fun games for your device.

- Go to Main Menu > Play Store and setup your Google account.
- Select Create to create a new account or Sign in to sign in your existing account.

Once you are signed in you can begin searching and downloading programs from the market. Tap Apps to view the list of applications available and tap Games to view the list of games available.

8.22 NEWS & WEATHER

Get the latest updates on weather and news around the world on your device. Please ensure that you have GPRS settings in your device to access

News and Weather. Contact your operator for GPRS settings.

9. SPECIFICATIONS

Screen (WVGA)	12.7 cm
Battery	2400 mAh
Dimensions	143 X 77.4 X 10.5 mm
Weight	205g
Band	GSM: 850/900/1800/1900 WCDMA: 2100
Standby Time	Up to 200 hours*
Maximum Talk Time	Up to 6 hours*
Power Adapter	Input: 100-240V/1A

* The standby time and maximum talk time depend upon the network signals and settings.

10. SUPPORT AND CONTACT

- You can visit www.si2imobility.com/spicemobiles for additional information, downloads and services related to your Spice handset.
- For further assistance or queries, you can call on SPICE customer care number 1800-300-77423 (toll free) or mail at customercare@smobility.in or product@smobility.in.

Note: After sales service of the device is confined to the country in which the purchasing is done.



ENVIRONMENTAL CONCERN

Help us save Our Environment...GO GREEN...!!

All our endeavors are directed towards providing environment friendly products to you. The materials used in our devices are recyclable and can be reused to make new products. We strive to make products that are safe for our consumers as well as the environment. Come join hands with us and make world a better place to live.

Preserve natural resources for future generations by recycling your phone. The phone contains some metals, when recycled properly; these can be put back into circulation, decreasing the need for new metal mining. Recycling reduces the need for raw materials, saves energy, helps mitigate Global Warming and reduces pollution, reduces waste products in landfills; therefore preserving natural resources for the future and saving the planet.

Follow some simple steps and contribute towards saving the planet.

DOs

Recycle your handset and its accessories.

To protect natural resources and to promote re-use of the material, kindly separate batteries from other type of waste.

DONTs

Do not dispose off your mobile and its battery in fire.

Do not dispose your mobile with the regular waste.

Do not over charge your handset. Remove the charger when battery is full.

Don't trash your phone, instead RECYCLE it



This logo signifies that this product and/or its constituents should not be disposed off with other household waste.

Hazards of Improper handling, accidental breakage, damage and /or improper recycling of hazardous elements

If this product is improperly handled, broken or damaged or carelessly recycled or disposed off in the fire, can result in environmental and data security concerns, including the following:

- Affect nearly every system in the human body and result in birth defects, brain, heart, liver, kidney and skeletal system damage. They will also significantly affect the nervous and reproductive systems of the human body;
- When burned, create cancer-producing dioxins which are released into the air we breathe; If thrown in landfills, may leach into groundwater affecting your local community;
- In warm climates, the oxidation of mercury in the environment can be accelerated, leading to the creation of oxidized Hg atoms that are known to be associated with ozone depletion; and Improper recycling additionally results in data security issues, as private electronic information remains on hard drive, if not properly removed before disposal.

How to Recycle

Please get your electronics products recycled only through authorized recyclers, approved by Pollution Control Board. We provide facility of recycling of our products. For details of our collection centers, please visit

our website or call our customer care. Help us to GO GREEN.

Constitution of Hazardous Elements in your Device:

Your device does not contain the following hazardous elements in a proportion higher than the limits provided hereunder: maximum concentration value of 0.1% by weight in homogenous materials for lead, mercury, hexavalent chromium, polybrominated biphenyls and polybrominated diphenyl ethers; and maximum concentration value of 0.01% by weight in homogenous materials for cadmium.