

MAXX AX8 RACE User Manual

Dear Customer,

Thank you for purchasing **MAXX AX8 Race**. Kindly read this user manual carefully to learn about key functional characteristics and operational methods of this mobile phone.

Contents

| | | |
|-----|---|----|
| I | Safety and precautions----- | 2 |
| II | Operation of menu functions----- | 4 |
| III | Quick start guide----- | 11 |
| IV | Troubleshooting----- | 13 |
| V | Specific Absorption Rate----- | 14 |
| VI | Terms & Conditions for the warranty ----- | 16 |

I. Safety and Precautions:

To use your MAXX phone safely and effectively, please read the following information before use:



Please turn off your phone when you are near a chemical plant, a gas station, an oil depot or other explosives.



To ensure safety, please use earphone during driving; Otherwise, unless emergency, make a call after parking your car by the roadside. DO NOT use the phone during driving at high speed.



Do not use your cell phone while in a plane. Please check whether Flight mode is set or not before boarding.



Do not use your cell phone in a hospital to avoid interference with the normal operation of medical equipment which may result in a medical accident. If the cell phone is used near a pacemaker, audiphones and some medical electronic equipment, you should pay special attention that the cell phone may interfere with these devices.



Auxiliaries and accessories not provided by us are excluded from the guarantee.



Do not dismantle your cell phone by yourself. In case of a failure, please contact the service station specified by us. Only qualified person may install or repair this product.



The phone should be charged in the environment which is well-ventilated, and should be kept away from inflammable substances and explosives.

To avoid demagnetization, please keep your phone away from magnetic substances, such as magnetic disk, credit card, etc.



Please be sure the phone isn't exposed to any liquid. In Case this situation occurs, please remove the battery and contact the service station specified by us.

Please use your phone in the environment which is neither too hot nor too cold, do not expose your phone in strong sunlight and in high-humidity environment.



All wireless devices may be susceptible to interference, which could affect performance.



Your cell phone has photo and record functions, please use these functions following the related laws and regulations. You may violate the laws and regulations if you take photos and record without authorization.

- Do not dispose the worn battery as common domestic rubbish. Please dispose the worn battery according to the specified instructions where the disposal of a worn battery is clearly specified.

Note: The Company will not undertake any responsibility for any consequences caused by failure to observe the above-mentioned suggestions or improper applications.

If any content described in this manual goes against that of your cell phone, it is subject to the real cell phone.

MAXX operates a policy of continuous development. MAXX reserves the right to make changes and improvements to any of the products described in this document without prior notice.

The availability of particular products may vary by region. Please check with the MAXX dealer nearest to you.

II. Operation of menu functions:

AX8 RACE is ANDROID SMART PHONE

In the standby mode, select **Menu** and the desired menu and submenu. Select **End** or **Back** to exit the current level of menu. Press the end key to return to the standby mode directly.

Dialer

- Tap the dialer icon on the homescreen
- Enter the phone number
- Press call key, to dial the number
- Press the end key to end the call

Function Menu Instruction

1. Browser

Select the browser icon to enter the Google Interface and you can search for websites

2. Calculator

The handset is provided with a calculator with basic functions. You can carry out the operation for plus, minus, multiply, and divide by pressing the screen. You can use some functions in the advanced panel.

Attention: the accuracy is limited and round-off error may occur.

3. Calendar

Enter the calendar menu and there shall appear a calendar on the screen with the current date marked out by background frame with a special color. Press the touch screen to browse date and the calendar information on the screen shall be correspondingly updated.

4. Camera

Under viewing condition, press the bottom icons to do the following operations. Press the middle icon to capture a picture or film a video, press the fourth icon to switch between camera mode and video mode. The fifth icon shows the currently captured picture or video.

5. Clock



New Alarm

Enter the clock menu and press alarm icon to add a new alarm. Scroll the scrollbar to set alarm time. Press alarm of list to edit the activation, Time, Repeat, Ringtone, Vibrate and Label, choose “done” to finish the setting. If you need to reset the settings, choose "Revert". If you want to delete the alarm, choose "Delete".

6. Contacts

Entering the Contacts, you can check all the contacts, search for contacts or add new contact. New contact means a newly added phone number that is recorded in the SIM card or the handset.

When adding a new contact, you can type in the name, phone number, other phone number, Email and so on.

You can also check call history and contact group.

7. Downloads

You can check the downloaded or being-downloaded contents

8. Email

First you need to set the Email account.

Step 1: enter email address and password.

Step 2: select account type, choose OK to connect.

9. File Manager

You can manage file , including Download, Music, and Received File. Press menu key to create a new folder or select folders to copy, move and delete.

10. FM Radio

Attention: this handset doesn't have a built-in antenna. If you want to listen to the radio, please insert the headphone first. Pressing the side key can adjust the volume.

11. Gallery

In the gallery interface, there are different folders. Select a folder and press to enter it. Press image or video to view pictures or videos.

When viewing the picture, if you press the screen or press the menu key, a menu with "share, delete, more" will pop out. Choose "share" to send the file through Nimbuzz, Messaging, Bluetooth, Twitter, WhatsApp Email or Gmail; choose "more" for further functions like Details, Set as, Crop, Print, and Rotate left or right.

If you press the capture icon at the upper right corner, you can directly get a capture or record a video.

12. Gmail

Configure your Gmail account and access emails . send receive and more.

13. Messaging

➤ Compose new message

Press edit new message to get a new text message:

Click the edit frame, type in after a virtual keyboard pops out.

Input contents into the typing frame on the touch screen. After editing, press send icon to send the text.

Press menu key to call, add subject, Attach, Delete message, Insert quick text and more operations.

➤ Message Setting

Include storage settings, SMS settings, MMS settings notice settings, service information settings and so on.

14. Music

Use the Music player to play music files. The songs saved in your SD Card can be played using the Music Player of the device. The songs are categorized by Artists, Albums and Songs. You can make your favorite playlist by long pressing on a song and selecting Add to Playlist. While listening to the music, you can choose among the various sound effects.

15. Phone

Press the keyboard, enter the phone number, and press Dial icon.

16. Play Store

Play store is dedicated to establishing the latest, fastest and most comprehensive third-party application store that makes Android system simpler. You can pick software and games to your taste from more than 10,000 applications anywhere and anytime.

17. Search

Input key words to search in the network, messages, applications, contacts, call history, music, etc

18. Settings

➤ SIM management

Dual SIM management. The contents in this menu will differ according to different network providers. For detailed information, please look at the phone.

➤ Wireless & networks

Change settings for wireless connection and network such as Airplane mode, Wi-Fi, Wi-Fi settings, Bluetooth, Bluetooth settings, Tethering & portable hotspot, VPN settings, Mobile networks and GPRS transfer prefer.

➤ Bluetooth

To activate Bluetooth, you need to select Bluetooth option.

Bluetooth settings:

Bluetooth: Activate/Inactivate Bluetooth.

Device name: check and change Device name.

Discoverable: others can find your Device if you activate this function.

Advanced settings: you can transfer files, select visit authority.

Scan for device: Scan and search Device

➤ **Data Usage**

To know the data usage by Both the SIM cards. Also will provide information about how much data usage consumption by different software's.

➤ **More**

Include Airplane Mode, VPN, Tethering and portable hotspot, Mobile Networks, GPRS transfer prefer mode. Tethering can be possible by USB, Wifi and Bluetooth. In mobile networks we can select 2G/3G network depend on operator data mode plan selection. 2G/3G Charges will be reflected as per the operator standard and plans.

➤ **Audio profiles**

Include General, Silent, Meeting and Outdoor. You can also add custom profiles.

➤ **Display**

Change settings of brightness, auto-rotate screen, animation and Screen timeout.

➤ **Storage**

Include the SD card storage, available storage, insert SD card (If a SD card has already been inserted, then this option will become "Unmount SD card "), format SD card and all available storage in the internal storage space. Device can support SD card Upto 32GB.

➤ **Battery**

The lithium ion battery attached to the mobile phone is usable once it is unpacked. Initially battery is not fully charged. Battery will reach its best performance condition after three repetitions of charging & discharging. Battery power level indication :

- Your mobile phone can display charging level of the battery.

- Under normal condition, you can see available energy of the battery from the power level icon in top right corner of the display screen.

Note: Performance of the battery is subject to various factors, including your wireless network configuration, signal strength, and temperature when the mobile phone is used, selected and used functions and settings, and Accessories of your mobile phone, voice, data and other application program modes. Pay attention to plugging direction of the charging plugs, earphone plug, USB line plug, inversely plugging will cause failure of charge or other trouble. It must be ensured.

➤ **Applications**

Include the management of applications, the condition and development of the currently used service and storage space.

➤ **Accounts & Sync**

Include general synchronisation settings and account management. The general synchronization settings include background data and automatic synchronization. You can also choose to add new account. After adding new account, you can do operations like synchronizing the calendar and contacts.

➤ **Location services**

Locate your position through tools like wireless network and GPS satellite.

➤ **Security**

Change the settings of screen unlock, SIM card lock, passwords, device administration and

Credential storage.

Screen lock settings:

Pattern: unlock the screen through designed pattern. Draw a private pattern to unlock the screen so as to avoid unauthorized use of the handset.

PIN: type in PIN numbers to unlock the screen.

password: type in code to unlock the screen.

➤ **Language & input**

Include language settings, keyboard settings, input method and so on.

➤ **Reset**

Restore original settings——in this menu, related settings will be restored to original status if you press "Factory data reset". You can also format the SD card. If you select this option, all of the data in the SD card will be erased.

➤ **Date & time**

Include automation, set date, select time zone, set time, use 24 hour format and select date format.

➤ **Schedule power on/off**

You can set the time for ON/OFF, which include setting time and repeated date.

➤ **Accessibility**

Power button: press power button to end calls.

➤ **About phone**

Include System updates, status information, battery use information, Legal information, Model number, android version, baseband version, Kernel version, Build number and Custom Build Version.

19. SIM Toolkit

The contents in this menu will differ according to different network providers. For detailed information, please look at the phone.

20. Sound Recorder

Press Recording Key to start recording. In the middle of the screen is a timer. Press Stop Key to stop recording and select "Save" in the popped out "Save/Cancel" option to save the record. You can press play key to listen to the record before selecting "Save/Cancel".

III. Quick Start Guide:

- **Featured Function**
Besides basic mobile phone functions, your handset also has various practical and fast featured functions. They are briefly introduced as follows:
 - **Contacts:** Support of quick search for qualified phone number records; the contact storage volume of SIM card/USIM card depends on the card itself; support texting through Contacts, copying a single record to SIM card/USIM card/handset and support copies among the handset, SIM card and SD card; support deleting the contact records in the SIM/USIM card and the handset.
 - **Call log:** Your handset will automatically store information related to call history for checking; support dialing all of the phone numbers listed in the call history; support storing the listed phone numbers in call history; support deleting single call record and all call records.
 - **Messaging:** Support storing the messages on the handset; support inserting text templates when editing a text; support copying phone number in the message.
 - **Music:** Support playing audio files, including mp3 formats.
 - **Recorder:** Support of call recording and non-call recording. During a call, you can select the open recorder in the option menu to record the call conveniently. You can check the generated recording file in the T card.
 - **Camera:** Support of picture-taking. You can change the camera settings to your preference.
 - **Settings:** You can change the phone settings to your preference, including SIM card management, wireless connection and network, call settings, profiles and so on. You can change the functions of each item according to your own taste, such as date & time, schedule ON/OFF and so on.
- For any support or service kindly contact your nearest authorised MAXX Service Partner. You can download the MAXX Authorised Service Center List from the below link: <http://www.maxxmobile.in/>

IV. Troubleshooting:

| Failure | Solution |
|--------------------------------|--|
| The phone fails to power on. | 1. Check that the battery is charged; 2. Check that the battery is installed correctly. |
| Insert SIM card error | 1. Check whether the SIM card is dirty. If the card is dirty, clean it; 2. Reinstall the SIM card; 3. If the SIM card is damaged, replace the SIM card. |
| Low Network | Check the signal strength indicator on the screen. 4 bars indicate a strong signal, and 2 bars or less indicate a weak signal. |
| Call registration fails | 1. You might have set the Hide Caller ID but the network operator does not support this service; 2. There may be strong signal interference; 3. You might have activated the Call Barring function; 4. You might have activated Line 2 but the network operator may not support this service. |
| Battery fails to charge | 1. The battery may have been excessively discharged. To charge the battery, it is necessary to connect it to a charger for a certain period of time; 2. The battery may have been deteriorated. |
| Cannot connect to the network | 1. Check whether the signal is too weak or wireless interference exists around; 2. Check whether the SIM card is installed correctly, poor connection exists, or the SIM card is damaged. If the SIM card is damaged, please contact the network operator. |
| Photos shot are too dark | 1. The brightness is set too low; 2. The ambient light is too dark. |
| Photos shot are too blurred | 1. The object shot is moving; 2. Your hand shakes when the shutter is pressed. |
| Photos shot are distorted | The object shot is too close to the lens. |
| Cannot access the service menu | The SIM card may not support the service. |

V. Specific Absorption Rate:

Mobile device is a radio transmitter and receiver. It is designed to not exceed the limits for exposure to radio waves Recommended by various governments. In India, these guidelines were developed by the Government of India, Department of Telecommunications, Ministry of Communications and IT and include safety margins design to assure the Protection of all persons, regardless of age and health, and to account for any variations in measurements.

The guidelines use a unit of measurement known as the Specific Absorption Rate (SAR). SAR level for mobile handsets Shall be limited to 1.6 Watt/kg, averaged over a 6 minutes period and taken over a volume containing a mass of 1 gram of Human tissue.

Highest SAR Value for **MAXX AX8 RACE** as below-

For GSM 900MHz – When tested on head – **0.543 Watt/Kg**
When tested on body – **0.829 Watt/Kg**

For GSM 1800MHz – When tested on head - **0.497 Watt/Kg**
When tested on body- **0.973 Watt/Kg**

For WCDMA – When tested on head - **0.541 Watt/Kg**
When tested on body- **0.731 Watt/Kg**

As SAR is measured utilizing the mobile device's highest transmitting power, the actual SAR of this mobile device while Operating is typically below that indicated above. This is due to automatic changes to the power level of the mobile device To ensure that it only uses the minimum level required to each the network. While there may be differences between the SAR levels of various mobile devices and at various positions, they meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, Products are designed to be within the guidelines. The World Health Organization has started that present scientific Information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want

To reduce your exposure, then you can do by limiting the length of calls or using a hands-free device to keep the mobile Device away from the head and body.

Specific Absorption rate (Safety Precautions) :-

- a) Use A wireless hands-free system (headphone, headset) with a low power Bluetooth emitter.
- b) Make Sure the cell phone has a low SAR.
- c) Keep your calls short or send a text message(SMS) instead. This advice applies especially to children ,adolescents and pregnant women.
- d) Use cell phone when the signal quality is good.
- e) People having active medical implants should preferably keep the cell phone at least 15cm away from the implant.

VI. Terms & Conditions for Warranty

MAXX MOBLINK offer 18 months limited warranty for the transceiver set from date of import or 12 months Limited Warranty for the transceiver set from date of purchase or whichever is earlier.

Warranty for the accessories -Battery, Travel Charger, Data Cable & Earphone will be 6 months from date of purchase which is provided along with phone package and should be within 18 months warranty period from date of import .

MAXX is not responsible for damage arising from failure to follow instructions relating to the product's use, also the warranty does not apply in below cases:

- a) To damage caused by use with non-MAXX certified products
- b) To damage caused by accident, abuse, misuse, flood, fire, earthquake or other external causes
- c) To damage caused by operating the product outside the permitted or intended uses described by MAXX

MAXX warranty obligations for this hardware product are limited to the terms set, for more details of terms & conditions, please refer the website www.maxxmobile.in

WARRANTY CARD Details to be fill up to claim warranty of this phone.

Name of Customer :_____

Model No:_____

IMEI No (SIM1):_____ **IMEI No (SIM2):**_____

Date of Purchase:_____

Maxx Moblink Private Ltd.

(100% subsidiary of Maxx Mobile Communication Ltd.)

Registered Office address :

16th Floor, DLH Corporate Park, Opp. Goregaon MTNL,

S.V. Road, Goregaon (W), Mumbai 400 062.

Tel:1860 233 4444

Email - customercare@maxxmobile.in | www.maxxmobile.in

Name of Dealer:

Dealer Stamp