

## WELCOME

Your A76 handset offers you the following state of the art features and much more:

- **Android Jelly Bean 4.2.2 Platform:** Feel the versatility of Android Operating System with its flexible features.
- **5 MP Camera:** The 5 Megapixel camera along with its versatile shot modes, 4 X zoom and flash allows you to take crisp and sharp high quality pictures and videos any time. Your handset also has a 0.3 MP front camera.
- **1.2 GHz Processor:** Gives you robust multi-processing capability for handling multiple applications.
- **5 Inch screen:** Gives you an intuitive and friendly Interface allowing you to operate your phone with finesse.
- **Video Calling:** Connect with your friends and family face to face in real time via video calls.
- **Sensors:** The Gravity sensor and proximity sensor of your phone ensure that your phone responds automatically to various orientations and conditions.
- **Dual SIM:** Your handset supports dual SIM.
- **Wi-Fi:** The Wi-Fi features lets you connect wirelessly and seamlessly with your Wi-Fi network for Internet.
- **Bluetooth:** Lets you exchange files and information with Bluetooth enabled devices.
- **External memory support:** Your handset supports external memory card expandable up to 32 GB for your myriad needs.

## CONTENTS

<b>THE ANDROID ADVANTAGE</b>	<b>5</b>
<b>READ ME FIRST</b>	<b>5</b>
DISCLAIMERS:.....	5
INSTRUCTIONAL ICONS .....	6
PHONE LAYOUT.....	8
INSERT SIM CARD.....	9
INSERT MEMORY CARD .....	10
TURNING YOUR PHONE ON/ OFF .....	11
CHARGING THE BATTERY.....	11
LOCKING/UNLOCKING THE PHONE.....	12
MAKE A CALL .....	15
IN CALL OPTIONS.....	15
CONFERENCE CALL .....	16
MAKE A VIDEO CALL.....	17
MAKE AN INTERNATIONAL CALL .....	17
END A CALL .....	18
DISABLE PHONE CALLS.....	18
CHANGING THE PHONE'S VOLUME .....	18
SENSORS.....	19
TAP AND HOLD .....	21
DRAG AN ITEM.....	21
SCROLL .....	22
SWIPE.....	22
USING THE PINCH ZOOM .....	23
DOUBLE-TAP .....	23
CHANGE THE ORIENTATION .....	24
USING THE HANDSET'S KEYS .....	24
OPEN AND CLOSE THE LAUNCHER.....	25
<b>THE HOME SCREEN</b>	<b>25</b>
SWITCH BETWEEN HOME SCREENS .....	25
REARRANGE ITEMS ON THE HOME SCREEN.....	26
CUSTOMIZE HOME SCREEN .....	26
MENU ICONS.....	30

CONTEXT MENU.....	30
OPTIONS MENUS .....	32
OPEN THE NOTIFICATIONS PANEL.....	34
TOOLKITS.....	35
CREATE AND SEND MULTIMEDIA MESSAGE.....	39
FORWARD A MESSAGE .....	39
LOCK A MESSAGE .....	40
USING THE ONSCREEN KEYBOARD.....	41
USE VOICE SEARCH.....	41
CAMERA .....	44
GALLERY .....	45
MUSIC .....	45
FM RADIO .....	46
RECORD SOUND .....	46
CONNECT TO THE INTERNET .....	48
BLUETOOTH TETHERING.....	49
PAIR WITH BLUETOOTH DEVICES .....	50
<b>MANAGE ACCOUNTS</b>	<b>50</b>
WHY USE A GOOGLE ACCOUNT.....	50
START GMAIL .....	50
CONFIGURING E-MAIL.....	51
USING EMAIL .....	51
GOOGLE SEARCH .....	52
SYNCHRONIZE CONTACT LIST .....	52
<b>APPLICATIONS</b>	<b>53</b>
MAPS.....	53
GPS (GLOBAL POSITIONING SYSTEM) .....	54
<b>WIDGETS</b>	<b>55</b>
DOWNLOAD APPLICATIONS FROM ANDROID MARKET .....	55
TASKBAR.....	55
<b>SAFETY PRECAUTIONS</b>	<b>58</b>
<b>TAKING CARE OF YOUR DEVICE</b>	<b>60</b>
COPYRIGHT .....	61
<b>INDEX</b>	<b>63</b>



# THE ANDROID ADVANTAGE

Micromax A76 comes with Jelly Bean 4.2.2 that is capable of performing various functions that a computer can perform and can be customized according to your own needs. For example, you can add and remove applications or upgrade existing applications to improve the functions. At the Android market, a range of applications and games can be downloaded from an ever growing collection. You can also integrate applications on your android phone with other applications online.

## READ ME FIRST

- Please read all safety precautions and this manual carefully before using your device to ensure safe and proper use.
- The descriptions in this manual are based on the default settings of your device.
- Available features and additional services may vary by device, software, or service provider.
- Applications and their functions may vary by country, region, software or hardware specifications. Micromax is not liable for performance issues caused by third-party applications.

### DISCLAIMERS:

- Talk and Standby time are affected by Network preferences, type of SIM card, and individual usage patterns.
- Specifications are subject to change without prior notice. Services and some features may be dependent on the network, or service content provider.
- Images shown in this User Guide are for representation only. Other product logos and company names mentioned/used herein may be

trademarks or trade names of their respective owners.

- The functions explained or listed in this manual may differ from the actual functions appearing in the device. In such a case, the latter shall govern.
- Content in this user manual may differ based on software provided by service providers or carriers, and is subject to change without prior notice.
- Micromax reserves the right to make modifications to the content in this user guide without any prior notice.

## INSTRUCTIONAL ICONS

Before you start, please familiarize yourself with the icons you will see in this manual:



*Information: Provides useful information*



*Warning: Situations that could cause injury to yourself or others*



 
*Caution: Situations that could cause damage to your device or other equipment*



*Tips to help you with the features.*

# GETTING STARTED

PHONE LAYOUT

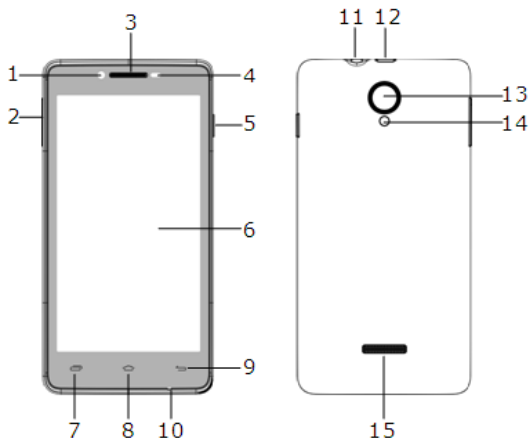


1	Front camera lens	9	Back key
2	Volume keys	10	Microphone
3	Ear speaker	11	Connector for charger/USB cable
4	Proximity sensor	12	Headset connector
5	Power key	13	Camera lens
6	Touch screen	14	Flashlight
7	Menu key	15	Speaker
8	Home key		




## INSERT SIM CARD

 1. Switch off your phone and remove the rear cover as shown below.

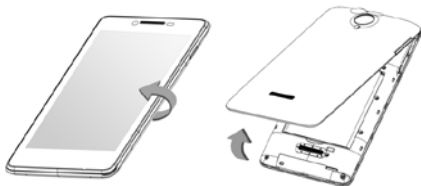

 2. Remove the battery and insert the SIM card correctly in the card slot(s) (See figure below).

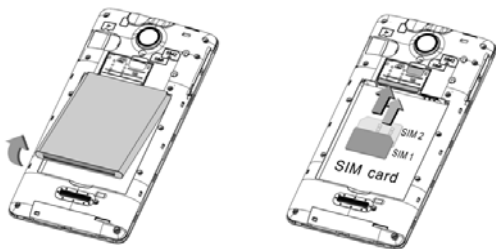

3. Insert the battery and place back the rear cover.



*Please keep the SIM Card out of the reach of children.*




*The card and the contacts are vulnerable to damage due to scratching or bending. Therefore, be careful when using, inserting or removing the cards*


## INSERT MEMORY CARD

 To store additional multimedia files, you must insert a memory card.

1. Power off the mobile phone, and then remove the rear cover.

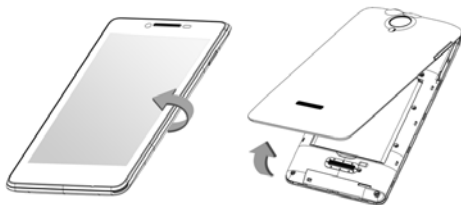

 2. Insert the memory card into the slot as shown below.

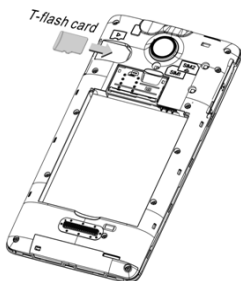

3. Finally place back the rear cover of the mobile phone.




*Use only compatible memory cards approved by Micromax with this device. Incompatible memory cards may damage the card or the device and corrupt the data stored in the card.*

## TURNING YOUR PHONE ON/ OFF

 
**Switch On:** Press and hold the Power key for a few seconds.

**Switch Off:** Press and hold the power key and select switch off.

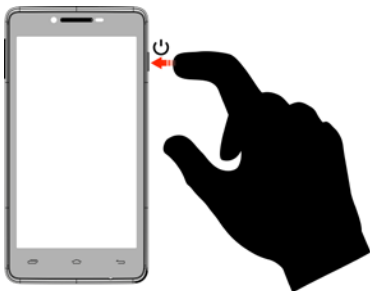

## CHARGING THE BATTERY

 Before using the device for the first time, you must charge the battery. You can charge the device with a travel adapter or connecting the device to a PC with a USB cable.

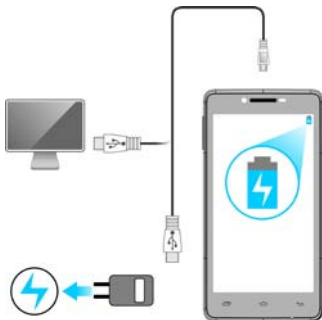

*Tip: You can also use a compatible USB charger to charge your battery.*



*Use only Micromax approved chargers and cables. Unapproved chargers or cables can cause batteries to explode or damage your device.*



*We suggest you charge the battery for 4 hours continuously for the first time.*

## **LOCKING/UNLOCKING THE PHONE**

You may need to provide PIN, Password, or draw a pattern to unlock your phone. To unlock the screen:

1. Press the power key to wake up the phone.
2. Hold and drag the lock icon towards the unlock icon.

You may be required to unlock your phone based on the unlock method in settings.

To set the unlock method:


1. On the main menu, Tap Settings > Security > Screen lock.
2. Choose the type of locking as desired. You can set your screen lock on the basis of pattern, PIN, Password or none.

## Using the Pattern Lock

Pattern Lock is a security feature you can enable on your phone to prevent it from unauthorized access. You can draw a pattern by connecting the dots (as shown below).



To set the unlock method:


1. On the Home screen, tap  then **Settings > Security**.
2. Tap **Screen lock**.
3. Choose **Pattern** and then follow the guided instructions to set the pattern lock.

Note: You can also set other locking methods as desired from **Screen lock**.






## **PLACING AND RECEIVING CALLS**

## MAKE A CALL

To make a call:

1. Tap the  icon on the main menu or the home screen to dial the desired number.
  2. Tap on any of the Phone, Call Log or Contacts tab to make a call.
  3. Tap on the contact to dial the number.
  4. Press the **Volume Up/ down** keys on the left side to adjust the call volume.
- ▶ You can dial a phone number or tap a number in your contacts.
  - ▶ You can also place a call from the Call log or messages.

 
## IN CALL OPTIONS

- ▶ Tap the  icon to add another person to the call.
- ▶ Tap the  icon to mute your voice so that the phone's MIC will not transmit voice to the other end. You can resume transmitting your voice by pressing the  icon again.
- ▶ Tap the  icon to hold the call. Tap the icon again to resume the call.
- ▶ Tap the  icon to listen via the speaker.




- ▶ Tap the  icon for DTMF inputs.
- ▶ End the call by pressing the  icon.

## CONFERENCE CALL

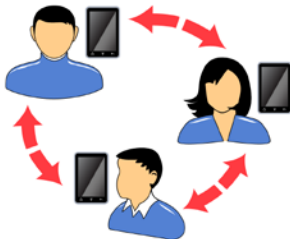Your device supports conference calls (network service) between more than two people.



If you dial or accept a new call when you are already on a call, you can merge the calls into a conference call.

1. Place a call to the first participant.
2. When you are connected, Tap the  icon and dial the number. The first participant is put on hold. You can also place the next call, using the phone tab, the Call log, or your contacts.
3. When you are connected, Tap  icon. The participants are added to the conference call.
4. You can also swap calls by tapping on  icon.

Your device supports conference calls (network service) between a select





numbers of participants.

## MAKE A VIDEO CALL



Your Handset supports video calling using which you can talk face to face with your friends via real time video streaming. You need to fulfill the following conditions for video calling:

- ▶ You need to enable 3G on your SIM card. Please contact your service provider to enable 3G on your SIM card.
- ▶ The video call recipient also needs to have a 3G enabled SIM card.
- ▶ You need to select the 3G enabled SIM from **Settings> More> Mobile Networks>3G service**.

To make a video call:

- ▶ Tap the  icon in the home screen and then tap the  icon to make the video call.


OR

- ▶ Tap the  icon in the home screen, highlight a contact and then tap the  icon to make the video call.

## MAKE AN INTERNATIONAL CALL

To dial an international number, tap and hold the '0' key from the dial pad

to enter the Plus (+) symbol, and then enter the international country prefix, followed by the phone number.

1. Tap the  icon to dial the number.
2. Press the **Volume Up/ down** keys on the left side to adjust the call volume.

## END A CALL

While during a call, tap the  icon.

 
## DISABLE PHONE CALLS

Some locations may require you to turn off your mobile, Wi-Fi, and Bluetooth wireless connections.

- ▶ Press and hold the **Power** button and then choose **Airplane Mode**.
- ▶ Drag notification panel down then tap the **Airplane mode**.

## CHANGING THE PHONE'S VOLUME

You can change the volume of your handset by using the volume keys on the left of the handset as shown:

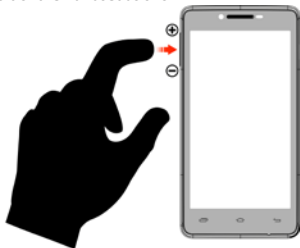

## SENSORS

Your phone has sensors that detect gravity and proximity. The proximity sensor turns the screen off when your face taps the screen and prevents you from activating phone functions when you are engaged in a call.

## USING THE TOUCH SCREEN

 
## **TAP AND HOLD**

Tap and hold an item. An action occurs depending on the situation.



## **DRAG AN ITEM**

Tap and hold an item and move your finger on the screen until you reach the target position.

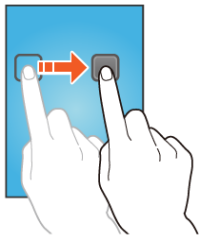


Tap and hold the item, and slide your finger across the screen. The item follows your finger.

You can generally drag items on the home.

## SCROLL

 Quickly slide your finger across the surface of the screen, (without dragging an item). For example, slide the screen up or down to scroll a list.

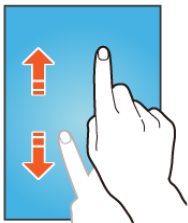

## SWIPE

Place a finger on the screen, and steadily slide your finger in the desired direction.

 


For example, when you are viewing a picture, to view the next picture,

swipe left.

### USING THE PINCH ZOOM

You can open any image or web page and then use your thumb and index finger to zoom the display through the pinch gesture as illustrated below.

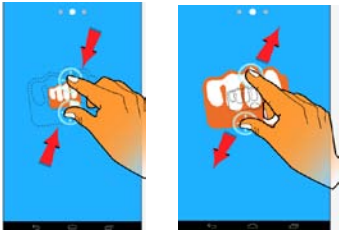

### DOUBLE-TAP

Tap quickly twice on a webpage, map, or other screen to zoom. For example, double-tap a section of a webpage in the browser to zoom that section. You can also double-tap to control the Camera zoom, in Maps, and in other applications.



### CHANGE THE ORIENTATION




On most screens, the orientation of the screen changes as you rotate it. You can turn this feature on and off.

You can change the screen orientation by rotating the handset.



### USING THE HANDSET'S KEYS

The phone's buttons offer a lot of functions and shortcuts.

Button	Press	Press and hold
	<b>Back:</b> Opens the previous screen you were working on. If the onscreen keyboard is open, closes the keyboard.	
	<b>Menu:</b> Opens a menu with items that affect the current screen or application.	
	<b>Home:</b> Open the Home screen. If you are viewing the left or right extended Home screen, opens the central Home screen.	Opens the most recently used applications.




## OPEN AND CLOSE THE LAUNCHER

You can open the launcher by tapping on the icon as depicted below.



## THE HOME SCREEN

When you start up, the home screen opens. The home screen is the gateway of most of the applications and functions on your phone. You can customize your home screen with shortcuts, widgets, themes, wallpapers and other items.

- ▶ Swipe left or right on the home screen to display the next home screen.
- ▶ Tap the launcher icon  at the bottom of the screen to view all installed applications.

 
## SWITCH BETWEEN HOME SCREENS

You can shift between the home screens as shown below.



## REARRANGE ITEMS ON THE HOME SCREEN

You can rearrange items on the home screen as shown below:

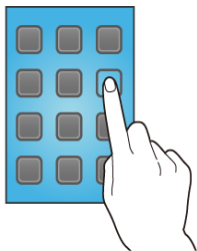


## CUSTOMIZE HOME SCREEN

When the device is in idle mode, you will see the idle screen. From the idle screen, you can view indicator icons, widgets, shortcuts to applications, and other items.

## Add Widgets and icons to home screen

You can customize the idle screen by adding shortcuts to applications or items in applications, widgets, or folders. To add items to the idle screen,



 
tap  icon to enter Apps screen. Long press and hold an application and then release your finger hold.

## Rearrange or Remove Widgets and Icons on your Home Screen

- ▶ Long press and hold the widget or icon you want to move. Drag the widget or icon to a new location on the screen.
- ▶ Press and hold on an icon in the home screen and then drag the widgets or icon to remove icon.

# Changing the Wallpaper

You can customize how your wallpaper looks by long press of the home screen. A list of choices will pop up using which you can choose your desired wallpaper.

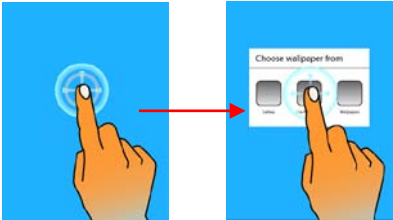

## WORKING WITH MENUS

The phone provides you with various menus for accessing the features in an intuitive way.

### MENU ICONS

You have the following menu icons to easily let you access its important features:



Opens the dialer



Opens messaging



Opens the Apps screen



Opens the phonebook

 



Opens the browser

The phone also provides you with **Context** menus and **Options** menus for accessing the features in an intuitive way.

### CONTEXT MENU


► You can open context menu by Taping  button on any screen.

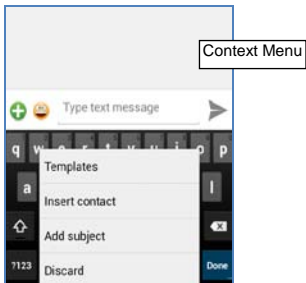

- Not all screens have context menus. If you tap  on a screen that has no context menu, nothing happens.

## OPTIONS MENUS

 - ▶ Options menus contain tools that apply to specific items on the screen. You can open an option by Taping and holding an item on the screen. Not all items have options menus.
- ▶ When you Tap and hold some items on a screen, an Options menu opens.

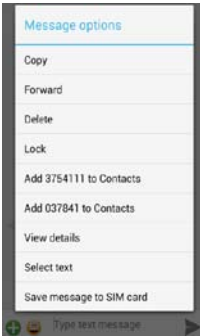



## MANAGING NOTIFICATIONS

The phone provides you with various notifications to alert you of various events.

- ▶ Notification icons inform you of new messages and events.
- ▶ When you receive a notification, its icon appears in the status bar, along with a summary that appears only briefly.

## OPEN THE NOTIFICATIONS PANEL

Drag the status bar down from the top of the screen as shown below.




The Notifications panel displays your network provider's name and a list of your current notifications.

## Respond to Notifications


1. Open the notification panel and tap a notification to respond to it.
2. What happens next depends on the notification.

 
## Close Notifications Panel

Drag the tab at the bottom of the Notifications panel to the top of the screen. Or just press the back button. The panel also closes when you tap a notification to respond to it. You can also delete all the notifications by tapping on  icon.



## TOOLKITS

Open the Notifications panel and then tap on  icon to access and choose various tools and settings available on your handset.

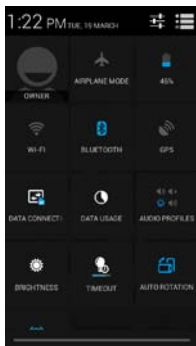

- ▶ **Airplane Mode:** Switch On/Off Airplane mode.
- ▶ **Battery Status:** Check battery status.
- ▶ **Wi-Fi:** Activate or deactivate the WLAN connection feature.
- ▶ **Bluetooth:** Activate or deactivate the Bluetooth wireless connection feature.
- ▶ **GPS:** Activate or deactivate the GPS feature.
- ▶ **Data Connection:** Activate or deactivate data connection.
- ▶ **Data Usage:** Find out the data usage of your network
- ▶ **Audio Profiles:** Choose between various audio profiles.
- ▶ **Brightness:** Adjust the brightness of your handset.
- ▶ **Timeout:** Set the Timeout period of your phone






- ▶ **Auto Rotation:** Activate/deactivate auto rotation of your handset screen.

# MESSAGING

You can use Messaging to exchange text messages and multimedia messages.

 
A Message becomes an MMS if you send it to an email address, or add multimedia media file(s).

## CREATE AND SEND MULTIMEDIA MESSAGE

1. Tap the  icon to go to messaging and then tap  icon to compose a message.
2. Tap  icon to attach a multimedia file to the message.
3. Tap the composition text box and enter your message body.
4. Enter or select a mobile phone number.
5. You can also tap  icon to add a contact from the contact list.
6. Tap  to send the multimedia message.

## FORWARD A MESSAGE

1. Open a message and then tap that message in a message conversation window.

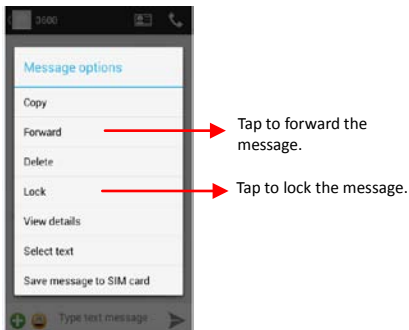

2. Tap **Forward** in the menu that opens.
3. Add a contact.
4. Tap ➤ to send the message.

You can also copy message text, save message to SIM card, view message details and delete message.

## LOCK A MESSAGE

 
You can lock a message so it won't be deleted if you reach your storage limits.

1. Tap and hold message in a message window.
2. Tap **Lock** in the menu that opens. Unlock a message by tapping and holding it and then tap **Unlock**.




## USING THE ONSCREEN KEYBOARD

Some applications display the keyboard by default. In others, you tap a text field where you want to enter text, to open the keyboard.

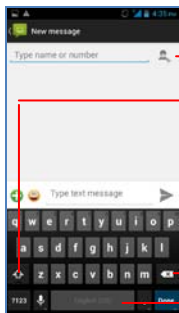


Tap this icon to select desired contact from phonebook

Tap once to capitalize the next letter you type. Tap and hold for caps.

Use the  icon to erase characters


Press space or a punctuation mark to enter the highlighted suggestion.

- ▶ After typing, press  icon to close the keyboard.
- ▶ Press the symbols key to switch to the numbers and symbols keyboard.
- ▶ Tap and hold the text field to open a menu and to copy/cut texts.

## USE VOICE SEARCH

### Menu > Voice Search

 
Use voice commands to access various useful features on your handset.

1. Tap on  icon on the main menu.
2. Issue your desired voice command to the phone.




3. The phone will return the Google search result based on your search.


# MULTIMEDIA
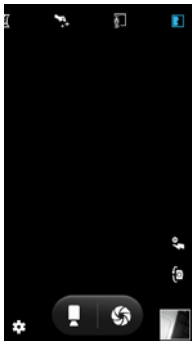
## CAMERA





### Take a Picture or video

- ▶ Tap the  Camera icon in the main menu.
- ▶ Adjust the exposure and other settings as you wish.
- ▶ Point the lens on the subject you want to click a photograph of.
- ▶ Tap the  icon on the screen to capture photos.
- ▶ Tap the  icon to bring up the camera settings.

- ▶ Tap on the  icon at the lower right side of the camera User interface to switch between the Front and Back camera.

## Shoot Videos

- ▶ Adjust the quality, effect, and other settings if you wish.
- ▶ Point the lens to the scene you want to capture.
- ▶ Tap the  icon.
- ▶ Tap the  icon again to stop recording.

## GALLERY

You can use the Gallery to view pictures and play videos and share files.

Tap the Gallery icon in the main menu or in camera mode (refer figure).


Tap an album to open and view its contents.

Tap and hold a picture or a video that you want to share. You can select more than one file at a time.

Tap the  icon and share via Bluetooth, messaging, e-mail etc.

## Music

You can easily transfer your favorite music from your PC to the phone and experience a world of interesting and melodious music.

- ▶ Tap the Music icon  from the Main menu. Use the intuitive buttons and icons on the phone in music interface to enjoy the features of your music player.
- ▶ Press the phone's volume up/down keys on the left side of the mobile phone to adjust the volume.

	<i>You can use an SD card to enhance the storage capacity for your various multimedia files such as music, photos emails and so on.</i>
--	---

## FM RADIO



You can listen to your favorite FM channels using the inbuilt FM receiver of your phone. You can listen to FM radio stations using your device - just plug in a headset, and select a station.

- ▶ Use the intuitive buttons and icons on the phone in Radio interface to enjoy the features of your inbuilt FM radio.
- ▶ Press the phone's volume up/down keys on the left side of the mobile phone to adjust the volume.

## RECORD SOUND

Menu > Sound recorder



Tap the  icon to start recording. Tap the  icon to stop the recording.



# CONNECT TO NETWORKS AND DEVICES

Your phone can connect to a variety of networks and devices, including Internet, Wi-Fi, GPRS, Bluetooth, devices, such as headsets. You can also transfer files to/from your PC through the data cable.

## CONNECT TO THE INTERNET

To configure Internet:

1. Go to Settings> More > Mobile Networks> Access point names.
2. Select the access point name or change the access point name for your Internet connectivity as provided by the service provider of your SIM card.

By default, your network provider sends the access point name settings via SMS, or it comes with your SIM card. You may need to install these settings. After this, you can choose from the listed access point names. If the access point names are not listed by default, please contact your network provider for the same.

3. After you have selected or configured the access point name, go to **Settings> SIM Management** and enable **Data Connection** to enable Internet connection.

## Connect to Internet via your Phone

You can use your A76 as a modem and connect your PC or laptop to the Internet when required. You can do this via:

- ▶ USB Tethering
- ▶ Wi-Fi Hotspot

### Connectivity via USB Tethering

You need to insert a data service enabled SIM card in your phone.



1. Connect your A76 to your computer through the USB cable.
2. Go to **Settings>More>Tethering & portable hotspot > USB Tethering**.
3. The driver installation window will pop up on your PC or laptop.
4. Install the driver as suggested.
5. You can now start using the Internet service via your A76.

**Note:** Your mobile operator will charge you based on your GPRS data usage.

### **Connectivity via Wi-Fi Hotspot**

You need to insert a data service enabled SIM card on your phone to use your A76 as a router.

1. Go to **Settings> More>Tethering & Portable hotspot> Wi-Fi Hotspot**.
2. Configure your Wi-Fi hotspot as suggested.
3. Make sure your computer has Wi-Fi. After connecting to the Wireless network, you can use the GPRS service from your A76.

- ▶ In case of Linux, Windows 7 and Vista OS, the drivers get automatically installed.
- ▶ However, in case of Windows XP, you need to manually install the drivers. If you do not have the driver, you can download it from [www.micromaxinfo.com](http://www.micromaxinfo.com).

**Note:** Your mobile operator will charge you based on your GPRS data usage.

### **BLUETOOTH TETHERING**

You can share your phone's Internet connection with another Bluetooth enabled handset via Bluetooth tethering.

Go to **Settings>More> Tethering & Portable hotspot> Bluetooth tethering**. Select the Bluetooth Tethering box to share your phone's Internet

connection.

## PAIR WITH BLUETOOTH DEVICES

Go to Settings > Bluetooth.

If Bluetooth is off, tap on **Bluetooth** to turn it on. Your phone scans and displays the Bluetooth devices in range.

If the device you want to pair with is not in the list, make it discoverable.

If your phone stops scanning before you make the other device discoverable, Tap **Search for devices**.

Tap the ID of the other device in the list to pair with them. If you are prompted to for a passkey, enter any passkey on one device and enter the same passkey you entered in the other device to be paired, If the pairing is successful, your phone connects to the device.

## MANAGE ACCOUNTS

You can set up a corporate, Google account etc on your device. You can do this by going to **Settings > Accounts > Add Account**:

You may also add other kinds of accounts, depending on your application.

## WHY USE A GOOGLE ACCOUNT

Your Google Account lets you take full advantage of Google applications and services that you may want to use, such as Gmail, Maps, Navigation, and various applications.

## START GMAIL

You can use Gmail to read and write email from any mobile device or browser. All your email is always up to date and available no matter where you check it from.

As Gmail is not only limited to mailing. Your Gmail name and password signs you into to many Google applications and services,

## CONFIGURING E-MAIL

### To set up Email:

1. Go to the **Settings** tab and scroll down to the Account section.
2. Tap **+Add account** and select **Email** from the displayed list.
3. Type the email address and password in the required fields and click **Next**.
4. Next, select the type of account you want to set up.
5. Provide the details needed for the set up and click **Next**.
  - ▶ The server will check for online settings automatically and your account will be set up. If not please check your Internet settings before proceeding.
  - ▶ If the settings are not downloaded automatically, please opt for the Manual Set up. If necessary, Please contact your service provider for detailed description.

## USING EMAIL

### To compose an Email:

1. Tap Menu from the Home screen and then Email/Gmail from the Items displayed.
2. If you are using several email accounts then select the account you want to send the mail from.
3. Tap the icon from the list displayed in the bottom of the screen.
4. Enter the recipient's name, a list of matching names are displayed. Select the matching name. For multiple recipients separate the names by a

comma (,) or a semi-colon (;). To delete a recipient, tap the delete icon. Tap Done when you are finished.

5. Now, add the subject of the mail in the Subject section and type the message you want to send in the Compose mail section.
6. To add an attachment, cc/bcc tap the menu icon on the phone and select the appropriate thing to be added.
7. To send the email, tap the send icon.

## To Receive Emails:

- ▶ Follow the first three steps listed above and tap the refresh icon on the bottom of the screen.
- ▶ If you are using multiple accounts and want to check all emails at once, tap Combined inbox and click Refresh.

## GOOGLE SEARCH

Google Search can help you find anything you need on the web.

Tap the  icon on the all apps screen to access Google search.

## SYNCHRONIZE CONTACT LIST

### Settings> Accounts>Add Account

To synchronize an account you will need to first have a Gmail account. You can either add a new account or can use existing account.

1. Enter your **Email ID** and **Password** and tap **Next**.
2. Choose the account options that display and tap **Next**.

Follow the suggested steps.

Your contacts synchronization will be complete in a few seconds.

## To Auto-sync Existing Account:

1. Tap on an existing account.
2. Tap **Sync Contacts**. (All phone contacts will be copied to that email account with details).

For this feature to work, you need to have Internet connectivity via your SIM or Wi-Fi. If your Sync does not proceed as expected, check whether data option is set to ON.

## APPLICATIONS

Your phone comes with a host of applications to make your life easier and more convenient. Explore the various applications and the features that come with your A76 handset and enjoy the advantage.

### MAPS

Google Maps is a web based service offered by Google Inc. which offers you access to various map based services. You can view various streets, landmarks and can even plan your routes with the help of Google Maps. It also comes with a navigation system (GPS required) which gives turn by turn route guidance while driving or walking. You can even download maps for offline usage. This serves as a useful application for your day to day usage.

Note:

- ▶ Internet connection is required for using Google Maps. For information on activating internet connection refer to the section 'Connect to the Internet'.
- ▶ The Google Maps application may not be available in every market, country or region.

- ▶ Micromax does not guarantee the accuracy of any directional services.
- ▶ When you use the map, you use your internet connection to transfer data to and from your phone. To avoid data transfer costs, you can download and save the map to your phone.

To select the required settings;

1. Go to **Settings> Personal> Location Access**.
2. Enable **Access my Location** option and **GPS satellites**.
3. Tap the **Maps** icon in the applications menu to start using Google Maps.

## GPS (GLOBAL POSITIONING SYSTEM)

Global Positioning System is a satellite based system that provides location information to the users. Your device has an in-built receiver that receives signals from the satellites.

You can drop down the notification panel and tap on the GPS icon to turn on/off the GPS.

Alternatively, you can;


1. Go to **Settings> Personal> Location Access**.
2. Enable **Access my Location** option and **GPS satellites**.

You can use these settings for using applications such as Google Maps.

Note:

- ▶ GPS services are dependent on the services provided by your mobile operator. If you do not have appropriate service on your mobile then you may not be able to use the GPS service.
- ▶ As GPS consumes battery life, it is advised that you switch on GPS only when it is needed.

# WIDGETS

Widgets allow to access shortcuts from your Main menu directly! To employ this app, just tap the Menu  from the bottom of the Home screen and swipe though menu icons to the widgets screen and find your apps in a straight line without any hassle.




## DOWNLOAD APPLICATIONS FROM ANDROID MARKET

The Android phones offer users access to unlimited entertainment sources. You can download applications, games, videos etc from the ever increasing Android market. New applications are added almost daily to give users a never ending fun experience.

## TASKBAR

Taskbar displays the recent apps used by you. The apps are stored in the systems history and take space from the phone's internal memory. So, it's

always good to remove these apps from the taskbar. To do so:

Tap and hold the  button on the phone and the taskbar will be displayed.



To remove the recent apps, tap the app you want to remove and slide on either side and the app will be removed from the list.





Or you may also tap and hold the same and an option “Remove from List” will appear. Tap the option and the app will be removed.



## SAFETY PRECAUTIONS



Remember to comply with legal requirements and local restrictions when using the phone.



Your Phone's radio waves may interfere with inadequately shielded medical devices. Consult a physician or manufacturer of the medical device to know whether they are adequately shielded from external Radio Frequency. Switch off your device when regulations require you to do so.



Always keep the phone and accessories out of reach of small children. Small parts such as the SIM card, dust cap, lens ring and lens cap as well as the microSD card can be dismantled and swallowed by small children.



Do not place the phone near electromagnetic data carriers such as credit/Debit cards. Information stored on them could be lost.



Permanent hearing loss may occur if you use earphones at high volume for prolonged periods. Set your volume to a safe level. If you experience discomfort in your ears, reduce the volume or discontinue the use of your earphones.



Ring tones, info tones and hands-free talking are reproduced through the loudspeaker. Do not hold the phone to the ear when it rings or when you have switched on the hands-free function.



The mains voltage (V) specified on the power supply unit must not be exceeded to prevent damage to the charging device. The power supply must be plugged into an easily accessible AC power socket when charging the battery.



You may only open the phone to replace the battery, SIM and microSD card. You must not open the battery under any circumstances. All other changes to this device are strictly prohibited and will invalidate the warranty.



The phone may cause interference in the vicinity of TV sets, radios and PCs.



Only use Micromax specified batteries and charging devices.

All batteries can cause property damage, injury or burns if a conductive material Tap the exposed terminals. Exercise care in handling any charged battery, particularly when placing it inside your pocket, purse or other container with metal objects. Do not dispose of batteries in fire as they may explode.



Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit\$.

Please put the phone safely in the phone stand. Do not put it onto

any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.



Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone during a flight.



Professional service: The phone must be installed or repaired by Micromax authorized personnel. You are likely to suffer a huge risk when you install or repair this phone by yourself, which also goes against the warranty rules.

## TAKING CARE OF YOUR DEVICE

Your device is a product of superior design and craftsmanship and should be handled with care. The following suggestions will help you protect your phone.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can rust the electronic circuits. If your device gets wet, remove the battery, wipe it with a dry cloth and take it to an authorized service center.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can get damaged.
- Do not attempt to open the device other than as instructed in this guide. Repairing this phone by yourself other than our authorized service agents/centers goes against the warranty rules.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not store your device near magnetic fields or allow your device to

come in contact with magnetic fields for extended period of time.

## Battery Recommendations

- Please put the battery in a cool and well-ventilated place out of direct sunlight. We recommend you to charge the battery at room temperature range.
- Batteries have life cycles. If the time that the battery powers equipment becomes much shorter than usual, the battery life is at an end. Replace the battery with a new battery of the same make and specification.
- Use manufacturer approved batteries, chargers, accessories and supplies. Micromax will not be held responsible for user's safety when using unapproved accessories or supplies.
- Do not discard the battery with household trash. Please dispose of used battery according to your local environmental laws and guidelines.

## Recycle your Phone



The WEEE logo (shown at the left) appears on the product (battery, handset, and charger) to indicate that this product must not be disposed off or dumped with your other household wastes. You are liable to dispose of all your

electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste.

Collection and proper recovery of your electronic waste equipments at the time of disposal will allow us to help preserve the environment. Recycling of the electronic waste equipment will ensure safety of human health and environment. For more information on best practices for disposal of electronic and electrical waste, please visit to our web site:

[www.micromaxinfo.com/weee.php](http://www.micromaxinfo.com/weee.php).

**Note:** Micromax will not bear any responsibility for any incompliance with the above mentioned guidelines or improper usage of the mobile phone.

## COPYRIGHT

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Micromax is strictly prohibited.

## INDEX

accessories, 61  
Android™, 5  
Batteries, 61  
Bluetooth, 50  
Camera, 1, 44  
Disclaimers, 5  
Gallery, 45  
Gmail, 50, 52  
Google, 52  
Internet, 48  
Keyboard, 41

Micromax, 6  
Multimedia, 43  
Notifications, 34  
Only, 60  
Search, 52  
SIM, 9  
Synchronize, 52  
used, 61  
video, 44  
Voice, 41

