



## LG-T375 User Guide - English

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

### Product Authentication program

Dear Customers,  
To protect all LG customers from counterfeit and grey market products and make sure that you receive official warranty service, LG is now running a product authentication program. To make sure your handset is a genuine product of LG, ONLY one SMS containing the IMEI No. of your purchased handset will be automatically sent to LG on the date of purchase. Once your phone is authenticated, you will receive the message "Your handset is a genuine LG product." The customer shall bear the cost of one SMS for the product authentication program. In return, you will receive one additional month of warranty for free. One additional month of warranty covers only mobile phone, not batteries and accessories. The IMEI No. sent to LG guarantees your handset to be free from manufacturing defects during the warranty period from the date of purchase without proof of purchase or warranty card.



P/N: MFL67481603(1.0) www.lg.com

## Phone Components



- Volume keys**
- **When the screen is at the Home screen:** Ring tone and touch tone volume.
  - **During a call:** Earpiece volume.
  - **Down volume key:** Press and hold to activate/ deactivate Silent mode.

- Power/Lock key**
- Short press to turn on/off the screen.
  - Long press for power on/off.

Handsfree or Stereo earphone connector

- 3 Touch **To** at the top of the screen to enter the recipients, then enter the number or touch **Q** to select a contact. You can even add multiple contacts.
- 4 Touch **SIM1** when ready.

**NOTE:** To send a message from SIM2 touch the forward arrow mark on **SIM1** icon.

**WARNING:** If an image, video, sound, New slide and so on is added to an SMS it will be automatically converted to an MMS and you will be charged accordingly.

## Video camera

### Making a quick video

To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.

- 1 Holding the phone horizontally, point the lens towards the subject of the video.
- 2 Press the red dot **Q**.
- 3 **REC** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.
- 4 To pause the video, touch **II** and resume by selecting **Q**.
- 5 Touch **Q** on screen to stop video recording.

## Using your touch screen

### Touch screen tips

- To select an item, touch the centre of the icon.
- Do not press too hard. The touch screen is sensitive enough to pick up a light, from touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Whenever your LG-T375 is not in use, it will return to the lock screen.

### Control the touch screen

The controls on the LG-T375 touch screen change dynamically depending on the task you are carrying out.

### Opening Applications

To open any application, simply touch its icon.

### Scrolling

Drag from side to side to scroll. On some screens, such as the Logs list, you can also scroll up or down.

**TIP:** User can Copy a selected text from any editor and can paste the same in any other editor.

Ex: Go to Message Editor, type some text. Now Select the Text you want to copy by scrolling over the text. Now Place the cursor at a point you want to paste the text. Go to Option and Click on Paste, so that copied text will get Pasted.

**NOTE: Spam Message** - You can block the unwanted messages by giving Spam numbers or Spam words. Those messages will get stored in Spam Box Folder.

## Installing the SIM card and the handset battery

### Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

#### Important!


The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

### Illustrations

Always switch the device off and disconnect the charger before removing the battery.

- 1 Remove the back cover.
- 2 Lift battery away.
- 3 Insert the SIM card.
- 4 Insert the battery pack.

- 5 Attach the back cover.
- 6 Charge the battery.

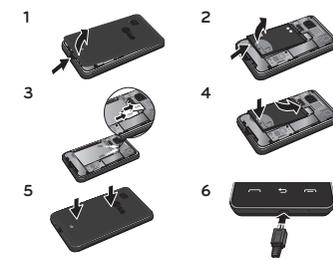

## Calls

### Making a Call

- 1 Touch **Q** to open the keypad.
- 2 Key in the number using the keypad.
- 3 Touch **SIM1** to initiate the call.

**NOTE:** To make a call from SIM2 touch the forward arrow mark on **SIM1** icon.

**TIP!** To enter + for making an international call, press and hold "0".

Press the power key to lock the touch screen to prevent calls being made by mistake.

## Entering Text

You can choose your input method by tapping **Q** and **Input method**.

Touch **T9** to turn on T9 mode. This icon is only shown when you choose **Keypad** as the input method. Touch to **Q** change between numbers, symbols and text input. Use **Shift** key to change between capital or lowercase input.

**TIP:** You can send SMS to many contacts at a time. User can select/deselect all contacts for sending the message. Only 20 contacts can be marked and if user select Select all only first 20 contacts will be marked.

To send the SMS to a particular group of contacts select Group Option and select particular group.

## Making a call from your contacts

- 1 From the home screen touch **Q** to open the **Contacts**.
- 2 Tap the search field box on the top of the screen and enter the first few letters of the contact you would like to call using the keypad.
- 3 From the filtered list, touch the Call icon next to the contact you want to call. The call will use the default number if there is more than one number for that contact.
- 4 Or you can touch the contact name and select the number to use if there is more than one number for that contact. You can also touch **Q** to initiate the call to the default number.

#### NOTE:

**Self call** - Self call imitates a real incoming call. Press "#\*#" on the Dialpad to make a self call. This doesn't charge any fee.

**NOTE: Excuse message** - During Incoming call alert, a preset Message can be sent as SMS on clicking Excuse msg.

**NOTE: SMS Sorting** - Inbox Messages can be sorted with the given sorting options for an easy access of messages. (**Date, Sender, Read and Unread**)

## Setting up your email

Touch **E-mail** from screen 2.

If the email account is not set up, start the email set up wizard and finish it. You can check and edit settings also you can check the additional settings that were filled in automatically when you created the account.

## Using the advanced settings

From the viewfinder, touch **Q** to open all advanced settings options. You can change the video camera setting after selecting the option, touch the **OK** button.

## Music

To access the music player, touch **Music**. From here, you can access a number of folders:

**Recently played** - Plays the songs you have played recently.

**All tracks** - Contains the songs you have on your phone except the pre-loaded default music.

**Artists** - Browse through your music collection by artist.

**Albums** - Browse through your music collection by album.

**Genres** - Browse through your music collection by genre.

**Playlists** - Contains all the playlists you have created.

**Shuffle tracks** - Play your tracks in a random order.

## Managing files

You can store multimedia files in your phone's memory so you have easy access to all your images, sounds, videos, documents and other content. You can also save your files to a memory card. Using a memory card allows you to free up space in your phone's memory.

By touching **My stuff**, you can open a list of the folders that store all your multimedia files.


## Installing the SIM card and the handset battery

### Installing a Memory Card

Remove the back cover of your phone. Push the memory card inside with the gold contact facing downwards. To remove the memory card, gently pull it outside.

**NOTE:** A memory card is an optional accessory.

## Phone Components

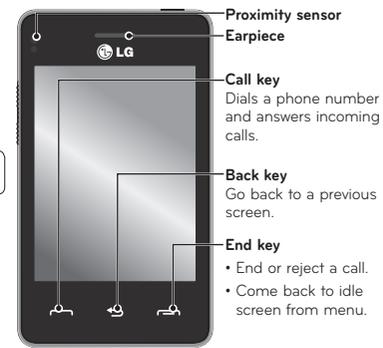

- 2 Choose whether to save the contact to your **Internal memory, SIM1 or SIM2**.
- 3 Enter your first and last name.
- 4 You can enter up to five different numbers per contact.
- 5 Add an email addresses. You can enter up to two different email addresses per contact.
- 6 Assign the contact to one or more groups.
- 7 Touch **Save** to save the contact.

## Messaging

Your LG-T375 combines SMS and MMS into one intuitive and easy-to-use menu.

### Sending a message

- 1 Touch **Messages** in menu and touch **Write message** to begin composing a new message.
- 2 Touch **Insert** to add an image, video, sound, template and so on.

**Upload** - Touch to upload the photo.

**Send Via** - Touch to send the photo as a **Message, Email** or via **Bluetooth**.

**Set as** - Touch to set as **Homescreen wallpaper, Lockscreen wallpaper, Contacts image**.

**Edit** - Touch to edit the photo.

**Q** Touch to delete the image.

**Q** Touch to take another photo immediately.

**Q** Touch to view a gallery of your saved photos.

## Using the advanced settings

From the viewfinder, touch **Q** to open all advanced settings options.

After selecting the option, touch the **OK** button.

## Using your calculator

- 1 Touch **Calculator**.
- 2 Touch the number keys to enter numbers.

## Converting a unit

- 1 Touch **Unit converter**.
- 2 Choose whether you want to convert Currency, Area, Length, Weight, Temperature, Volume or Velocity.
- 3 Then select the unit and enter the value you would like to convert from.

## PC Suite

You can synchronise your PC with your phone to make sure all your important details and dates match. You can also backup your files to put your mind at ease.

**NOTE:** Install PC Suite using CD provided and follow the Installation Guide.

## Answering and rejecting a call

When your phone rings, press **Q** key to answer the call.

To mute the ringing, touch on Silent tab in alerting screen. This is useful if you forgot to change your profile to Silent for a meeting. Touch on Reject tab to reject an incoming call in alerting screen.

## Contacts

### Searching for a contact

- 1 Touch **Contacts**.
- 2 You see a list of contacts. Typing in the first letter of a contact's name in the Search field will jump the menu to that alphabetical area of the list.

### Adding a new contact

- 1 Touch **Contacts** and touch **Add**.

## Camera

### Taking a quick photo

- 1 Touch **Camera** menu.
- 2 When the camera has focused on your subject, touch the **Q** on the right-center of the screen to take a photo.

**TIP:** To switch to the camera mode or video mode, slide up/down the camera or video icon on the centre-right of the viewfinder.

### After taking a photo

Your captured photo will appear on the screen.

The following options are available.

Touch **Q**

## Application

### Adding an event to your calendar

- 1 Touch **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Touch **Add**.

### Setting your alarm

- 1 Touch **Alarms**.
- 2 Touch **Add**, then you can set and save your alarm in this menu.

### Voice recorder

Use your **voice recorder** to record voice memos or other audio files.

 
## The web

**Browser** gives you a fast, colourful world of games, music, news, sport, entertainment and loads more, straight to your mobile phone. Wherever you are and whatever you're into.

### Accessing the web

- Touch the **Browser**.
- To go straight to the browser home page touch **Yes**. Once page is loaded tap on settings button in the right top corner for more options.

**NOTE:** You will incur extra cost by connecting to these services and downloading content. Check data charges with your network provider.



## Wi-Fi

Wireless Manager allows you to manage Internet connections your phone's Wi-Fi (a wireless LAN). It allows the phone to connect to local wireless networks or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology. It allows fast emailing and Internet browsing.

**NOTE:** The LG-T375 supports WEP and WPA/ WPA2-PSK security. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window. If encryption is not set, this pop-up window will not be shown.

You can obtain the key from your Wi-Fi service provider or network administrator.



- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.



- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is a risk of explosion if the battery is replaced by an incorrect type.

## Dual SIM setting

You can see two Network Signal icons on the left-top of the screen when you insert two SIM-Card.

To select or switch the **SIM card**, press **Menu** and select **Dual SIM settings**.

## Settings

### Changing your phone settings

Use the freedom of adapting the LG-T375 to your own preferences.

From the home screen, select **☰** and touch **Settings** then scroll to **Device settings**.



## Software update

### Phone Software update

**LG Mobile Phone Software update from internet**
For more information on using this function, please visit the http://update.lgmobile.com or http://www.lg.com/common/index.jsp → select country and language → Support. This Feature allows you to update the firmware of your phone to the latest version conveniently from the internet without the need to visit a service centre. As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage your mobile phone.



- Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone during or immediately after operation.

## Efficient phone operation

### Electronic devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.



- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.
- Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.

**Anti-theft mobile tracker** - When the handset is stolen, handset sends the SMS to the numbers configured by real Owner. To activate the ATMT feature, you will need to set ATMT on, and configure the ATMT settings with Owner name and Alternate numbers. Default ATMT Code is "0000".

**NOTE:** Anti Theft Mobile Tracker - ( **☰** > Settings > Device settings > Security > Anti-theft Mobile tracker) When the handset is stolen, handset sends the SMS to the predefined numbers configured by real owner. ATMT SMS will contain information about the stolen phone **IMEI, Owner name & phone number** of the person who is using that handset.



## Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

## Exposure to radio frequency energy

**Radio wave exposure and Specific Absorption Rate (SAR) information**

This mobile phone model LG-T375 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all users, regardless of age and health.



## Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.



## Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

<b>Charger</b>	<b>Battery</b>
	
<b>Stereo headset</b>	<b>Data cable and CD</b>
	
<b>User Guide</b>	
	

 
## SOS Service settings

• **SOS Service** - Enable "SOS service" at SOS Service settings. After enabling, press down volume key 4 times when screen is locked, the SOS message is sent and the phone stays in SOS Mode.

In the emergency situation SOS message will be sent to the assigned receivers and incoming calls by them will be automatically accepted. All notification sound will be muted. To exit the SOS mode, press the End key in Homescreen.

### Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. To change any settings, use **Menu > Settings > Connectivity**.



- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionising Radiation Protection (ICNIRP) is 2 W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use close to the ear is 0.718 W/kg (10g).



## Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volume is set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.

**NOTE:** Excessive sound pressure from earphones can cause hearing loss.



## Sending and receiving your files using Bluetooth

**To send a file:**


- Open the file you want to send, typically this will be a photo, video or music file.
- Choose **Send via**. Choose **Bluetooth**.
- If you have already paired the **Bluetooth** device, your LG-T375 will not automatically search for other **Bluetooth** devices. If not, your LG-T375 will search for other **Bluetooth** enabled devices within range.
- Choose the device you want to send the file to.
- Your file will be sent.



## Product care and maintenance

**⚠ WARNING:** Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's option, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop the phone.
- Do not subject this unit to mechanical vibration

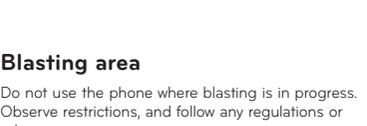

## Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

## In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the aircraft without permission from the crew.

## Technical data

## Ambient Temperatures

**Max.:** +55°C (discharging) +45°C (charging)  
**Min.:** -10°C




**To receive a file:**

- To receive files, your Bluetooth must be both **ON** and **Visible**. See **Bluetooth settings** for more information.
- A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.
- You will see where the file has been saved. For image files, you can choose to **View** the file. Files will usually be saved to the appropriate folder in **My stuff**.

**TIP!**

- When you use a Bluetooth headset , A2DP and AVRCP profiles are not supported while you play video. It means you will not listen video sound if you use Bluetooth headset.
- Bluetooth file transferring function will be blocked under some applications running. (Voice call, Camera, Music Player, UMS/ PCSync)

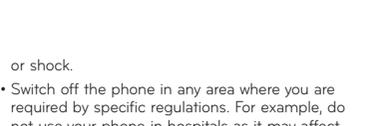

- or shock.
- Switch off the phone in any area where you are required by specific regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).



## Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

## Emergency calls

Emergency calls may not be available with all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.



### Declaration of Conformity

<b>Local Data:</b>		
Name		
Address	1 LG Electronics Bldg	
Address	1 LG Electronics Bldg	
Address	1 LG Electronics Bldg	
Address	1 LG Electronics Bldg	
<b>Product Data:</b>		
Product Name	GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment	
Model Name	LG-T375	
Trade Name		
LG	<b>CE0168</b>	
<b>Technical Specifications:</b>		
<p>3G/2G Dualmode W999SE-EC  EN 301 488-1 V.8.3 (2008) / EN 301 488-7 V.1.3.1 (2005) / EN 301 488-17 V.2.1.1 (2009)  EN 62209-2007/PCS:2008 / EN 62209-1:2008  EN 60950-1:2006+A11:2009  EN 501 691 V8.2.2  EN 300 328 V1.7.1</p>		
<b>Notified Body Information:</b>		
<p>The conformity to above standards is verified by the following Notified Body(SMRT)  SMRT, Farnth House, Churchfield Road, Watlington-Thames, Surrey KT12 2TD, United Kingdom  Notified Body Identification Number : 0168</p>		
<b>Declaration:</b>		
I hereby declare under our sole responsibility that the product mentioned above to which this Declaration relates complies with the above mentioned standards, regulations and directives.	Name	Boord Date
	Chang Heung Lee / Director	8 March 2012
LG Electronics Inc. – EU Representative Kijgeman 1, 1186 DR Amstelveen The Netherlands	 Signature of representative	