

## CONTENT

<b>1.WARNINGS .....</b>	<b>- 1 -</b>
<b>2.GETTING STARTED.....</b>	<b>- 2 -</b>
<b>3.YOUR PHONE .....</b>	<b>- 3 -</b>
<b>4.FUNCTION MENU .....</b>	<b>- 4 -</b>
<b>5. PHONEBOOK .....</b>	<b>- 4 -</b>
<b>6.MESSAGE.....</b>	<b>- 4 -</b>
<b>7. CALL LOG.....</b>	<b>- 5 -</b>
<b>8.MULTIMEDIA.....</b>	<b>- 5 -</b>
<b>9. TOOLS.....</b>	<b>- 6 -</b>
<b>10. GAMES.....</b>	<b>- 7 -</b>
<b>11. PROFILES.....</b>	<b>- 7 -</b>
<b>12. SETTINGS .....</b>	<b>- 7 -</b>
<b>13.ENTRY MODE .....</b>	<b>- 8 -</b>
<b>14. CARE AND MAINTENANCE.....</b>	<b>- 8 -</b>
<b>15. TECHNICAL INFORMATION.....</b>	<b>- 10 -</b>

## **1. Warnings**

---

Not following these simple guidelines may be dangerous or illegal. Read the complete user guide for further information.

### **TURN ON SAFELY**

Do not turn on the phone when wireless phone is prohibited or when it may cause interference or danger.

### **ROAD SAFETY**

Obey all road safety laws. Always use both of your hands to operate the vehicle while driving.

### **INTERFERENCE**

All wireless phones may be sensitive to interference, which may affect performance.

### **TURN OFF IN HOSPITALS**

Follow all restrictions. Turn off the phone near medical equipment.

### **TURN OFF ON AIRCRAFTS**

Follow all restrictions. Wireless devices can cause interference on aircrafts.

### **TURN OFF WHEN REFUELING**

Do not use the phone at/near refueling stations. Do not use near fuel or chemicals.

### **USE SENSIBLY**

Only qualified personnel may install or repair this product.

### **ENHANCEMENTS AND BATTERIES**

Use only appropriate enhancements and batteries. Do not connect incompatible products.

### **WATER-RESISTANCE**

Your phone is not water-resistant. Keep it dry.

### **BACKUP COPIES**

Remember to make back-up copies or keep a written record of all important information stored in your phone.

## CONNECTING TO OTHER DEVICES

When connecting to any external device, read its user guide for detailed safety instructions. Do not connect with incompatible products.

### 2. Getting Started

---

#### 2.1 SIM Card Installation

When you subscribe to a cellular network, you will receive a plug-in SIM card complete with your subscription details, such as your PIN, and available optional services.

**Caution:** Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.

**Tips:** Face the gold color contact point of SIM card towards the cell phone and push the SIM card into the slot.

#### 2.2 Battery Installation

**Caution:** Install according to the illustration above to avoid breaking the battery connectors.

#### 2.3 Charging the Battery

Insert the charger; the flash symbol on the charger plug must face upwards.

Connect the charger to a standard wall outlet and the battery power icon in the up-right corner of the screen will start scrolling. When the battery bar stops scrolling, the battery charge is complete. Press the two sides of the charger plug and disconnect the charger from the phone.

#### 2.4 T-flash Card

Insert the T-Flash card into phone. This will expand the Flash memory of the phone. Tap Multimedia menu, you can browse MP3, MP4, picture, etc.

#### 2.5 USB Cable

You can transfer and store files, such as MP3, MP4 and

pictures from PC, through USB cable, to the U-disk in phone or identified SD card that is inserted.

### **3. Your Phone**

---

#### **3.1 Making a Call**

In standby mode, press numerical keys to input phone number to dial phone number. When you finish inputting phone number, press the dial key、SIM2 key to make a call. If you're making a long distance call, add the area code preceding the telephone number. During a call, you can press up/down keys to adjust volume. Press left soft key to access Options.

#### **3.2 Emergency Service**

You can dial an emergency call without the SIM card. Contact your service provider to get the emergency call number.

#### **3.3 Answering a Call**

When you receive a call, the phone will ring or vibrate and will display an incoming call indicator. Press the dial key, SIM2 key or left soft key to answer. Press left soft key to access options.

#### **3.4 Rejecting/Ending a Call**

Press end key to reject an incoming call or end current call.

#### **3.5 Key function**

1.Direction key, In editing interface:

- (1) Right key: Move the cursor with the direction of right.
- (2) Left key: Move the cursor with the direction of left.
- (3) Up key: Move the cursor with the direction of up.
- (4)Down key: Move the cursor with the direction of

down.

2. OK key: To the main menu
3. Right soft key: To perform the function of the prompt displayed in lower right corner of the screen.
4. Left soft key: Enter main menu or to perform the function of the prompt displayed in lower left corner of the screen. Click the left soft key then \* lock the phone
5. Send key: To dial and pickup calls; on standby mode, to see the record of all calls made.
6. End key: To end a call or reject incoming calls. Under most circumstances pressing this key will put the mobile phone into standby mode. Hold down this key to power On/Off.
7. Number keys: To enter numbers and letters; the number keys from 2-9 can be set for one-key dialling.
8. \* key: cycle according to \* keys to switch and input \*, +, P, W, display symbols list in edit mode;
9. # key: long press # key scene mode switch

## **4.Function menu**

### **5. Phonebook**

---

You can store contacts' personal information and numbers while also search for previously stored contacts. Press left soft key to access Options.

### **6.Message**

---

After entering Messages, in: Templates, Voice Mail Server, Broadcast Message, SMS Settings, and Message capacity.

#### **6.1 Write Message**

##### **6.1.1 Text message**

This function can begin a new SMS. After completing the

SMS, press left soft key to access to options.

## **6.2 Inbox**

To check received messages in inbox.

## **6.3 Outbox**

Checks the information of unsuccessfully sent message in outbox .

## **6.4 Drafts**

You can save unsent and edit incomplete messages in drafts box.

## **6.5 Sentbox**

Check the sent messages in sent box.

## **6.6 Templates**

5 a template for choice

## **6.7 Voice mail server**

Edit speech number

## **6.8 Broadcast message**

To set parameters of Broadcast message

## **6.9 Settings**

SMS and Broadcast message

## **7. Call Log**

---

In the call history menu, you can check dialed calls, received calls, missed calls, rejected calls, delete all, call timers, call cost.

## **8.Multimedia**

---

### **8.1 Camera**

Press left soft key or OK key to select the function. The photo can be previewed in the screen; press OK key to shoot and

right soft key to back, left soft key to access Options. Use navigation keys, you can choose and enter the functions list on screen.

## **8.2 Video Player**

Preview the videos. Press up key and down key to adjust volume. Press navigation keys to select and then press OK key confirm to enter. Press left soft key to access to "List", then press right soft key to return.

## **8.3 Audio player**

This function menu is used to store and play the multimedia file. Press the left soft key or OK key to enter and use the Navigation keys, OK key, or Music Control Keys to operate. Press up key and down key to adjust volume. Press left soft key to access Options.

## **8.4 FM**

Enter FM radio (insert earphone). Press left/right key to change frequency, Press the left soft key to access Options.

## **8.5 Recorder**

You can take a recorder in this function. In the play mode, use up key and down key to adjust the volume. Press OK button to record. After record, access Options. After entering the file list, select one file, access to Options

## **8.6 File manager**

---

Enter this menu; you can check the files store on T-flash card. Press left soft key, you can do options.

## **8.7Image browser**

Enter the "Image viewer" submenu.

## **9. Tools**

---

### **9.1 Bluetooth**

This mobile phone support Bluetooth wireless connection. You can establish wireless connection between mobile phone and

device to realize voice communication, data exchange and synchronization. Press left soft key to do options

## **9.2 Calendar**

You can use this feature to view the year, date and solar term easily. Use navigation keys to navigate other date. Press left soft key, you can enter to submenu to do options.

## **9.3 Calculator**

This feature can use your phone as a calculator for simple calculations. Press corresponding keys to enter the numbers.

## **9.4 Alarm**

The alarm clock feature sounds an alert or makes a vibration alert at a time you specify. There are 3 alarm clocks can be edit and set.

## **10. Games**

---

Your phone supplies built-in game, you can play it whenever or wherever you want.

## **11. Profiles**

---

This phone provides several profiles, by pressing left soft key, you can enter to set: Active, Customize, Rename, and Enhance Sound.

## **12. Settings**

---

### **12.1 Call Settings**

Dual-SIM, Network selection; Call divert; Call barred; Call waiting; Hide ID; Select line; Flight mode; Others

### **12.2 Phone settings**

Time & date/Select language/Shortcut settings/Autopower on/off; Power management/Light Effect/Restore factory settings Input default password 1234 to restore factory settings

### **12.3 Display settings**

Wallpaper Setting, Idle display settings; Contrast; Backlight; Keypad backlight time; Animation effect ;



## **12.4 Security settings**

PIN/ PIN2/Data security1234/Auto keypad lock; Lock screen byend-key/Power-on password.

## **13.Entry mode**

---

You can use several methods for entering text and numbers. By selecting a Text Entry Mode, the phone provides a few Text Entry Mode for new adding, editing contact records, finding contacts, editing SMS and writing memos.

Select Text Entry Mode:

### **10.1 Letter entry mode**

Editing interface, click on the appropriate soft keyboard subtitles.

### **10.2 Number entry mode**

Click the top left corner of the input image to switch to digital input, through the point of the soft keyboard to enter the corresponding number.

## **14. Care and maintenance**

---

### **Battery care**

- Your device is powered by a rechargeable battery. When the power is weak, please charge the battery. In order to extend the lifespan of the battery, use all the battery's power before recharging.
- Unplug the charger from the electrical plug and the device when not in use. Do not leave the battery connected to a charger more than a week. Overcharging may shorten its lifespan.
- Extreme temperatures can affect the ability of your battery to charge. Battery needs the fit temperature. If the surrounding temperature is over 40°C, the battery cannot be charged.
- Use the battery only for its intended purpose. Never use any

charger or battery that is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) Short-circuiting the terminals may damage the battery or the connecting object.

- Leaving the battery in hot or cold places, such as in a closed car in summer or a freezer in winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 59°F and 77°F (15°C and 25°C). A hot or cold battery may not function temporarily, even when the battery is fully charged.

- Battery performance is particularly limited in temperatures below freezing.

- Do not dispose of batteries in a fire! Dispose of batteries according to local regulations. Please recycle when possible. Cellphones are not considered household waste.

- **Please use original matched battery. If wrong battery is used, there will be danger of explosion**

- **Disused old battery, Please handle it according to local environmental protection law and don't throw it at random.**

### **Mobile phone maintenance**

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery and allow the device to dry completely before replacing it.

- Do not use or store the device in dusty, dirty areas. Its

moving parts and electronic components can be damaged.

- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.

All of the above suggestions apply to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service.

## **15. Technical Information**

---

Weight

Size Length × Width × Depth

Battery

Networks:

Battery work times refer to the list below (Will not announce if the capacity is changed):

The operation time of the battery depends on conditions such as:

- Transmitting power level
- Signal (distance between the phone and the base station)
- Network parameters defined by the operator
- Phone use (WAP, games, SMS)
- Charging procedure used

Exclusions:

Subject to the exclusions contained below:

1. Damage due to the improper use.
2. User does not follow the manual.

Explanation:

The company has the final right of the explanation for this document.

Software upgrades will not be announced.

**All pictures are for reference only in the instruction book; please refer to the actual phone.**