

MAXX AX407 GenXdroid7 User Manual

Dear Customer,

Thank you for purchasing **MAXX AX407 GenXdroid7**. Kindly read this user manual carefully to learn about key functional characteristics and operational methods of this mobile phone.

Contents

I	Safety and precautions-----	2
II	Operation of menu functions-----	4
III	Quick start guide-----	10
IV	Troubleshooting-----	11
V	Specific Absorption Rate-----	12
VI	Terms &Conditions for the warranty -----	13

I. Safety and Precautions:

To use your MAXX phone safely and effectively, please read the following information before use:



Please turn off your phone when you are near a chemical plant, a gas station, an oil depot or other explosives.



To ensure safety, please use earphone during driving; Otherwise, unless emergency, make a call after parking your car by the roadside. DO NOT use the phone during driving at high speed.



Do not use your cell phone while in a plane. Please check whether Flight mode is set or not before boarding.



Do not use your cell phone in a hospital to avoid interference with the normal operation of medical equipment which may result in a medical accident. If the cell phone is used near a pacemaker, audiphones and some medical electronic equipment, you should pay special attention that the cell phone may interfere with these devices.



Auxiliaries and accessories not provided by us are excluded from the guarantee.



Do not dismantle your cell phone by yourself. In case of a failure, please contact the service station specified by us. Only qualified person may install or repair this product.



The phone should be charged in the environment which is well-ventilated, and should be kept away from inflammable substances and explosives.

To avoid demagnetization, please keep your phone away from magnetic substances, such as magnetic disk, credit card, etc.



Please be sure the phone isn't exposed to any liquid. In Case this situation occurs, please remove the battery and contact the service station specified by us.

Please use your phone in the environment which is neither too hot nor too cold, do not expose your phone in strong sunlight and in high-humidity environment.



All wireless devices may be susceptible to interference, which could affect performance.



Your cell phone has photo and record functions, please use these functions following the related laws and regulations. You may violate the laws and regulations if you take photos and record without authorization.

- Do not dispose the worn battery as common domestic rubbish. Please dispose the worn battery according to the specified instructions where the disposal of a worn battery is clearly specified.

Note: The Company will not undertake any responsibility for any consequences caused by failure to observe the above-mentioned suggestions or improper applications.

If any content described in this manual goes against that of your cell phone, it is subject to the real cell phone.

MAXX operates a policy of continuous development. MAXX reserves the right to make changes and improvements to any of the products described in this document without prior notice.

The availability of particular products may vary by region. Please check with the MAXX dealer nearest to you.

II. Operation of menu functions:

AX407 GenXdroid 7 is ANDROID SMART PHONE

In the standby mode, select **Menu** and the desired menu and submenu. Select **End** or **Back** to exit the current level of menu. Press the end key to return to the standby mode directly.

Dialer

- Tap the dialer icon on the homescreen
- Enter the phone number
- Press call key, to dial the number
- Press the end key to end the call

Function Menu Instruction

1. Browser

Select the browser icon to enter the Google Interface and you can search for websites.

2. Calculator

The handset is provided with a calculator with basic functions. You can carry out the operation for plus, minus, multiply, and divide by pressing the screen. You can use some functions in the advanced panel.

Attention: the accuracy is limited and round-off error may occur.

3. Calendar

Enter the calendar menu and there shall appear a calendar on the screen with the current date marked out by background frame with a special color. Press the touch screen to browse date and the calendar information on the screen shall be correspondingly updated.

4. Camera

Under viewing condition, press the bottom icons to do the following operations. Press the first camera icon to capture a picture or film a video, press the middle icon to switch between camera mode and video mode. The third icon shows the currently captured picture or video.

5. Clock



New Alarm

Enter the clock menu and press alarm icon to add a new alarm. Scroll the scrollbar to set alarm time. Press alarm of list to edit the activation, Time, Repeat, Ringtone, Vibrate and Label, choose “done” to finish the setting. If you need to reset the settings, choose "Revert". If you want to delete the alarm, choose "Delete".

6. Contacts

Entering the Contacts, you can check all the contacts, search for contacts or add new contact. New contact means a newly added phone number that is recorded in the SIM card or the handset. When adding a new contact, you can type in the name, phone number, other phone number, Email and so on. You can also check call history and contact group.

7. Downloads

You can check the downloaded or being-downloaded contents.

8. Email

First you need to set the Email account.

Step 1: enter email address and password.

Step 2: select account type, choose OK to connect.

9. File Manager(ES File Explorer)

You can manage file , including Download, Music, and Received File. Press menu key to create a new folder or select folders to copy, move and delete.

10. FM Radio

Attention: this handset doesn't have a built-in antenna. If you want to listen to the radio, please insert the headphone first. Pressing the side key can adjust the volume.

11. Gallery

In the gallery interface, there are different folders. Select a folder and press to enter it. Press image to view pictures.

When viewing the picture, if you press the screen or press the menu key, a menu with "share, delete, more" will pop out. Choose "share" to send the file through Messaging, Bluetooth, Email or Gmail; choose "more" for further functions like Details, Set as, Crop, Print, and Rotate left or right.

If you press the capture icon at the upper right corner, you can directly get a capture or record a video.

12. Gmail

Configure your Gmail account and access emails. send, receive and more.

13. Maxx LifeBox

It is a mobile lifestyle portal which brings all popular and useful services to the finger tip of the user. No more keyword punching. Just click to stay updated, have fun, search anything, get train info or go spiritual.

The main services of MAXX LifeBox are as below:

- **A Mobile Lifestyle Portal**
- **Enriches your life in several ways:**
- **Fill Fun in your Life** - 'Jokes', 'Sher-O-Shayri', 'Love meter' etc.
- **Stay updated in your Life** - 'News', 'Cricket', 'Bollywood' etc.
- **Bring Ease to Life** - 'Search by SMS' and 'Railway PNR enquiry' services, 'Trace mobile number' etc.
- **Enhance your knowledge** - 'Dictionary', 'English learning', 'General Knowledge', 'Exam Tips' etc.
- **Learn Healthy Lifestyle** - 'Beauty Tips', 'Fitness Tips', 'Dating Tips' etc.
- **Spirituality** - 'Quotes from Religious books', 'Horoscope', 'Vastu Tips', 'Thought of the day' etc.
- **Fun → Stay updated → Learn → Explore**

14. Maxx World

Maxx World is an Maxx powered App Store specially designed considering needs of Indian consumers. It makes usages very simple as there is no need of an email ID or Credit card to buy Premium games. Easy to discover games and applications, flexibility to download free games and buy premium games by paying through Operator billing.

The main features of Maxx World are as below:

- **Recommendation:** It recommends users the best local and international apps.
- **My Apps:** Downloaded apps & games can be easily accessed through 'My Apps'. Users can launch the downloaded apps & games in the store.
- **Promotion area:** It promotes the most wonderful Apps & Games. User can click the promotion banner to get more information of the product.
- **Vote:** If users Like any downloaded apps or game, they can vote with an easy click on Like button.
- **Version upgrade:** If there is new version, it will pop up message for users to upgrade the store. Users can easily get the latest version via OTA.

15. Messaging

- **Compose new message**

Press edit new message to get a new text message:

Click the edit frame, type in after a virtual keyboard pops out.

Input contents into the typing frame on the touch screen. After editing, press send icon to send the text.

Press menu key to call, add subject, Attach, Delete message, Insert quick text and more operations.

- **Message Setting**

Include storage settings, SMS settings, MMS settings notice settings, service information settings and so on.

16. Music

Use the Music player to play music files. The songs saved in your SD Card can be played using the Music Player of the device. The songs are categorized by Artists, Albums and Songs. You can make your favorite playlist by long pressing on a song and selecting Add to Playlist.

17. Phone

Press the keyboard, enter the phone number, and press Dial icon.

18. Play Store

Play store is dedicated to establishing the latest, fastest and most comprehensive third-party application store that makes Android system simpler. You can pick software and games to your taste from more than 10,000 applications anywhere and anytime.

19. Search

Input key words to search in the network, messages, applications, contacts, call history, music, etc

20. Settings

➤ Dual SIM Settings

Dual SIM Settings. The contents in this menu will differ according to different network providers.

For detailed information, please look at the phone.

➤ Wireless & Networks

Change settings for wireless connection and network such as Airplane mode, WLAN, WLAN settings, Bluetooth, Bluetooth settings, Tethering & portable hotspot, VPN settings, Mobile networks.

➤ Call Settings

Change settings for Dual sim and call related such as SIM1 and SIM2 call settings, IP dialing,

Vibration.

➤ Sound

Change settings for Sound and ringtones such as Profiles, Incoming Call, Notifications, Feedback.

➤ **Display**

Change settings for Display such as Brightness, Auto-rotate screen, Animation, Screen timeout.

➤ **Location & Security**

Locate your position through tools like wireless network or mobile networks.

In Security, Change the settings of screen unlock, SIM card lock, passwords, device administration and Credential storage.

Screen lock settings:

Pattern: unlock the screen through designed pattern. Draw a private pattern to unlock the screen so as to avoid unauthorized use of the handset.

PIN: type in PIN numbers to unlock the screen.

password: type in code to unlock the screen.

➤ **Applications**

Include the management of applications, the condition and development of the currently used service and storage space, Battery use and development.

➤ **Accounts & Sync**

Include general synchronization settings and account management. The general synchronization settings include background data and automatic synchronization. You can also choose to add new account. After adding new account, you can do operations like synchronizing the calendar and contacts.

➤ **Privacy**

In Privacy settings will be restored to original status if you press "Factory data reset". All of the data in the Phone will be erased. You can also format the SD card. If you select this option, all of the data in the SD card will be erased. Include Backup my data and automatic restore.

➤ **Storage**

Include the SD card storage, available storage, insert SD card (If a SD card has already been inserted, then this option will become "Unmount SD card "),format SD card and all available storage in the internal storage space. Device can support SD card Up to 32GB.

- **Language & input**
Include language settings, keyboard settings, input method and so on.
****Available languages:**
Hindi, Bengali, Telugu, Tamil, English, French, Persian, Arabic, Russian, Chinese.
- **Voice input & output**
In voice input & output settings include voice input such as Text-to-speech settings.
- **Accessibility**
Delegating accessibility-It may also log your user interface interactions. To use this delegate accessibility use this accessibility service.
- **Date & time**
Include automatic, set date, select time zone, set time, use 24 hour format and select date format.
- **Time switch machine**
You can set the time for ON & OFF, which include setting time and repeated date.
- **About phone**
Include System updates, status information, battery use information, Legal information, Model number, android version, baseband version, Kernel version, Software version and Hardware Version.

21. SIM Toolkit

The contents in this menu will differ according to different network providers. For detailed information, please look at the phone.

22. Sound Recorder

Press Recording Key to start recording. In the middle of the screen is a timer. Press Stop Key to stop recording and select "Save" in the popped out "Save/Cancel" option to save the record. You can press play key to listen to the record before selecting "Save/Cancel".

23. Video Player

You can play your videos through MX Player.

***The Language converter/software may not produce the accurate translation as desired by the user and hence company disowns any results/liability arising there from.*

III. Quick Start Guide:

- **Featured Function**
Besides basic mobile phone functions, your handset also has various practical and fast featured functions. They are briefly introduced as follows:
 - **Contacts:** Support of quick search for qualified phone number records; the contact storage volume of SIM card/USIM card depends on the card itself; support texting through Contacts, copying a single record to SIM card/USIM card/handset and support copies among the handset, SIM card and SD card; support deleting the contact records in the SIM/USIM card and the handset.
 - **Call log:** Your handset will automatically store information related to call history for checking; support dialing all of the phone numbers listed in the call history; support storing the listed phone numbers in call history; support deleting single call record and all call records.
 - **Messaging:** Support storing the messages on the handset; support inserting text templates when editing a text; support copying phone number in the message.
 - **Music:** Support playing audio files, including mp3 formats.
 - **Recorder:** Support of call recording and non-call recording. During a call, you can select the open recorder in the option menu to record the call conveniently. You can check the generated recording file in the T card.
 - **Camera:** Support of picture-taking. You can change the camera settings to your preference.
 - **Settings:** You can change the phone settings to your preference, including SIM card management, wireless connection and network, call settings, profiles and so on. You can change the functions of each item according to your own taste, such as date & time, schedule ON/OFF and so on.
-
- For any support or service kindly contact your nearest authorised MAXX Service Partner. You can download the MAXX Authorised Service Center List from the below link: **<http://www.maxxmobile.in/>**

IV. Troubleshooting:

<u>Sr.No.</u>	<u>Failure</u>	<u>Solution</u>
1	The Phone fails to power on	1. Check that the battery is charged; 2. Check that the battery is installed correctly.
2	Insert SIM card error	1.Check whether the SIM card is dirty, if card is dirty, clean it; 2. Reinstall the SIM card; 3. If the SIM card is damaged replace the SIM card.
3	Low network	Check the signal strength indicator on the screen. 4 bars indicate strong signal and 2 bars or less indicate poor signal.
4	Call registration fails	1.You might have set the Hide Caller ID but the network operator does not support this service; 2.There may be strong signal interference; 3.You might have activated the Call Barring function; 4.You might have activated Line 2 but the network operator may not support this service.
5	Battery fails to charge	1. The battery may have excessively discharged To charge the battery it is necessary to connect it to a charger for certain period of time; 2.The battery may have been deteriorated.
6	Cannot connect to the network	1.Check whether signal is too weak or wireless interference exists around; 2.Check whether the SIM card is installed correctly, poor connection exists or the SIM card is damaged. If the SIM card is damaged please contact the network operator.
7	Photos shoot are too dark	1. The brightness is set too low; 2. The ambient light is too dark.
8	Photos shot are too blurred	1. The object shot is moving; 2. Your hand shakes when shutter is pressed.
9	Photos shot are distorted	The object shot is too close to the lens.
10	Cannot access the service menu	The SIM card may not support the service.

V. Specific Absorption Rate:

Mobile device is a radio transmitter and receiver. It is designed to not exceed the limits for exposure to radio waves Recommended by various governments. In India, these guidelines were developed by the Government of India, Department of Telecommunications, Ministry of Communications and IT and include safety margins design to assure the Protection of all persons, regardless of age and health and to account for any variations in measurements.

The guidelines use a unit of measurement known as the Specific Absorption Rate (SAR). SAR level for mobile handsets Shall be limited to 1.6 Watt/kg, averaged over a 6 minutes period and taken over a volume containing a mass of 1 gram of Human tissue.

Highest SAR Value for **MAXX AX407 GenXdroid7** as below-

For GSM 900MHz – When tested on head – **0.314 Watt/Kg**
When tested on body – **0.372 Watt/Kg**

For GSM 1800MHz – When tested on head – **0.168 Watt/Kg**
When tested on body – **0.339 Watt/Kg**

As SAR is measured utilizing the mobile device's highest transmitting power, the actual SAR of this mobile device while Operating is typically below that indicated above. This is due to automatic changes to the power level of the mobile device To ensure that it only uses the minimum level required to each the network. While there may be differences between the SAR levels of various mobile devices and at various positions, they meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, Products are designed to be within the guidelines. The World Health Organization has started that present scientific Information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want To reduce your exposure, then you can do by limiting the length of calls or using a hands-free device to keep the mobile Device away from the head and body.

Specific Absorption rate (Safety Precautions) :-

- a) Use A wireless hands-free system (headphone, headset) with a low power Bluetooth emitter.
- b) Make Sure the cell phone has a low SAR.
- c) Keep your calls short or send a text message(SMS) instead. This advice applies especially to children ,adolescents and pregnant women.
- d) Use cell phone when the signal quality is good.
- e) People having active medical implants should preferably keep the cell phone at least 15cm away from the implant.

VI. Terms & Conditions for Warranty

MAXX MOBLINK offer 18 months limited warranty for the transceiver set from date of import or 12 months Limited Warranty for the transceiver set from date of purchase or whichever is earlier.

Warranty for the accessories -Battery, Travel Charger, Data Cable & Earphone will be 6 months from date of purchase which is provided along with phone package and should be within 18 months warranty period from date of import .

MAXX is not responsible for damage arising from failure to follow instructions relating to the product's use, also the warranty does not apply in below cases:

- a) To damage caused by use with non-MAXX certified products
- b) To damage caused by accident, abuse, misuse, flood, fire, earthquake or other external causes
- c) To damage caused by operating the product outside the permitted or intended uses described by MAXX

MAXX warranty obligations for this hardware product are limited to the terms set, for more details of terms & conditions, please refer the website www.maxxmobile.in

WARRANTY CARD Details to be fill up to claim warranty of this phone.

Name of Customer :_____

Model No:_____

IMEI No (SIM1):_____ **IMEI No (SIM2):**_____

Date of Purchase:_____

Maxx Moblink Private Ltd.

(100% subsidiary of Maxx Mobile Communication Ltd.)

Registered Office address :

16th Floor, DLH Corporate Park, Opp. Goregaon MTNL,

S.V. Road, Goregaon (W), Mumbai 400 062.

Tel: 1860 233 4444

Email -customer@maxxmobile.in | www.maxxmobile.in

Name of Dealer:

Dealer Stamp