

# MAXX MSD7Touch MT280 User Manual

---

Dear Customer,


Thank you for purchasing **MAXX MSD7Touch MT280**. Kindly read this user manual carefully to learn about key functional characteristics and operational methods of this mobile phone.


## Contents


|     |   |    |
|-----|---|----|
| I   | Safety and precautions.....               | 2  |
| II  | Cell Phone Outline.....                   | 4  |
| III | Operation of menu functions.....          | 5  |
| IV  | Application of USB storage function ..... | 9  |
| V   | Troubleshooting.....                      | 10 |
| VI  | Specific Absorption Rate .....            | 11 |
| VII | Terms & Conditions for the warranty ..... | 13 |


## **I. Safety and Precautions:**


To use your MAXX phone safely and effectively, please read the following information before use:


 Please turn off your phone when you are near a chemical plant, a gas station, an oil depot or other explosives.


 To ensure safety, please use earphone during driving; Otherwise, unless emergency, make a call after parking your car by the roadside. DO NOT use the phone during driving at high speed.

 Do not use your cell phone while in a plane. Please check whether Flight mode is set or not before boarding.


 Do not use your cell phone in a hospital to avoid interference with the normal operation of medical equipment which may result in a medical accident. If the cell phone is used near a pacemaker, audiphones and some medical electronic equipment, you should pay special attention that the cell phone may interfere with these devices.

 Auxiliaries and accessories not provided by us are excluded from the guarantee.


 Do not dismantle your cell phone by yourself. In case of a failure, please contact the service station specified by us. Only qualified person may install or repair this product.

 The phone should be charged in the environment which is well-ventilated, and should be kept away from inflammable substances and explosives.

To avoid demagnetization, please keep your phone away from magnetic substances, such as magnetic disk, credit card, etc.

 Please be sure the phone isn't exposed to any liquid. In Case this situation occurs, please remove the battery and contact the service station specified by us.

Please use your phone in the environment which is neither too hot nor too cold, do not expose your phone in strong sunlight and in high-humidity environment.

 All wireless devices may be susceptible to interference, which could affect performance.



Your cell phone has photo and record functions, please use these functions following the related laws and regulations. You may violate the laws and regulations if you take photos and record without authorization.

- Do not dispose the worn battery as common domestic rubbish. Please dispose the worn battery according to the specified instructions where the disposal of a worn battery is clearly specified.


**Note:** The Company will not undertake any responsibility for any consequences caused by failure to observe the above-mentioned suggestions or improper applications.

If any content described in this manual goes against that of your cell phone, it is subject to the real cell phone.

**MAXX operates a policy of continuous development. MAXX reserves the right to make changes and improvements to any of the products described in this document without prior notice.**

The availability of particular products may vary by region. Please check with the MAXX dealer nearest to you.

## II. Cell Phone Outline :

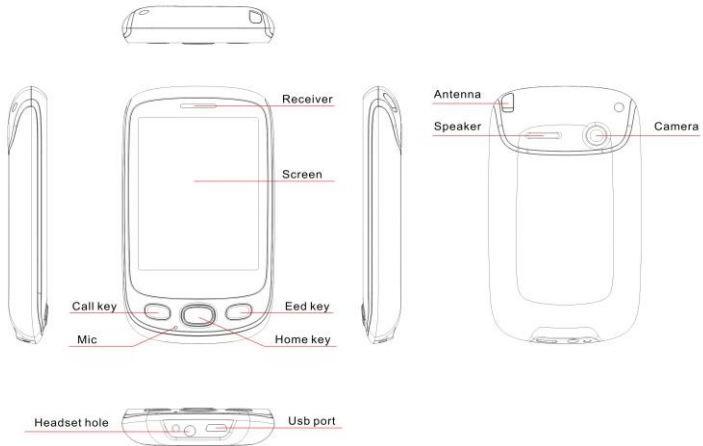

### **III. Operation of menu functions:**

#### **MSD7Touch MT280 is FULL touch phone**

In the standby mode, select **Menu** and the desired menu and submenu. Select **End** or **Back** to exit the current level of menu. Press the end key to return to the standby mode directly.

#### **1.Dialer:**

- Tap the dialer icon on the homescreen
- Enter the phone number
- Press call key, to dial the number
- Press the end key to end the call

#### **2. Phonebook:**

You can add the new contact by selecting menu “Add new contact”.

You can save the contacts in the mobile phone and SIM card, it depends on the SIM card, Phone memory capacity.

#### **3. Messages:**

To write & read SMS, MMS, you can also store messages in drafts, unsent messages in outbox & view the Sent messages in Sent Messages.

#### **4. Call logs:**

You can view the call logs (Missed, Dialed, received calls) through this option.

#### **5. Calendar:**

You can view and edit the memo of a specified date with this function.

#### **6. Settings:**

This menu option lets you view and edit your Dual Sim Settings, Pen calibration , Network settings , Call Settings, Display Settings, Scheduled Power ON/Off, Date & Time Settings, and Language & input Method, Restore factory Settings.

- Dual Sim Settings: Set Card, Display boot up Menu.

- Network Settings: Flight Mode, Cellular Network Settings.
  - Sound Settings: Can set Message tone, incoming call tone.
  - Display Settings :set brightness
  - Security Settings: The phone provides several codes to protect your phone against misuse.
    - Phone Lock: If the phone lock is activated, the phone lock password is requested after the phone is switched on. The default password is "1234". If the phone is locked, only emergency calls can be made.
  - Date & Time Settings: Set Date & time.
  - Language & Input Method: Set current display language.
  - Call Settings-to set call waiting, divert, forward option. And more
- Advanced Settings**
- Scheduled Power On/Off: Set the time to power on/off the phone automatically.
  - Restore Factory Settings: Reset the phone to default values (factory settings).

## **7. Alarm:**

The mobile phone provides 5 alarms and you can set them as your need. If you have configured an alarm, an icon indicated that you have configured the alarm will appear.

## **8. Camera:**

With this function, you can use the built-in camera of the phone to take a photo, or adjust the camera settings. The lens of the camera is located at the back of the phone; it utilizes the phone screen as the viewfinder. Photos generated by the camera are in JPG format.

## **9. Image viewer:**

Pictures taken can be accessed quickly through Gallery. Select an image to view OR press options to send the selected image, change the storage, delete all files etc.

**10. Calculator:**

Calculator enables you to make basic arithmetic calculations, such as addition, subtraction, multiplication and division. Enter the numbers and choose the desired operator. Use CLEAR to delete the entered numbers and ok to get the output.

**11. File manager:**

File Manager enables you to browse, open and manage the data saved in the Phone and Memory card. The device provides a certain space for users to manage files and supports the T-Flash card. You can use the file manager to conveniently manage various directories and files on the device and the T-Flash card. Choose Files to enter the root directory of the memory. The root directory will list the default folders, new folders and user files. You can also format both the storage of phone and memory card.

**12. Sound Recorder:**

The mobile phone supports recording formats. You can record conversations, which may be saved to the Audio folder under File Manager.

**13. Connectivity:**

To get connect to the network, please set the settings as per service provider & select SIM.

**14. FM radio:**

You can use your device to listen to FM radio stations once the original Headset is plugged into the accessories connector.

**15. World Clock:**

Adjust and Settings in the region of world time.

**16. STK (SIM TOOL KIT):**

STK features are provided by your service provider. If your SIM card supports STK feature, you will see the STK menu. Different STKs has different STK main menus. Please contact your service provider if the STK does not work.

**17. Audio player:**

Play audio files, you can stop, stop, played and switch to the next/on a song use screen.

**18. Bluetooth:**

This function is used for transferring the data from two paired phones.

**19. Browser:**

This function allows you to acquire or visit diversified services on the Internet through message or network. Please contact your network operator for more information.

**20. Camera:**

This function is used to take photos, you can also set the options for your choice to take the photo.

**21. Video player & recorder:**

Play the video tape of video files, you can stop, stop, played and switch to the next/on a song use screen. And record video through camera.

**22. Lock:**

You can lock the screen by using this option.

**23. Profiles:**

You can choose your choice of profile as General, Silent, and Meeting & Outdoor.

**24. EBook Reader:**

Your device supports reading files in the \*.txt format, which is ideal for reading an e-book. Store the \*.txt files in the Ebook folder, and then you can read them in Bookshelf.

**25. Facebook:**

Facebook is a very popular social networking site around the world giving people the power to share and make the world more open and connected. Millions of people use Facebook every day to keep up with friends uploads an unlimited number



of photos, share links and videos, and learn more about the people they meet. Please ensure that you have GPRS settings in your device to open Facebook. Contact your operator for GPRS settings.

**26. Games :**

Game option lets you play game provided in the phone.

**27. Task :**

You can add the task in this option.

**IV. Application of USB storage function:**

**Note:** The phone can use USB function (like charging) under switched off mode.

When USB cable is plugged in, phone will have the following options:

- **Mass storage:** The phone can be connected to the PC and used as a USB Flash Disk.
- For any support or service kindly contact your nearest authorised MAXX Service Partner. You can download the MAXX Authorised Service Center List from the below link: <http://www.maxxmobile.in/>

## **V. Troubleshooting:**

| Failure                        | Solution   |
|--------------------------------|--|
| The phone fails to power on.   | 1. Check that the battery is charged;<br>2. Check that the battery is installed correctly.   |
| Insert SIM card error          | 1. Check whether the SIM card is dirty. If the card is dirty, clean it;<br>2. Reinstall the SIM card;<br>3. If the SIM card is damaged, replace the SIM card.  |
| Low Network                    | Check the signal strength indicator on the screen. 4 bars indicate a strong signal, and 2 bars or less indicate a weak signal.   |
| Call registration fails        | 1. You might have set the Hide Caller ID but the network operator does not support this service;<br>2. There may be strong signal interference;<br>3. You might have activated the Call Barring function;<br>4. You might have activated Line 2 but the network operator may not support this service. |
| Battery fails to charge        | 1. The battery may have been excessively discharged. To charge the battery, it is necessary to connect it to a charger for a certain period of time;<br>2. The battery may have been deteriorated.   |
| Cannot connect to the network  | 1. Check whether the signal is too weak or wireless interference exists around;<br>2. Check whether the SIM card is installed correctly, poor connection exists, or the SIM card is damaged. If the SIM card is damaged, please contact the network operator.  |
| Photos shot are too dark       | 1. The brightness is set too low;<br>2. The ambient light is too dark.   |
| Photos shot are too blurred    | 1. The object shot is moving;<br>2. Your hand shakes when the shutter is pressed.  |
| Photos shot are distorted      | The object shot is too close to the lens.  |
| Cannot access the service menu | The SIM card may not support the service.  |

## **VI. Specific Absorption Rate:**

Mobile device is a radio transmitter and receiver. It is designed to not exceed the limits for exposure to radio waves Recommended by various governments. In India, these guidelines were developed by the Government of India, Department of Telecommunications, Ministry of Communications and IT and include safety margins design to assure the Protection of all persons, regardless of age and health, and to account for any variations in measurements.

The guidelines use a unit of measurement known as the Specific Absorption Rate (SAR). SAR level for mobile handsets Shall be limited to 1.6 Watt/kg, averaged over a 6 minutes period and taken over a volume containing a mass of 1 gram of Human tissue.

Highest SAR Value for MSD7Touch MT280 as below-

For GSM 900MHz – When tested on head - **0.672** Watt/Kg  
When tested on body -**0.560** Watt/Kg

For GSM 1800MHz – When tested on head - **0.510** Watt/Kg  
When tested on body- **0.655** Watt/Kg

As SAR is measured utilizing the mobile device's highest transmitting power, the actual SAR of this mobile device while Operating is typically below that indicated above. This is due to automatic changes to the power level of the mobile device To ensure that it only uses the minimum level required to each the network. While there may be differences between the SAR levels of various mobile devices and at various positions, they meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, Products are designed to be within the guidelines. The World Health Organization has started that present scientific Information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want To reduce your exposure, then you can do by limiting the length of calls or using a hands-free device to keep the mobile Device away from the head and body.

**Specific Absorption rate (Safety Precautions) :-**

- a) Use A wireless hands-free system (headphone, headset) with a low power Bluetooth emitter.
- b) Make Sure the cell phone has a low SAR.
- c) Keep your calls short or send a text message(SMS) instead. This advice applies especially to children ,adolescents and pregnant women.
- d) Use cell phone when the signal quality is good.
- e) People having active medical implants should preferably keep the cell phone at least 15cm away from the implant.

## **VII. Terms & Conditions for Warranty**

MAXX MOBLINK offer 18 months limited warranty for the transceiver set from date of import or 12 months Limited Warranty for the transceiver set from date of purchase or whichever is earlier.

Warranty for the accessories -Battery, Travel Charger, Data Cable & Earphone will be 6 months from date of purchase which is provided along with phone package and should be within 18 months warranty period from date of import .

MAXX is not responsible for damage arising from failure to follow instructions relating to the product's use, also the warranty does not apply in below cases:

- a) To damage caused by use with non-MAXX certified products
- b) To damage caused by accident, abuse, misuse, flood, fire, earthquake or other external causes
- c) To damage caused by operating the product outside the permitted or intended uses described by MAXX

MAXX warranty obligations for this hardware product are limited to the terms set, for more details of terms & conditions, please refer the website [www.maxxmobile.in](http://www.maxxmobile.in)

## Warranty Card

### **WARRANTY CARD Details to be fill up to claim warranty of this phone.**

**Name of Customer :** \_\_\_\_\_

**Model No:** \_\_\_\_\_

**IMEI No (SIM1):** \_\_\_\_\_ **IMEI No (SIM2):** \_\_\_\_\_

**Date of Purchase:** \_\_\_\_\_

#### **Maxx Moblink Private Ltd.**

(100% subsidiary of Maxx Mobile Communication Ltd.)

Registered Office address :

16th Floor, DLH Corporate Park, Opp. Goregaon MTNL,  
S.V. Road, Goregaon (W), Mumbai 400 062.

Tel: 1860 233 4444

Email - [customercare@maxxmobile.in](mailto:customercare@maxxmobile.in) | [www.maxxmobile.in](http://www.maxxmobile.in)

**Name of Dealer:**

**Dealer Stamp**