

ALL RIGHTS RESERVED

Spice Retail Ltd. ©2013. All rights are reserved. No part of this document can be reproduced without permission. All trademarks and brand names mentioned in this publication are property of their respective owners. While all the efforts have been made to ensure the accuracy of contents in this manual, we presume no responsibility for errors or omissions or statements of any kind, whether such errors are omissions or statements resulting from negligence, accidents, or any other cause.

We operate a policy of continuous development and reserve the right to make changes, modifications and improvements to the device, device features/specifications or any of its parts without prior notice. Your device may have preinstalled bookmarks and links for third party internet sites and may allow you to access third party sites. These are not affiliated with Spice, and Spice does not endorse or assume liability for them. If you access such sites, take precautions for security or content.

The limited warranty does not cover user manuals or any third party software, settings, content, data or links, whether included/downloaded in the product, whether included during installment, assembly, shipping or any other time in the delivery chain or otherwise and in any way acquired by you.

To the extent permitted by applicable law(s), Spice does not warrant that any

Spice software will meet your requirements, will work in combination with any hardware or software applications provided by a third party, that the operations of the software will be uninterrupted or error free or that any defects in the software are correctable or will be corrected.

 *User's Manual is provided just to guide the user about the functionality of the device. This does not seem to be any certificate of technology. Some functions may vary due to modifications and up-gradations of software or due to printing mistake.*

SAFETY PRECAUTIONS

Please read the following safety guidelines before using the device.

- Do not use the phone while you are driving.
- Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them.
- Keep your phone and its accessories away from children.
- Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. People having active medical implants should keep their cell phone at least 15 cm away from the implant.
- Permanent hearing loss may occur if you use earphones or headphones at high volume.
- Use a wireless hands-free system (headphone/ headset) with a low power Bluetooth emitter.
- Make sure the cell phone has a low SAR.
- Keep your calls short or send a text message (SMS) instead. This advice applies specially to children adolescents and pregnant women.
- Use cell phone when the signal quality is good.

Notice:

- Do not dismantle the device or accessories otherwise, manufacturer is not liable to pay for damages as the device and accessories are not covered by warranty. Use only original batteries and charging devices.
- Please back up your important data timely and keep them properly. The company is not liable for any failure to call or loss of data due to mis-operation, poor signal or power cut, etc.
- All the screens in this manual are for reference only, and some contents actually displayed may depend upon the presetting of the service provider or the network operator, or the SIM card. If any functions referred to in this manual are different from those of your device, please follow your device.
- Do not put use it in a place with flammable gas such as a petrol pumps. The temperature recommended for using the device is 5-35°C Do not touch the charger, power cable or socket with wet hands. This may cause an electric shock.



If your phone or any of its accessories do not function normally, then please visit your nearest authorized service facility. The qualified personnel will assist you, and if necessary, will arrange for the service.

SAR (Specific Absorption Rate)

Your device conforms to the Indian guidelines for exposure to radio waves. The limits are given in terms of a unit referred to as the Specific Absorption Rate (SAR), which is a measure of the amount of radio frequency energy absorbed by the body when using a mobile phone. The SAR value as per the Indian guidelines standard is 1.6 watts per kg (Watt/kg), averaged over a 6 minutes period and taken over a volume containing a mass of 1 gram of human tissue. The highest SAR value of this device when tested is 1.208 Watt/kg.

TABLE OF CONTENTS

ALL RIGHTS RESERVED.....	1
SAFETY PRECAUTIONS.....	3
TABLE OF CONTENTS.....	6
WHAT'S IN THE BOX?.....	10
1. UNDERSTANDING YOUR DEVICE.....	11
1.1 GENERAL INFO.....	11
1.2 DEVICE OVERVIEW	12
<i>Position of Keys</i>	
<i>Function of Keys</i>	
2. GETTING STARTED.....	14
2.1 INSTALLING CARDS & BATTERY	14
<i>Installing SIM Card and Battery</i>	
<i>Installing Memory Card</i>	
<i>Charging the Battery</i>	
2.2 POWERING ON/OFF THE DEVICE.....	16
<i>Turning On the Device</i>	
<i>Turning Off the Device</i>	
<i>Automatic Customer Registration</i>	

3. BASIC OPERATIONS.....	18
3.1 CALLING	18
<i>To Make Calls</i>	
<i>Answer/Reject an Incoming Call</i>	
<i>Other Options during the call</i>	
<i>To put a call on hold</i>	
<i>To set up conference calls</i>	
3.2 MESSAGING.....	21
<i>Creating a Message</i>	
<i>Receiving and Managing Messages</i>	
<i>To reply to a text message</i>	
<i>To forward a text message</i>	
MULTIMEDIA MESSAGE.....	23
3.3 CONTACTS.....	25
<i>To add a Contact</i>	
3.4 EMAIL.....	27
<i>Setting up an Email Account</i>	
3.5 BROWSER	28
<i>To open a web page</i>	
<i>To scroll the page</i>	
<i>To set the Home page</i>	
HOME SCREEN.....	30
4.1 STATUS BAR.....	31
4.2 APPLICATION TAB.....	32
4.3 CUSTOMIZING SCREEN	33
<i>Widgets</i>	

Setting the wallpaper

5. MULTIMEDIA.....	36
5.1 MUSIC PLAYER.....	36
5.2 CAMERA	37
<i>Capturing an Image</i>	
5.3 GALLERY	38
5.4 FILE MANAGER	38
5.5 SOUND RECORDER	38
6. NETWORK.....	40
6.1 WLAN	40
<i>Note:</i>	
6.2 BLUETOOTH.....	42
7. SETTINGS.....	43
7.1 WIRELESS & NETWORKS	43
7.2 SIM MANAGEMENT	44
7.3 AUDIO PROFILES	44
7.4 DISPLAY	44
7.5 STORAGE	44
7.6 BATTERY	45
7.7 APPS.....	45
7.8 LOCATION ACCESS	46
7.9 SECURITY	46
7.10 LANGUAGE & INPUT	47

7.11 BACKUP AND RESET	47
7.12 ACCOUNTS	47
7.13 DATE AND TIME	47
7.14 SCHEDULE POWER ON/OFF	48
7.15 ACCESSIBILITY	48
7.16 ABOUT PHONE.....	48
8. APPLICATIONS & UTILITIES.....	49
CALCULATOR.....	49
CLOCK	49
FACEBOOK	50
EMAIL	50
GOOGLE SEARCH	51
MAPS	51
NAVIGATION	51
PLAY STORE	51
LOCAL	52
SPICE GANG.....	52
DOCUMENTS TO GO	52
YOU TUBE	53
OLX	53
9. SPECIFICATIONS.....	54
10. SUPPORT AND CONTACT.....	55
ENVIRONMENTAL CONCERN.....	56

WHAT'S IN THE BOX?

Your package comes with the following items. If any of these is missing, please contact your retailer

- Device
- USB Cable
- Charger
- User's Manual
- Headset
- Battery
- Warranty Card
- Service Centre List

1. UNDERSTANDING YOUR DEVICE

1.1 GENERAL INFO

Your device is based on Android version 4.2.2 and encloses features, such as 1GHz Dual core Processor, 1500mAh Battery, 3.5" HVGA Screen, 2.0MP+1.3MP Camera, Dual SIM(2G+2G), AGPS/GMS, Media Player, Wi-fi, FM Radio, Bluetooth, Maps etc.



1.2 DEVICE OVERVIEW



Position of Keys

1	Home Key	2	Search Key
3	Menu Key	4	Back Key
5	Earphone connector	6	Power up/down Key
7	USB connector	8	Volume Key
9	Camera	10	Speaker
11	Flash		

Function of Keys

Key	Description
Power Key	Hold and press the key to switch on/off the device. Press the key to turn on/off the display screen.
Menu Key	In the idle screen, touch the key to set wallpaper, view settings, manage apps etc. At any interface, touch it to view menu options.
Home Key	At any interface, touch the key to return to the home screen. In idle screen, touch and hold the key to view recently accessed features.
Back Key	Touch to go back to the previous menu.
The Volume Keys	In the idle screen, press upwards or downwards to increase or decrease the ringer volume. While using music/video player, press the keys to increase/decrease the volume.

2. GETTING STARTED

2.1 INSTALLING CARDS & BATTERY

Please switch off your device before inserting or removing the battery/SIM card or memory card.

Installing SIM Card and Battery

Your device is provided with two SIM slots for two different SIM cards. In order to install battery and SIM card in the device, please follow the steps mentioned below:

- Remove the back cover of the device.
- Hold the device with the front facing downwards; pull the battery cover
- Insert the SIM cards in the device.
- Attach the battery.
- Push the battery cover until it clicks into place.

Installing Memory Card

Your device supports T-Flash card, which is a multimedia memory card used to multiply the memory of the device. The T-flash card is small and should be pulled out and installed carefully and prudently in order to avoid any kind of damage. Please follow the steps mentioned below to install the memory card in the device:

- Switch off your device.
- Remove the battery cover.
- Slide the T-Flash card into the slot.
- Attach the battery.
- Push the battery cover until it clicks into place.

Charging the Battery

The device prompts a warning tone and message stating insufficient battery when the battery power is low.

Please follow the instructions mentioned below to charge your device:

- Plug the connector of the charger into the jack of the device.
- Plug the charger into a standard AC wall outlet.

Charging  Fully Charged 

You must fully charge the battery before using the device for the first time. It is recommended to charge the battery for three hours before using the device for the first time.

2.2 POWERING ON/OFF THE DEVICE

 
Turning On the Device

After installing the SIM cards and charging the battery, you are now ready to turn on your device.

- Long press and hold the Power Key to turn on the device.
- The first screen that appears is known as the home/idle Screen.
- Drag the lock icon side wards to unlock the screen.
- If the screen turns off, then press the Power Key to turn on the display.

Turning Off the Device

- Press and hold the Power Key for 5 seconds.
- A pop-up window appears, select Power off.
- Select OK to confirm.

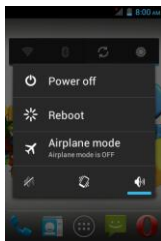

Automatic Customer Registration

After 4 hours of usage a SMS from the device will be sent automatically for the customer registration.  *Standard SMS charges apply.*

3. BASIC OPERATIONS

3.1 CALLING

To Make Calls

If the icon  appears on the screen, then you can make or receive calls.

 
To make a call, please follow the steps mentioned below:

- Enter the Main Menu, select Phone.
- Enter the phone number using the on-screen keyboard.

 Tap  to erase a wrong number. Tap and hold it to erase the entire number.

After entering phone number, tap  to make a call.

To end the call, press the red icon to end.

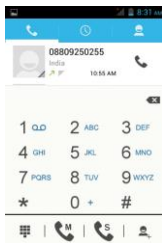

Answer/Reject an Incoming Call

When you receive an incoming call, a notification message appears on the screen. In order to accept the call, tap. In order to accept the call, drag  towards right. If you wish to reject the call, drag  towards left.

Other Options during the call

To put a call on hold

If you are having a call conversation and there is another incoming call, select menu and select hold to put the first call on hold. To unhold the call, select hold again.

To set up conference calls

If you are already having a call conversation, select Hold to put the call on hold.

Select Add Call to make another call. .

 
After connecting to the second call, select merge calls to set up the conference call.

3.2 MESSAGING

Your device features, sending and receiving of SMS (Short Message Service) and MMS (Multimedia Message Service). Go to Main Menu and then select Messaging.

Creating a Message

- Tap New message icon to compose a new msg.
- In To field; enter the recipient's phone number.
- Type message in the Type to compose field and Tap Send.

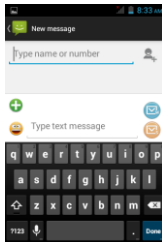

Receiving and Managing Messages

When you send and receive messages to/from a contact, these messages are grouped as a message thread. A message thread looks like an exchanged conversation.

To reply to a text message

- Enter the Main Menu, select Messaging.
- Select a message thread to open it.
- Select Type to compose to enter your message/reply.
- Click Send.

 
To forward a text message

- Enter the Main Menu, select Messaging.
- Tap to view a message thread.
- Press and hold a message to view the message options.
- Select Forward.
- In the To field, enter the recipient's phone number.
- Click Send.

MULTIMEDIA MESSAGE

A Multimedia message or MMS can contain letters, an image, an audio or video file. To create and send a MMS, please follow the steps mentioned below:

- Enter the Main Menu, select Messaging.
- Select Compose new message.
- Select Menu > Add subject.
- In the To field, enter the recipient's phone number or email address and enter the Subject.
- To insert a picture or video file, select Menu > Attach.
- To insert text, tap Type to Compose, and then enter your message.

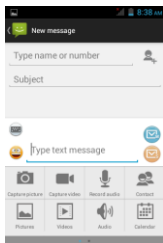

3.3 CONTACTS

Contacts refer to the phonebook that lets you store names, phone numbers, e-mail addresses and other information. You can save information such as name, picture, phone numbers, e-mail addresses, etc. for each contact listed in your Contacts menu.

To add a Contact

- Enter the Main Menu select People
- Tap New contact icon.
- Select the storage where you want to save the contact.

Phone contact

Name

Add organization

PHONE

Phone MOBILE

EMAIL

Email HOME

ADDRESS

Street

...

You can enter contact information such as name, phone number, email address etc., if you select storage as “Phone”.

 
Tap Done to save the contact or tap Revert to exit without saving any change.

3.4 EMAIL

Your device allows you to compose, read and send emails.

Setting up an Email Account

- Enter the Main Menu, tap Email.
- Enter your Email address and Password.
- Tap Next. The device will automatically retrieve email settings.
- Enter Name and Account display name.
- Tap Done

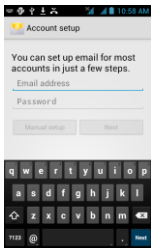

3.5 BROWSER

Browser is a tool which enables you to access the Internet.

To open a web page

- From the Main Menu, select Browser.
- Tap the address bar.
- Type the URL and select Go.
- Tap Menu to access more functions, such as bookmarks and other browser related settings.



To scroll the page

- Use finger gestures to scroll up or down.
- To scroll left or right, tap and swipe your finger towards right/left.

To set the Home page

- While viewing a web page, tap Menu > Settings > General > Set homepage > Current page.
- Enter the URL of page that you want to set as home page and select Ok.

HOME SCREEN

From Home screen, you can quickly access common features, view notifications of missed calls, received messages and check connection status.



	Network intensity of Master SIM or Slave SIM
	Battery level of the device
	New short message
	Missed call notification
	Call in progress
	USB connected
	Headset is plugged in
	Bluetooth is activated

4.1 STATUS BAR

The Status bar icons indicate different types of information. The table below lists various icons that might appear on the status bar of the device.

4.2 APPLICATION TAB

Tap Application Tab to access various applications and utilities in the device. The Application tab enables you to access the Main Menu and select among the various utilities/features available in the device.



Application Tab

 
4.3 CUSTOMIZING SCREEN

The device features a touch screen with idle displays and access to utilities at just one-touch. So swipe right or left to navigate through various screens accessing your favorite features without entering the main menu. Each screen can be customized by adding various widgets, shortcuts and folders.

Widgets

Save time with live updates right on Home screen and get all of your personalized updates at one place. You may add and customize the Widgets on Home screen by:

- In the main menu > WIDGETS page > long tap WIDGETS icon > add a shortcut on the screen everywhere what you want

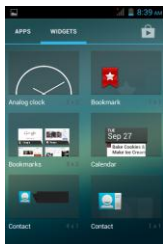

Setting the wallpaper

You can customize the wallpaper of your Home screen with default wallpaper or with pictures taken from your device.



In the idle mode, tap Menu Key > Wallpapers.

Select the desired wallpaper from the various options:

 
- Gallery
- Live Wallpapers
- Wallpapers

5. MULTIMEDIA

Your device features various multimedia options, such as Music, Video Player, Camera etc.

5.1 MUSIC PLAYER

The songs saved in SD Card can be played using the Music Player of the device.

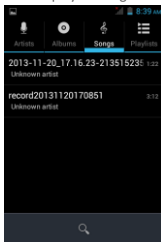

5.2 CAMERA

Your device is equipped with camera and camcorder, which enables you to capture photos and videos.

Capturing an Image

Select Camera. The screen will automatically switch to landscape view.

Aim the phone at the subject, and then tap to take the shot.

5.3 GALLERY

 
You can view the captured images, recorded video clips, and downloaded images via Gallery. The picture folder and video folder will be displayed. Select to view the camera pictures or camera videos. The images or videos will be displayed in thumbnails.

5.4 FILE MANAGER

You can browse, open and manage the data saved in the Device and Memory card by accessing the File Manager sub-menu. The device provides a certain space for users to manage files and supports the SD card. You can use the file browser to conveniently manage various directories and files on the SD card.

5.5 SOUND RECORDER

You can use the sound recorder to record sounds and also select to save the recordings in your phone. Tap Application Tab to access Main Menu > Sound Recorder.

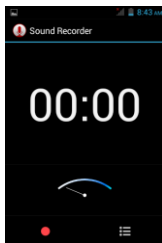

6. NETWORK

6.1 WLAN

- Connect to a wireless network to browse Internet.
- Idle screen and tap menu > System Settings or in the main menu screen > select Settings icon
- Tap Wireless & networks.
- Tap WLAN to activate and network notification to start detecting networks auto. The available networks will then be listed.
- Tap menu key > Add network to add a connection.

Note:

If the device before the connection is successful, the equipment information will be saved in the pop-up window selected connection, select forget to remove device information.

If the device does not encrypt selected connection in the pop-up window to connect.

If the device is encrypted, the pop-up window will appear, enter the password.

Network connection is successful; the status bar icon appears WLAN connection.

 
6.2 BLUETOOTH

You can transfer data, such as music to other device using Bluetooth. Search the device and accept/transfer data. The received data is automatically stored in the directory.

- Access Settings by entering the main menu
- Select wireless & networks
- Check Bluetooth to turn on Bluetooth
- To make your device discoverable, select blue tooth settings and check discoverable.

7. SETTINGS

Select Settings to view and adjust the settings of your device. The Settings menu is categorized into: Wireless & networks, Device, Personal, Accounts and System.

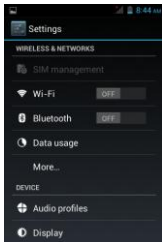

7.1 WIRELESS & NETWORKS

Access this sub-menu to change/view the WLAN, Bluetooth, Mobile Networks and VPN settings. Please refer to network section for detailed information on

WLAN and Bluetooth.

To access net using GPRS service, please go to Mobile Networks > Network Settings > Access Point Name > select the desired SIM.

7.2 SIM MANAGEMENT

Your device supports two SIM cards, which can be managed by accessing the SIM Management sub-menu.

7.3 AUDIO PROFILES

You can choose to change the Volume, ringtone, touch sounds and other sound settings for your device using this sub-menu.

7.4 DISPLAY

With this function you can configure the display characteristics of the device including brightness, animation, auto-rotate screen and screen time out.

7.5 STORAGE

View and manage the data storage of your device:

- **Total Space and Available Space:** Lists the amount of space on the microSD card installed in your device and the amount you have used to store photos, videos, music, and other files.
- **Un-mount SD Card:** Un-mounts the micro SD card from your device so that you can format the card or safely remove it when the device is on.
- **Erase SD Card:** Permanently erases everything on the micro SD card.
- **Available Space:** The amount of internal phone storage used by the operating system, its components, applications (including those you downloaded), and their permanent and temporary data.

7.6 BATTERY

You can check the battery status of the device by accessing this sub-menu.

7.7 APPS

This sub-menu enables you to manage all the installed and running applications saved in the device memory and SD card. You can remove and manage installed applications, view and control running applications, allow installation of non-Spice build in market applications.

7.8 LOCATION ACCESS

The settings related to the location can be configured using this sub-menu.

7.9 SECURITY

You can protect your device from unauthorized access by setting the Pattern or PIN code.

Enable or Disable SIM card PIN

When PIN code is enabled, you are required to enter the PIN code before making a call.

- Go to Application Drawer > Settings > Security.
- From the SIM card lock tab, select Set up SIM card lock.
- Select a SIM card.
- Tap Lock SIM card to use PIN. Check to enable, uncheck to disable.
- Enter the current PIN code.
- To change the PIN code, select Change PIN.
- Enter the old PIN code.
- Enter the new PIN code and confirm.

Setup Screen Lock

- You can set up a lock for your screen in form of Pattern or PIN code.
- Go to Settings > Security
- Set up screen lock
- Select a desired form (Pattern, PIN code, Slide or Password)

7.10 LANGUAGE & INPUT

Use the Language & Input settings to select the language for the text on your device and for configuring the onscreen keyboard, including words that you've added to its dictionary.

7.11 BACKUP AND RESET

You can back up your data and Factory data reset.

7.12 ACCOUNTS

Use the Accounts & Sync settings to add, remove, and manage your Google and other supported accounts. You also use these settings to control how and whether all applications send, receive, and sync data on their own schedules, and whether all applications can synchronize user data automatically.

7.13 DATE AND TIME

You can select to set date, time and time zone using this sub-menu.

Use Automatic unless you need to override the network values.

Use 24-hour format: Select to set 24-hour formats on or off.

Select Date format: Select from a variety of formats.

7.14 SCHEDULE POWER ON/OFF

You can set the time for auto power on /off. Do turn the status on before using that function, and then the time.

7.15 ACCESSIBILITY

You can use the Accessibility settings to configure any accessibility plug-ins you have installed on your device.

7.16 ABOUT PHONE

You can view system information Including System updates, Status, Battery use, Legal information, Model number, Android version and so on.

8. APPLICATIONS & UTILITIES

For your entertainment purpose, your device is provided with several interesting games, applications and utilities. Please ensure that you have GPRS setting in your device to access the applications. Contact your operator for GPRS settings.

CALCULATOR

Calculator helps you perform basic arithmetic functions, such as addition, subtraction, multiplication and division.

CLOCK

The clock function gives you an access to alarm clock.

- Tap Application Tab to enter the Main Menu
- Select Clock
- Select from the various options available, select Alarm
- Tap Menu key to add alarm and change/view the Settings.

FACEBOOK

Facebook is a very popular social networking site around the world giving people the power to share and make the world more open and connected. Millions of people use Facebook every day to keep up with friends, uploads an unlimited number of photos, share links and videos, and learn more about the people they meet. Please ensure that you have GPRS settings in your device to open Facebook. Contact your operator for GPRS settings.

GMAIL

Gmail is Google's web-based email service. Google Mail is configured when you first set up your device. Depending on your synchronization settings, Google Mail on your device is automatically synchronized with your Google Mail account on the web.

- Go to Main Menu > Gmail.
- Select Create or Sign in your Google account.
- Follow the on screen instructions to login or create your Gmail username and password. Once logged in, you can begin reading and sending emails from your Gmail account.

GOOGLE SEARCH

Now your device enables you to find anything anywhere with Google Search. Please ensure that you have GPRS activated on your SIM card before using this service. Just type your query in the search bar and press Go. The result page will open up.

MAPS

Maps is Google's mapping service to search for places of interest.

NAVIGATION

Do not manipulate this application while driving. Traffic data is not real-time, and directions may be wrong, dangerous, prohibited, or involve ferries. Walking routes may be missing sidewalks or pedestrian paths.

PLAY STORE

Play store allows you to find and download applications and fun games for your device. Go to Main Menu > Play Store and setup your Google account. Select Create to create a new account or Sign in to sign in your existing account. Once you are signed in you can begin searching and downloading programs from the market. Tap Apps to view the list of applications available and tap Games to view the list of games available.

The services/applications provided by Play Store solely belong to Google and are not affiliated with Spice, and Spice does not assume liability for them.

LOCAL

Places helps you discover nearby places you'll love. Quickly search for Restaurants, Cafes, Bars and other places, while on the go. Places also makes it easy to quickly rate the places you visit. By rating places you'll get place recommendations based on the places you like and recommendations from your friends.

SPICE GANG

SpiceGang has different content categories from where you can download wallpapers, play GPRS games, get sports update, connect to your friends and do much more. All services within Spice Gang are GPRS based services. Please contact your operator for GPRS settings.

DOCUMENTS TO GO

This application allows you to view various files on your device. Just save your document in the memory card and view those through Documents To Go

application.

YOU TUBE

YouTube is an online video streaming service that allows you to view, search, and upload videos.

To start using YouTube

Tap the Application Tab to enter Main Menu > Select YouTube.

Videos are grouped into various categories. Tap a category to see the available videos for that category. Select a video to play it.

OLX

Start using the #1 Free Classifieds App!!!The best way to buy and sell 'on the go' and in your local area. OLX allows you to easily post your ads for free and search for classified ads in your local area. Whether it is a flat screen TV, mobile phones, electronics, used cars, an apartment to rent, or a second-hand piece of furniture, OLX provides you with millions of buyers and sellers to connect to, all for free!

9. SPECIFICATIONS

Screen (HVGA)	8.89cm
Battery	1500mAh
Dimensions	119X63X11.5cm
Band	900/1800 MHz
Standby Time	120hours
Maximum Talk Time	8hours
USB	5pin

**Depending upon local network signal strength.*

10. SUPPORT AND CONTACT

You can visit www.si2imobility.com/spicemobiles/ for additional information, downloads and services related to your Spice handset.

For further assistance or queries, you can call on SPICE customer helpline Number: +91 11 42921000 or mail at customercare@smobility.in or product@smobility.in.

Note: After sales service of the device is confined to the country in which the purchasing is done.



ENVIRONMENTAL CONCERN

Help us save Our Environment...GO GREEN..!!

All our endeavors are directed towards providing environment friendly products to you. The material used in our devices are recyclable and can be reused to make new products. We strive to make products that are safe for our consumers as well as the environment. Come join hands with us and make world a better place to live.

Preserve natural resources for future generations by recycling your phone. The phone contains some metals, when recycled properly; these can be put back into circulation, decreasing the need for new metal mining. Recycling reduces the need for raw materials, saves energy, helps mitigate Global Warming and reduces pollution, reduces waste products in landfills; therefore preserving natural resources for the future and saving the planet.

Follow some simple steps and contribute towards saving the planet.

DOs

- Recycle your handset and its accessories.
- To protect natural resources and to promote re-use of the material, kindly separate batteries from other type of waste.

DONTs

- Do not dispose off your mobile and its battery in fire.
- Do not dispose your mobile with the regular waste.
- Do not over charge your handset. Remove the charger when battery is full.

Don't trash your phone, instead RECYCLE it



This logo signifies that this product and/or its constituents should not be disposed off with other household waste.

Hazards of Improper handling, accidental breakage, damage and /or improper recycling of hazardous elements

If this product is improperly handled, broken or damaged or carelessly recycled or disposed off in the fire, can result in environmental and data security

concerns, including the following :

- Affect nearly every system in the human body and result in birth defects, brain, heart, liver, kidney and skeletal system damage. They will also significantly affect the nervous and reproductive systems of the human body ;
- When burned, create cancer-producing dioxins which are released into the air we breathe ;
- If thrown in landfills, may leach into groundwater affecting your local community ;
- In warm climates, the oxidation of mercury in the environment can be accelerated, leading to the creation of oxidized Hg atoms that are known to be associated with ozone depletion; and
- Improper recycling additionally results in data security issues, as private electronic information remains on hard drive, if not properly removed before disposal.

How to Recycle

Please get your electronics products recycled only through authorized recyclers, approved by Pollution Control Board. We provide facility of recycling of our products. For details of our collection centers, please visit our website or call our customer care.

Help us to GO GREEN.

Constitution of Hazardous Elements in your Device:

Your device does not contain the following hazardous elements in a proportion higher than the limits provided hereunder:

- maximum concentration value of 0.1% by weight in homogenous materials for lead, mercury, hexavalent chromium, polybrominated biphenyls and polybrominated diphenyl ethers ; and
- maximum concentration value of 0.01% by weight in homogenous materials for cadmium.