

# MAXX MX472 Sleek User Manual

---

Dear Customer,

Thank you for purchasing **MAXX MX472**. Kindly read this user manual carefully to learn about key functional characteristics and operational methods of this mobile phone.

## Contents

|                                               |    |
|-----------------------------------------------|----|
| I Safety and precautions.....                 | 2  |
| II Operation of menu functions.....           | 4  |
| III. Application of USB storage function..... | 6  |
| IV Troubleshooting.....                       | 7  |
| V. Specific Absorption Rate .....             | 8  |
| VI Terms & Conditions for Warranty .....      | 10 |

## **I. Safety and Precautions:**

To use your MAXX phone safely and effectively, please read the following information before use:

 Please turn off your phone when you are near a chemical plant, a gas station, an oil depot or other explosives.

 To ensure safety, please use earphone during driving; Otherwise, unless emergency, make a call after parking your car by the roadside. DO NOT use the phone during driving at high speed.

 Do not use your cell phone while in a plane. Please check whether Flight mode is set or not before boarding.

 Do not use your cell phone in a hospital to avoid interference with the normal operation of medical equipment which may result in a medical accident. If the cell phone is used near a pacemaker, audiphones and some medical electronic equipment, you should pay special attention that the cell phone may interfere with these devices.

 Auxiliaries and accessories not provided by us are excluded from the guarantee.

 Do not dismantle your cell phone by yourself. In case of a failure, please contact the service station specified by us. Only qualified person may install or repair this product.

 The phone should be charged in the environment which is well-ventilated, and should be kept away from inflammable substances and explosives.

To avoid demagnetization, please keep your phone away from magnetic substances, such as magnetic disk, credit card, etc.

 Please be sure the phone isn't exposed to any liquid. In Case this situation occurs, please remove the battery and contact the service station specified by us.

Please use your phone in the environment which is neither too hot nor too cold, do not expose your phone in strong sunlight and in high-humidity environment.

 All wireless devices may be susceptible to interference, which could affect performance.

 Your cell phone has photo and record functions, please use these functions following the related laws and regulations. You may violate the laws and regulations if you take photos and record without authorization.

- Do not dispose the worn battery as common domestic rubbish. Please dispose the worn battery according to the specified instructions where the disposal of a worn battery is clearly specified.

**Note:** The Company will not undertake any responsibility for any consequences caused by failure to observe the above-mentioned suggestions or improper applications.

If any content described in this manual goes against that of your cell phone, it is subject to the real cell phone.

**MAXX operates a policy of continuous development. MAXX reserves the right to make changes and improvements to any of the products described in this document without prior notice.**

The availability of particular products may vary by region. Please check with the MAXX dealer nearest to you.

## **II. Operation of menu functions:**

In the standby mode, select **Menu** and the desired menu and submenu. Select **Exit** or **Back** to exit the current level of menu. Press the end key to return to the standby mode directly.

---

### **1. Messages:**

The SMS function is a network service. You may need to apply to the network operator first before you can send and receive a message.

### **2. Phonebook:**

You can add the new contact by selecting menu “Option -> New ”.

You can save the contacts in the mobile phone and SIM card, it depends on the SIM card memory capacity.

### **3. Call History:**

You can view the call history (Missed, dialled, received calls) through this option.

### **4. Settings:**

- This menu option lets you view and edit your phone settings, call, display, network and security settings
- The default password for Phone lock, Privacy & Restore factory settings is “1234” you can personalize the password.

### **5. Camera:**

With this function, you can use the built-in camera of the phone to take a photo, or adjust the camera settings. The lens of the camera is located at the back of the phone; it utilizes the phone screen as the viewfinder. Photos generated by the camera are in JPG format.

You can also edit & set camera settings .Also take picture with different camera effects.

### **6. Image viewer:**

Pictures taken can be accessed quickly through Gallery. Select an image to view OR press options to send the selected image, change the storage, delete all files etc. You can make the folders for the photos you taken

**7. Audio player:**

Play the music files, you can stop, stop, played and switch to the next/on a song use screen.

**8. FM radio:**

A compatible headset needs to be attached to the device for the FM radio to function.

**9. Video player:**

Play the video tape of video files, you can stop, stop, played and switch to the next/on a song use screen.

**10. Sound Recorder:**

The mobile phone supports recording formats. You can record conversations, which may be saved to the Audio folder under File Manager

**11. Video recorder:**

With this function, you can use the built-in camera of the phone to take a video recorder.

**12. File manager:**

This menu enables you to access the File Manager, where folders or files in the memory card can be managed

**Caution:** You will lose all the data stored in the memory card after format.

**13. Calculator:**

Calculator enables you to make basic arithmetic calculations, such as addition, subtraction, multiplication and division.

**14. Calendar:**

You can view and edit the memo of a specified date with this function.

**15. Alarm:**

The mobile phone provides alarms and you can set them as your need. If you have configured an alarm, an icon indicated that

you have configured the alarm will appear.

**16. Bluetooth:**

This function is used for transferring the data from two paired phones.

**17. User profiles:**

You could set different scene modes.

--Normal

--Silent

--Meeting

--Indoor

--Outdoor

You could active, settings, rename or enhance ring.

**18. Games:**

Fun & Games option lets you play games provided in the phone.

**19. Services:**

You have to set WAP, GPRS & MMS settings manually. You can download the WAP GPRS settings from the below link <http://www.maxxmobile.in/> . This function allows you to acquire or visit diversified services on the Internet through message or network. Please contact your network operator for more information.

**20. STK:**

STK features are provided by your service provider. If your SIM card supports STK feature, you will see the STK menu.

Different STKs has different STK main menus. Please contact your service provider if the STK does not work.

\*\*\*

The language converter/software may not produce the accurate translation as desired by the user and hence company disowns any results/liability arising therefrom.

---

### **III. Application of USB storage function:**

**Note:** The phone can use USB function (like charging) under switched off mode and switch on mode..

In switch off mode, when you plug in the USB cable, you need not select function; the phone can be connected to the PC and used as a USB Flash Disk. You can also use the USB cable as a charger.

In switch on mode, when you plug in the USB cable, you need to select the “Mass storage” function; the phone can be connected to the PC and used as a USB Flash Disk. You can also use the USB cable as a charger.

---

#### IV. Troubleshooting:

| Failure                        | Solution                                                                                                                                                                                                                                                                                               |
|--------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The phone fails to power on.   | 1. Check that the battery is charged;<br>2. Check that the battery is installed correctly.                                                                                                                                                                                                             |
| Insert SIM card error          | 1. Check whether the SIM card is dirty. If the card is dirty, clean it;<br>2. Reinstall the SIM card;<br>3. If the SIM card is damaged, replace the SIM card.                                                                                                                                          |
| Low Network                    | Check the signal strength indicator on the screen. 4 bars indicate a strong signal, and 2 bars or less indicate a weak signal.                                                                                                                                                                         |
| Call registration fails        | 1. You might have set the Hide Caller ID but the network operator does not support this service;<br>2. There may be strong signal interference;<br>3. You might have activated the Call Barring function;<br>4. You might have activated Line 2 but the network operator may not support this service. |
| Battery fails to charge        | 1. The battery may have been excessively discharged. To charge the battery, it is necessary to connect it to a charger for a certain period of time;<br>2. The battery may have been deteriorated.                                                                                                     |
| Cannot connect to the network  | 1. Check whether the signal is too weak or wireless interference exists around;<br>2. Check whether the SIM card is installed correctly, poor connection exists, or the SIM card is damaged. If the SIM card is damaged, please contact the network operator.                                          |
| Photos shot are too dark       | 1. The brightness is set too low;<br>2. The ambient light is too dark.                                                                                                                                                                                                                                 |
| Photos shot are too blurred    | 1. The object shot is moving;<br>2. Your hand shakes when the shutter is pressed.                                                                                                                                                                                                                      |
| Photos shot are distorted      | The object shot is too close to the lens.                                                                                                                                                                                                                                                              |
| Cannot access the service menu | The SIM card may not support the service.                                                                                                                                                                                                                                                              |

## **V. Specific Absorption Rate:**

Mobile device is a radio transmitter and receiver. It is designed to not exceed the limits for exposure to radio waves recommended by various governments. In India, these guidelines were developed by the Government of India, Department of Telecommunications, Ministry of Communications and IT and include safety margins design to assure the protection of all persons, regardless of age and health, and to account for any variations in measurements.

The guidelines use a unit of measurement known as the Specific Absorption Rate (SAR). )

SAR level for mobile handsets Shall be limited to 1.6 Watt/kg, averaged over a 6 minutes period and taken over a volume containing a mass of 1 gram of Human tissue

Highest SAR Value for **MX472** as below-

For GSM 900MHz – When tested on head - **0.632** Watt/Kg  
When tested on body -**0.415**Watt/Kg

For GSM 1800MHz – When tested on head - **0.534** Watt/Kg  
When tested on body -**0.741** Watt/Kg

As SAR is measured utilizing the mobile device's highest transmitting power, the actual SAR of this mobile device while Operating is typically below that indicated above. This is due to automatic changes to the power level of the mobile device To ensure that it only uses the minimum level required to each the network. While there may be differences between the SAR levels of various mobile devices and at various positions, they meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, Products are designed to be within the guidelines. The World Health Organization has started that present scientific Information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure, then you can do by limiting the length of calls or using a hands-free device to keep the mobile Device away from the head and body.

### **Specific Absorption rate (Safety Precautions) :-**

- a) Use A wireless hands-free system (headphone, headset) with a low power Bluetooth emitter.
- b) Make Sure the cell phone has a low SAR.
- c) Keep your calls short or send a text message(SMS) instead. This advice applies especially to children ,adolescents and pregnant women.
- d) Use cell phone when the signal quality is good.
- e) People having active medical implants should preferably keep the cell phone at least 15cm away from the implant.

## **VI. Terms & Conditions for Warranty**

MAXX MOBLINK offer 12 months limited warranty for the transceiver set from date of import or 12 months Limited Warranty for the transceiver set from date of purchase or whichever is earlier.

Warranty for the accessories -Battery, Travel Charger, Data Cable & Earphone will be 6 months from date of purchase which is provided along with phone package and should be within 12 months warranty period from date of import or whichever is earlier.

MAXX is not responsible for damage arising from failure to follow instructions relating to the product's use, also the warranty does not apply in below cases:

- a) To damage caused by use with non-MAXX certified products
- b) To damage caused by accident, abuse, misuse, flood, fire, earthquake or other external causes
- c) To damage caused by operating the product outside the permitted or intended uses described by MAXX

MAXX warranty obligations for this hardware product are limited to the terms set, for more details of terms & conditions, please refer the website [www.maxxmobile.in](http://www.maxxmobile.in)

Free Memory Card and other freebies (if applicable) will have no warranty.

**WARRANTY CARD Details to be fill up to claim warranty of this phone.**

**Name of Customer :**\_\_\_\_\_

**Model No:**\_\_\_\_\_

**IMEI No (SIM1):**\_\_\_\_\_ **IMEI No (SIM2):**\_\_\_\_\_

**Date of Purchase:**\_\_\_\_\_

**Maxx Moblink Private Ltd.**

Registered Office address :

16th Floor, DLH Corporate Park, Opp Goregaon MTNL,  
S.V. Road, Goregaon (W), Mumbai 400 062.

Tel:1860 233 4444

Email –customercare@maxxmobile.in | www.maxxmobile.in

**Name of Dealer:**

**Dealer Stamp**