

ALL RIGHTS RESERVED

Spice Retail Ltd. ©2013. All rights are reserved. No part of this document can be reproduced without permission. All trademarks and brand names mentioned in this publication are property of their respective owners.

While all the efforts have been made to ensure the accuracy of contents in this manual, we presume no responsibility for errors or omissions or statements of any kind, whether such errors are omissions or statements resulting from negligence, accidents, or any other cause. We operate a policy of continuous development and reserve the right to make changes, modifications and improvements to the device, device features/specifications or any of its parts without prior notice.

Your device may have preinstalled bookmarks and links for third party internet sites and may allow you to access third party sites. These are not affiliated with Spice, and Spice does not endorse or assume liability for them. If you access such sites, take precautions for security or content.

The limited warranty does not cover user manuals or any third party software, settings, content, data or links, whether included/ downloaded in the product, whether included during installment, assembly, shipping or any other time in the delivery chain or otherwise and in any way acquired by you. To the extent permitted by applicable law(s), Spice does not warrant that any Spice software will meet your requirements, will work in combination with any hardware or software applications provided by a third party, that the operations of the software will be uninterrupted or error free or that any defects in the software are correctable or will be corrected.



Note: User's Manual is provided just to guide the user about the functionality of the device. This does not seem to be any certificate of technology. Some functions may vary due to modifications and up-gradations of software or due to printing mistake.

TABLE OF CONTENTS

SAFETY PRECAUTIONS	3
UNDERSTANDING YOUR DEVICE	5
GENERAL INFORMATION	5
TECHNICAL SPECIFICATIONS	5
DEVICE OVERVIEW	6
FUNCTION OF KEYS	6
STATUS ICONS	7
GETTING STARTED.....	8
INSTALLING SIM CARD AND BATTERY	8
INSTALLING MEMORY CARD	9
CHARGING THE BATTERY	9
SWITCH ON/OFF THE DEVICE	10
AUTOMATIC CUSTOMER REGISTRATION	10
BASIC OPERATIONS	10
TO MAKE CALLS	10
TO DIAL INTERNATIONAL NUMBER	11
ANSWER/REJECT AN INCOMING CALL	11
OPTIONS DURING A CALL	11
MAIN MENU.....	11
PHONEBOOK.....	12
MESSAGES	13
CALL LOGS	14
MULTIMEDIA	16
S-LIFE	17
BLUETOOTH	18
FILE MANAGER.....	18
ORGANIZER.....	18
SETTINGS	19
FUN & GAMES	22
PROFILES.....	22
SERVICES	23
SUPPORT AND CONTACT	23
ENVIRONMENTAL CONCERN	24

SAFETY PRECAUTIONS

Please read the following safety guidelines before using the device.

- Do not use the phone while you are driving.
- Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them.
- Keep your phone and its accessories away from children.
- Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. People having active medical implants should keep their cell phone at least 15 cm away from the implant.
- Permanent hearing loss may occur if you use earphones or headphones at high volume.
- Use a wireless hands-free system (headphone/headset) with a low power Bluetooth emitter.
- Make sure the cell phone has a low SAR.
- Keep your calls short or send a text message (SMS) instead. This advice applies specially to children adolescents and pregnant women.
- Use cell phone when the signal quality is good.

Notice:

- Do not dismantle the device or accessories otherwise, manufacturer is not liable to pay for damages as the device and accessories are not covered by warranty.
- Use only original batteries and charging devices.
- Please back up your important data timely and keep them properly. The company is not liable for any failure to call or loss of data due to mis-operation, poor signal or power cut, etc.
- All the screens in this manual are for reference only, and some contents actually displayed may depend upon the presetting of the service provider or the network operator, or the SIM card. If any functions referred to in this manual are different from those of your device, please follow your device.
- Do not put use it in a place with flammable gas such as a petrol pumps. The temperature recommended for using the device is 5-35°C. Do not touch the charger, power cable or socket with wet hands. This may cause an electric shock.



If your phone or any of its accessories do not function normally, then please visit your nearest authorized service facility. The qualified personnel will assist you, and if necessary, will arrange for the service.

SAR (Specific Absorption Rate)

Your device conforms to the Indian guidelines for exposure to radio waves. The limits are given in terms of a unit referred to as the Specific Absorption Rate (SAR), which is a measure of the amount of radio frequency energy absorbed by the body when using a mobile phone. The SAR value as per the Indian

guidelines standard is 1.6 watts per kg (Watt/kg), averaged over a 6 minutes period and taken over a volume containing a mass of 1 gram of human tissue. The highest SAR value of this device when tested is maximum **0.947 Watt/kg**. You can check the SAR value of your handset by pressing ***#07#**.

UNDERSTANDING YOUR DEVICE

General Information

Your device encloses features, such as **Digital Camera, Video Player, Audio Player, FM radio** etc. The SIM card inserted in the slot1 is called Master SIM, and the other one in the slot2 is known as Slave SIM.



Technical Specifications

Battery	1800mAh
Charger	Input: AC90~380V, Output:DC5.0V
Dimensions	123.7*52.8*12.2mm
Weight	90g
Screen	6.09cm, Resolution: 240X320
Standby Time*	Up to 540 hours
Maximum Talk Time *	Up to 540 minutes

** The standby time and maximum talk time depend upon the network signals and settings.*

Device Overview



1. Earpiece	2. LSK/Menu Key
3. Master SIM Key/Call Key	4. Keypad
5. USB Connector	6. Torch
7. Ok/Center Key	8. RSK/Right Soft Key
9. End/Power Key	10. Navigation Keys
11. Headset Connector	12. Camera










Function of Keys

Key	Description
Master SIM Key	To make/answer a call from Master SIM. In the standby mode, press this key to view Call Logs.
Slave SIM /LSK/Menu Key	To make a call from Slave SIM. In the standby mode, press the key to access Main Menu.

RSK/Right Soft Key End/Power Key	Use RSK to execute the functions indicated at the right of the prompt bar on the screen.
	End an ongoing call. Press and hold this key to turn on or off the device.
Navigation Keys	In the editing mode, use the keys to move the cursor. In the standby mode, press the keys to access the function assigned to these keys.
Keypad	Use to enter numbers, letters and special characters. In the standby mode, long press 0 Key to switch on the FM Radio. Press RSK and # key to lock/unlock screen. Long press * key to switch on the torch.

Status Icons

The table below lists various icons that might appear on the status bar while using the device. Apart from the icons for signal strength level and the power, other icons are displayed as per the current mode and priority of the device.

Icon	Description
	Indicates the network signal strength of Master SIM.
	Indicates the network signal strength of Slave SIM.
	Indicates the current battery capacity.
	Indicates that there is an unread SMS in Master SIM.
	Indicates that there is an unread SMS in Slave SIM.
	Indicates that there is a missed call in Master SIM.
	Indicates that there is a missed call in Slave SIM.
	Indicates that Alert type of current profile is Only Ring.
	Indicates that Alert type of current profile mode is Vibrate.



Indicates that the Alert type of the current profile mode is the Ring and Vibrate.



Indicates that the Alert type of the current profile mode is the Ring after Vibrate.



Indicates that the current profile is Headset mode.



Indicates that alarm clock is set as activated.



Indicates the current keypad-locked state.

 
 
GETTING STARTED

Please switch off your device before inserting or removing the battery/SIM card or memory card.

Installing SIM Card and Battery

Your device is provided with two SIM slots for two different SIM cards. The SIM card inserted in the slot1 is called Master SIM, and the other one in the slot2 is known as Slave SIM.


- Remove the back cover of the device.
- Hold the phone with the front facing downwards; pull the cover.
- Insert the SIM cards and battery in the device.
- Attach the battery.
- Push the battery cover until it clicks into place.

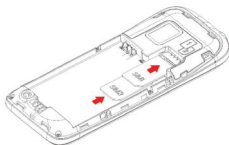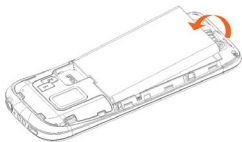

Installing Memory Card

Your device supports T-Flash card, which is a multimedia memory card used to multiply the memory of the device. The T-flash card is small and should be pulled out and installed carefully and prudently in order to avoid any kind of damage.

 - Switch off your device.
- Remove the battery cover.
- Slide the T-Flash card into the slot.
- Attach the battery.
- Push the battery cover until it clicks into place.

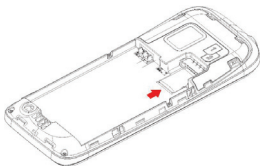


Charging the Battery

The device prompts a warning tone and message stating insufficient battery when the battery power of your device is low.

Please follow the instructions mentioned below to charge your device:

- Plug the connector of the charger into the jack of the device.
- Plug the charger into a standard AC wall outlet.

Note: When  is shown on the screen, it indicates that there is not enough power and you should now charge your device. When charging is complete, the battery icon will stop flashing. You must fully charge the battery before using the device for the first time. It is recommended

to charge the battery for four hours before using the device for the first time. If the device is turned on during charging, you can still make or answer calls, but this will consume battery power, thus will extend the charging time of the device.

Switch On/Off the Device


To turn on/off the device, press and hold the **End/Power Key**. If you have enabled the SIM Lock function then enter the PIN code (4 to 8 digits secret code of your SIM card). It is preconfigured and provided to you by your network operator or retailer. If you enter an incorrect PIN code 3 times in succession, your SIM card will be locked. To unlock it, you must obtain a code from your network operator.

Automatic Customer Registration

After 4 hours of usage a SMS from the device will be sent automatically for the customer registration. *Note: standard SMS charges apply.*

BASIC OPERATIONS

To Make Calls

If the icon  appears on the screen, then you can make or receive calls.

- Input the phone number (should affix the international/ national/regional code or district code if necessary) and then press the Master/Slave SIM key to make a call.
- You can select a number from Contacts and call the Contacts person.

Tip: The signal strength may influence the quality of connection.

To Dial International Number

Your device supports dialing the international emergency phone number, such as 112. With the device, you can dial an emergency call in any country or region under the normal situation regardless of SIM card inserted when the device is located within the coverage of the GSM network. Input the emergency phone number and press **Master/Slave SIM Key** to dial. The device will select the main network automatically after powered on if it is located within the coverage of the main network. The device can use other network, called as roaming, if the device is not located within the coverage of the main network when the network operator protocol permits. You can dial or answer a call when the symbol of the network operator appears on the screen.

Answer/Reject an Incoming Call

- Press **Call/Master SIM Key** to receive the incoming call. You can use the earphone to answer the call when the generic headset is inserted in the device.
- Press **End Key** to reject an incoming call.

Options during a Call

Press **<Options>** to use the following functions during the call:

- **Hold:** temporarily hold the current call.
- **End single call:** end the current call.
- **New call:** to make a new call.
- **Phonebook:** access the Contacts menu.
- **Call Logs:** view call logs.
- **Messages:** enter in the SMS menu.
- **Mute:** on/off the mute mode.
- **DTMF:** on/off the DTMF.
- **Volume:** Adjust volume of call.

MAIN MENU

Menu guides you to the various applications, features and utilities available in your device. In the idle mode, press menu key to access the Main Menu. Use the navigation keys to choose the desired operation and press Ok to enter the selected operation.

Phonebook	Messages	Call Logs
Multimedia	S-life	Bluetooth
File manager	Organizer	Settings
Fun & Games	Profiles	Services

PHONEBOOK

Phonebook refers to the directory wherein all the Contacts are stored in an alphabetical order. You can view, edit, delete, send message and perform various other functions on each contact of your phonebook. Press LSK key in the standby mode and then select Contacts.

Add New Contact

- Go to Main Menu > Phonebook > Add new Contact
- Press ok and enter the Contacts details

Search Contact

- Go to phonebook > contacts and input the initials of a name to be searched.
- Select a desired entry from the list.

Select a Contact from the list and press Ok/Center Key to perform the following operations:

- View: view the detailed info of the selected Contacts.
- Send text message: send message to the Contacts.

- Call: call the Contact.
- Edit: edit the Contact information.
- Delete: delete the Contact.
- Copy: Copy the entry to phone or SIM memory.
- Add to blacklist: Add the selected number to blacklist.
- Phone settings: You can perform operations, such as speed dial, memory status, delete all contacts and so on.

MESSAGES

Your device features, sending and receiving of SMS. Press LSK key to access Main Menu and then select Messages.

Write message

You can create and send SMS to a particular Contact using this sub-menu.

Inbox

Inbox sub-menu enables you to view all the messages received on your Master/Slave SIM.

Drafts

The created messages can be saved to drafts folder for future use. After selecting a message from the Drafts folder, select Options to view/edit/delete or send the saved message from the desired SIM.

Outbox

All the sent but failed messages get stored in the Outbox folder

Sent messages

All the sent messages get stored in the sent message folder.

Broadcast messages

Cell broadcast is the service that the network operator sends messages such as weather report and traffic to the GSM subscribers in specified area.

- Receive mode: Enable/disable message receiving.
- Channel settings: Select, add, edit or delete the channel.
- Languages: Set the language of received message.
- Read messages: If the cell broadcast is enabled, you can read the received messages.

SMS templates

Your device is provided with some commonly used pre-defined messages. These messages can be edited and send instantly.

SMS Settings

You can change the SMS settings, such as memory status, preferred storage, save sent message etc.

- Text message
 - Master/Slaver SIM: You can set and check SMSC address, delivery report, reply path and Voicemail server.
 - Memory status: You can check the memory status of the SIM cards or mobile phone in this menu.
 - Save sent message: Set On/Off.
 - Preferred storage: Set the preferred storage position of the messages (SIM cards or mobile phone).

CALL LOGS

Call Logs lets you view the call details i.e. the missed, received & dialed call logs. In the standby mode, press LSK key to access Menu>Call logs/Call settings. Scroll up/down using the navigation keys to select a call and then press OK key to view

the details and perform operations, such as View, Call, Delete and Edit before call.

Call logs

Missed Calls

With this function, you can check recent missed calls. Scroll the Up/Down keys to select a missed call. Press OK key to access missed call information, and perform operations, such as View, call, send text message, edit before call and delete.

Dialed Calls

With this function, you can check recent dialed calls. Press OK key to access dialed call information, and perform operations, such as View, call, send text message, save to phonebook, edit before call or delete.

Received Calls

With this function, you can check recent received calls. Press OK key to access received call information, and perform operations, such as View, Call, send text message, edit before call and delete.

Delete call logs

Clear call logs. You can select dialed call logs, missed call logs and received call logs to clear. Or you can directly select all call logs to delete.

Call Settings

Master/Slave SIM Call Settings

- Call waiting: Activate, the network will notify you of a new incoming call while you have a call in progress (Net work Service).
- Call divert: This network service allows you to divert your incoming calls to another number. For details, Contact your service provider.

- Call barring: Activate, this network service allows you to restrict incoming calls from your device. For details, Contact your service provider.

Advanced settings

- Blacklist: Set On/Off for blacklist and add blacklist numbers.
- Auto call recorder: Set auto call recorder on/off.
- Auto redial: Set On/Off for auto redial in this option.
- Call time reminder: Give you one or periodic alert tone in the calling process so that you can know the call time. You can also disable the alert tone.
- Answer mode: answer the phone by any key or auto answer when headset mode.

MULTIMEDIA

This menu is specifically designed for the entertainment purpose of the user. To enter this menu, go to the Main Menu and select Multimedia. The various multimedia features offered by your device include **Camera, Image Viewer, Video Recorder, Video Player, Audio Player, Sound Recorder, and FM Radio.**

Camera

Your device is provided with Camera, which supports the photographing and video shooting functions.

Image Viewer

Pictures taken can be accessed quickly through Image Viewer. Select an image to view and press LSK key to perform operations, such as, play, use the image as wallpaper.

Video recorder

In standby mode, select Menu > Multimedia > Video recorder to launch the video recorder and shoot your videos.

Video Player

Your device supports playing various video formats. To access the Video Player, go to Multimedia and select Video Player. All the videos available in the storage selected by you will be displayed. Select a video clip and press OK key to open it.

Audio Player

Audio player allows you to play audio files. Please save your audio files in the My Music folder of the memory card. You can stop, pause, play and switch to the next/previous song using the navigation keys.

Sound Recorder

Your device supports recording. You can record conversations, which will be saved to the Audio folder under File Manager. After selecting a recording, you can select to play, rename, delete etc.

FM Radio

You can use your device to listen to FM radio stations after inserting the headphones. Go to Main Menu > Multimedia > FM radio. When in the Radio interface, press options to view channel list, manual input, auto search, record and file list.

S-LIFE

This mobile phone provides several services for your life, if you need this kind of services, you will be charged by operator. For more information, please consult your local operator.

BLUETOOTH

In the Bluetooth interface, you can perform the following operations:

- Power: Activate/deactivate the Bluetooth.
- Visibility: Set on/off.
- My device: Support below options: searching new Bluetooth device, update service record, rename device, connecting phone and delete no used device.
- Search audio device: to searching new Bluetooth device.
- My name: Display my Bluetooth name and you can edit name as your need.
- Advanced: to check audio path, my address or set storage.

FILE MANAGER

File manager enables you to browse, open and manage the data saved in Memory card. The device provides a certain space for users to manage files and supports the Memory card. You can use the file manager to conveniently manage various directories and files on the Memory card. Choose Files to enter the root directory of the memory. The root directory will list the default folders, new folders and user files.

ORGANIZER

The organizer menu gives you access to a number of features including **Calendar, Calculator, Alarm and Torch.**

Calendar

You can view and edit the memo of a specified date with this function.

- Jump to Date: Skip to the specified date to view or edit the daily arrangements of the day.
- Go to today: You can switch to the current date.
- Go to weekly view: You can view the weekly calendar.

Calculator

The mobile phone is provided with a calculator with basic functions. You can carry out the basic arithmetic operations using the in-built calculator of your device.

Alarm

Your device provides 5 alarms and you can set them as per your need. If you have configured an alarm, an icon indicating that you have configured the alarm will appear on the status bar.

Torch

Go to organizer > torch to turn on /off the torch. In the idle mode, long press * key to switch on the torch.

SETTINGS

In the standby mode, press menu key to access Menu > Settings.

Multi SIM settings

You can set the dual SIM mobile phone accordingly:

- Multi SIM open;
- Only master SIM open;
- Only slave SIM open;

Phone Settings

- Time and Date
 - Set home city: You can set home city as your need.
 - Set time/date: Set current time and date and turn on/off Daylight saving.
 - Set format: Set the displaying format of time and date and Date separator with "\" ":" "/" and "-".
 - Update with time zone: Set on/off for this function.
 - Auto Power on/off: Set scheduled power on/off time.
- Language: Select the phone language (available options are English and Hindi. The default language is English.)
- Pref. input method: Define the default input method.
- Display settings: Set wallpaper/ show date and time.
- Dedicated keys: You can configure short cut functions for the direction Up, Down, Left, and Right key respectively. In the standby mode, press any one of them to access the appointed function.
- Flight mode: to set flight mode or normal mode.
- Misc. settings: Set the brightness and time of LCD backlight.

Network Settings

Please Contacts the network operator for the following network service.

- Network Selection: You can choose Automatic or Manual to select the network (Auto is recommended). When you select Automatic, the

device will make the selection according to the network. If you select Manual, you will have to select the network manually.

- GPRS transfer pref.: set data prefer or call prefer.

Security Settings

- Master/Slave SIM Security: You can choose to set/change the PIN for Master/Slave SIM.
- Phone Security
 - Phone lock: You can lock or unlock the device. Enter the password to activate or deactivate the phone lock. When the device is locked, you will be asked to enter the phone password. 4-8 numbers can be used for the phone password. The default phone password is 1122.
 - Change password: You can change phone password as per your desire.
- Mobile tracker: Input phone password to set mobile tracker. The default password is 1122.
- Keypad auto lock: Set keypad auto lock time or set it off.

Connectivity

To set data connection SIM or data accounts.

Restore settings

- Access the setting, select Reset, enter the password, and follow the prompt to reset and restart the mobile phone. This operation will restore all default settings.
- Note: The default password is 1122. The phone will auto power on after shutdown.

Shortcuts

The system default several shortcut menu, can be manually

add to ten, select one menu, press the left soft key into the "Options", can undertake the following operation:

- Add: to add other menu.
- Edit: edit the current menu.
- Delete: delete selected shortcut menu.
- Delete all: delete the entire shortcut menu.
- Change order: rearrange menu.

FUN & GAMES

Snake: This phone provides a snake game. You can choose start game/Game level/Best grades/Help.

Games settings: You can set Sound effect and volume level as per your need.

PROFILES

The phone provides four pre-defined user profiles that allow the operations of the phone to best suit the environment you are in. The profiles are **General, Silent, Meeting and Outdoor**. The phone will automatically enter the headset profile if you connect the headset to your phone.

General

Activate

Customize

- Alert type: Set Ring only, Vib only, Vib and ring and Vib then ring as your need.
- Ring type: Repeat and Beep once.
- Master/Slaver SIM incoming call: Set up the tone of incoming call of Master/slaver SIM.
- Ringtone volume: Set the volume of ringtone.
- Master/Slaver SIM message: Set up the tone of message.
- Message volume: Set the volume of message.

- Keypad: Set Click, Tone or Silent.
- Keytone volume: Set the keypad volume.
- System alert: Set On/Off.

Silent

Ring, Volume and Alert type mustn't be set. Select "Activate" in "Options".

Meeting

Please select activate to enable the meeting mode on. In the standby mode, long press # key to enable/disable meeting mode.

Outdoor

Please refer to "General" for more details.

SERVICES

To access this menu, enter the Main Menu in the standby mode and then select Service. You can use the network-related services with this function.

SUPPORT AND CONTACT

- You can visit www.si2imobility.com/spicemobiles for additional information, downloads and services related to your Spice handset.
- For further assistance or queries, you can call on SPICE customer helpline number **011-42921000** or mail at customercare@smobility.in or product@smobility.in.

Note : After sales service of the device is confined to the country in which the purchasing is done.



ENVIRONMENTAL CONCERN

Help us save Our Environment...GO GREEN..!!

All our endeavors are directed towards providing environment friendly products to you. The material used in our devices are recyclable and can be reused to make new products. We strive to make products that are safe for our consumers as well as the environment. Come join hands with us and make world a better place to live.

Preserve natural resources for future generations by recycling your phone. The phone contains some metals, when recycled properly; these can be put back into circulation, decreasing the need for new metal mining. Recycling reduces the need for raw materials, saves energy, helps mitigate Global Warming and reduces pollution, reduces waste products in landfills; therefore preserving natural resources for the future and saving the planet.

Follow some simple steps and contribute towards saving the planet.

DOs

- Recycle your handset and its accessories.
- To protect natural resources and to promote re-use of the material, kindly separate batteries from other type of waste.

DONTs

- Do not dispose off your mobile and its battery in fire.
- Do not dispose your mobile with the regular waste.
- Do not over charge your handset. Remove the charger when battery is full.

Don't trash your phone, instead RECYCLE it



This logo signifies that this product and/or its constituents should not be disposed off with other household waste.

Hazards of Improper handling, accidental breakage, damage and /or improper recycling of hazardous elements

If this product is improperly handled, broken or damaged or carelessly recycled or disposed off in the fire, can result in environmental and data security concerns, including the following:

- Affect nearly every system in the human body and result in birth defects, brain, heart, liver, kidney and skeletal system damage. They will also significantly affect the nervous and reproductive systems of the human body ;
- When burned, create cancer-producing dioxins which are released into the air we breathe ;
- If thrown in landfills, may leach into groundwater affecting your local community ;
- In warm climates, the oxidation of mercury in the environment can be accelerated, leading to the creation of oxidized Hg atoms that are known to be associated with ozone depletion; and

- Improper recycling additionally results in data security issues, as private electronic information remains on hard drive, if not properly removed before disposal.

How to Recycle

Please get your electronics products recycled only through authorized recyclers, approved by Pollution Control Board. We provide facility of recycling of our products. For details of our collection centers, please visit our website or call our customer care.

Help us to GO GREEN.

Constitution of Hazardous Elements in your Device:

Your device does not contain the following hazardous elements in a proportion higher than the limits provided hereunder:

- maximum concentration value of 0.1% by weight in homogenous materials for lead, mercury, hexavalent chromium, polybrominated biphenyls and polybrominated diphenyl ethers ; and
- maximum concentration value of 0.01% by weight in homogenous materials for cadmium.