



**VIDEOCON**

**UNIVERSAL DIGITAL CONNECT LIMITED**

**Marketing Office:**

Plot no.: 254, IInd Floor, Udyog Vihar, Phase-IV  
Gurgaon - 122015, Haryana, India.

Website: [www.videoconmobiles.com](http://www.videoconmobiles.com)

Tel: 0124-33660000

USER MANUAL

A26



**VIDEOCON**  
*Mobile Phones*

[www.videoconmobiles.com](http://www.videoconmobiles.com)



# User Manual

## A26

## Table of Contents

<b>Table of Contents .....</b>	<b>2</b>	Home Screen .....	19
<b>Legal Notices.....</b>	<b>5</b>	Notification Icons .....	20
<b>Safety Precautions .....</b>	<b>6</b>	Managing Widgets .....	21
<b>Software Update Information .....</b>	<b>9</b>	Add Functions to Home Screen .....	22
<b>Third Party Applications Disclaimer .....</b>	<b>9</b>	Changing Wallpaper .....	22
<b>Memory Capacity .....</b>	<b>11</b>	Using Headset .....	23
<b>SAR .....</b>	<b>12</b>	Enter text using the onscreen keypad	23
<b>Getting Started.....</b>	<b>14</b>	<b>Basic Operations .....</b>	<b>24</b>
Assembling the device .....	14	Switch On or Off the Device .....	24
Charge the battery.....	15	Screen Lock and Unlock.....	24
Battery Use .....	16	Secured screen lock.....	25
<b>Know your device .....</b>	<b>17</b>	Make a Call .....	26
Phone Layout.....	17	Using Contact .....	26
Key Layout .....	17	Using Call Log .....	26
Using the touch screen .....	18	Answer Calls .....	27
Soft Buttons .....	19	<b>Clock.....</b>	<b>29</b>
		To Set an Alarm .....	30

affect operation.

- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone. Do not hold the external antenna when the phone is in use. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed. In addition, use of unauthorized antennas may result in non-compliance with the local regulatory requirements in your country.

The above instructions apply to your phone, battery, charger and other accessories. If any of them does not work properly, please send it to a

qualified service provider.

<b>Bluetooth .....</b>	<b>30</b>
<b>Browser .....</b>	<b>31</b>
To Set Home Page.....	31
To use the Google Search Widget ..	32
<b>Calculator .....</b>	<b>32</b>
<b>Calendar .....</b>	<b>32</b>
<b>Using the Camera and Camcorder .....</b>	<b>34</b>
Using the CAMERA.....	34
Clicking a Photo .....	35
Viewing Images.....	35
Viewing Videos .....	36
<b>People .....</b>	<b>36</b>
To Add a Contact .....	37
Importing Contacts .....	37
Editing a Contact.....	37
Deleting a contact.....	38
Separating Contacts.....	38

Hide contact groups .....	38
<b>Downloads .....</b>	<b>38</b>
<b>Email.....</b>	<b>39</b>
Adding an Email Account.....	39
Configuring an Email Account .....	39
Sending an Email .....	39
Receiving emails .....	40
Checking emails manually .....	40
Attaching files as attachments .....	40
Reply or forwarding an Email .....	40
Managing Email folders.....	41
<b>File Explore .....</b>	<b>41</b>
Accessing File Explorer .....	41
Creating Folder .....	41
Copying a File .....	42
<b>FM Radio .....</b>	<b>42</b>
Listening to FM Radio.....	42

<b>Gallery .....</b>	<b>42</b>	Text Messages .....	49
Viewing Photos & Videos.....	42	Multimedia Message .....	50
Launching slideshow.....	43	<b>Music .....</b>	<b>52</b>
Playing Video files.....	43	Playing Music.....	53
<b>Gmail .....</b>	<b>43</b>	Changing Playback Options .....	53
Organize email by labels.....	44	Creating a Playlist .....	53
Account Synchronize .....	44	Removing tracks from a playlist .....	53
<b>Internet Applications .....</b>	<b>46</b>	<b>SIM Toolkit (STK) .....</b>	<b>54</b>
Latitude.....	46	<b>Sound Recorder .....</b>	<b>54</b>
Maps .....	46	Start Recording.....	54
Places.....	47	<b>V-Store.....</b>	<b>54</b>
Navigation.....	47	<b>Settings .....</b>	<b>55</b>
YouTube.....	47	Wireless and networks .....	55
G-Talk.....	48	Device .....	57
TOI .....	48	Personal.....	59
<b>Play Store .....</b>	<b>48</b>	System .....	60
<b>Messages.....</b>	<b>49</b>	<b>Care and maintenance .....</b>	<b>61</b>

### About phone

Access information about your device, check the device's status, and so forth.

### Care and maintenance

Thank you for choosing our phone. Should you encounter any problem with the phone, please contact our dealer or qualified service provider. Your phone is a finely designed and crafted product. Please use it with care. The following instructions will help you comply with the terms of the warranty and enjoy this product for many years:

- Keep the phone and all its parts and accessories out of the reach of children.
- Keep the phone dry, all kinds of liquid will erode the electronic circuit.

- Do not use or store the phone in a dusty place to avoid damaging the removable parts.
- Keep the phone away from hot places, high temperature can shorten the life of electronic device, warp or melt certain plastic and damage batteries.
- Do not attempt to open or disassemble the phone, non-expert handling may damage it.
- Do not drop, crush or shake the phone to avoid damaging the internal circuit board.
- Do not use harsh chemicals, cleaning solvents or strong detergent to clean the phone.
- Do not paint the phone or the paint may obstruct the removable parts and

settings to the factory default values.

## System

### Date & time

Access and alter the following settings to control how time and date are displayed on your device:

- **Automatic date and time:** Automatically update the time when you move across time zones.
- **Automatic time zone:** Set the time zone.
- **Use 24-hour format:** Set the time to be displayed in 24-hour format.
- **Select date format:** Select a date format.

### Accessibility

Check to enable all installed accessibility plug-ins.

### Developer option

- **USB debugging:** Select to connect your device to a PC by using a PC data cable. This is for application development.
- **Stay awake:** Set the device's screen to stay on while charging the battery.
- **Allow mock locations:** Allow mock locations and service information to be sent to a Location Manager service for testing. This is for application development.

### User Interface

- **Force GPU rendering:** Set to use 2D hardware acceleration in applications
- Select **Window animation scale** and **Transition animation scale**

## Legal Notices




All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of VIDEOCON is prohibited. VIDEOCON operates on a policy of continuous development. VIDEOCON reserves the right to make changes and improvements to any of the products described in this document without prior notice.





Under no circumstances shall VIDEOCON be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused. The contents of this document are

provided as it is. Except as required by applicable law, no warranties of any kind, either deselected or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. VIDEOCON reserves the right to revise this document or withdraw it at any time without prior notice. The availability of particular products may vary by region. Please check with VIDEOCON Executive.

## Safety Precautions

Please comply with these precautions to avoid putting yourself or other around you in a dangerous or illegal situation, and ensure peak performance of your device.

Icon	Description
	<b>ROAD SAFETY</b> Do not use your phone while driving.
	<b>INTERFERENCE</b> All wireless devices could affect your device performance.
	<b>HOSPITALS</b> Switch off your device near hospitals and medical equipment.

	<b>AIRCRAFT</b> Switch off your device in aircraft. Wireless devices can cause interference in aircraft.
	<b>REFUELLING</b> Switch off the device when refueling. Do not use the device at refueling point.
	<b>BLASTING AREAS</b> Switch off the device near blasting areas.
	<b>USE SENSIBLY</b> Use in normal condition, as explained in the User's manual. Do not touch the antenna

## Personal

### Accounts and Sync

Change the settings for the auto sync feature or manage accounts for synchronization. Touch the toggle button to turn on and off the synchronization.

### Location services

Allow Google's location service, GPS satellites and location & Google search for determining your approximate location.

### Security

Set the unlock security by Screen lock, encryption, and set up SIM card lock settings. You can also administrate device and credential storage option.

### Language & input

- **Select language:** Open the Language screen, where you can select the language to use for the text input on your phone. You can also select **Spelling correction** and **Personal Dictionary**
- **Keyboard & input methods:** Allows you to choose default language, enable voice search, mouse/trackpad search and pointer speed.
- **Backup & reset**  
Change the settings for managing your settings and data.
- **Back up my data:** Back up your device's settings to the Google server.
- **Automatic restore:** Set the device to restore applications' data you backed up when they are installed in your device.
- **Factory data reset:** Reset your



the dial pad touch tones, touch sounds, screen lock sound and vibrate on touch.

## Display

- **Brightness:** Set the brightness of the display.
- **Wallpaper:** Allows you to select the wallpaper.
- **Auto-rotate screen:** Check to automatically switch the orientation of the screen as you turn the phone sideways or even upside down.
- **Sleep:** Set the length of time the device waits before turning off the display's backlight.
- **Button Light Time:** Set the Button light time manually or by default.
- **Font size:** Allows you to choose the font size of all the icons in phone display.

## Storage

Check memory information of memory cards and your device, and format the external memory.




## Battery

Allows you to check the battery status, battery level and batter usage.

## Applications

Change the settings for managing installed applications.

- **Manage applications:** Access the list of the applications installed on the device and check the application information.
- **Preferred install location:** Allows you to choose the preferred install location where you want the applications to download.

	unnecessarily.
	<b>QUALIFIED SERVICE</b> Only qualified personnel may install or repair phone.
	<b>BATTERIES</b> Use only approved batteries. Do not connect incompatible products.
	<b>WATER-RESISTANCE</b> Your device is not water-resistant. Keep it dry.

## Important safety measures

Your phone is designed to comply with all the necessary precautions and requirements and should be treated with care. The suggested safety measures will help you to use this

product without causing you any health hazards.

Your phone is designed to comply with all the necessary precautions and requirements and should be treated with care. The suggested safety measures will help you to use this product without causing you any physical hazards.

- When buying a cell phone, make sure it has a low SAR (Specific Absorption Rate).
- Use a wireless hands-free system (headset) with a low power Bluetooth emitter.
- Either keep calls short or send a SMS instead. This advice applies especially to children, adolescents and pregnant

women.

Whenever possible, only use cell phone when the signal quality is good.

People having active medical implants should keep their cell phone at least 15cm away from the implant.

The FCC advice: "Many people mistakenly assume that using a cell phone with a lower reported SAR value necessarily decreases a user's exposure to RF emissions, or is somehow "safer" than using a cell phone with a high SAR value. While SAR values are an important tool in judging the maximum possible exposure to RF energy from a particular model of cell phone, a single SAR value does not provide sufficient information about the amount of RF

exposure under typical usage conditions to reliably compare individual cell phone models."

World Health Organization (WHO) Advice: Organizations such as the World Health Organization and the US Food and Drug Administration have stated that if people are concerned and want to reduce their exposure they could use a hands-free device to keep the phone away from the head and body during phone calls, or reduce the amount of time spent on the phone.

## Mobile Networks

Allows you to manage Network connection settings and Data settings. You can enable data usage and data usage in roaming.

## Call Settings

Allows you to manage SIM1/SIM2 call settings. This option allows you to enable Dual Mode, which activates both the SIM cards, only SIM1 or SIM2.

## Device

### Profile Settings

Change the settings for various profiles on your device.

Volumes: Allows you to check the music, video, games and other media. You can set the volume level for ringtone & notifications, and alarms.

Silent mode: Activate the silent mode to mute all sounds except media sounds and alarm ringtones.

Phone ringtone: Select a ringtone to alert you for an incoming voice calls.

Default notification: Select a ringtone to alert you during an on-going event such as incoming messages, missed calls, and alarms.

Vibrate and ring: Allows you to select to vibrate the phone while ringing.

System: Allows you to enable/disable

mentioned earlier in this document.

### Data Usage

Allows you to view the data usage by your phone. Data is network service provider based service. For more information on plans and costing, check with your network service provider.

Touch More to perform more functions:

### Airplane mode

Disable all wireless functions on your device. You can use only non-network services.

### VPN settings

Set up and manage Virtual Private Networks (VPN).

### Tethering & portable hotspot

- USB tethering: Activate the USB tethering feature to share your device's

mobile network connection with PCs via USB. When connected to a PC, your device is used as a wireless modem for a PC.

- Portable Wi-Fi hotspot: Activate the WI-FI hotspot to use the phone as a WI-FI modem and connect to other devices like PC, Laptop, and Phones. Configure WI-FI hotspot for different types of security.

- Bluetooth tethering: Activate the USB tethering feature to share your device's mobile network connection with PCs via Bluetooth.

Note: Drivers can be downloaded from [www.videoconmobiles.com](http://www.videoconmobiles.com)

## Software Update Information

To enhance device performance, we recommend that you get in touch with the nearest VIDEOCON Authorized Service Center, regarding the availability of updated firmware for your device. Please see the enclosed Service Center Directory for the VIDEOCON Authorized Service Center nearest to your location.

## Third Party Applications Disclaimer

Some applications accessible through your mobile belong to third parties and are protected by patent, copyright, trademark and/or other intellectual


property laws. Those applications are provided solely for your personal non-commercial use. You may not use any application in a manner that has not been authorized by the application owner or provider.

Without limiting the foregoing, unless expressly authorized by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, exploit, or distribute in any manner or medium any content or services displayed through this device. "Third party content and services are provided "as is". VIDEOCON does not warrant content or services so provided, either expressly or impliedly, for any

purpose. VIDEOCON expressly disclaims any implied warranties, including but not limited to, warranties of merchantability or fitness for a particular purpose. VIDEOCON does not guarantee the accuracy, validity, timeliness, legality, or completeness of any content or service made available through this device. Under no circumstances, including negligence, shall VIDEOCON be liable, whether in contract or tort, for any direct, indirect, incidental, special or consequential damages, attorney fees, expenses, or any other damages arising out of, or in connection with, any information contained in, or as a result of the use of any content or service by you or any

third party, even if advised of the possibility of such damages.” Third party services may be terminated or interrupted at any time, and VIDEOCON makes no representation or warrantee that any content or service will remain available for any period of time. Videocon reserves the right, in its sole discretion to change/modify/update the software (including without limitation, the availability of any feature or content) of the phone at any time without prior notice. Content and services are transmitted by third parties by means of networks and transmission facilities over which VIDEOCON has no control. Without

## Settings


To launch settings, touch  →Settings.

The available options for customizing settings are:

### Wireless and networks

Change the settings for wireless network connections.

#### WI-FI

Touch the toggle button to turn on/off the WI-FI. Once WI-FI is on, the list of available WI-FI will show. Touch and tap on the selected network to set up the connection. Touch  to perform additional functions:

- **Add network:** Allows you to manually

add the network.

- **Advanced:** Allows you to configure WI-FI settings.
  - **Network notification** - Set the device to notify you when an open network is available.
  - **Keep WI-FI on during Sleep** – Allows you to keep WI-FI on during sleep. You can choose always, open when plugged in and never option.
  - **WI-FI frequency band** – You can check the frequency band, MAC address and IP address.

#### Bluetooth

Allows you to turn on or off the Bluetooth device. To read more information about Bluetooth, please refer to the “Bluetooth” section

- Touch **Delete**.
- The song is now removed from the playlist

## SIM Toolkit (STK)




Short for SIM Toolkit, it is a standard for providing value added services and e-commerce over the GSM networks, using the phone to make the necessary transactions. Services depend on your network service provider.

## Sound Recorder


Sound recorder is useful for the quick recording of sounds. You can also record your voice and set it as a ringtone.

## Start Recording

To start recording:

- Touch  → **Sound Recorder**. Sound Recorder screen is displayed.
- Touch  to start recording. The recording time is also displayed in the screen.
- Record your desired message.
- Touch  to stop recording.

## V-Store

To launch V-Store, touch  → **V-Store**.

Discover **Selected, Localized Applications** on **V-Store**

limiting the generality of this disclaimer, VIDEOCON expressly disclaims any responsibility or liability for any interruption or suspension of any content or service made available through this device. VIDEOCON is neither responsible nor liable for customer service related to the content and services. Any question or request for service related to content or services should be made directly to respective content and service providers.

## Memory Capacity

Memory capacity is dependent on Operating System usage. Available storage capacity may be less as it includes pre-installed operating system,

such as Android and/or pre-installed applications, or media content, shared video/system memory.

## E-Waste Management



**What is E-waste?**

- 'E-waste' means waste electrical and electronic equipment (WEEE).

**How harmful is e-waste?**

E-wastes are considered dangerous, as certain components of some electronic products contain materials that are

hazardous, depending on their condition and density. If improperly disposed, they can leach lead and other harmful substances into soil and groundwater.

Govt. of India vide notification dated May 12, 2011 has announced E-waste (Management and Handling) Rules, 2011 ("Rules").

According to these Rules, the consumer now has the legal responsibility to dispose of the waste electrical and electronic equipment (popularly known as "WEEE") in the prescribed manner and not by just throwing it into a dustbin or giving/selling it to scrap dealer.

V RECYCLE, is an initiative by Videocon where we recycle your old and no longer useful phones.

There are 3 easy steps to begin playing your part:

Step 1: Grab your old and useless phone (or

its accessories).

Step 2: Locate a Videocon Collection Point near you, available at

<http://www.videoconmobiles.com/v-recycle.htm>

Step 3: Drop your old phone into the designated collection boxes.


Lets join hands today to celebrate the glory of nature earth & help in making it a better & healthier place for all of us.

## SAR


Your phone meets the SAR requirements for exposure to radio waves, recommended by Govt. of India. Your mobile phone is a radio transmitter and receiver. It is designed and manufactured so as not to exceed the

## Playing Music

To play audio files on your device:


- Touch  → **Music**.
- Touch **Songs**, and all songs on the device are displayed.
- Touch to select the song. The music playback starts automatically.

## Changing Playback Options


- While in Playback screen, touch .
- Touch **Library** to go to the Music Library screen.
- Touch **Add to playlist** to add the song to a preferred playlist.
- Touch **Use as ringtone1/2** to set this song as ringtone.
- Touch **Delete** to delete this song.

## Creating a Playlist

Add songs to a specific playlist or create a playlist.

- Touch  → **Music**.
- Touch and hold the song you want to add.
- Touch **Add to playlist**.
- Select from the current playlist or touch **New** to create a new playlist.
- The song has been added to the playlist.

## Removing tracks from a playlist

- Touch  → **Music**.
- Touch and hold the song you want to delete.

- **Read reports:** You can choose to activate or deactivate request of read report for each message sent by you.
- **Auto-retrieve:** Uncheck to download only the heading of multimedia messages, which you can then touch to open a menu to download the whole message. This is useful for controlling how much data you download. For example, when connected to a slow data network.
- **Roaming auto-retrieve:** Uncheck to download only the header of multimedia messages when connected to other carrier's data networks. This is useful for avoiding unexpected charges, if your contract has limits on data roaming.

## Notification Settings

- **Notifications:** Check to receive a notification whenever you receive a new message.
- **Choose ringtone:** Allows you to select the ringtone, which notifies you about the receiving of a new message.
- **Vibrate:** Check this option to receive a message notification via vibration. You can choose from three option:

## Service Message Settings

- **Enable WAP PUSH:** Enables you to receive service messages.

## Music

You can transfer music files from your computer to your phone.

limits for exposure to radio-frequency (RF) energy, as recommended by the Govt. of India. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The limits include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health. The exposure standard for mobile phones employs a unit of measurement known as SAR (Specific Absorption Rate). The SAR limit recommended by the Govt. Of India is 1.6 Watt/kg taken over a volume containing a mass of 1 gram of tissue. The highest SAR value for A26 is 1.03 W/Kg. Press \*#07# to check the SAR value on your phone display.

## Getting Started

### Assembling the device

1. Locate the groove at the bottom left of the device and gently remove the back cover by pulling it outwards from the device.



 
2. If the battery is in the compartment, lift and pull it out in the direction of the

arrow (shown below).



3. Insert/remove the SIM cards into their respective slots. Make sure that the contact areas on the cards are facing the connectors on the device as shown below.

### Changing Message settings

- In **Messages** window, touch  → **Settings**. Use the **Settings** screen to modify settings specific to storage, SMS, MMS, and notifications.

#### Storage settings

- **Delete old messages:** Allows you to automatically delete older messages from a thread when the message limit is reached.
- **Text message limit:** Touch to set the number of messages to save per thread of text messages. When the limit is reached, older messages are deleted automatically, if the **Delete old messages** are enabled.
- **Multimedia message limit:** Touch to set the number of messages to save per

thread of multimedia messages. When the limit is reached, older messages are deleted automatically, if the **Delete old messages** are enabled.

#### Text (SMS) settings

- **Delivery reports:** Check to receive delivery reports for the messages you send.
- **Copy SMS to SIM card:** Allows you to copy message to SIM card.
- **Manage SIM1/2 card messages:** Touch to open a window, where you can work with messages stored on your SIM card.


#### Multimedia (MMS) Messages

- **Delivery reports:** Check to receive a report on the messages you send.




the message options.

- Touch **Forward**.
- In **To** field enter the recipient's phone number.

- Touch  to transmit the message.

### Deleting messages

To delete an entire thread, open the message and touch  → **Delete thread**, and touch **Delete** to confirm.

### To delete a message in a thread:

- Touch the message thread to open it.
- Touch and hold the message, and touch **Delete message** and touch **Delete** to confirm.


### Multimedia Message


Attach audio, video, or image files with a message to send it as a multimedia


message.

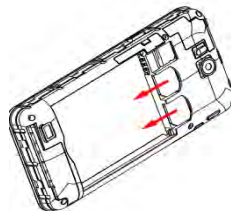 
### Composing MMS

On the Messages screen:

- Touch  to compose a new message and enter a phone number in the **To** field. As you start typing, the matching contacts display in a list. Touch the required contact. You can also enter the name of a contact.

- Touch **Type to compose** to start typing your message. Touch  to add pictures, capture picture, videos, capture video, audio, record audio and so forth. It converts the message in multimedia message.

- Touch  to transmit MMS.



4. Insert/remove memory card. Take compatible micro SD card, and place it into its respective slot.



5. Replace the battery. Align the contacts of the battery with the corresponding connectors in the battery compartment and place the back cover .

### Charge the battery

To charge the device battery:

1. Take the USB cable from the device

packaging, and attach it to power adapter. Now connect the power adapter into a standard AC wall outlet.

2. Connect the mini USB connector on the cable into its designated port at the left side of the device. The battery level indicator on the device screen will start scrolling horizontally to indicate that the battery is being charged.

**Note:** Exercise extreme caution while connecting the charger to the device. The connectors on the charger and on the phone may get damaged if too much force is applied while connecting them.

If the battery is completely discharged, it

may take a while before the on-screen charging indicator starts scrolling.

3. When the battery is fully charged, the battery level indicator on the device screen will stop scrolling.

4. Once the charging is complete, disconnect the charger from the device and then from the wall outlet.

### Battery Use

To extend the battery life of your device:

- Use the standard wall charger to charge the battery for the first time.
- During the first 3-4 charge cycles, charge the battery until the battery indicator on the display stops scrolling.
- Avoid partial charging. Also, wait for

Play Store can guide you to the highest quality, most ideal apps for your interests, needs, and tastes at any given moment.

 
## Messages

### Text Messages

Use **Messages** to exchange messages (text, multimedia, or email) with contacts.

### Composing text message


Touch  → **Messages** to display the


Messaging window. Touch  to compose a new message or open an ongoing message thread.

### Receiving and Managing Messages


Messages sent to and received from a contact are grouped as a message thread. A message thread looks like an exchanged conversation.

### Replying to a text message

• Touch  → **Messages** and touch a message thread to open it. Touch **Type message** to enter your message.

• Touch  to transmit the message.

### Forwarding a text message

• Touch  → **Messages**.

• Touch to view a message thread.

• Touch and hold a message to display


viewed, Top rated, and more. Touch a category to see the available videos of that category.

- Touch a video to play it. You can play video on YouTube only in Normal mode. To view video in Normal mode, check the HQ option displayed on top right corner in landscape mode.

## G-Talk

G-Talk is Google's instant messaging program.

### To Sign in to Talk

- Touch  → Talk.
- Touch **Create** or **Sign in your Google account**.
- Follow the on-screen instructions to login or to create your Gmail username

and password.

- Once logged in, you can begin chatting by using Talk.

## TOI

TOI provides you the links of various newspapers like Times of India, Economic Times, and so forth. You can select the desired link and access the newspaper.

**Note:** "It is recommended to install the third party applications on memory card rather than phone memory for best performance."

## Play Store

The Play Store helps you to discover the perfect applications for your mobile.

the battery to discharge completely before charging it again.



- Charge the battery using the USB cable only if the recommended wall charger isn't readily available.
- Avoid keeping the device on vibrate mode.

## Know your device

### Phone Layout



### Key Layout

Button	Press
	Home Key
	Menu Key



 


Back Key

## Using the touch screen

Use your finger to use the icons, buttons, menu items, the onscreen keyboard, and other items on the touch screen.

- **Touch:** Launch screen items such as application and setting icons. You can enter the text via on-screen keyboard.
- **Touch & hold:** Touch and hold an item on but not lifting your finger until an action occurs. For example, touch and hold an application to display its options.
- **Drag:** Touch and hold icons for a few seconds and then, without lifting your finger, move your finger on the screen until you reach the target position.

- **Swipe or Slide:** To swipe or slide, you quickly move your finger across the surface of the screen, without pausing when you first touch it.
- **Double-tap:** Tap quickly twice on a webpage, map, or other screen to zoom.
- **Pinch:** In some applications (such as Maps, Browser, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).
- **Rotate the screen:** On most screens, the orientation of the screen rotates with the phone as you turn it from upright to its side and back again.

- To clear the map, touch  → **More** → **Clear Map**.
- To view terms, privacy, and for notices, you can touch  → **More** → **Terms, Privacy & Notices**.
- To view information about Google Map, touch  → **More** → **About**.

## Places


Places are a shortcut menu from the **Map** or **Latitude**, which is used to search for a place around you. This feature may be unavailable depending on your region or service provider.

- In Idle mode, open the application list and select **Places**.
- Select a category. Your device

searches for places around your current location that are related to the category.


- Select a place name to view its details.

## Navigation

Navigation is a shortcut menu from the **Map** or **Latitude**. In Idle mode, touch  → **Navigation**; you can get directions to a specific destination.

## YouTube

YouTube is an online video streaming service that allows you to view, search, and upload videos. To start using YouTube:




- Touch  → **YouTube**.
- Videos are grouped into categories, such as Featured, Most popular, Most

## Internet Applications

### Latitude

#### Share your location via Google Latitude

Learn to share your location with your friends and view friends' locations via Google Latitude.




- In Idle mode, touch  → **Latitude**. The device automatically joins Latitude.
- Press  → **Add friends** → **Select from Contacts** or **Add** via email address.
- Select friends you want to add or enter an email address, and select **Add friends** → **Yes**.
- When your friend accepts your invitation, you can share locations.
- Press  → **See map**.

Your friends' locations are marked with their photos on the map.






### Maps

Maps are Google's mapping service to search for places of interest.

#### To open Maps:

- Touch  → **Maps**. Do any of the following:
- To search for a place of interest, touch  → **Search**, and then type the name of the place search.
  - To get direction, touch  → **Directions**.
  - Join **Latitude**, touch Join Latitude, and then touch **Allow & share** to share your location with friends.

## Soft Buttons

	<b>Dialer</b> In Home Screen, touch to launch virtual Dialing Keypad.
	<b>Contacts</b> Touch to display Contacts screen
	<b>Menu</b> Touch to display Menu applications
	<b>Messages</b> Touch to display Messages screen
	<b>Browser</b> Touch to display Internet Browser

## Home Screen

The Home screen allows you to quickly access menu applications, such as Dialer, Contacts, Menu, Messages, and so forth.

### Navigating the Home screen

Touch and scroll horizontally on the home screen to display the available screens in your device. On the extended Home screen, you can add, delete and access other menu applications and phone functions. Touch and hold Home key to view recently used applications.

### Extending the Home screen

Touch and swipe your finger horizontally to view the extended Home screen. These extensions provide additional space for icons, widgets, shortcuts, and other items.

## Deleting applications from the Home screen

To delete an application, touch and hold an application, the icon of the application enlarges, and **'X' Remove** displays at the top of the Home screen. Without lifting your finger, drag the widget over **'X' Remove** to delete it.





## Notification Icons

Notification icons on the status bar state the arrival of new messages, shows calendar events, alarm activation, and so forth. You can also view ongoing settings, such as call forwarding or current call status.

You can open the message, reminder, or

an event notification in the Notification Panel. It also allows you to see the name of mobile operator.

When a new notification icon displays in the status bar, press and hold the status bar, then slide your finger tip in the direction of arrow to open the Notification icons panel.

Icon	Description
	Network Signal Strength
	Battery Level Indicator
	Connected to Wi-Fi
	Phone is connected to the Computer via USB cable

like Contacts, Gmail, and Calendar, can sync data from multiple applications. Others sync data only from the first Google Account, you sign into on your phone, or from an account associated specifically with that application. For some accounts, syncing is two-directional; changes that you make to the information on your phone are made to the copy of that information on the web. Your Google Account works this way. Other accounts support only one-way sync; the information on your phone is read-only.

## To change an account's sync settings:

- Open the **Accounts & Sync Settings** screen.

- Touch the account whose sync settings you want to change. The Data and Synchronization screen appears, displaying a list of information the account can sync.

## Checked items are configured to sync to your phone

Check or uncheck the kinds of information you want to sync to the phone. The Unchecked option will not remove the information from your phone; it will simply stop it from being kept in sync with the version on the web. To remove the information previously synced with the account, you must remove the account.


## Organize email by labels

You can organize your email by labeling your messages or adding stars to mark important messages. You can sort messages by label filter.

### Add a label to a message

- From the Inbox screen, tap and hold a message.
- Select **Change labels**.
- Select a label to add and select **OK**.

### Filter messages

- From the Inbox screen, touch  → **Go to labels**.
- Select the label of the messages you want to view.

### Customizing email settings

You can configure the general settings of

your email account such as account name, email checking frequency, default account, notifications, and server settings.







 


For more information on how to modify email settings, see “**Accounts & Sync Settings**”.





## Account Synchronize

### Configuring account sync and display options

You can configure background data use and synchronization options for all of the applications on your phone.


You can also configure what kinds of data you want to synchronize for each account. Some applications, such as Gmail and Calendar, have their own synchronization settings. Applications,

	Data is Downloading
	Headset is connected
	Bluetooth is On
	Missed Call
	Alarm is activated
	Time
	New Message is received
	New Google Talk Message
	Synchronization is in progress

	New Gmail Message
	More Notifications
	3.5G SIM Slot
	2G SIM Slot

## Managing Widgets

Widgets are like windows into your apps.


Touch  → **Widgets** tab to access widgets.

From the main Widgets screen, you can:

- Move between screens by swiping horizontally.
- Drag a widget to a home screen by

touch and hold the Widget's icon, slide your finger where you want to place it and lift your finger. Note that, you can only drag and place the widget at the available space on the home screen.


### Add Functions to Home Screen

You can add the different functions to the blank Home screen by pressing  → **Wallpaper**, **Manage apps** and **system settings**.

- **Wallpapers:** Add wallpapers to your Home screen.


### Changing Wallpaper

To change the wallpaper on the Home screen:


Touch  → **Wallpaper** to select Wallpaper from **Gallery**, **Live Wallpapers** and **Wallpapers**. You can use the images captured via phone, images saved on memory card, images that have been transferred from your computer to your phone.

Touch **Wallpapers** to open a screen which displays default Wallpapers. Slide the images horizontally to view all available options. Touch a wallpaper option to view its large image. Touch **Set Wallpaper** to change the wallpaper.

- **Manage Applications:** Access the list of the applications installed on the device and check the application information.

- Touch  → **Gallery**.
- Touch **Camera** to view the images in thumbnails.
- Touch an image to view.
- To view previous/next image, touch and scroll the images horizontally on the screen.

### Launching slideshow

While viewing an image, touch  at upper right corner of the screen to launch the **Slideshow**. Touch it again to stop slideshow.


### Playing Video files

In the **Gallery** application, touch **Videos** to view a list of available video files.

### Gmail

Google Mail is configured when you first set up this device. Depending on your synchronization settings, Google Mail on this device is automatically synchronized with your Google Mail account on the web.

#### To open Gmail:

- Touch  → **Gmail**.
- Touch **Create** or **Sign in your Google account**.
- Follow the on screen instructions to login or create your Gmail username and password.
- Once logged in, you can begin reading and sending emails from your Gmail account.



## Copying a File

### To copy a file:

- On the File Manager screen, touch hold the file or folder you want to copy, and then touch **Copy** from the options.

## FM Radio



### Listening to FM Radio

As **FM Radio** uses the wired stereo headset, which comes in product packaging, as the antenna, therefore, connect the headset first to the audio jack of your phone before accessing FM radio.

To access FM Radio:

- Touch  → **FM Radio**, to open the

application.

- If you are the first time user, the device will automatically scans for available FM channels, save them as presets, and play the first FM channel found.
- Touch  to display the operations panel and settings of FM Radio options.
- Touch the **arrows buttons** to search and play next searched FM stations.
- Touch  button to stop FM radio broadcasting.

## Gallery

### Viewing Photos & Videos

To view photos in the album:

- **System Settings:** Allows you to customize your system settings.

## Using Headset

Use the headset for hands-free conversations or listening to music. Take the headset from the product packaging and plug it in its designated slot on the top of the phone.


### NOTE:

- Using a headset limits your ability to hear outside sounds. Therefore, the use of the headset while driving may endanger you or other commuters on the road.
- Setting the headset volume to its maximum levels may impact your hearing.

- To accept a call, press & hold answer/end button on the headset. To end a call, press the answer/end button again.

## Enter text using the onscreen keypad

### Displaying on-screen keypad

Touch an editable field in an application to display the on-screen keypad. To hide the keypad, touch .

## Copy and Paste Text

While you are entering text, you can use the copy and paste feature to use text in other applications.

1. Place the cursor from where you want

to start typing the text.

2. Tap and hold the text input field.
3. Select the **Select text** from the option list.
4. Drag your finger across the text you want to highlight.
5. Select **Copy** to copy, or **Cut** to cut the text onto the clipboard.
6. In another application, tap and hold the text input field.
7. Select **Paste** to insert the text from the clipboard into the text field.

## Basic Operations

### Switch On or Off the Device

#### To switch on your device,

Press and hold the **Power key** (top of

the phone) located at the top of the phone.

#### To switch off your device

Press and hold the **Power key** to display **Phone Options** menu. Touch **Power Off** followed by **OK** to confirm.

### Screen Lock and Unlock

The device phone screen is set to lock automatically after configurable time delay when the device is in the idle mode and no function has been used. It is recommendable to lock the screen, when it is not in use to avoid any unwanted device operations.

#### Lock the Screen

To prevent launching applications inadvertently, press the **Power Key** once to lock the touch screen.

## Managing Email folders

Each account has Inbox, Outbox, Sent, Drafts and Trash folders. Depending on the features supported by your account's service provider, you may have additional folders.

To view an account's folders, while viewing its Inbox or other folder, open the account from the Email screen. Touch a folder to view a list of the messages it contains.

## File Explore

File Explorer is a pocket-sized personal assistant, which lets you organize, edit, and delete files and folders.

### Accessing File Explorer


Touch  → **File Explorer**. Tab displayed under **File Explorer** is:


**Phone:** Display files and folders saved in your phone memory.

**Micro SD card:** Displays files and folders saved in your micro SD card.

### Creating Folder

To create a folder:

- On the File Explorer screen, access the directory of the folder, where you want to create **New folder**.
- Touch  to open the options panel, and then touch **New Folder**.
- Enter **Name** of the new folder in the text box.
- Touch **OK**, and then **new folder** is displayed with the desired name.


- From Home screen, touch  → **Email**.

- Touch the icon  + **Compose**.
- Touch **To**, **Subject** and **compose mail** sections to compose the Mail and send.


### Receiving emails

E-mails are automatically received in Inbox folder when the device is connected to the network.

### Checking emails manually

Launch the email application and touch  → **Refresh**.



### Attaching files as attachments

- Before sending your message, touch  → **Attach File**.

- Browse to the folder in which the file you want to attach is stored.  
**NOTE:** Do not delete the attached file you attached before the message is completely sent (sent label displays, and not the Outbox label).

- Touch **Send**.

### Reply or forwarding an Email

- Open the Inbox folder and click a message to read it. The options are:
  - Touch  **Reply** to send a reply for the email.
  - Touch  → **Forward or Reply all**, and enter the recipient in the **To** field.
  - Compose your message, touch **Send** to finish.

The touch screen is set to lock automatically after configurable time delay when it is in the idle mode and no function has been used.


### Unlocking the Screen

To unlock the device screen, press the **Power Key** once to wake up the device and then, swipe the **Lock Icon** **downwards** open **Dialer** on the phone. On the lock style, swipe the **Lock Icon** **Upwards** towards the **Message icon** to access **Messages** function, swipe the **Lock Icon** **towards right** side to unlock the phone. swipe **Lock icon** **towards left** side to open **Camera** on the phone.

### Secured screen lock

If you are concerned about securing your phone data, you can choose to set

a more complex lock for the touch screen.

Touch  → **Settings** → **Security** → **Screen Lock**

Touch to configure your phone to require a Pattern, PIN, or password to unlock your screen.

Follow the on-screen instructions to choose a **Pattern** for unlocking the touch screen.

Once enabled, press the **Power key** to lock the touch screen. The next time, when you turn on your phone or wake up the touch screen, draw the unlock pattern as selected by you to unlock the screen.



**WARNING:** If you forget the unlock

pattern, touch **Forgot Pattern**. It will request you to login on your primary Google account, which is configured on the phone and this will unlock the screen lock.



## Make a Call


### Using Virtual Keypad

In the idle mode

- On the **Home** screen, touch  to display virtual numeric keypad.
- Enter the phone number including the area code. Touch  to erase a digit. For international calls, insert the “+” sign followed by the country code, area code (without the initial zero) and phone number.

- After entering the number, you can



touch  and then select 

and  to make a call by the desired SIM card.

### Using Contact

Touch **Contact** icon on the **Home** screen to view the contacts list. **Scroll, touch** and **tap** to **select** the **contact** you wish to call, and then **tap** on the **contact number** to make a call after **choosing** the **desired SIM** card.

### Using Call Log

Touch  the Home screen, and then touch , select the phone number to


## Email

### Adding an Email Account

Before you can start using the Email function of the phone, you must configure your email account.

### Configuring an Email Account

When you launch Email for the first time, a wizard will display, which will help you to add your account for many popular email systems, so that you can read and work on the same email as you do on a computer.

- Touch  → **Email**.
- Answer the on-screen prompts and then touch **Next**. Or touch **Manual setup** if you prefer configuring it

yourself.

- Enter the username and password for the account.

**Note:** For Manual Setup, you would need to know the server type that the network service provider uses, such as POP3, IMAP, or MS Exchange. If your provider is using a POP3 setup, you would need to know the incoming and outgoing server address, and their respective port numbers.

- Touch **Done**. Your phone starts downloading your email messages and you can start using the phone to send and receive email messages.

### Sending an Email


To send an email from the account added to E-mail account:

contact's details.

- Touch a category of contact information, such as contact's name, phone number or email address, to enter that kind of information about your contact.
- Change the contact information and touch **Done**.
- To cancel the changes, touch **Cancel**.

## Deleting a contact

 
To delete a contact:

- In the contacts list, touch  → **Delete** in the options menu. Touch and tap to select the contact numbers need to be deleted.
- Touch **OK** to confirm that you want to delete the contact.

## Separating Contacts

You can hide contacts that don't have phone numbers. You can also configure which groups of contacts, for each account, you want to display in the Contacts list.

## Hide contact groups

In **People**, touch  → **Contacts to display** and touch an account to open the groups associated with it.

## Downloads

Allows you to view the download history of the phone.

call by choosing the desired SIM card. You can also send a message and add the number to the Contacts list.


## Answer Calls

If the phone is on ringing mode, press the **Volume keys** on the left side of the phone to put the phone on silent mode. To answer an incoming call, drag the



to the right until it reaches at the



To cancel an active call, touch  on the display panel.

## Reject a Call

To reject an incoming call, drag



to the left until it reaches at the

## Reject With Message

When you can't receive a call or don't want to talk to the caller, you can just send them a quick SMS with pre-programmed message or can type your own message.

During an incoming call, you can drag



to the upwards until it reaches at



and the SMS templates will pop up. You can select the message from the templates list or can **Custom Message**

your own message. Touch **Send** to send the message to the caller.


### Video Calling

Your device supports video calling on 3G network.

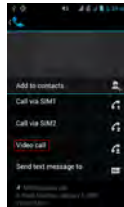 
Note: To make a video call, both parties on the call must have a 3G network subscription that supports 3G service and coverage. For availability, pricing and subscription to video call services, contact your network service provider.

- To make a video call enter the phone

number using the virtual numeric keypad. After entering the phone

number touch  to initiate a video call.

- You can also make a video call by selecting a contact from the contact list. Tap the contact once and select the option of **Video call**.




### To Add a Contact

In Contacts,

1. If you have more than one account with contacts, touch the account to which you want to add the contact.
2. Enter **Name and Number** for the desired contact.
3. Touch a category of contact information, such as phonetic given name and email address, address, to enter that kind of information about your contact.

### Importing Contacts


If you have contacts stored as vCard on a micro SD card or SIM, you can import them into your phone. Similarly, you can export contacts in vCard format onto a micro SD card, to back them up.

 
To import contacts, in the contacts list, touch  → **Import/Export**. Select required option from, Import from SIM card, Import from SD card, or Export to SD card.


**Note:** You can add contacts on your phone and synchronize them with the contacts in your Google Account.


### Editing a Contact

You can always make changes to the information you have stored for a contact.

- In the contacts list, touch the contact whose details you want to edit, and then touch  → **Edit** in the options menu.

Alternatively, you can also touch , and then touch **Edit** while viewing a

- Touch  → **Camera** → **switch to video** to launch the video camera.

- To start recording, touch .
- To stop recording, touch the same again.
- Click on the preview screen to click a photo while recording.


## Viewing Videos

### To view video:

After recording a video, a thumbnail of the video you have just recorded is shown in the lower right corner of the Capture screen. Touch the thumbnail to view it.

- Touch the video to view it in full screen.

- If you want to view more videos, touch and scroll on the screen to left and right to view recorded videos.

- Touch  to perform additional functions, such as delete and details.

## People

The people application lets you store names, phone numbers, e-mail addresses, and other information. Phone contacts are stored in the phone memory. You can save information such as names, pictures, phone numbers, e-mail addresses, and so forth. You can also add the frequently used contacts to the favourites list.



*Note: The picture clarity depends upon the network signals and availability of 3G network.*

## Working with Call Options




During an active call, your phone allows you to perform various actions:

You can press **Volume keys** on the right side of the phone to increase and decrease the call volume.

### Call options are:

- : Allows you to open Virtual Dialing Keypad to initiate conference call, a new call or to view Contacts list or call logs.
- : To put the call on speaker,

touch Speaker.

- : Touch **Mute** to enable and disable the microphone during an active call.
- : Use to put the call on Hold.
- : Use to initiate a new call during an existing call.
- : Use to disconnect an active call.


## Clock

Enables you to view time and date and set the alarm.


## To Set an Alarm

Touch the **Clock** → **Set alarm** → **Add alarm**. The available options are:


- **Turn on alarm:** Touch to turn **On** the alarm.
- **Time:** Touch to set the alarm time.
- **Repeat:** Touch Repeat to set the days when you want the alarm to be repeated.
- **Ringtone:** Touch and browse a sound file, which will play when the alarm is activated.
- **Vibrate:** Touch to let the phone vibrate in addition to playing the ringtone.
- **Label:** Touch to enter a name for the alarm.

Touch  to customize additional options, such as Desk Clock, Add alarm and Settings.

Under **Settings**, you can check Alarm in silent mode, Alarm Volume, Snooze duration, Volume and Ring duration.

**NOTE:** To sound an alarm even when your device is set to silent mode, touch  → **Settings**, and check **Alarm in silent mode**.


## Bluetooth

Touch  → **Settings** → **Bluetooth** to access Bluetooth. Touch **Toggle button** at the top right corner of the display screen to **turn on** or **off** the Bluetooth.

show Zoom in or out controls.

## Clicking a Photo

**To take a photo:**


- Access your **Camera**, and then switch to the camera mode.
  - Touch **Camera settings** to customize settings for capturing the image. The preview image changes as you change the settings.
  - To click the image, touch **Capture icon**  located on the phone.
  - The photo you just took is displayed for a moment. You can preview the photos at right end corner thumbnail.
  - **NOTE:** Do not move your hand until the image is captured.
- NOTE:** You can touch and toggle

between Camera and Camcorder icon.

## Viewing Images

On the Camera screen, touch **Gallery button**. Touch and scroll the images to choose.


After taking a photo, a thumbnail of the photo you have just taken is shown in the upper right corner of the Captured screen. Touch the thumbnail to view it. Touch the on-screen buttons to do any of the following:


- Touch **Lock icon** to share the photo in a message or post it online.
- Touch  to perform additional functions, such as delete, slideshow, edit, and so forth.

## Recording Videos



to choose from the list of time. When the time comes, you will receive a notification at the selected reminder time about the event.

- Touch  to delete the selected event.

On any Calendar view, touch . Calendar Menu is displayed. You can add new event, refresh the calendar, search the event, choose calendars to display and configure the calendar settings.

## Using the Camera and Camcorder

In addition to being a communication device and a personal assistant, your mobile phone also provides you with

endless entertainment possibilities. You can take photos, create videos and audio clips, and download and listen to music.


The camera is a combination of camera and camcorder that you can use to shoot, and share pictures and videos.


### Using the CAMERA

**To access Camera:**


- From the **Home screen**, touch **Camera**. Or, you can also quickly access Camera application, by pressing Camera key on the right-side of the device. Or, you can


also touch  → **Camera**.

- Touch  to close the camera.
- On the camera screen, touch **+** and -to

- Once the Bluetooth is on, you will see the list of available Bluetooth devices.
- Touch and tap on the searched device to pair.
- Touch on the Name of your device to make your device visible to other Bluetooth devices.
- Touch  to perform additional functions:
  - **Rename phone** – Allows you to rename your Bluetooth name.
  - **Visibility timeout** – Allows you to select the visibility timeout time.
  - **Show received files** – Allows you to show the received files via Bluetooth.


## Browser

Touch  → **Browser**, or you can also open **Browser** from the **Home screen**,

 
by touching .

On the displayed **Address Bar**, enter the URL of the webpage you want to visit, and then touch “Go” (blue Go button on the Android keyboard).

### To Set Home Page


1. While viewing a webpage, touch  → **Settings** → **General** → **Set homepage**. You can choose from current page, blank page, default page, most visited sites and other.
2. Choose other and then enter the URL

of the page that you want to set as home page. Touch **OK** to **Save**.

While browsing a webpage, touch  to access additional options like Refresh, Bookmarks, Share page and so forth.

### To use the Google Search Widget

Surf the Internet or the device data from the **Home screen**.



1. On Home screen, Press  to display the Google search box.
2. Enter what you want to search for either the device data or on the web.

3. Touch  again.

### Calculator

Learn to perform mathematical calculations directly on your device like a desktop calculator.

To use calculator:


- In the idle mode, touch  → **Calculator**.
- Use the keys that correspond to the calculator display to perform basic mathematical operations.
- Touch  to **Clear history** and open **Advanced panel**. Use Advanced panel to use **Scientific calculator**.

### Calendar

The Calendar lets you schedule and set



sound alarms for appointments, meetings and other events. Scheduled appointments for the day can be displayed on Home screen.

### Accessing Calendar

Touch  → **Calendar**. Calendar screen is displayed in your device screen.

### Creating an Event

To create an event:

- Touch  → **Calendar**.
- Touch  **New Event** to enter event details.
  - Enter the name of event in **Event Name** field.
  - Enter the location in **Location** field.
  - Select the dates and enter in **From**

and **To** field.

- Touch to select **All Day**.
- Select the **Time zone**
- Enter event description in **Description** field.
- To set **Repetition**, select the repetition from the list.
- To set **Reminders**, select the reminder time from the list.
- Touch **Done** to return to the calendar.

### Setting an Event Reminder

To set an event reminder:

- On any calendar view, touch an event to view its details or event summary.
- Touch **Add reminder**, to add a reminder. Touch the **(X)** button to delete it.
- Touch the **Selected Reminder Time**,