

E7mini User Guide



1. For your safety	3
2. Learn about the phone	4
3. Before using	4
4. Getting started	6
5. Communication	8
6. Multimedia	9
7. Connecting to networks and devices	11
8. Health and safety	15

1. For your safety

Read these simple guidelines. Not following them may be dangerous or illegal.



SWITCH OFF IN HOSPITALS

Follow any restrictions. Switch the device off near medical equipment. Do not use the device where blasting is in progress.

Please keep this cell phone away from children, as they could mistake it for a toy, and hurt themselves with it.

Don't try to modify the phone except by the professional.

Warning!

Only use the authorized spare parts, otherwise it may damage the phone and the warranty will **be void**. And it may be dangerous.



SWITCH OFF WHEN REFUELING

Don't use the phone at a refueling point. Don't use near fuel or chemicals.



SIM CARDS ARE PORTABLE

Keep your phone, phone parts and accessories out of children's reach

Notice: The T-Flash Card can be used as a Memory Disk, the USB cable is necessary.



BATTERY

Please do not destroy or damage the battery, it can be dangerous and cause fire.

Please do not throw battery in fire **to avoid danger**

When battery cannot be used, **please dispose in an environmental safe method**

Do not try to dismantle the battery.

If the battery or the charger is broken or old, please stop using them. **And replace with certified genuine battery**



USE QUALITY EQUIPMENT

Use our authorized equipment **to avoid danger**



ROAD SAFETY COMES FIRST

Give full attention while driving; pull off the road or park before using your phone. **Please follow traffic rules of local city/town**



INTERFERENCE

All wireless devices may be susceptible to cause interference, which could affect performance.



SWITCH OFF IN AIRCRAFT

Wireless devices can cause interference in aircraft. It's not only dangerous but also illegal to use mobile phone in an aircraft.

2. Learn about the phone

Button	Press	Press & hold
Power key (Right side)	Turns on/off the screen.	Opens a menu with options for airplane mode, powering off the phone and so on.
Volume Up/Down (Right side)	When a call is in progress, Increases or decrease the call volume, When the phone is ringing, silences the ringer. On the Home screen when no calls in progress, Increase or decreases the ringtone volume, or sets the phone to be silent instead of ringing. In other applications, controls the volume of music, spoken directions, and other audio.	Quickly increasing the ringtone volume to maximum or minimum.

IMPORTANT

The battery of E7mini mobile phone is fixed, not removable.

3. Before using

 
Insert SIM card

The phone is a Dual SIM mobile phone allowing you to use the facility of two networks. To insert SIM card(s):

1. Stick the ejection pin into the pinhole, the Micro-SIM Box will be out of the card slot.



2. Insert the Micro-SIM card correctly in Micro-SIM Box.

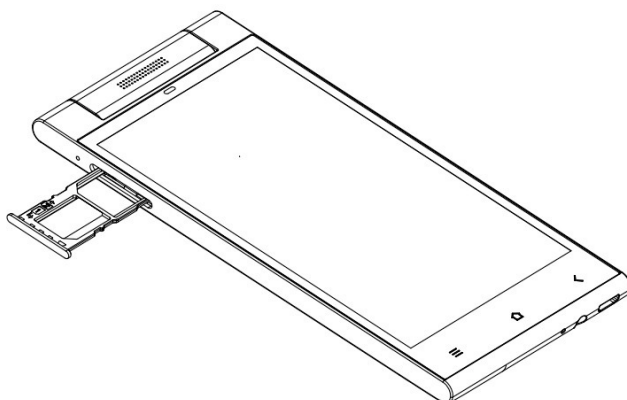

3. Push the Micro-SIM Box into the card slot.

Note1: The phone supports Hot Plug.

Note2: The SIM card is a small object; please keep the card out of the reach of children to avoid swallowing the card by accident. Do not touch the metal surface of the SIM card and keep it away from electromagnetism to avoid loss and damage of the data. You will not be able to connect to the network if the SIM card is damaged.

Charger

1. Connect the charger to the charger jack on the phone.
2. Next connect the charger to a power socket, the charging starts, with the charging icon in an animated state.
3. When the charging icon becomes static, it indicates that the battery is full.
4. Disconnect the charger from the power socket and the phone.

Note: Slight heating during charging is normal. It indicates that the battery is full, when the charging icon becomes static.

4. Getting started

4.1 Turn on/off your phone

- Turn on the phone

 
Long press the **power key** to start up the cell phone. If you have started up the SIM card 1/2 lock, you have to enter SIM card 1/2 PIN.

- Turn off the phone

Long press the **power key**, a context menu will prompt, touch “**Power off**” to switch off the cell phone.

4.2 Getting to know the Home screen

The Home screen is your starting point to access all the features on your phone. It displays application icons; You can customize the Home screen with different wallpaper and display the items you want.

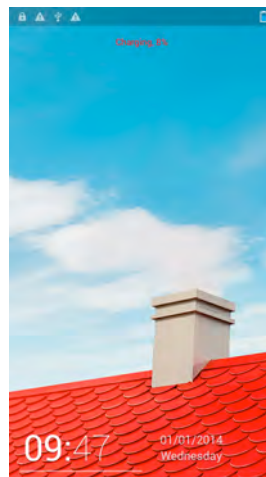

At the top of the screen, the Status bar displays the time, information about the status of your phone, and icons for notifications that you've received.

4.3 Using the touch screen

The main way to control Android features is by using your finger to touch icons, buttons, menu items, the onscreen keyboard, and other items on the touch screen.

Touch: To act on items on the screen, such as application and settings icons, to type letters and symbols using the onscreen keyboard, or to press onscreen buttons, you simply touch them with your finger.

Touch & hold: Touch & hold an item on the screen by touching it and not lifting your finger until an action occurs.

Drag: Touch & hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position. You drag items on the Home screen to reposition them

Swipe or slide: To swipe or slide, you quickly move your finger across the surface of the screen, without pausing when you first touch (so you don't drag an item instead). For example, you slide the screen up or down to scroll a list, and in some Calendar views you swipe quickly across the screen to change the range of time visible.

Double-tap: Tap quickly twice on a webpage, map, or other screen to zoom. For example, you can double-tap a section of a webpage in Browser to zoom that section to fit the width of the screen. In Maps, and in other applications, Double-tapping after pinching to zoom in some applications, such as browser, reflows a column of text to fit the width of the screen.

Pinch: In some applications (Such as Maps, Browser, and Gallery) you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).

Rotate the screen: On most screens, the orientation of the screen rotates with the phone as you turn it from upright to its slide and back again. You can turn this feature on and off.

4.4 Customizing the Home screen

Enter the the screen, to slide the screen to view all installed applications.

To add an item on the Home screen

You can change the position for the applications. Touch & hold an item for a moment and then, without lifting your finger, move your finger on the screen until the main screen shows a thumbnail of the 5 screens. Touch & hold the item to the thumbnail of the screen that you want to move.

To remove an item from the Home screen

1. Touch & hold the item you want to remove. Don't lift your finger. The left of the application will appear "X" icon.
2. Touch the "X" to delete the application.

 
4.5 Connect to network

When you assemble your phone with a SIM card from your wireless service provider, your phone is configured to use your provider's mobile networks for voice calls and for transmitting data.


- **Settings--> Dual SIM Setting;** the name of the wireless service provider you're currently registered with is selected in the list.
- Click the name of the network provider, you can rename it .
- You can set default SIM for voice call and messaging;

4.6. Input text

You can touch a text field where you want to enter text to open the keyboard.

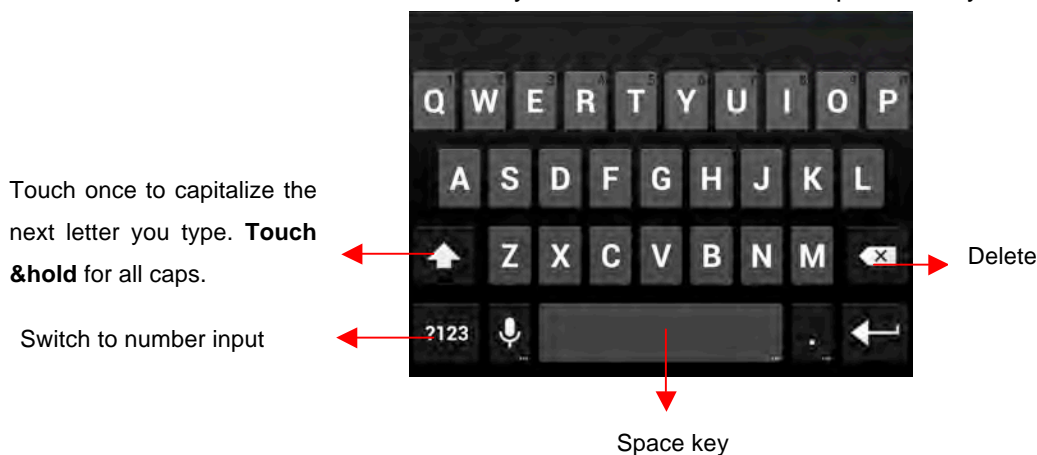


To enter text

- Touch a text field, the onscreen keyboard opens.
- Touch the keys on the keyboard to type; the characters you've entered appear in a strip above the keyboard.
- Use the Delete key  to erase characters to the left of the cursor.
- When you're finished typing, Press Back to close the keyboard.

5. Communication

5.1 Make a call

 - * Touch the phone icon on the Home screen or if you're already working with Contacts, touch the **Phone** tab.
- * Enter the phone number you want to dial;
- * Touch the phone icon to dial the number that you entered. You can select voice call or Video call.

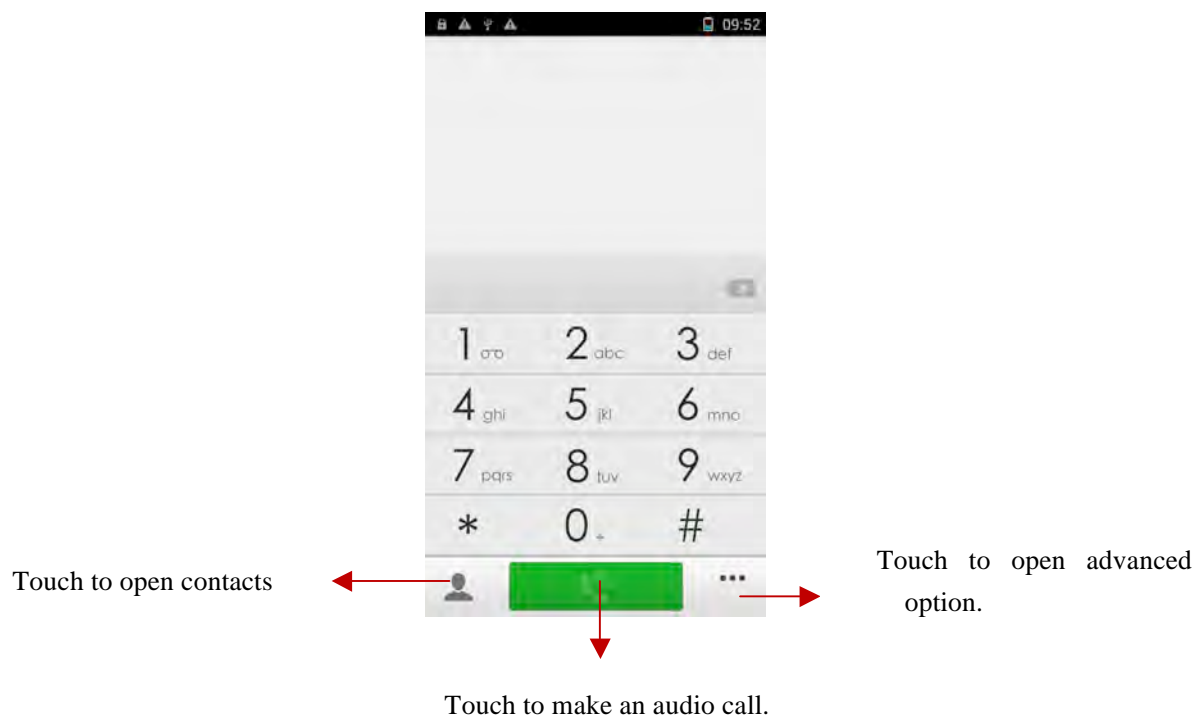

5.2 Messaging

You can use this phone to exchange text messages and multimedia messages with your friends on their mobile phones. The messages come to and from the same contact or phone number will into a single conversation, so you can see your entire message history with a person conveniently.

6. Multimedia

6.1 Camera


Camera is a combination camera and camcorder that you use to shoot and share pictures and videos.

Note1: Pictures and videos are stored on the phone's storage.

Note2: Flip the axle to change the front camera.

6.1.1 Take a picture

 Set the flash to open or closed, automatically status

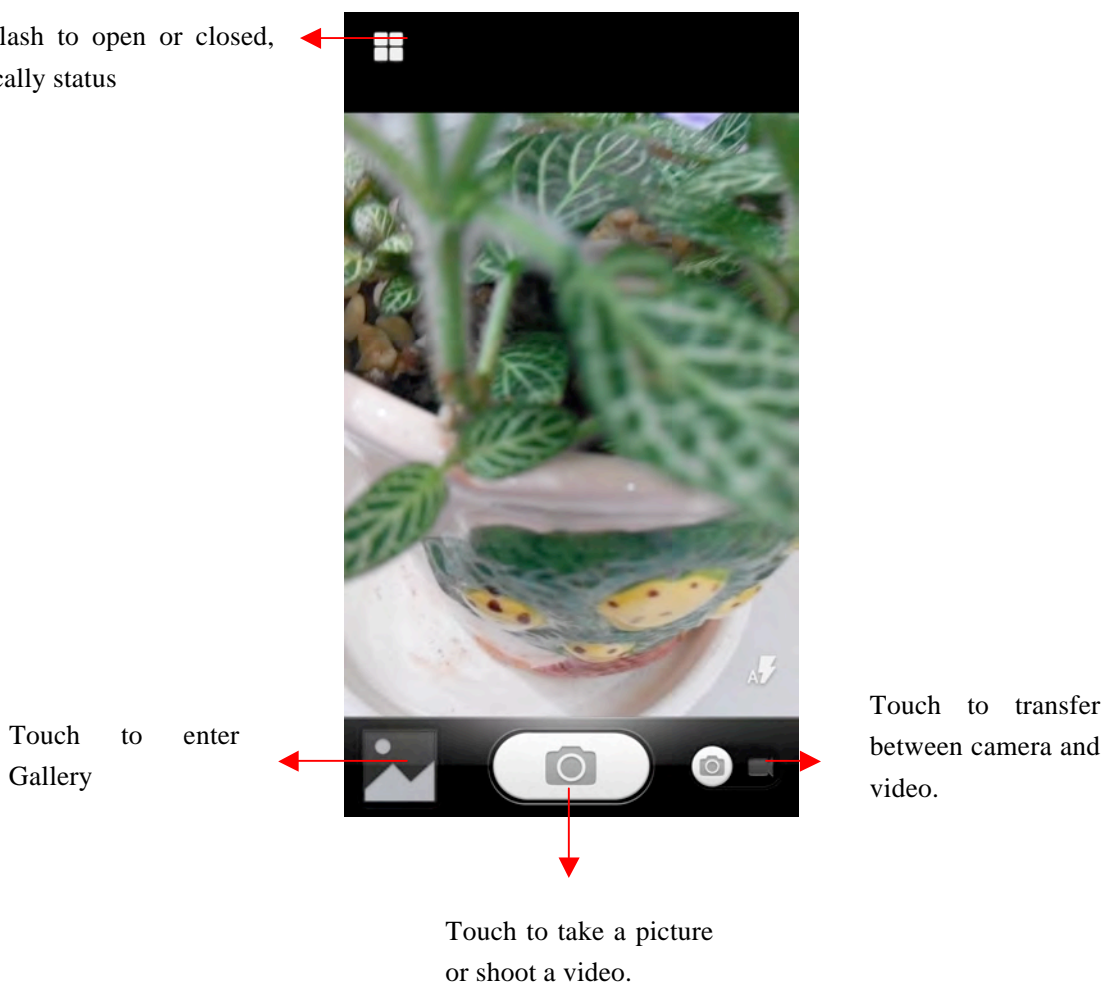

- Adjust your exposure and other settings if you wish. Or leave them on automatic.
- Frame your subject on screen.
- Touch the Shutter icon on screen.

6.1.2 To shoot a video

- Adjust the quality and other settings if you wish. Or leave them on automatic.
- Point the lens to frame the scene where you want to start.
- Touch the Start Video icon. Camera starts shooting the video.
- Touch Stop video icon to stop shooting. An image from your most recent video is displayed as a thumbnail at the bottom Left

6.2 View albums

Touch the Gallery icon to view albums of your pictures and videos. Gallery presents the pictures and videos, including those you've taken with Camera and those you downloaded from the web or other locations.

You can do the following operations:

- To share pictures: you can share your pictures through MMS, Bluetooth, and so on.
- To delete pictures: You can delete the pictures you are viewing.
- To get details about the picture: You can view more details about the picture.

6.3 Music

You use Music to organize and listen to music and other audio files that you transfer to your from your computer.



7. Connecting to networks and devices

Your phone can connect to a variety of networks and devices, including mobile networks for voice and data transmission, Wi-Fi data networks, and Bluetooth devices, such as headsets. You can also connect your phone to a computer, to transfer files from your phone storage, and share your phone's mobile data connection via USB or as a portable Wi-Fi hotspot.

7.1 WLAN

WLAN is a wireless networking technology that can provide internet access at distance of up to 100 meters, depending on the WLAN router and your surroundings. You can configure the WLAN as follow:

- **Settings-->WLAN** check **WLAN** to turn it on.
- Enter **WLAN**. The phone scans for available WLAN networks and displays the names of those it finds. Secured networks are indicated with a Lock icon. If the phone finds a network, you connected previously, It connects to it.
- Touch a network to connect to it.
If the network is open, you are prompted to confirm that you want to connect to that network by touching connect.
If the network is secured, you're prompted to enter a password or other credentials

7.2 Bluetooth

Bluetooth is a short-range wireless communications technology that devices can use to exchange information over a distance of about 10 meters. The most common Bluetooth devices are headphones for making calls or listening to music, hands-free kits for cars, and other portable device, including laptops and cell phones.

7.2.1 To send a file

- **Settings--> Bluetooth**, check **Bluetooth** to turn it on.
- Enter **File Explorer** to select a file and long press it, Select **Share--> Bluetooth**.
- Touch **Scan for devices**, the phone will scan for and display the names of all available Bluetooth devices in range.
- Touch the names of the other device in the list to pair them. After paired the file will be sent.

7.2.2 To receive a file

- **Settings--> Bluetooth**, check **Bluetooth** to turn it on. Ensure your Bluetooth been connected within visibility time
- After paired, the phone will receive the file. The file you received will save to the "Bluetooth" file folder on the phone storage

7.2.3 To connect to a Handsfree device

- **Settings--> Bluetooth**, Select **"Search for devices"**;
- Turn on the Handsfree device, Select the Handsfree device in the list to pair.
- After paired, you can use the Handsfree device to listen music and receive call.

7.3 Smart gestures

The smart gesture system supports a variety of experience and control, through gesture can be more convenient operation.

 
- **Settings-->All Settings--> Smart Gesture**, check **Smart gestures** to turn it on.

7.3.1 Smart dial


- **Settings-->All Settings--> Smart Gesture**, click to turn the **Smart dial** on.

In message content page, contacts details page or call history details page, directly dial the number of the sender; In contacts details page, directly dial the first number if you have many numbers.

①

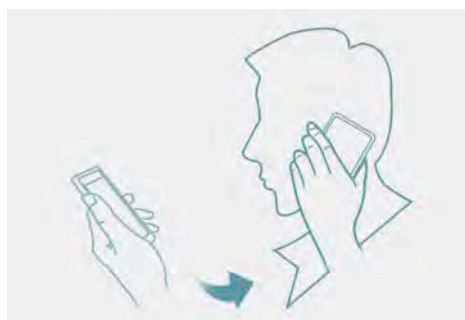

②

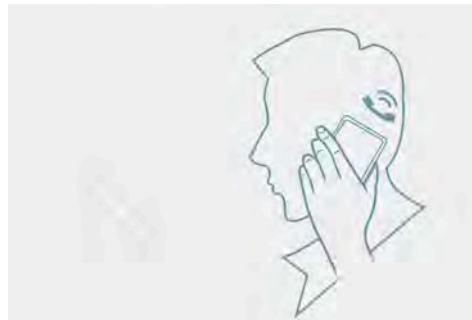 


7.3.2 Smart answer


- **Settings-->All Settings--> Smart Gesture**, click to turn the **Smart answer** on.

Pick up the phone to your face so it will answer the incoming call automatically.

 ①

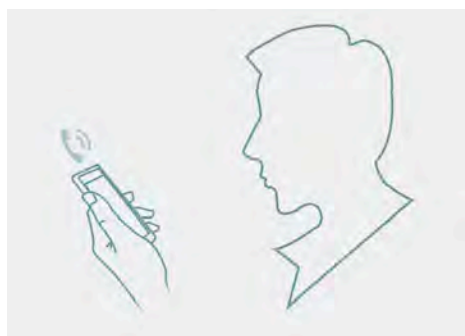

②

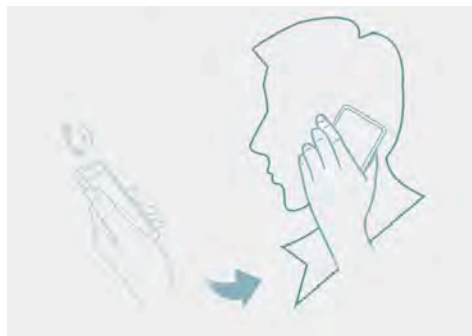 


7.3.3 Pause alarm

- **Settings-->All Settings-->Smart Gesture**, click to turn the **Pause alarm** on

Flip back the phone to pause the on-going alarm.

 ①

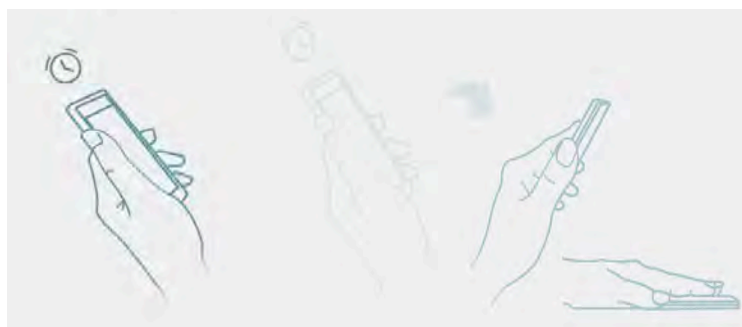

②



7.3.4 Double click wake

 
- **Settings-->All Settings--> Smart Gesture**, click to turn the **Double click wake** on.

In the mobile phone dormant state quick fingers tapping the screen two times, can wake up the mobile phone.

①



②

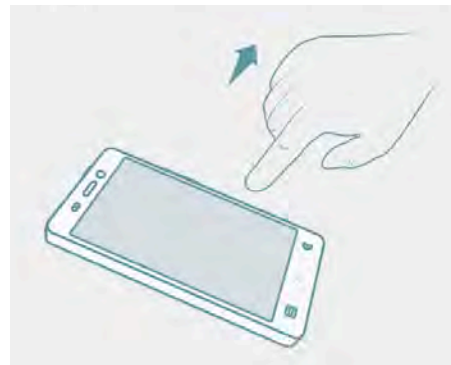

7.3.5 Quick operating

- **Settings-->All Settings--> Smart Gesture**, click to turn the **Quick operating** on.

When the phone is sleep, by drawing the gesture to the shape above can open the selected application or dial to the selected people. Clicking the shape above can set which application to open or which people to dial. If the user has set the screen lock mode to password mode or pattern mode, this will not take effect.



 
7.3.6 Open the camera rotation camera

- **Settings-->All Settings--> Smart Gesture**, click to turn the **Open the camera rotation camera** on.

You can manual rotary camera open the camera.

7.4 Fake call

Slip the screen to the left above can open the application when the phone is sleeping. Click the Fake call then you will receive a fake phone call to help you easily get away from predicament after 14 seconds.

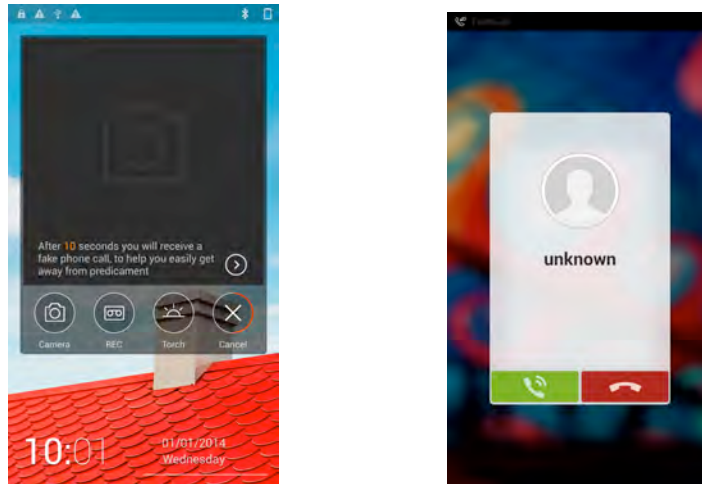

7.5 Connecting to a computer via USB

You can connect your phone to a computer with a USB cable, to transfer music, pictures, and other files between your phone storage and the computer.

When connecting your phone to a computer and mounting its phone storage, you must follow your computer's instructions for connecting and disconnecting USB devices, to avoid damaging or corrupting the files on your phone storage

You can't share your phone's data connection via USB cable at the same time. If you are using USB tethering, you must turn that off first.

7.5.1 To connect your phone to a computer via USB

1. Use the USB cable that came with your phone to connect the phone to a USB port on your computer.
2. Touch **File copy** in the screen that opens to confirm that you want to transfer files. When the phone is connected as USB storage, the screen indicates that USB storage is in use and you receive a notification. Your phone storage is mounted as a drive on your computer. You can now copy files to and from the phone storage

During this time, you can't access the phone storage from your phone, so you can't use applications that rely on the phone storage, such as camera, Gallery, and Music.

7.5.2 To disable phone calls (Airplane mode)

Some locations may require you to turn off your phone's mobile, Wi-Fi, and Bluetooth wireless connections. You can turn off all these wireless connections at once by placing your phone in Airplane mode.

1. Press & hold the **Power** button
2. Touch **Turn on airplane mode**.

8. Health and safety

Please read these simple guidelines. Not following them may be dangerous or illegal.

SAR Compliance

- Your phone is designed not to exceed the limits of emission of radio waves recommended by international guidelines.
- SAR (specific absorption rate) is the measurement of body-absorbed RF quantity when the phone is in use. SAR value is ascertained according to the highest RF level generated during laboratory tests.
- The SAR value of the phone may depend on factors such as proximity to the network tower, use of accessories and other enhancements.
- The true SAR level during normal phone usage will be much lower than this level.
- The highest SAR value of this device at the head and body are **0.612 W/kg and 0.524W/kg** respectively averaged over 1.5cm gap of human tissue.

SAR Recommendations

- Use a wireless hands-free system (headphone, headset) with a low power Bluetooth emitter.
- Please keep your calls short and use SMS whenever more convenient. This advice applies especially to children, adolescents and pregnant women
- Make sure the cell phone has a low SAR.
- Prefer to use your cell phone when the signal quality is good.
- People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant.
- Maintain a preferable distance of 15 mm from the device.

Safe Driving

- Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit.
- Please do not put the phone onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.

During Flight

- Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone during a flight.

In Hospitals

- Your Phone's radio waves may interfere with the functioning of inadequately shielded medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external Radio Frequency. Switch off your device when regulations posted instruct you to do so.
- To avoid potential interference with implanted medical devices such as a pacemaker or cardioverter defibrillator:
- Always keep your phone at least 15.3 centimeters (6 inches) from the medical device.
- Do not carry the wireless device in a breast pocket.
- Turn off the phone if there is any reason to suspect that interference is taking place.
- Follow the manufacturer directions for the implanted medical device.
- If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

Unsafe Areas

- Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.