

QPAD E704

User Manual

Introduction

Acknowledgement

Thanks for your purchase of our product. QPAD E704 is a 7inch high definition tablet PC. Its CPU is BCM23550, Quad Core, clocked at 1.2GHz; it is based on Android 4.2 operating system.

The product is designed with various functions, including 2G, 3G, WI-FI, Bluetooth, GPS, FM, voice call and so on. It is easy to achieve wireless communication and internet, you have access to surf the internet anytime and anywhere using 3G; it is also built with high accuracy Glonass assisted GPS module, so that it can be used for navigation.

The manual systemically introduces the functions, use techniques and announcements, please read this manual carefully before your operation.

Announcements

Preventive maintenance

- Please always keep the device dry. To avoid the device from short circuit troubles, corrosion faults and electric shorts, please prevent the device, battery and charger from water and moisture, and do not operate the device or charger with wet hand(s).
- To avoid failure of device, battery and charger, please prevent the device, battery, charger from violent shock or shake.
- To avoid failure of device, battery and charger, please prevent the device, battery, charger of all over heating or too cold circumstances.
- Never disassemble the device and accessories arbitrarily.

Safety Instruction

Before the operation of the device, please read this chapter. For further details, please refer to the safety instructions and announcement.

- Never use the device when driving, in order to ensure safe driving.
- In the medical area, please abide by related rules and regulations. Please shut down the device when near to the medical area.
- To avoid the wireless signals from interrupting the flight-controlling signals, please shut down the device or use airplane mode when you are boarding a flight.

- To avoid electronic equipment failure, please shut down the device in the vicinity of high-accuracy electronic equipment.
- Please keep the device away from magnetic equipment. The radiation of device may erase the data stored in the magnetic equipment.
- Please comply with related rules and regulations, and respect others' privacy and legal rights while using the device.
- Please strictly adhere to related instructions in the manual when using USB cable to ensure the safety of the device or PC.

Device Introduction



▲ Pictures in this guide are for your reference only, please refer to the real product.

Device Operation and Preparation

Battery Charging

Please use AC adaptor to fully charge the device.











1. Apply the power adaptor to charge the device.
2. Please wait until it is fully charged and don't pull out the adaptor while charging.

When it is fully-charged, the LED will turn to Green.

Device Status and Reminder





Reminder icons

When some reminder message appears on your reminder window, please tap the column and slip the screen to open the reminder list. Choose the menu you need, and confirm the information. Then you can close the reminder window through clicking the column to slide up. Please refer to below status icons :

	New email		Airplane mode on
	USB connected		USB adjustment connected
	Return button		Downloading
	Display recently-used application		Home button
	Battery		WIFI connected



Keys Function

Keys Function Description :

Power button	Short press to sleep/wake up, long press to Power ON/OFF
Volume + (up)	Increase the volume
Volume - (down)	Decrease the volume
Home button 	Click it in any interface will return to main interface.
Back button 	Click it in any interface will return to previous menu
Menu button 	This button will display the menu interface.
Display recently-used application 	Display recently browsed history

Unlock


Under the standby mode, press Powerkey once to make the screen to sleep, press it again to wake the screen. Touch and drag the lock icon to the unlock icon to unlock the screen. Long press the Power key can activate a prompt for powering off your device or switching to airplane mode.

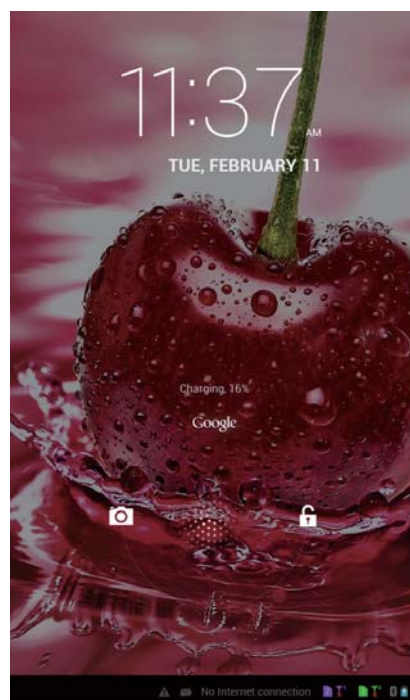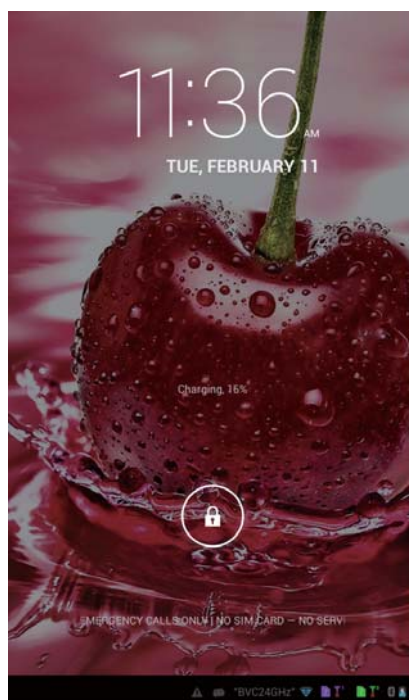


- ▲ If you can not power off your device for unknown reasons, please long press the Power key for more than 10 second to force a shutdown.


Main Menu

Touch Menu icon to enter Main Menu screen, scroll the screen left or right to switch the page of Main Menu. Touch and hold a widget or an app on the screen, and you can customize your Home screen by dragging it to different positions and different screens. Press the Home key to go back to the Home screen.

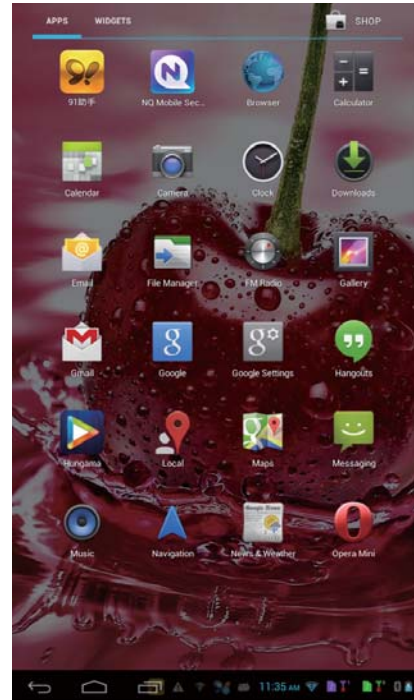


Notification

 You can pull up the status bar on any page to quickly enter Settings  screen. You can also see the notification received by the device. Touch the notification to quickly enter your app receiver to check out.

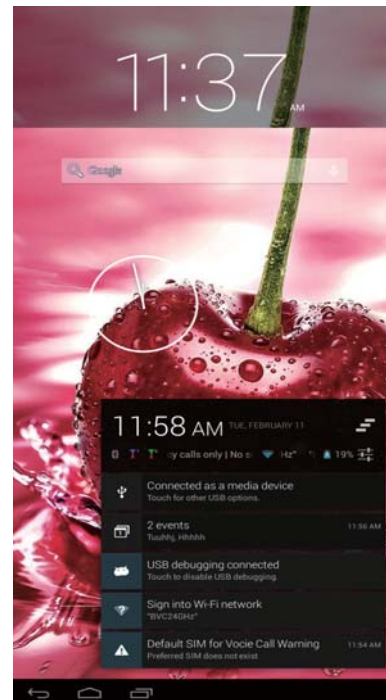


Calling

From you Home screen, touch phone Dialer to dial the phone number. During the call, you can open the keypad to dial numbers or enter your Contacts. Return a call , or call a number from a recent call stored in call log.

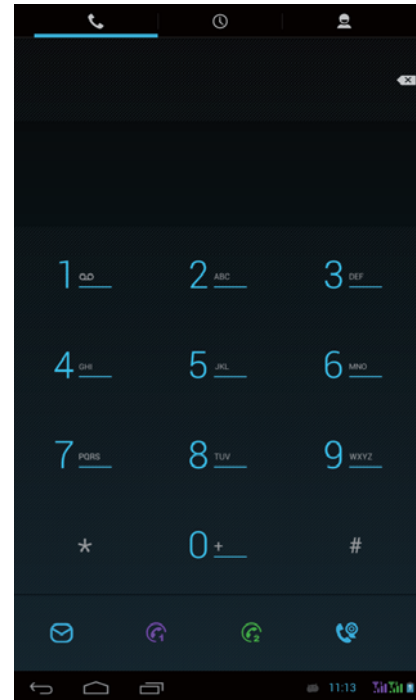


Messaging

Your Tablet can send and receive text and multimedia messages to other mobile phones and to email addresses. Tablet's default input method is Android keyboard. You can also install other input Apps as you like.

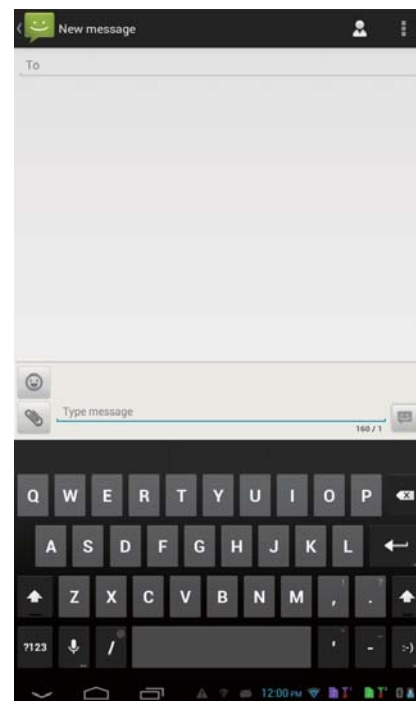


Browser

Your Tablet is equipped with a full HTML Browser, which allows you to access the internet. From the Home screen, select Browser. The webpage can be adjusted according to the screen size. Double tap to zoom in or out while viewing your webpage.

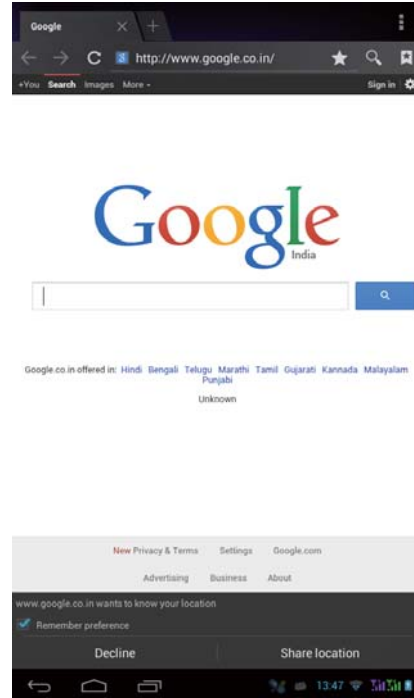

Gallery

The pictures and videos are displayed as folder thumbnails when enter the gallery. The gallery supports many picture formats including PNG and JPG, video formats including MP4, 3GP. Touch the picture or the video to play.

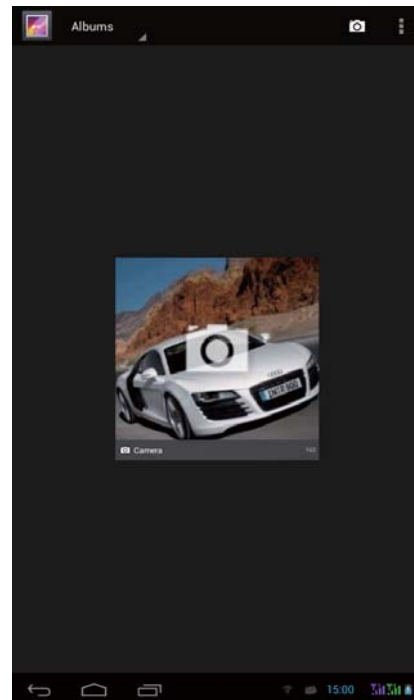

Camera


Enter the camera, touch the screen to focus and shoot freely. There are several kinds of scene modes to select: auto, cloudy, sunny, fluorescent, filament, etc.



Music

Your Tablet supports music formats including MP3, AAC, AMR and midi, etc.

You can choose to play songs as in playlist, or shuffle. An individual song can be repeated and or a playlist.

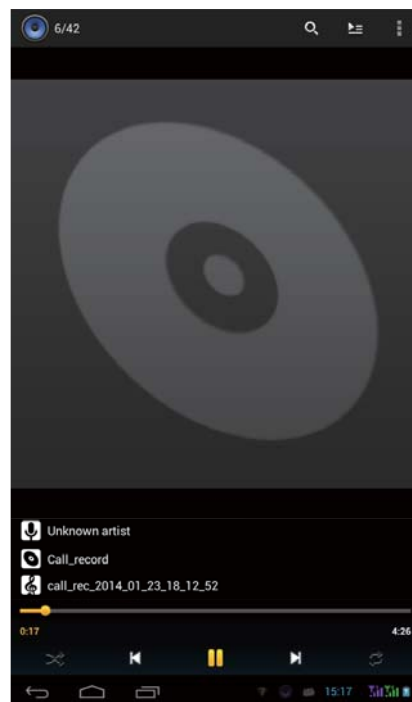


FM Radio

You need to plug your headset into the jack to listen to FM radio. You can switch the playing mode from headset to speaker playing. The channel can be searched automatically and stored for collecting your favorite program.




Sound Recorder

Your Tablet has a built-in sound recorder function. Touch the record button to start the recording and touch the stop button to finish the recording and save the audio file automatically. It can record audio and play the recorded audio.

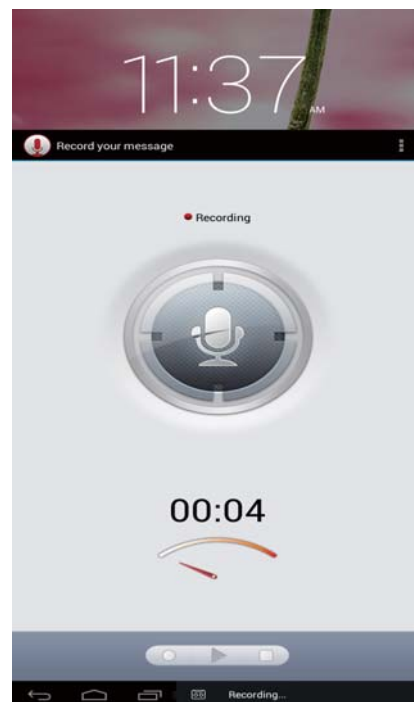

Multitasking

While on a call, you can access your email, calendar, or any other app, and even surf the web when you're connected to WiFi or 3G. To quickly switch between apps, long press the Home key to reveal recently used apps. Scroll up to see more apps, then touch one to reopen it. Scroll an app right or left to end it.

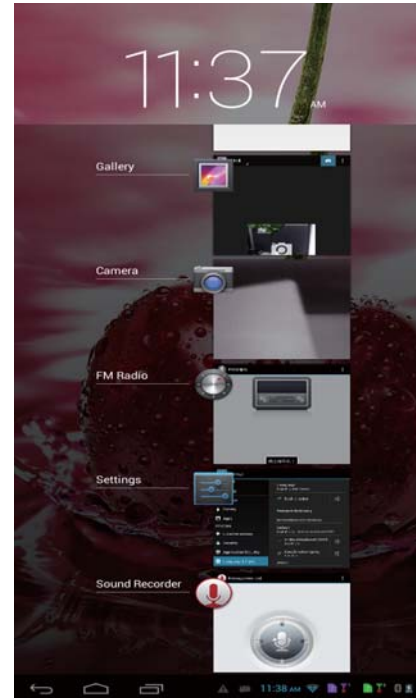

Settings

Enter the Settings screen to customize your Tablet, Personalize it with a different wallpaper and ringtone, and you can also choose a method for locking your screen, view the storage, choose default write disk etc.



Reboot the device

To reboot the device, when device is powered off, press power button, while the device vibrates press volume up key. The device opens into Factory Mode. Using the volume down key, select the action, and press the power key to select “Reboot”.



Note: LAVA does not take any responsibility for any misshappening during this incidence.