

Quick Start Guide

Panasonic is a Trademark of Panasonic Corporation
© Copyright 2013 Panasonic Corporation
All Rights Reserved.
Panasonic Corporation reserves the right to alter
material or technical specification without prior
notice.

Note: - For detailed user manual of phone please log
onto <http://www.mobile.panasonic.co.in>



Panasonic

Table of contents

1. Understanding your Phone.....	3
2. Description Icons	4
3. Insert & Remove the SIM & Battery	4
4. Charging the Battery.....	6
5. Using your Phone.....	7
6. Calling.....	10
7. Messaging.....	11
8. Email	11
9. Connecting to the Internet	12
10. Safety & Precautions	13
11. Regulations & Safety usage.....	14
12. Specific Absorption Rate (SAR) Information	16
13. Disclaimer	17

-1-

Panasonic

Thanks for choosing this Panasonic mobile device, this device is built to provide you with a high quality smart phone experience. Please read this guide carefully and keep it for future use.

- The content and pictures in this manual may differ from the product, or from the software provided by service providers or carriers, and are subject to change without prior notice.
- The items supplied with your device and available accessories may vary depending on your region or service provider.
- The additional accessories may be available at your local Panasonic retailer.
- Other accessories may not be compatible with your device, likewise the supplied items are designed only for your device and may be incompatible with other devices.
- Panasonic is not liable for performance issues or incompatibilities caused by edited registry settings or modified operation system software.
- If a device is rooted, it is liable to lose its guarantee and warranty.

-2-

Panasonic

Understanding your Phone



Key	Functionalities
	Home Key Touch the key to return to the home screen. In idle screen, touch and hold the key to view recently accessed features.
	Back Key Touch to go back to the previous menu
	Recent Apps Touch the key to access to the recent Apps
	Screenshot Key Touch the key to make the screen shots
	Camera Shortcut Touch the key to enter camera mode
	Power ON/OFF Press the button to turn ON/OFF the device and screen

-3-

Panasonic

Description Icons

Icons	Descriptions	Icons	Descriptions
	Shows the phone's network signal strength		Show the phone's battery status
	Speaker has been activated		You have unread SMS
	Call on hold		USB storage turned on
	The ringing tone is set on vibration		Flight Mode
	3G network in use		Roaming is on
	You have missed calls		Alarm is active
	On a call		Bluetooth on
	USB is connected		Wi-Fi is turned on

Insert & Remove the SIM and Battery

Inserting the Battery and SIM

 
- Open the back cover of your phone.
- Insert the SIM in the either slot, where gold coloured contact is facing downwards.
- Align the battery's contact points with those of the phone and gently press the battery down into its place.
- Replace the battery cover clicking it back into its position.

-4-

Panasonic

Inserting the Battery

Closing the Back Cover

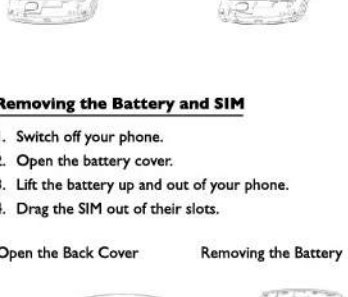

Removing the Battery and SIM

- Switch off your phone.
- Open the battery cover.
- Lift the battery up and out of your phone.
- Drag the SIM out of their slots.

Open the Back Cover

Removing the Battery



-5-

Panasonic

Charging the Battery

The rechargeable Li-ion battery that comes with your phone is ready to be used, but is not full charged.

Please use only Panasonic provided charger for charging

- Connect the charger to your phone, and plug it into a socket.
- The battery indicator in the corner of the screen will scroll to show you it's charging.
- When fully charged, the battery indicator will stop scrolling.
- Disconnect the charger from your mobile, and unplug.

Power ON/OFF

Press the power key to power ON/OFF the phone. When you turn your phone on, it'll automatically check the SIM and show the following information on screen:

- Input SIM1 PIN:** If you've set a PIN for your SIM1.
- Input SIM2 PIN:** If you've set a PIN for your SIM2.


Note:

The PIN is supplied with your SIM. Please replace it with your own PIN code as soon as possible. Contact customer care, if wrong PIN is entered thrice.

-6-

Panasonic

Using your Phone

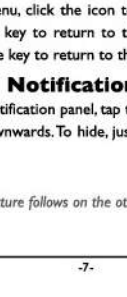

Enter Main Menu

In Idle mode, press the key to enter the main menu on the desktop and press the (Home) key to return.

Enter Sub Menu

In the Main menu, click the icon to select the sub menu, press the Back key to return to the previous menu, and press the Home key to return to the Home Screen.

Open the Notification Panel

To open the notification panel, tap the indicator icons area and drag it downwards. To hide, just drag back the screen upwards.

Note: - Picture follows on the other page

-7-

Panasonic



Other Screen Options

Scroll left or right on idle screen to change and access the other screens.

Add Icons on the Main Interface

Long press the icon on the main menu until it's enlarged and the mobile phone vibrates; drag the icons from main menu to the main interface/Home Screen.

Move Icons on the Main Interface

- Long press the icon on the main interface until it's enlarged and the mobile phone vibrates.
- Drag the icon to the desired position and then release it.

Delete Icons on the Main Interface

- Long press the icon on the main interface until it's enlarged and the mobile phone vibrates.
- Drag the icon to "Remove" to delete it.

-8-

Panasonic

Change Wallpapers

- Long press "Touch Screen" to open the menu.
- Choose from 'Gallery' / 'Live Wallpapers' / 'Wallpapers', select the wallpaper and press 'Set Wallpaper' to complete.

Installing APK files

 
APK is a supported file format for the Android mobile operating system.

- Please copy the downloaded APK file into the SD card
- In Idle mode, click Main Menu to enter the main menu.
- Click 'File Manager' to enter the directory of SD card.
- Click the APK file you wish to install, and follow wizard.

Application Access

- On the Home Screen, select to access application list.
- Scroll horizontally, left or right to access another screen.

The dot at the bottom of screen, if touched moves directly to corresponding screen.



-9-

 
Panasonic

Calling

To make a call, open the dialer screen, enter the phone number and select the green and violet key.



To receive any call, just drag towards the green key and to reject a call, drag towards the red key.

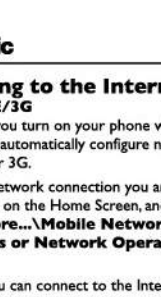

-10-

Panasonic

Messaging

You can create and send text and multimedia messages (MMS).

- Open messaging application.
- Add recipient and enter your message.
- For a multimedia message (MMS) add an item to the message.

Email

Besides your Gmail account, you can also set-up external POP3 or IMAP email accounts in your phone.

To access this function, touch Application tab on Home Screen, then select Email.

An email wizard will guide you through the steps to set-up an email account.

- Enter the email address and password of the account you want to set-up.
- Touch Next, If the account you entered is not provided by your service provider in the phone, you will be prompted to go to the email account settings screen to enter the settings manually. Or you can touch Manual Setup to directly enter the incoming and outgoing settings for the email account you want to set up.
- Enter the account name and display name in outgoing emails.
- To add another email account, go to Settings and touch Add Account on the right of the title.
- Touch Add Account on the right of the title to create.
- To create and send emails touch on the icon on the Inbox Screen.
- Enter recipient(s) email address(es).
- Enter the subject and the content of the message.
- Touch to Attach File to add an attachment.
- Finally, touch to send.

-11-

Panasonic

Connecting to the Internet

GPRS/EDGE/3G

The first time you turn on your phone with SIM card(s) inserted, it will automatically configure network service: GPRS, EDGE or 3G.

To check the network connection you are using, touch Application tab on the Home Screen, and then touch **Settings\More... \Mobile Networks\Access Point Names or Network Operators.**

Wi-Fi

Using Wi-Fi, you can connect to the Internet when your phone is within the range of a wireless network. Wi-Fi can be used on the phone even without a SIM card.

To turn Wi-Fi on and Connect to a Wireless Network

- Touch on Quick Setting bar to get to Settings.
- Touch the switch beside Wi-Fi to turn on/off Wi-Fi.
- Touch Wi-Fi, detailed information of all detected Wi-Fi networks will be displayed in the Wi-Fi Networks section.

Wi-Fi Hotspot

Using Wi-Fi Hotspot enables your device to become a wireless router, once the Wi-Fi Hotspot is set, your device can be connected and you can use its data on other device(s).

Turn on Wi-Fi Hotspot option and your device will be in searchable mode.

Note: - Wi-Fi Hotspot may bear additional data charges.

Factory Data Reset

To activate factory data reset:

- Touch on Quick Setting bar to get to Settings.
- Touch Backup and Reset/Factory Data Reset.
- Touch Reset phone/Erase everything.

Phone reset will erase all of your personal data from the

-12-

Panasonic

Safety and Precautions

internal phone storage, including information about your Google Account, any other accounts, your system and application settings, and any downloaded applications. If you reset the phone, you're prompted to re-enter all the information again, as if you first started the device.

To prevent any damage to the device or any injury to you, please read the safety information before using the device.

- Do not use the device with wet hand.
- Use the device carefully while inserting SIM or Battery, as battery terminal may get damaged by force.
- Do not use damaged power cords, never try to pull the charger from the cord.
- Avoid using charger other than from Panasonic.
- Keep the device dry. Precipitation, humidity, liquids or moisture can contain minerals that will corrode the electronic circuits. If your device does get wet, remove the battery and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.

-13-

Panasonic

Regulations and Safety Usage

Please follow all safety warnings and regulations when using your device in restricted areas.

On Road

Avoid using phone while driving, please follow the traffic rules.

Near Sensitive Electronics

Your phone may cause interference when used near TVs, radios or automated office equipments.

While Flying

Your phone can cause interference with the aircraft equipment. So it's essential you follow airline regulations.

In Hospital

Your phone may interfere with the normal operation of a medical equipment. Follow all hospital regulations and turn it off when you're asked to by posted warnings or medical staff.

At a Petrol Station

Don't use your phone at petrol stations.

Disassembled Product

Never take your phone apart. Unauthorised repairs could break the terms of your warranty.

-14-

Panasonic

Around Children

Keep your mobile out of children's reach. It should never be used as a toy and it might not be good for their health.

Original Accessories

Only use the original accessories supplied with your phone or those approved by the manufacturer.

Near Explosives

Turn off your phone in or near areas where explosive materials are used.

Emergency Calls

To make an emergency call, your phone must be turned on and in an area where there's network coverage. Dial the national emergency number and press 'Send'. Explain exactly where you are and don't hang up until help has arrived.

Working Temperature

The working temperature for the phone is between 0 and 40 degree Celsius. Please don't use the phone outside the range. Using the phone under too high or too low temperature might cause problems.

At very high volume, prolonged listening to a mobile phone can damage your hearing.

-15-

Panasonic

Specific Absorption Rate (SAR) information

- Your mobile phone is a radio transmitter and receiver. It has been designed to comply with applicable safety requirements for exposure to radio waves. The radio wave exposure guidelines employ a unit of measurement called Specific Absorption Rate (SAR). The recommended SAR limit for any mobile handset is 1.6 W/Kg averaged over a 6 minute period and taken over a volume containing a mass 1g of human tissue.

Maximum SAR for this device is as mentioned below:

Head SAR: 0.462 W/Kg

Body-worn SAR: 0.467 W/Kg

- Use cell phone when the signal strength is good. Keep your calls short or instead use a headset or send a text message. This advice applies especially to children, adolescents and pregnant women.
- If you are using a Bluetooth headset device, please make sure it has a low power emitter.

-16-

Panasonic

Disclaimer

Panasonic Mobiles holds the authority to change the feature set and information without any prior information/intimation.

Some contents and services accessible through this device belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property rights.

Third party services may be terminated or interrupted at any time. Panasonic does not bear any responsibility or authority for the warranty or usage of these applications. These applications are accessible on Panasonic device by network, WiFi or any other mean over which Panasonic has no control. Panasonic should not be held responsible or liable for any customer related issues arising due to suspension or restrictions of these third party services.

-17-