

More HP resources

Resource	Location
HP support <ul style="list-style-type: none">Online chat with an HP technician.Find telephone numbers.Locate HP service center locations.	Go to http://www.hp.com/support .
Product Notices, Warranty, and User Guide <ul style="list-style-type: none">Safety and regulatory informationThe expressly provided HP Limited Warranty applicable to your tabletProduct documentation	On the Home Screen, touch the HP User Guides app, touch  select your Region and Language, and then select HP Worldwide Limited Warranty and Technical Support, Product Notices, or User Guide .
Serial number, product number, model number, and IMEI number	Back of tablet or on box

Specification

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated at 100-240 V, 50/60 Hz, 0.3-1.0 A.

Note: The tablet can operate on DC power using an industry-standard micro-B USB cable. The HP adapter included with your tablet is recommended for charging the tablet.

Temperature

Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

Relative humidity (noncondensing)

Operating: 10% to 90%

Product description

This product is a lightweight tablet and features a thin-panel display, a processor, RAM, integrated battery pack, and an external AC adapter. The printed *Quick Start* guide identifies the hardware components of your tablet. The AC adapter has a rating of 100-240 V ac, 50/60 Hz, 0.3-1.0 A. You can access the latest user guide from the **HP User Guides** app.

Regulatory information

For regulatory identification purposes, your product is assigned a Regulatory Model Number (RMN), HSTNH-H408C. The RMN is located on the back of the tablet, and should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.). If required, regulatory markings for your country or region are located on the back of the unit, under the removable battery (if equipped), on the packaging, or elsewhere in this document. For more safety and regulatory information, refer to the Product Notices included with your tablet, accessible via the **HP User Guides** app.

Product Notices

Some notices may not apply to your product. One or more integrated wireless devices are installed in this device. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.

Limited Warranty

You can find the expressly provided HP Limited Warranty applicable to your product using the **HP User Guides** app. In some countries or regions, HP may provide a printed HP Limited Warranty in the box. For some countries or regions where the warranty is not provided in printed format, you may request a printed copy from <http://www.hp.com/go/orderdocuments> or write to:

North America: Hewlett-Packard, MS POD, 11311 Chinden Blvd. Boise, ID 83714, USA	Europe, Middle East, Africa: Hewlett-Packard, POD, Via G. Di Vittorio, 9 20063 Cernusco s/Naviglio (MI), Italy	Asia Pacific: Hewlett-Packard, POD, P.O. Box 200 Alexandra Post Office, Singapore 911507
--	--	--

When you request a printed copy of your warranty, please include your product number, name, and postal address.

IMPORTANT: Do NOT return your HP product to the addresses above. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to http://welcome.hp.com/country/us/en/wwwcontact_us.html.

 **WARNING:** To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.

 **WARNING:** To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.

 **WARNING:** To reduce the possibility of heat-related injuries or of overheating the tablet, do not place the tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).

 **WARNING:**  Listening to music at high volume levels and for extended durations can damage one's hearing. To reduce the risk of hearing damage, lower the volume to a safe, comfortable level and reduce the amount of time listening at high levels.

For your own safety, before using headsets or earphones, always reset the volume. Some headphones are louder than other headphones, even if the volume control setting is the same.

Changing the default audio or equalizer settings might lead to higher volume and should only be done with caution.

For your own safety, headsets or earphones used with this product should comply with the headphone limits in EN 50332-2.

If the product includes a headset or earphones, this combination is in compliance to EN 50332-1.

 **WARNING:** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.

IMPORTANT: The battery(ies) in this product cannot be easily replaced by users themselves. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support.

When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

Quick Start



Note: Features may vary by model and country.

Setting up your tablet

1 If a micro SIM card is not preinstalled in the tablet, insert a micro SIM card (purchased separately) in the appropriate slot (see “Insert a micro SIM card or a micro SD card” section of this guide).



2 After charging the battery, press and hold the power button  for about 2 seconds until the HP logo is displayed.

3 Follow the on-screen instructions to select a language and a wireless network.

Using your tablet

Home screen icons

-  **Phone**—Allows you to make a phone call.
-  **Contacts**—Allows you to store frequently called phone numbers.
-  **Search**—Allows you to type one or more keywords to search with the installed search app.
-  **Recent apps**—Opens a list of apps used recently.
-  **Home**—Opens or returns to the Home screen.
-  **Back**—Opens the previous screen.
-  **Voice search**—Allows you to touch , and then speak one or more keywords to search with the installed search app.

NOTE: The icons on the Home screen and the appearance of the Home screen may vary.

Make a call

Touch  on the Home screen, touch the keys to enter the phone number, and then touch .
— or —
Touch , touch a contact name, and then touch .

Answer a call →

Slide  toward .

Reject a call →

Slide  toward .

Reject a call with a message →

Slide  toward .

End a call

Touch .

 
Return a recent call

Touch , and then touch a recent call.

IMPORTANT: To use the phone features, you must use a headset.

Use gestures

The following gestures can be used with your tablet:



Change your tablet's view

The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

NOTE: Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top, and then touch

Auto-rotate  to lock or unlock the screen rotation.

Lock and unlock

Lock—Press the power button.

Unlock—Touch the screen and slide your finger in any direction to display the Home screen.

Turn off the tablet

Press and hold the power button, touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button for several seconds to turn off the tablet.

Display apps, widgets, and notification

Apps—All apps are displayed on the Home screen.

Widgets—Press and hold the Home screen to display the **Set Home Screen** menu, and then select **Widgets**.

Notification—Swipe down from the top of the screen to see your notifications.

Back up your data

HP strongly encourages that you periodically back up your personal data on your tablet to another computer, a dedicated storage device, or to the cloud using one of several commercially available solutions. For more information, you can access the user guide from the **HP User Guides** app.

Insert a micro SIM card or a micro SD card



© Copyright 2014 Hewlett-Packard Development Company, L.P. The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical and editorial errors or omissions contained herein.

Third Edition: June 2014
First Edition: April 2014

Printed in China
Imprimé en Chine
Stampato in Cina
Impreso en China
中国印刷
중국에서 인쇄



768334-003