



Unboxing



Getting started



Basics



Web & network



Mail



Camera



Multimedia



Maps & navigation



Utilities



Specifications



Troubleshooting



Safety



Inside your package Your tablet at a glance

Unboxing

 
Congratulations on your purchase and welcome to Prestigio.
To get the most from your product and enjoy all that Prestigio has to offer, please visit:

www.prestigio.com/catalogue/MultiPads

More details about your product, please visit:

www.prestigio.com/support

Inside your package

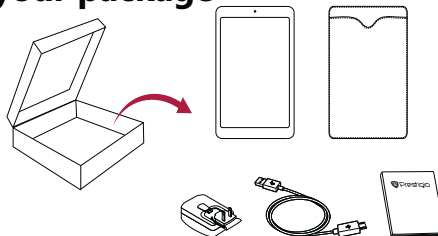


- Prestigio Multipad
- Travel charger
- Quick start guide
- Warranty card
- Pouch
- USB cable
- Legal and safety notices



Please read the "Legal and safety notices" in your package before use.

 Your tablet at a glance

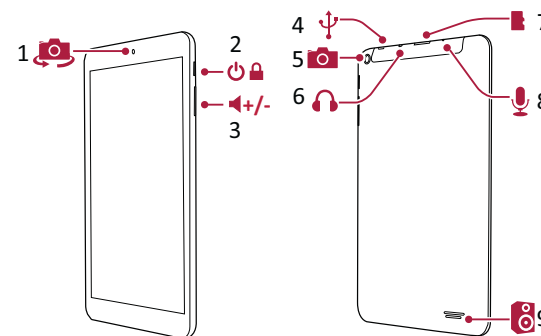

- 1 Front camera
- 2 Power button
- 3 Volume button
- 4 Micro USB port
- 5 Rear camera

- 6 Earphone jack
- 7 Memory card slot
- 8 Microphone
- 9 Speaker



Menu

Troubleshooting



Back

Next





Installation
Charge the battery
Power on your tablet
Home screen
List menu



Troubleshooting



Next

 


Getting started

Installation

Follow the steps below to prepare your tablet for using.
Remember to turn off your device before inserting the cards.

Insert a memory card

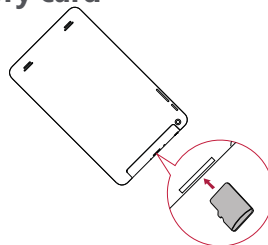

Frequent writing and erasing of data shortens the lifespan of memory cards.

Charge the battery

Plug the small end of the USB cable into the micro USB port of the device, and plug the large end of the cable into travel charger. Insert the travel charger into a electric socket.



Always use authentic accessories to optimise your battery performance. Non-authentic accessories (eg. chargers) can damage your battery and even your tablet.

Optimise your battery performance

Here are some tips to help you optimise your battery performance.

- Always ensure that your tablet profile is appropriately set to meet your actual usage.
- If you are not using Bluetooth, Wi-Fi or other applications, turn them off.
- Adjust the intensity of your display screen's backlight to low or medium level and for the shortest duration.
- Avoid using or placing your tablet near magnetic objects (eg.

a radio or television) or on metal surfaces, which will impact the network connection and ultimately drain power from your battery.

Power on your tablet

Press and hold the power button for a few seconds to power on your tablet.

 


To turn off your tablet, press and hold the power button, and then tap **Power off** on the pop-up screen.

Home screen

Your Home screen is the starting point to access all of your tablet's features. The Home screen can have multiple panels. To view other panels, swipe left or right.

Tap  to return to the Home screen. Your tablet's Home screen consists of the following:

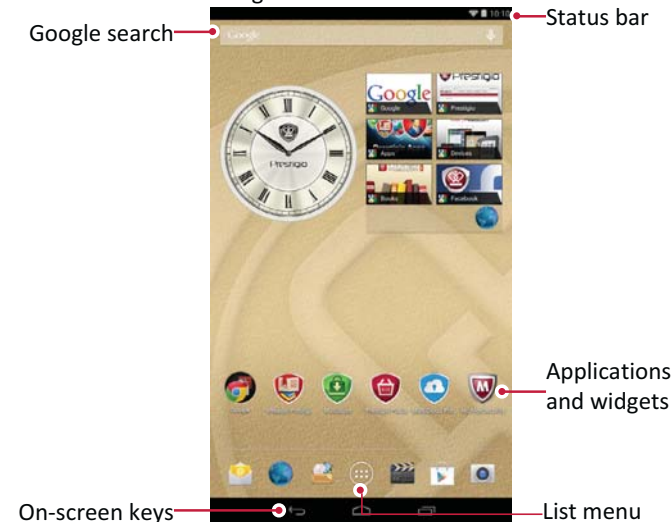



Installation
Charge the battery
Power on your tablet
Home screen
List menu

 **Menu**

Troubleshooting



 **Back**

Next



Buttons

The menu, home and back keys help you navigate your tablet.

- Tap  to open the list of recent apps.
- Tap  to return to the Home screen.
- Tap  to return to the previous screen.

Personalise your wallpaper

Pick your favourite picture as your Home wallpaper.

1. Tap and hold the blank area on the Home screen.
2. Select **Wallpaper**.
3. Select an image and set it as wallpaper.
 - Or choose a photo in Gallery to set it as wallpaper.

Add an app icon to Home screen

 
1. On the Home screen, tap  to open the list menu.
2. Tap and hold an application icon.
3. Drag it into a panel preview.

Remove an item on Home screen

1. Tap and hold an item to remove.
2. The **Remove** option appears at the top of the Home screen.
3. Drag the item to the **Remove** option.
4. When the **Remove** option turns red, release the item.

List menu

All your apps can be found on the list menu. On the Home screen, tap  to open the list menu. The list menu can have multiple panels. To view other panels, swipe left or right. Tap  or  to return to the Home screen.

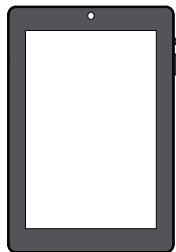

Finger tips

Lock and unlock the screen

Notifications panel

Quick settings

Status icons

Enter text

System upgrade



Menu

Troubleshooting



Back

Next



 
Basics

Finger tips

Only use your fingers to use the touch screen.


Tap

To open an application, to select a menu item, to press an on-screen button, or to enter a character using the on-screen keyboard, tap it with a finger.

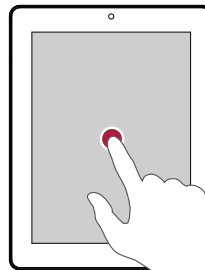


Tap and hold

 Tap and hold an item for more than 2 seconds to access available options.

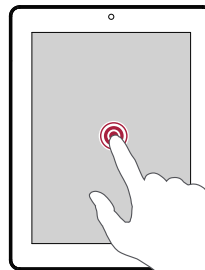


Swipe

 Quickly swipe your finger vertically or horizontally across the screen to go to other home pages, scroll through documents, and more.

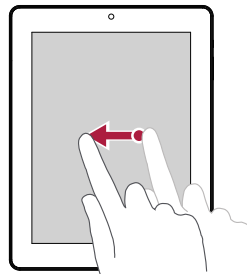


Slide or scroll

 Slide your finger vertically across the screen to open drop-down menu. Drag up or down to scroll.

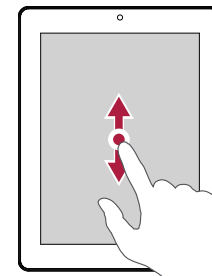


Zoom in

 Spread two fingers apart on a web page, map, or image to zoom in a part.

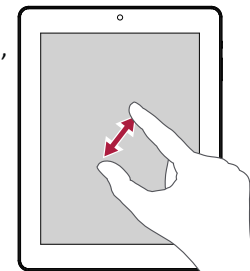

Zoom out

 
Pinch two fingers together on a web page, map, or image to zoom out a part.

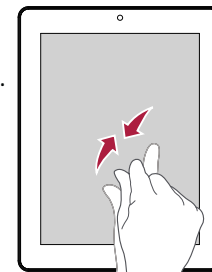

Flick

 Flick left or right on the Home screen or the applications screen to see another panel. Flick up or down to scroll through a web page or a list, such as contacts.



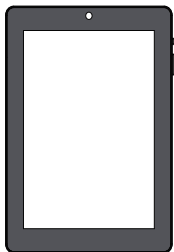

Finger tips
Lock and unlock the screen
Notifications panel
Quick settings
Status icons
Enter text
System upgrade



Menu

Troubleshooting



Back

Next



Lock and unlock the screen

When not in use, lock your tablet to prevent unwanted operations and save the battery power.

- Lock: press the power button.
- Unlock: press the power button, and then slide the lock icon to unlock your screen.



When your tablet is locked, your tablet can still:

- Receive calls, text messages, and other updates.
- Play music.
- Adjust the volume.

You can use the earphones to answer a call or listen to music.

Auto lock

You can set a time span for the screen to be locked automatically.

1. On the list menu, tap **Settings >Display > Sleep**.
2. Select your desired time span.

Set screen lock pattern

To protect your personal information and prevent others from using your tablet without your permission, set a screen lock pattern, PIN, or password. You will be asked to unlock the screen every time when your tablet is powered on or when it is idle for a certain period of time.

- On the list menu, tap **Settings >Security > Screen lock**.

Notifications panel

 
When you get a new notification, you can open the notifications panel to see what event notification or new information you have received.

- To open the notifications panel, slide down from the top left of the screen.
- To dismiss the notification, tap .


Quick settings

Quick settings allows you to easily turn on and off airplane mode, Wi-Fi, and other functions. It also provides a shortcut to set the brightness, lock screen auto orientation, and access the system settings.

- Slide down from the top right of the screen to open quick settings.

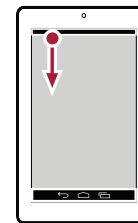

open notifications panel

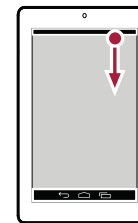 


open quick settings

Status icons

The icons in the status bar at the top of the screen give information about your tablet:

Icons	What it means
	Silent mode activated.
	Vibration mode activated.
	Airplane mode activated.
	Battery power level.
	Wi-Fi connected.
	Connected to PC.
	Wired earphone + microphone connected.
	Wired earphone connected
	Warning.
	Alarm is set.

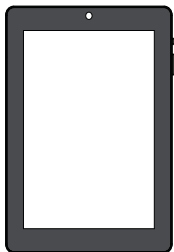 

Finger tips
Lock and unlock the screen
Notifications panel
Quick settings
Status icons
Enter text
System upgrade



Menu

Troubleshooting 



Back

Next



Enter text

Use the Prestigio keyboard or the voice input feature to enter text.

Change the input method

You can download an input app or use the input method pre-installed on your tablet. To change the input method, follow these steps:

1. On the list menu, tap **Settings > Language & input > Default**.
2. Choose the desired input method.

Use the Prestigio keyboard



1. Shift key: Tap it before entering an uppercase letter. For all caps, tap it twice. Tap it again to enter a lowercase letter.
2. Numbers and symbols key
3. Voice input key: tap and hold it to activate the voice input feature.
4. Space key
5. Enter key
6. Backspace key

Cut or Copy text

1. Select the text you want, and tap  or . The selected text is then cut or copied to the clipboard.
2. In a text entry field, press and hold at the point where you want to paste the text.
3. Tap **PASTE**.

System upgrade

Your tablet can check and notify you if there is a new upgrade available. You can also manually check if there is an available update. You can set this option in **Settings > About tablet > System updates**.



Do not press any buttons while the device is upgrading.



Connect to the Internet

Web browse



Menu

Troubleshooting



Back

Next



Web & network

Connect to the Internet

Your tablet connects to the Internet via a Wi-Fi connection (if available).

Wi-Fi

Connect the device to a Wi-Fi network to use the Internet or share media files with other devices.

Connect to a wireless network

1. Go to **Settings**, and tap **Wi-Fi** to turn it on.
2. The Wi-Fi section will show the list of networks detected.
3. Tap the desired Wi-Fi network you want to connect to.
 - If you selected a secured network, you will be asked to enter the network key or password.

Erase a saved wireless network

Any network that has ever been used, including the current network, can be erased. Your tablet will not automatically connect to it.

1. On the Home screen or list menu, tap **Settings**, and then tap **Wi-Fi**.
2. Tap the wireless network you have previously been connected to.
3. Tap **Forget**.

Web browse

You can use your tablet to browse websites. Before browsing a website, please confirm that you have turn on Wi-Fi.

Browse a web page

1. On the Home screen or list menu, tap .
2. Enter your search keywords or a web address to start browsing.



Set up a mail account

Send a mail

Reply to a mail

Gmail



Menu

Troubleshooting



Back

Next



Mail

Use this application to send or view e-mail messages. Learn to send or view e-mail messages via your personal or company e-mail account.

Set up a mail account

- On the Home screen or list menu, tap  and do one of the following:
 - If this is your first time adding an e-mail account, move to the next step.
 - If you've already added an email account, then tap  > **Settings** > **ADD ACCOUNT**.
- Enter the e-mail address and password for your e-mail account.
- Tap **Next** for a private e-mail account, or tap **Manual setup** for a company e-mail account.
- Follow the prompts to complete the setup.

Delete an email account

- Go to **Settings**, tap your account name in **Accounts**.
- Tap  > **Remove account**.

Send a mail

- Tap .
- Fill in one or more recipients.
- Enter the subject, and then compose your mail. Add an attachment if you want.
- Tap  to send the mail.

Reply to a mail

 
- On the e-mail inbox, tap the e-mail message.
- Tap , and then compose your mail.
- Tap  to send the mail.

Gmail

Use this application to quickly and directly access the Google Mail service.

View your Gmail Inbox

- On the Home screen or list menu, tap .
- Your mail inbox is displayed on the screen.
- Tap the desired mail to read it.

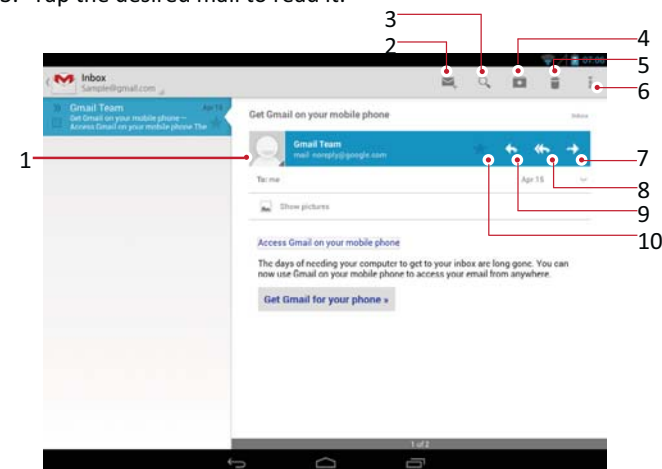

- Add this email address to contacts list.
- Create a new email.
- Search for emails.
- Keep this email for long-term storage.
- Delete this email.
- More options.
- Forward this email to others.
- Reply to all recipients.
- Reply to this email.
- Mark the email as a reminder.



Your camera at a glance

Take a photo

Take a photo of yourself

Record a video



Menu

Troubleshooting



Back

Next

 


Camera

With your tablet, you can take both photos and videos as desired. In addition to a rear camera, there is a camera on the front for video calls and self-portraits.

- To use the camera, on the Home screen or list menu, tap Google Camera .

Your camera at a glance

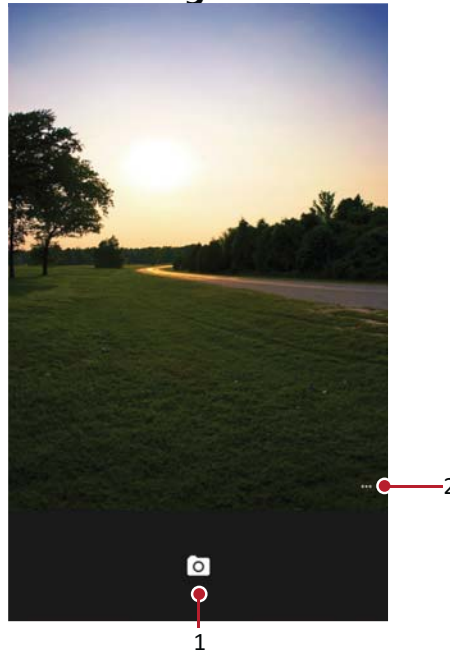

1. Capture a photo.
2. More settings.

Select a capture mode

Swipe from left to right to find the capture mode.



Lens blur - Blur the background of a photo .



Camera - Take a photo.



Video - Record a video.

Take a photo

1. Turn on the camera.
2. Change the camera settings if necessary.
3. Just point the camera at what you want to capture.
4. Tap  to capture the photo.

Take a photo of yourself

1. Tap .
2. Tap  to capture the photo.

Set self timer

1. Tap  to turn on self timer, and set your time span.
2. Tap . The photo will be captured after the set time span.

Record a video

1. Swipe from left to right, tap  to choose video mode.
2. Tap  to start recording.
 - While recording, you can tap the screen to capture an image.
3. To stop recording, tap .



Gallery Music player



Troubleshooting



Back

Next



Multimedia

Your tablet provides several multimedia apps for your entertainment. You can view your photo gallery, enjoy music, and watch videos.

Gallery

Use **Gallery** to view all your photos and videos on your tablet.

- To open your Gallery, on the Home screen or list menu, tap



View your photos

- In Gallery, tap  to open a drop-down list, and then tap **Albums/Locations/Time**.
- Browse an album or a group of photos.
- Tap a photo to view it in full screen.

Edit your photos

When viewing a photo, tap  to use the following functions:

- Delete:** Delete the photo.
- Slideshow:** Start a slideshow with images in the current folder.
- Edit:** Launch Paper Artist to edit a photo.
- Rotate left:** Rotate anticlockwise.
- Rotate right:** Rotate clockwise.
- Crop:** Resize the orange frame to crop and save your photo.
- Set picture as:** Set a photo as your wallpaper or a contact image.
- Details:** Check information of the photo file.

Watch your videos

- In Gallery, tap the video that you want to watch.
- Select **Video player** to play it.
- Tap the on-screen keys to control the video playback.
- Press the volume button to adjust the sound.
- Tap  to select more options.

Share your photos and videos

 
You can share your photos and videos with another device via e-mail, MMS or Bluetooth.

- In Gallery, select the photos or videos that you want to share.
- Tap  to open a drop-down list, and then tap **E-mail/Messaging/Bluetooth**.

Music player

Listen to music

- On the Home screen or list menu, tap .
- Tap , and then:
 - Tap **My Library** to browse songs sorted by genres, artists, albums, and all music.
 - Tap **Playlists** to browse recent or all playlists.
 - Tap **Listen Now** to check the playing and next songs.
- Tap a song from the list.
- Use the following keys to control playback:

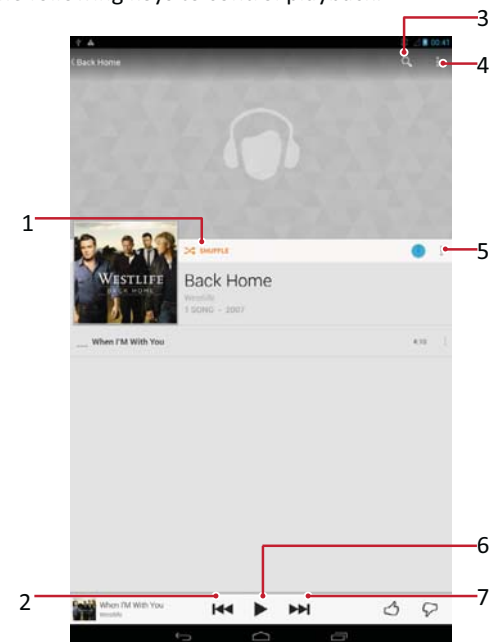



Gallery Music player



Menu

Troubleshooting



Back

Next



- 1 Turn on shuffle.
- 2 Skip to the previous song. Tap and hold to move backwards quickly.
- 3 Search music.
- 4 Settings and help.
- 5 More options.
- 6 Pause and resume playback.
- 7 Skip to the next song. Tap and hold to move forwards quickly.



Find a location
Get directions
Maps settings



Troubleshooting



Next



Maps & navigation

Use Google Maps to pinpoint your current location, search for places, or get directions.

- On the Home screen or list menu, tap .



This application may not be available depending on the region or service provider.

Find a location

Turn on or off location service

In order to find your location on your tablet, you need to enable location service.

1. Go to **Settings**, tap **Location access**.
2. Turn on **Access to my location**.

Find your location

On the maps screen, tap  to find your location on the map.



If you are in an area where there are a lot of surrounding buildings, locations may have a hard time pinpointing your location.

Search for a place

You can search for a name of an establishment, street, or city. Suggested matches will be shown while you type.

1. On the maps screen, tap .
2. Enter the place you want to search for.
3. Select the desired place in the result list.

Get directions

1. On the maps screen, tap  to get directions.
2. Choose how you want to get to your destination.
3. Enter your start point and end point.
4. The map opens showing the route to your destination.

Maps settings

While viewing the map,

- Tap  to get more options.
- Tap  > **Settings** to set up the Google Maps.



Clock Calendar



Menu

Troubleshooting 



Back

Next



Utilities

Clock

Use the clock app to set alarms, check the time in any location in the world, measure the duration of an event, or set a timer.

- On the Home screen or list menu, tap .

World clock

You can add a city to the world clock screen.

1. On the Home screen or list menu, tap .
2. Tap .
3. Scroll through the list and tap the city that you want to add.

Alarm

You can set up one or more alarms.

Set an alarm

1. On the clock screen, tap .
2. Tap  to add a new alarm.
3. Use the virtual digit keyboard to set the alarm time.
4. Tap **OK**.
5. If you want the alarm for multiple days, tap **Repeat**.

Turn off an alarm

1. On the clock screen, tap .
2. Select the alarm you want to turn off.
3. Drag the slider to OFF.

Stop an alarm

When the alarm rings,

- Slide to : The alarm stops.
- Slide to : The alarm will sound again after a specified length of time.

Delete an alarm

1. Tap and hold the alarm you want to delete.
2. Tap .

Timer

1. On the clock screen, tap .
2. Set the duration, and then tap **Start**.

Stopwatch

On the clock screen, tap .

- Tap **Start** to time an event.
- Tap  to record lap times.
- Tap  to clear lap time records.

Calendar

You can create events and make plans on your calendar.

- On the Home screen or list menu, tap . Tap  to change your calendar to day, week, month or agenda view.

Create an event

1. Go to , select a date.
2. Tap  to create a new event.
3. Edit reminder settings.
4. Tap **Done** to save the event.

Manage your events

Edit an event

1. While viewing your calendar, tap  to change it to agenda view.
2. Tap the event you want to edit, and then tap .
3. Make changes to the event.
4. Tap **Done**.

Delete an event

Select the event you want to delete, and then tap .



 
Troubleshooting



Next



Specifications



Quad Core, 1.2 GHz



 
8 GB Flash + 1 GB RAM



Android™ 4.4, KitKat®



Micro SDHC/SDXC, up to 32 GB



8" IPS, 16:10, 1280*800



0.3 MP + 2 MP



Wi-Fi (802.11 b/g/n)



3800 mAh



207.2*122.5*9.2 mm (H*W*D)



363 g



Troubleshooting

The network symbol is not displayed

The network connection is lost. Either you are in a radio shadow (in a tunnel or between tall buildings) or you are outside the network coverage area. Try from another place, try to reconnect to the network (especially when abroad), or contact your network operator for assistance/information.

The touch screen responds slowly or improperly

If your device has a touch screen and the touch screen is not responding properly, try the following:

- Remove any protective covers from the touch screen. Protective covers may prevent the device from recognising your inputs and are not recommended for touch screen devices.
- Ensure that your hands are clean and dry when tapping the touch screen.
- Restart your device to clear any temporary software bugs.
- Ensure that your device software is upgraded to the latest version.
- If the touch screen is scratched or damaged, take it to your local dealer.

Your battery seems to over heat

You might be using a charger that was not intended for use with your tablet. Make sure you always use the authentic accessory shipped with your tablet.

You can not receive and/or store JPEG pictures

A picture may not be accepted by your tablet if it is too large, if its name is too long, or if it does not have the correct file format.

When charging, the battery icon shows no bar and the outline is flashing

Only charge the battery in an environment where the temperature does not go below 0°C (32°F) or above 45°C (113°F). In other cases please contact your tablet supplier.

Your tablet does not work well in your car

A car contains many metallic parts that absorb electromagnetic waves which can affect the tablet's performance. A car kit is available to provide you with an external antenna and enables you to make and receive phone calls without handling the handset. Check with the local authorities whether or not you are allowed to use the tablet while driving.

Your tablet is not charging

If the battery is completely flat, it might take several minutes of precharge (up to 5 minutes in some cases) before the charging icon is displayed on the screen.

The picture captured with the tablet camera is not clear

Make sure that the camera lens on both sides is clean.

Your device freezes or has fatal errors

If your device freezes or hangs, you may need to close programs or reset the device to regain functionality. If your device is frozen and unresponsive, press and hold the Power button for 8-10 seconds. The device reboots automatically.

If this does not solve the problem, perform a factory data reset. On the list menu, tap Settings > Back up & reset > Factory data reset > Reset device > Erase everything.

A connection is not established when you connect the device to a computer

- Ensure that the USB cable you are using is compatible with your device.
- Ensure that you have the proper drivers installed and updated on your computer.
- If you are a Windows XP user, ensure that you have Windows XP Service Pack 3 or higher installed on your computer.
- Ensure that you have Windows Media Player 10 or higher installed on your computer.





Important safety instructions

Disclaimer



Menu

Troubleshooting



Back

Next



Legal and safety information

Important safety instructions

Your Prestigio MultiPad Tablet PC is manufactured and designed for mobile usage. Please read the following instructions carefully. It helps you to use your device without safety issues and keep your Tablet PC in good working condition:

1. Do not place objects on top of the MultiPad as objects may scratch the screen.
2. MultiPad should be kept away from extreme changes of temperature.
3. Protect it from direct sunlight or heat sources.
4. Protect the device from moisture and from dusty or smoky environment as it can harm the tablet.
5. Keep your MultiPad away from contact with active chemicals.
6. Do not place the MultiPad on an uneven or unstable surface. Fall of the device can cause damage to the LCD screen which is not covered with warranty.
7. Do not expose the MultiPad to strong magnetic or electrical field.
8. Protect your MultiPad from hits and extreme pressure.
9. Operation Temperature: This MultiPad should only be used in environments with ambient temperatures between 0°C (32°F) and 35°C (95°F).
10. Do not insert into MultiPad devices or items not matching to standard sockets on it.
11. Do not use MultiPad in the rain - it is NOT a waterproof device. Protect the Multipad from dust, dirt and high humidity.
12. Do not use Your MultiPad during driving.
13. Use only manufacturer approved chargers. Using non-original chargers may cause damage of the device and be harmful to your health.
14. The MultiPad and the adapter may produce some heat during normal operation or charging. Avoid placing it to the soft surfaces, other places and conditions which may prevent normal dispersion of the heat, causing device overheating. Do not leave the MultiPad on your lap or other part of the body to prevent discomfort or injury from heat exposure.
15. Disconnect the MultiPad from an electrical outlet after it is charged.

16. Do not use a pen or any sharp object to tap the screen. Clean the touch screen with a soft cloth. If needed, dampen the cloth slightly before cleaning. Never use abrasives or cleaning solutions.
17. DO NOT disassemble the MultiPad, only a Prestigio certified service technician should perform repair.
18. Always power off the MultiPad to install or remove external devices that does not support hot-plug.
19. Your MultiPad must be switched off during airplane take-off and landing.

Disclaimer

As Prestigio products are constantly updated and improved, your device's software may have a slightly different appearance or modified functionality than presented in this user manual. We make every effort to ensure that the information and procedures in this user manual are accurate and complete. No liability can and will be accepted for any errors or omissions. Prestigio reserves the right to make any changes without further notice to any products herein.