User Manual Lava KKT Hero

Contents

1 Preface	3
2 Introduction	5
2.1 PHONE DISPLAY	5
2.2 KEY	6
3 Function Menu	8
3.1 Main Menu	8
4 Safety Information and Notices	12
5 Frequently Asked Questions and Troubleshooting	
6 E-waste Disposal Mechanism	16
Do's and Don'ts for disposal e-waste	16
Consequences of improper handling and disposal of E-Waste	17
7 LAVA WARRANTY CERTIFICATE	

1 Preface

Thank you for purchasing this cellular phone.

To guarantee your cellular phone works properly, please follow the instructions in this manual to prevent any possible incidents or malfunctions.

Follow all safety warnings to avoid injury or property damage.

Screen displays and illustrations in this user's manual are designed to help you operate your phone to its optimum performance.



We continuously strive to improve our products. Therefore, we reserve the rights to revise this user manual or withdraw it at any time without prior notice.

SAR Information

 The highest SAR value for this mobile phone is <1.6 W/Kg, in accordance with the requirements of the ICNIRP,. The recommended limit for exposure to radio waves is 1.6 watts/kilogram (W/kg) averaged over 1gram of tissue. For more information, please visit Lava's website www.lavamobiles.com to read about Safety precautions:

- Use a wireless hands-free system (Headphone, headset) with a low power Bluetooth emitter
- Make sure the cell phone has a low SAR
- Keep your calls short or send a text message (SMS) instead. This advice applies especially to children, adolescents and pregnant women
- · Use cell phone when the signal quality is good
- People having active medical implants should preferably keep the cell phone at least 15cm away from the implant

Safety precautions:

- Use cell phone when the signal quality is good
- People having active medical implants should preferably keep the cell phone at least 15cm away from the implant.

2 Introduction

2.1 Phone Display



2.2 Key

Key	Function
Dial Key	Make or answer a call
	View Call logs in standby mode.
End Key/	Pressing and holding to turn the phone on/off. End a call or reject an incoming call.
Power Key	Return to the idle mode.
Left Soft Key	Access the main menu in idle mode.
Right Soft	Access the Name list in idle mode.
Key	Return to the previous menu.
	Press and hold it, turn on /off the flashlight.
OK Key	Press to enter main menu in idle mode.
	After inputting numbers, press this key to do options.
Numeric key	Enter numbers, letters or characters.
	Select a submenu item labeled with the corresponding number.
*	Press to toggle between *, +, (pause character) P, and (wait character) W.
	Press to enter symbol when editing text.
#	Press to switch input modes when entering text.
	Press and hold to change sound profiles to Silent Mode and General mode.

Navigate	In idle mode, press up key to access Camera; press down key to access
Keys	Music ;press left key to access Messaging; press right key to access Shortcuts. The
	user can define your own shortcuts for navigate keys
	Within a menu, press Up, Down, Left and Right to scroll through menu options.



Note: "Press" in this manual, means to press and release the key; "press and hold" means to press and hold the key for at least 2 seconds.

3 Function Menu

3.1 Main Menu

All function options about the mobile phone are listed as below with brief descriptions

Call center

-Call logs

Check call logs for missed, dial, received calls and perform functions like save , delete view etc

-Call settings

To perform the setting related to Blacklist, Auto redial, Call time display, Auto call recorder, Call time reminder, Call limiter, Reject by SMS, Vibration on call connection and Answer mode.

Phonebook

New	To add New Contact
View	To view contact info
Send	To send SMS to contact.
Call	To make a call.
Edit	To edit the selected phonebook entry.
Delete	To delete the selected phonebook entry.

Сору	Copy to phone or SIM
Add to Blacklist	To Add to Blacklist
Mark several	To mark or mark all entries for further operations.
Phonebook settings	To do other operations such as Extra numbers and Memory status.
Multimedia	•
-Photo viewer	To view the saved image.
-Video Recorder	To take video shoot
-Video Player	To play the recorded movie.
-Sound recorder	To record the sound.
-FM radio	You can use the FM radio without the headset as the antenna.
Camera	<u> </u>
To take photo.	
Messaging	
-Write message	To create a new SMS.
-Inbox	To view the received messages.
-Drafts	To save the messages that are not ready to send out in order to
	further edit, and then send.
-Outbox	To view the messages in sending or sent unsuccessfully.

-Sent box

To view the sent messages.

-Templates

To view or edit the templates to create.

- Settings

To perform the setting related to SMS, Memory status, Text message counter, Save sent message and Preferred storage.

Audio player

To play the music.

Gallery

To manage the space of memory card, perform the corresponding operation on the selected file and folder

Settings

-User profiles

To perform the setting related to security Including General, Silent, Meeting, outdoor.

-Dual SIM settings

Only SIM 1 open, Only SIM 2 open, Dual SIM open.

- Phone settings

To perform the setting related to mobile phone such as Time and date, power on/off, Language,

Display, Shortcuts, Dedicated Keys, Auto update time and Flight mode.		
- Security settings		
To perform the setting rela	ated to security Including PIN, PIN2, Privacy protection, Mobile Tracker.	
- Network settings		
To set the network of SIM	11,SIM2,and you can set GPRS transfer pref.	
-Connectivity		
To view and set the data	connection.	
-Restore Settings		
Restore all settings as before. Default password:4321		
Organizer		
To perform the features in	ncluding Bluetooth, Alarm, calculator, Ebook reader, Calendar, World clock,	
Torch.		
Services		
Internet explorer	Your mobile phone supports wireless application protocol (WAP)	
	service. You can access many different WAP services such as news,	
	weather reports, flight information, and others.	
Fun		
Provide games for your fu	ın.	

4Safety Information and Notices

Before using the phone, please read the safety precautions carefully and let your children know these, so that you can use your phone correctly and safely.

Do not switch on your phone when phone use is prohibited or when phone use may cause interference or danger.

Do not use your phone while driving.

Follow the rules or regulations in hospitals and health care facilities. Switch off your phone near medical equipment's.

Switch off your phone in an aircraft. The phone may cause interference to control signals of the aircraft.

Switch off your phone near high-precision electronic devices. The phone may affect the performance of these devices.

Do not attempt to disassemble your phone or its accessories. Only qualified personnel are

allowed to service or repair the phone.

Do not place your phone or its accessories in containers with strong electromagnetic field.

Do not place magnetic storage media near your phone. Radiation from the phone may delete the information stored on them.

Do not put your phone in a high-temperature place or use it in a place with flammable gas such as a gas station.

Keep your phone and its accessories away from children. Do not allow children to use your phone without guidance.

Use approved batteries and chargers only to avoid explosion.

5 Frequently Asked Questions and Troubleshooting

Frequently	Cause and Solution
Asked	
Questions	
Fail to turn on	Press the power on key for over 1 second.
	Check if the battery is properly connected. Please remove and install it again, retry
	to turn on;
	Check if battery is appropriately charged
Fail to connect	Weak signal. Please try and move to a location with strong signal and try
network	connecting to the network again;
	Please ensure that you are not beyond the network coverage of service providers;
	Please ensure you have a valid SIM card. Please contact your network provider for
	further information;

SIM Card Error	Dirt on the metal surface of an SIM card. Use clean cloth to wipe the metal touch point on an SIM card. The SIM card is not inserted. The SIM card is damaged. Please contact your network service provider.
Fail to charge	Poor contact. Please check if the plug is connected well. The battery or charger is damaged. You need to replace it.

6E-waste Disposal Mechanism

'E-waste' means waste electrical and electronic equipment (WEEE). In other words E-waste is a popular, informal name for electronic products nearing the end of their "useful life". For more details about e-waste please refer e-waste rules, 2011 www.moef.nic.in

Do's and Don'ts for disposal e-waste

Do's:

- Ensure that an Authorized Person repairs your Lava products
- Call Our Local Authorized Collection Centers to Dispose Lava products
- Always drop your used electronic products, batteries or any accessories thereof after the end of their life at nearest Authorized Collection Point or Collection Center.
- Separate the packaging material according to responsible waste disposal options and sorting for recycling.
- Always remove the battery from the product, when you do not intend to use the product anymore it in future.

Don'ts

Do not Dismantle your Lava Product on your own

- •Do not give your e-waste to Kabbadi Wala / Scrap Dealer/ Rag Pickers.
- •Do not dispose-off the e-waste in landfills
- •Never dump E-waste in garbage bins.
- Do not dispose of your product at municipal waste bins or rooms.
- Do not throw used batteries into household waste.

Consequences of improper handling and disposal of E-Waste

- Improper disposal of waste prevents natural resources from being re-used.
- Some waste contains hazardous chemicals and if not disposed of properly may release toxins into the soil and water, and also releases greenhouse gases into the environment
- If e-waste is not properly disposed of, it can threat to the health and well-being of humans and animals and it also has adverse effect on the environment.
- Placing of batteries or devices on or in heating devices, such as microwave, ovens, stoves, or radiators and improper disposal of batteries may lead to explosion.
- •If the battery terminals are in contact with metal objects, it may cause a fire.

For more details on how to dispose of your Lava products at the end of life, Please refer the list of our Services Centers on Pan India basis on our website www.lavamobiles.com or please view this link for the details of Service Centers http://www.lavamobiles.com/support-services.

7LAVA WARRANTY CERTIFICATE

Limited warranty:

LAVA international Ltd. (LAVA) provides limited warranty for your mobile phone and original accessories delivered with your mobile phone (hereinafter referred to as "product")

The warranty period for the transceiver is one (1) year and for battery, charger and headset is six (6) months from the date of purchase.

LAVA Warranty

Subject to the conditions of this Limited Warranty, LAVA warrants a product to be free from defects in design, material and workmanship at the time of its original purchase by you, and for a subsequent period of one (1) year for transceiver and six (6) months for battery & charger.

You shall have no coverage or benefits under this warranty in the event that any of the following conditions are applicable:

- The product has been subjected to abnormal use or conditions, improper storage, exposure to
 1.excessive moisture or dampness, exposure to excessive temperature, unauthorized
 modification, unauthorized repair (including but not limited to use of unauthorized spare parts in
 repairs), abuse, accidents, Acts of God, spills of food or liquids, improper installation
- You have not notified Lava of the defect in the product during the applicable warranty period.
- The product serial no. code or the accessories date code has been removed, defaced or altered.

- The product has been used with or connected to an accessory (i) Not supplied by Lava or its
 affiliates, (ii) Not fit for use with the product or (iii) Used otherwise than in manner intended.
- The seals of the product's battery enclosure have been broken or shown evidence of tempering or the product's battery has been used in equipment other than that for which it has been specified usable by LAVA.
- All plastic surfaces and all other externally exposed part that is scratched or damaged due to normal use.

To get maximum of your new product, we recommend you to:

- Read the guidelines for safe and efficient use as mentioned in the manual.
- Read the terms and conditions of your Lava warranty in the manual.
- Present this Lava Warranty Certificate along with original proof of purchase whenever you require any warranty services.

In case Lava product needs service, please visit the nearest Lava service centers given in the service guide. Please visit our Website www.lavamobiles.com for updated list of Authorized Service Centers near to your location.

Important note: for your warranty to be valid, all information on the warranty certificate has to be completed including the stamp from the authorized distributor/retailer.

All warranty information, product features and specifications are subject to change without notice

MEI No.	
Dealers Stamp	
Date of purchase	
Model No.	