

KKT 08 User Manual

Contents	
KKT 08 User Manual.....	1
Contents.....	1
1. Getting to know your phone.....	1
1.1 Installing SIM card and battery.....	1
1.2 Installing Storage card.....	1
1.3 Battery charging.....	2
1.4 Power on/off.....	2
1.4.1 Power on.....	2
1.4.2 Power off.....	2
2. Using Call Function.....	2
2.1 Making a call.....	2
2.2 Answering or rejecting a call.....	2
2.2.1 Answer a call.....	2
2.2.2 Reject a call.....	2
2.3 Adjusting call volume.....	2
2.4 Ending a call.....	2
3. View a contact.....	2
3.2 Adding a new contact.....	2
3.3 Write Message.....	3
3.4 Call.....	3
3.5 Delete.....	3
3.6 Delete multiple.....	3
3.7 Import/Export.....	3

3.8 Send vCard.....	3
3.9 Copy.....	3
3.10 Others.....	3
4. Call logs.....	3
4.1 Missed calls.....	3
4.2 Dailed calls.....	3
4.3 Received calls.....	3
4.4 Rejected calls.....	3
4.5 Delete all.....	3
4.6 Call timers.....	3
4.7 Open list.....	3
4.7.1 Details.....	4
4.7.2 Call.....	4
4.7.3 Write message.....	4
4.7.4 Add to contacts.....	4
4.7.5 Add to blacklist.....	4
4.7.6 Delete.....	4
4.7.7 Delete all.....	4
4.7.8 Mark.....	4
5. Settings.....	4
5.1 Call settings.....	4
5.2 Phone settings.....	4
5.3 Display settings.....	5
5.3.1 Wallpaper settings.....	5

5.3.2 Brightness.....	5
5.3.3 Keypad backlight time.....	5
5.4 Security settings.....	5
5.4.1 PIN.....	5
5.4.2 Modify PIN2.....	5
5.4.3 Phone locked.....	6
5.4.4 Change phone password.....	6
5.4.5 Privacy.....	6
5.4.6 Lock screen by end-key.....	6
5.4.7 Mobile tracker.....	6
5.5 Profiles.....	6
5.5.1 Network selection.....	7
5.5.2 Dual SIM settings.....	7
5.5.3 Network selection.....	7
5.5.4 EBook.....	7
5.5.5 SIM tool kit.....	7
5.5.6 Bluetooth.....	7
5.5.7 Fun&Games.....	7
5.5.8 Live space.....	7
5.5.9 Sokoban.....	7
5.5.10 Snake.....	7
5.5.11 Angry Bird.....	7
5.5.12 Audio player.....	7
5.5.13 Templates.....	7
5.5.14 Image environment.....	7
5.5.15 Medical devices.....	7
5.5.16 Pedometer.....	7
5.5.17 Camera.....	7
5.5.18 Camcorder.....	7

5.6 Image viewer.....	8
5.6.1 Video Player.....	8
5.6.2 FM radio.....	8
5.6.3 Recorder.....	8
5.6.4 Application.....	8
5.6.5 Calendar.....	8
5.6.6 Alarm.....	8
5.6.7 Torch.....	8
5.6.8 Calculator.....	8
5.6.9 Stopwatch.....	8
5.6.10 World Clock/Timer.....	8
5.6.11 EBook.....	8
5.6.12 SIM tool kit.....	8
5.6.13 Bluetooth.....	8
5.6.14 Fun&Games.....	8
5.6.15 Live space.....	8
5.6.16 Sokoban.....	8
5.6.17 Snake.....	8
5.6.18 Angry Bird.....	8
5.6.19 Audio player.....	8
5.6.20 Templates.....	8
5.6.21 Image environment.....	8
5.6.22 Medical devices.....	8
5.6.23 Pedometer.....	8
5.6.24 Camera.....	8
5.6.25 Camcorder.....	8

Make an emergency call.....	11
12.3 Password access.....	11
12.3.1 Phone password.....	11
12.3.2 PIN code.....	11
12.3.3 PIN2 code.....	11
12.3.4 PUK code.....	12
12.3.5 PUK2 code.....	12
12.4 Customer care number.....	12
12.5 Live warranty certificate.....	12
12.6 Cautions for battery charging.....	12
12.7 Cautions for battery usage.....	12

12.6 Cautions for spare parts usage.....	13
12.7 Other safety information.....	14
12.8 SAR Compliance.....	14
12.9 Troubleshooting.....	15
13 Customer care number.....	15
14 Live warranty certificate.....	15
15 Cautions for battery charging.....	15
16 Cautions for battery usage.....	15



1. Getting to know your phone

- 1.1 Installing SIM card and battery
(1) Hold on [End Key] for about three seconds to switch off the phone.
(2) Remove the battery cover.
(3) Remove the battery.
(4) Follow the sign for SIM1 and SIM2 on the phone to install SIM1 and SIM2. Please make sure that the golden contacts of the card face into the phone and the notched corner has the same direction with the card slot, then push the other side of the card gently until it fits itself in the card slot.
(5) Replace the battery with its golden contact part facing the set phone battery contact piece, and then replace the battery cover.
- 1.2 Installing Storage card
(1) Hold on [End Key] for about three seconds to switch off the phone.
(2) Remove the battery cover.
(3) Remove the battery.
(4) Follow the arrow direction of "OPEN" on the T-Card slot cover, open card slot cover, put the T-Card into the slot vertically, make sure that the gold contacts of the

card face upwards, until the card face itself in the card slot.
(5) Follow the arrow direction of "LOCK" on the T-Card slot cover, pull card slot cover to lock the card slot.
1.3 Battery charging
Charged by the travel charger
(1) Insert the battery correctly into the phone.
(2) Insert the head of the travel charger to connecting slot of the phone, and then connect the charger to a standard power socket.
When charging is complete, unplug the charger from the standard power socket first, and then disconnect the phone and charger.
1.4 Power on/off
1.4.1 Power on
Hold on [End Key] for three seconds to switch on the phone.
1.4.2 Power off
Hold on [End Key] for three seconds to switch off the phone.
2. Using Call Function
2.1 Making a call
(3) On the Home Screen, input the area code and phone number.

- (4) Select <Options--Call--Voice call--SIM1/SIM2> to select SIM1 or SIM2 to call.
2.2 Answering or rejecting a call
2.2.1 Answer a call
When there is an incoming call, you can press [Left Soft Key] to answer.
2.2.2 Reject a call
When there is an incoming call, you can press [End/Right softkey] to reject it.
2.3 Adjusting call volume
During a call, you can press [Up/Down Key] to adjust the earphone volume.
2.4 Ending a call
Press [End Key] to end the call.
3. Contacts
3.1 View a contact
Enter the phonebook, the phone is defaulted to show contact list with all entries.
3.2 Adding a new contact
On the Contacts list, select<Options--New>to create a new contact.
Phone: You can input the contact name, mobile phone, you can also set special ring for the contact entry.

SIM1. The input record will be saved to SIM1, with each name one phone number.
SIM2. The input record will be saved to SIM2, with each name one phone number.
3.3 Write Message
Directly send a message to the phone number.
3.4 Call
Call the current contact.
3.5 Delete
Delete the current contact.
3.6 Delete multiple
Delete contacts on marked at the same time.
3.7 Import/Export
Import: You can backup your contacts to SD card or phone memory.
Export: You can backup your contacts to phone to SD card or phone memory.
3.8 Send vCard
Send a vCard via SMS/Bluetooth.
3.9 Copy
You can copy the number from phone to SIM card.

- 3.10 Others**
You can set Speed dial number/Fixed dialing number and check own number/service number the Memory status.
4. Call logs
Enter the main menu, and then select [Call logs] to enter the call list.
4.1 Missed calls
Display recent calls upticked up.
4.2 Dailed calls
Display recent calls dailed.
4.3 Received calls
Display recent calls received.
4.4 Rejected calls
Display recent calls rejected.
4.5 Delete all
Delete all the call entries.
4.6 Call timers
Select the desired SIM Card, and then you can view all relevant information about the SIM Card.
4.7 Open list
Select any a log, Press [End/SIM2] to enter the Option list

- 4.7.1 Details**
View the detail of the current call.
4.7.2 Call
Call the current number.
4.7.3 Write message
Directly input the SMS and send to the current number.
4.7.4 Add to contacts
Add the number to black list and block the same number to call you.
4.7.5 Add to blacklist
Add the number to black list and block the same number to call you.
4.7.6 Delete
Delete the current logs.
4.7.7 Delete all
Delete all the current logs.
4.7.8 Mark
You can mark one or more call logs, then you can write message to them or delete it.
5. Settings
5.1 Call settings
Blacklist: You can check the blacklist in here, and also can set the feature whether need to act on calling or messaging.
Fixed dialing: Add the numbers for fixed dialing.
Call divert: Divert an incoming call to a designated phone number under the presetting condition. This function can be launched or closed.
Call waiting: The network will inform you for a newly incoming call during the call. Please contact with your network operator to launch or close the function.
Select line: Select default line 1 or line 2.
Hide ID: Hide ID. Display own ID. Display ID by network these options existing.
Others: There are some feature about IP prefix, Minute reminder, Auto redial, Vibration on call connected, Reject via SMS, Auto call recorder.
5.2 Phone settings
Date & Time: You can set time, date and format, also you can On/Off Update time settings for your phone.
Language settings: Set the current system display language and writing language.
Dedicated keys: You can set the direction key designated menu.
Scheduled power on/off: Phone can power on/off

- according to your preset time.
Shortcuts: Set default shortcut functions.
5.3 Display settings
5.3.1 Wallpaper settings
Select the default or other pictures as the wallpaper of the phone.
5.3.2 Brightness
Press [Left/Right Key] to adjust the brightness.
5.3.3 Keypad backlight time
Select the desired keypad light time.
5.4 Security settings
5.4.1 PIN
PIN code is the personal identification number for SIM card. If never be modified, the initial password set by network operator should be 1234 or 0000. If activated the power-on PIN code, then you have to input the PIN password each time you switch the phone on. You can modify the PIN code to prevent your SIM card being used by others.
5.4.2 Modify PIN2
PIN2 code is the personal identification code required for some certain functions (such as set fixed number, set phone fans, etc).

- Therefore, please do remember the PIN code. If you modify it.
PUK code (PUK1) is made up by 8 digits, unmodifiable. When the phone is locked by PIN code, please enter correct PUK code to unlock the phone. If you incorrectly input the PUK code ten times in succession, then the SIM card cannot be used any more. Some PUK codes are provided together with the SIM card, some should be gained from the network service provider. If you don't know the PUK code while your PIN code is locked, please never input the code casually. In this case, please call the hotline of the service provider for your SIM card, after simply checking about the user identity, you can gain the PUK code for free to unlock your phone.
5.4.3 Phone locked
Please be careful when use this function. If you forget PUK code, please consult your network operator. If you incorrectly input the PUK code ten times in succession, the SIM card will be scrap.
5.4.4 Change phone password
You can change the phone password.
5.4.5 Privacy
Secured by phone password, the phone will be protected from other unauthorized users. When password function has been activated for call logs or message, you have to enter correct password on corresponding main menu or sub-menu. The default password is "4321".

- 5.4.6 Lock screen by end-key**
Once adjusted this function, when the backlight is on, press [End Key] to turn off the backlight and auto lock the keypad.
5.4.7 Mobile tracker
When the Mobile tracker is on, once your SIM card is replaced, the phone will automatically send status information to the prior SIM card.
call timely to save the phone time.
Please be careful when use this function.
5.4.8 Profiles
After activated this function, you should input password each time you switch the phone on.
The default password is "4321".
5.4.9 Change phone password
You can change the phone password.
5.4.10 Privacy
Secured by phone password, the phone will be protected from other unauthorized users. When password function has been activated for call logs or message, you have to enter correct password on corresponding main menu or sub-menu. The default password is "4321".

- 5.4.11 Lock screen by end-key**
Once adjusted this function, when the backlight is on, press [End Key] to turn off the backlight and auto lock the keypad.
5.4.12 Mobile tracker
When the Mobile tracker is on, once your SIM card is replaced, the phone will automatically send status information to the prior SIM card.
call timely to save the phone time.
Please be careful when use this function.
5.4.13 Profiles
After activated this function, you should input password each time you switch the phone on.
The default password is "4321".
5.4.14 Change phone password
You can change the phone password.
5.4.15 Privacy
Secured by phone password, the phone will be protected from other unauthorized users. When password function has been activated for call logs or message, you have to enter correct password on corresponding main menu or sub-menu. The default password is "4321".

- 5.4.16 Lock screen by end-key**
Once adjusted this function, when the backlight is on, press [End Key] to turn off the backlight and auto lock the keypad.
5.4.17 Mobile tracker
When the Mobile tracker is on, once your SIM card is replaced, the phone will automatically send status information to the prior SIM card.
call timely to save the phone time.
Please be careful when use this function.
5.4.18 Profiles
After activated this function, you should input password each time you switch the phone on.
The default password is "4321".
5.4.19 Change phone password
You can change the phone password.
5.4.20 Privacy
Secured by phone password, the phone will be protected from other unauthorized users. When password function has been activated for call logs or message, you have to enter correct password on corresponding main menu or sub-menu. The default password is "4321".

volume, Power ringtone, Ring Type, Set the ring type such as Repeat, Ascending, Beep once, Other alert rings, Select the key tone , battery low alert , power ringtone , dial tone, Note: After plugging in the headset, ringtone will output from the headset as well as the phone, when there is incoming call or message, Flight mode/Activate, it will closed all wireless signals.

5.6 Network selection
You can set up the phone network with this function and choose the modes of searching the phone network, including Auto and Manual modes.

5.7 Dual SIM settings

- ▶ Standby mode: You can select the standby mode for SIM card, either to have one SIM card standby, or to have both SIM cards standby simultaneously.
- ▶ Reply by email SIM: You can activate the function to reply from current SIM card for call and SMS.
- ▶ Set SIM name: You can name the Card as you want.
- ▶ Set dual SIM call divert

6. My files

This menu allows you to manage file stored in the phone or storage card.

7.0 Option list

7.1 Write message
Enter the main menu and select [Message—Write message] to add a new SMS directly.

After writing an SMS, press [OK Key] to send the message.

7.2 Inbox
Store all received SMS.

7.3 Outbox
Store all SMS failed to be sent.

7.4 Drafts
Save edited SMS haven't sent.

7.5 Sendbox
Store all the SMS successfully sent out.

7.6 Templates
While editing messages, you can directly cite the preset common phrases. Select <Edit> to set the common phrases by yourselves.

7.7 Broadcast message
You can receive broadcast text messages with various

contents via network service, such as news, weather or sports information. For more details, please consult your network operator.

7.8 Option list

Press option key to enter land you can modify SMS Settings and check the Message capacity.

8. Multimedia

8.1 Camera
Enter the main menu, and select [Multimedia—Camera] to enter the camera preview screen, press [OK Key] to take a photo.

8.2 Camcorder
Enter the main menu, and select [Multimedia—Camcorder] to enter the video preview screen, and press [OK Key] to start recording the video.

8.3 Image viewer
The function provides a prompt access to view the photos and pictures.

8.4 Video Player
Enter the Main menu, and click [Multimedia—Video player]. Press [OK Key] to play or pause Press [Up/Down Key] to skip to last/next one

Press [Left/Right Key] to adjust the playing volume

8.5 FM radio
Enter the Main menu, then select [Multimedia—FM radio].

▶ Press [OK Key] to play or pause

▶ Press [Left/Right Key] to adjust the radio frequency

▶ Press [Up/Down Key] to adjust the playing volume

8.6 Recorder
Enter the main menu, select [Multimedia—Recorder], and press [OK Key] to start recording. After ceasing the recording, the recorded file will be automatically save in the folder [Audio], select <Options—Record file list> to check

9. Application

9.1 Calendar
Once you enter this menu, there is a monthly-view calendar for you to keep track of important appointments, etc.

9.2 Alarm
On the Home Screen, press [Left Soft Key] to enter the main menu, and select [Application—Alarm], then you can set the alarm name, time, ring and mode.

9.3 Torch
You can open or closed torch.

9.4 Calculator
Directly input numbers, press [Navigation Key] to select your desired operation symbols (+, -, ×, ÷). Press [OK Key] to get the answer.

9.5 Stopwatch
You can start stopwatch.

9.6 World clock/Timer
This function allows you to check the standard time in different areas of the world and you can into timer.

9.7 Ebook
You can view file in TXT format by Ebook and copy the TXT file to the [Ebook] folder in the phone or memory card from your PC.

9.8 ASIN tool kit
You can into ASIN tool kit and check all the function about the ASIN operator's device.

9.9 Bluetooth
With Bluetooth, you can make a wireless connection to other compatible devices, such as mobile phones, headsets and car kits. You can use the Bluetooth to send images, video clips, music, sound clips and notes, and transfer files from your compatible PC.

10. Fun&Games

10.1 Lava space
You can into Lava space and choose SIM1 or SIM2 to check lava space function.

10.2 Sokoban
You can play sokoban game and for specific operation, please refer to Help option of the game.

10.3 Snake
You can play Snake games and for specific operation, please refer to Help option of the game.

10.4 Hungry bird
You can play Hungry bird game and for specific operation, please refer to Help option of the game.

11. Audio player
You can enter the main menu, and select [Multimedia—Audio] to enter the Audio Player screen.

Press [OK Key] to play or pause Press [Left/Right Key] to skip to last/next one Press [Up/Down Key] to adjust the playing volume

12. Safety Precaution

12.1 Usage environment
Please remember to obey relevant rules and regulations whenever use your phone. This will prevent

bad effect from you and the environment.

Switch off your phone near explosive places, such as gas stations, bunkers, chemical factories or blasting scene, and adhere to any safety signs and instructions there. Breaking any rules may cause explosion or injury.

Phone using in plane will interfere with the flight operation and bring dangers. Therefore, please do switch off your phone before boarding, and make sure it is power off during the whole flight.

Please keep the phone in its special bracket while you're driving. Please don't put it on a seat or in places where it could fall off when the car encounters collision or break. In order to ensure safe driving and avoid road accidents, please don't use the phone when driving. If you must use it, please use the phone's hands-free headset or park at roadside before making or answering a call.

Please put the phone away from the high temperature environment, for explosion might be caused when the battery is excess high temperature.

12.2 Medical devices
Please switch off your phone in areas near the electronic medical equipments that obviously requires switching the phone off. Such as heart pacemakers, hearing aids, etc.) Most medical devices can shield the

phone's RF signal, but some can't. If you have any doubts or need to find out more, please consult your doctor or medical device manufacturer.

12.2.1 Pacemaker
Pacemaker manufacturers advise the distance between your phone and heart pacemaker should be 6 inches (15.3 cm) at least, otherwise the phone could interfere with the pacemaker.

The personnel who wears pacemaker should do the following:

- ▶ If your phone is switched off, please turn on your phone and check whether the network signal is strong enough.
- ▶ If the phone is switched off, please turn on your phone and check whether the network signal is strong enough.
- ▶ If the phone is switched off, please turn on your phone and check whether the network signal is strong enough.

12.2.2 Hearing aids
Mobile phone might bring some interference to some hearing aids. If so, please consult the hearing aids manufacturer.

12.2.3 Emergency calls
As the phone uses a radio signal, wireless and ground communication network and personal settings functions like other phones, it is impossible to ensure your phone can be connected successfully in any situation, so please don't rely purely on your phone as the only means of notification in cases of emergency (such as medical first aid).

Make an emergency call

If your phone is switched off, please turn on your phone and check whether the network signal is strong enough.

(1) Input the local first aid number correctly (such as 120), different areas have different first aid numbers.

(2) Press the press the call key to call.

Caution:
While making an emergency call, you should try best to provide all important information precisely. At this time, the phone may be the only communication tool, so, don't end the call without permission.

12.3 Password access
Your phone and SIM card can be protected by a password to prevent others using them illegally.

12.3.1 Phone password

This protects your phone from unauthorized users. You can set the preset password when you use it for the first time. After using it, please modify your phone password as soon as possible and keep it secret.

12.3.2 PIN code
This is personal identification code, which is used to protect the SIM card from unauthorized users. Generally, the PIN code and SIM card will be provided together. After activating the PIN code, you need to input correct password each time you switch the phone on or to ensure normal usage.

Caution:
If you input your PIN code incorrectly for three times in succession, the SIM card will be locked. You need to enter the PUK code to unlock it. If you don't have a PUK code, please contact your network operator or SIM card retailer for this information. Please don't input any character(s).

12.3.3 PIN2 code
This is the password for activating special functions of the SIM card. You need to input it while entering some functions (eg Charge Unit, Fixed Dialing etc.) Usually,

the PIN2 code and the SIM card will be provided together. If you incorrectly input the PIN2 code for three times in succession, it will be locked and you will need to input PUK2 to unlock it.

12.3.4 PUK code
This is used to unlock the PIN code. Usually the PUK code and SIM card are provided together. If you don't have it, please contact with your network operator or SIM card retailer. SIM Card won't be used any more, if you incorrectly input the PUK code ten times in succession. In that case, please apply a new SIM card from your network operator. PUK code is unmodifiable.

12.3.5 PUK2 code
This is used to unlock the PIN2 code. Usually the PUK2 code and the SIM card are provided together. PUK2 can modify the locked PIN2 code. If you incorrectly input the PUK2 code for ten times in succession, you will not be able to access some functions. Please apply to your operator for a new card. The PUK2 code is unmodifiable. If you lose it, please contact your service provider.

12.4 Cautions for battery charging
The phone provides power by using a lithium battery. The standby time and call time will be influenced by the system's environment and phone settings.

Please use the approved battery and charger designated for this product. The company will take no responsibility for damage caused by unauthorized battery or charger.

The battery can't be used starting when the phone is charged in power-on-state.

Caution:
1. If there is no battery left at all, then the battery icon will appear after 2-3 minutes of charging. The battery charging time depends on the status of the phone (whether switched on, making a call), usually, it will take about 2-5 hours.

2. To make the new battery achieve its best capacity, please charge and discharge the phone for twice or three times. Please charge the new battery over 10 hours for the first several times.

Don't use wet hands to touch the battery or charger while charging in order to avoid danger.

Try not to use the phone while charging.

The battery icon stops scrolling while the battery is full, and then you can disconnect the phone from the charger adapter.

12.5 Cautions for battery usage
The battery usage depends on the network, phone

setting and usage situation.

Never use any damaged battery.

The phone will consume a little power if it is near network station. Therefore, the call and standby time depends greatly on the signal strength of honeycomb network and the parameters set by network operator. The battery charging time lies on the remnant power, and the type of the battery and charger. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to replace with a new battery.

Only use batteries and chargers authorized for this device. Otherwise, explosion might be caused. Please disconnect the charger while unused. Do not leave the battery connected to a charger over one week, for overcharging may shorten the life length.

Do not connect the amide and cathode of a battery inversely.

Do not leave the battery in places with over-high or over-low temperature. Otherwise, the battery capacity will be reduced and battery life will be shortened.

Always try to keep the battery in room temperature. Do not short-circuit the battery. This may damage the electronic core or internal protected circuit. If you keep the unused battery in the pocket or bags, metal objects (eg coin, clip or pen etc.) inside might have the amide

directly contacted with the cathode of the battery and caused accidental short circuit. Therefore, please carefully and separately store the battery.

Don't turn your phone battery or treat it as common rubbish. Please adhere to the local environmental policy in order to avoid endangering life and causing environmental damage, and recycle your batteries in time.

If your phone, battery or other charging device is accidentally penetrated by water, you must not put it inside any calculation equipment (such as driver, microwave oven etc.) to dry it. The phone or other products may go wrong, and may even cause the phone, battery or other charging device to burn, expand and explode.

Please deal with the discarded battery according to the relevant introduction.

The company will take no responsibility for any direct or indirect damage caused by user error.

12.6 Cautions for spare parts usage

- ▶ Please put all spare parts (such as SIM card, storage card, battery etc.) out of reach of children, in case danger occurs.
- ▶ Please do switch off the phone and unplug the phone and charger before you removing the battery from the phone.

- ▶ As the phone's spare parts are not waterproof, please keep all spare parts dry.
- ▶ You should pull out the plug of any spare part correctly when you switch off the power, don't drag the power line freely.
- ▶ If the phone, battery, and/or charger don't operate normally, please contact closest qualified maintenance centres timely.

12.7 Other safety information
If you don't use your phone, it's better to switch it off and remove the battery so as to save energy and avoid cellular radiation.

Please don't have the volume over loud while using the phone, which might impair your hearing.

The unprofessional shouldn't disassemble the terminal and battery of the phone.

It is recommended that you should try not to use the holder with magnet button, for the magnet may interfere with the phone signal, and hard iron button may cause the LCD screen. Plastic phone cover will lead to poor realization of vapor and have the internal components completely, moreover, it can have the phone shell oxidized and faded.

If you or your family has a medical record of dizziness or epilepsy, please consult with the doctor first. If you

want to play phone games or use the flashlight (the flash doesn't available in all phone models).

Please don't put the flashlight too close to the eyes of human beings or animals, as this could do harm to the eyes.

Should avoid the phone falling off from high places.

12.8 SAR Compliance

- ▶ Your phone is designed not to exceed the limits of emission of radio waves recommended by international guidelines.
- ▶ SAR (specific absorption rate) is the measurement of body absorbed RF quantity when the phone is in use. SAR value is ascertained according to the highest RF level generated during laboratory tests.
- ▶ The SAR value of the phone may depend on factors such as proximity to the network tower, use of accessories or other accessories.
- ▶ The highest SAR value of the device at the head and body are below 1.0W/kg respectively averaged over 1g/m of human tissue.

SAR Recommendations

- ▶ Use a wireless hands-free system (headphone, headset) with a low power Bluetooth sender, whenever more convenient.
- ▶ Please keep your calls short and use SMS whenever more convenient. This advice applies especially to children, adolescents and pregnant women.

13. Troubleshooting

- ▶ Prefer to use your cell phone when the signal quality is good.
- ▶ People having active medical implants should be advised to keep their cell phone at least 15 cm away from the implant.
- ▶ Maintain a preferable distance of 15 mm from the device.

14. Customer care number
For any assistance call 18602076000

15. Lava warranty certificate
Limited warranty:
LAVA International Ltd. (LAVA) provides limited warranty for your mobile phone and original accessories delivered with your mobile phone (hereinafter referred to as "product").
The warranty period for the transceiver is one (1) year and for battery, charger and headset is six (6) months from the date of purchase.

LAVA Warranty
Subject to the conditions of this Limited Warranty, LAVA warrants a product to be free from defects in design, material and workmanship at the time of its original purchase by you, and for a subsequent period of one (1) year for transceiver and six (6) months for battery & charger.

You shall have no coverage or benefits under this warranty in the event that any of the following conditions are applicable:

- ▶ The product has been subjected to abnormal use or conditions, improper storage, exposure to excessive moisture or dampness, exposure to excessive temperature, unauthorized modification, unauthorized repair(including but not limited to use of unauthorized spare parts in repair), abuse, accidents, Acts of God, spills of food or liquids, improper installation.
- ▶ You have not notified LAVA of the defect in the product during the applicable warranty period.
- ▶ The product serial no. code or the accessories date code has been removed, defaced or altered.
- ▶ The product has been used with or connected to an accessory (if not supplied by LAVA or its affiliate, (i) Not fit for use with the product or (ii) Used otherwise than in manner intended.

- ▶ The seals of the product's battery enclosure have been broken or shown evidence of tampering or the product's battery has been used in equipment other than that for which it has been specified usable by LAVA.
- ▶ All plastic surfaces and all other externally exposed part that is scratched or damaged due to normal use. To get maximum if of your new product, we recommend you to:
 - ▶ Read the guidelines for safe and efficient use as mentioned in the manual.
 - ▶ Read the terms and conditions of your Lava warranty in this manual.
 - ▶ Keep your original receipt; you will need it for warranty services if asked to produce.

Please See Lava Warranty Certificate along with original proof of purchase whenever you require any warranty services.

In case Lava product needs service, please visit the nearest Lava service centers given in the service guide. Please visit our Website www.lavamobile.com for updated list of Authorized Service Centers near to your location.

Important note: Your warranty to be valid, all information on the warranty certificate has to be completed including the stamp from the authorized

distributor/retailer.

All warranty information, product features and specifications are subject to change without notice.

Model No.:.....
IMEI-No.:.....
Date of purchase:.....
Model No.:.....