

# **LAVA KKT40 mini**

## **A User's Guide**

© 2013. All rights are reserved. No part of this document may be reproduced without permission.

While all efforts have been made to ensure the accuracy of all contents in this manual, we assume no liability for errors or omissions or statements of any kind in this manual, whether such errors or omissions or statements resulting from negligence, accidents, or any other cause. The contents of this manual are subject to change without notice.

Protect our environment! We strive to produce products in compliance with global environmental standards. Please consult your local authorities for proper disposal.

Note: User's Manual is just to guide the user about the functionality of the phone. This does not substantiate any certificate of technology. Some functions may vary due to modifications and up-gradation of software or due to printing mistake

## Welcome

Congratulations on your purchase of the LAVA KKT40 mini mobile phone. Your phone provides many functions which are practical for daily use, such as a hands-free loudspeaker, 0.3 MP camera, MP3 player, Ultra clear video. You can read the manual to understand how to use KKT40 mini mobile phone and experience the well-established functions and simple operation method. Please use the original accessory in order to achieve the best use of effects. Use of non-original components results in of the damage caused of by machinery, in which case Lava shall not be responsible.

## LAVA support and contact Information

Check [www.Lavamobiles.com](http://www.Lavamobiles.com) web site for additional information, downloads, and services related to your LAVA product.

To check for the nearest LAVA service center location for maintenance services, you may like to visit [www.lavamobiles.com/support-services](http://www.lavamobiles.com/support-services)

## Service Center number

No.:1860-200-7500

## For Your Safety

Read these simple guidelines. Not following them may be dangerous or illegal. Read the complete user manual for further information.



### Save power

Do not use your mobile phone where it is forbidden to use or it might cause disturbance or danger.



### Safe transportation first

Please observe all local laws and regulations.

Do not use your mobile phone while driving.

Safe transportation should be considered first when driving.

**Disturbance**

All mobile phone performances might be reduced or fluctuate during a disturbance.

**Turn off when in the hospital**

Please follow related limitations.

Please switch your mobile phone off when near a medical instrument.

**Turn off when in an airplane**

Please follow related limitations.

Do not try to use your mobile phone on an airplane.

**Turn off around exposure Area**

Please observe related limitations

Do not use your mobile phone near an area where explosions can occur.

**Use qualified after sales service**

Only a qualified technician can install or repair your mobile phone. Please contact LAVA authorized service center in case of phone failure.

**Accessories and batteries**

Only use the authorized accessories and batteries and do not connect to incompatible manufacturers or products.

**Waterproof**

Your mobile phone is not waterproof. Please keep it away from water.

**Backup**

Remember to make a backup or keep a written record of all important information saved in your mobile phone.

**Connect to other devices**

Please read the user manual of the device to get more detailed security instructions before connecting to other devices and do not connect to an incompatible product.



### SOS emergency calls

Make sure your mobile phone is switched on and in a service area. In idle mode, input the SOS number; then press the Dial Key. Advise where you are and do not hang up without permission.



**Please read carefully and observe the terms above.**

## Innovative Functions

### Mobile Tracker

After entering the password of mobile tracker, you can change the status and settings. The phone password is "4321" by default.

A. Status: On/Off this function.

B. Password: You can change the default password using this function.

C. Bonding Phone: Save a phone number.

D. Preset Content: Set the message content when the tracker message was sent automatically.

After changing SIM card, if user input wrong mobile tracker password for only once, phone will send a message to bonding phone number.

### Auto call recorder

You can set on/off for this feature, when it is set on, phone will record automatically during you answer/make a call.

### Your phone & Key parts



1 Receiver Mesh	2 OK Key
3 Navigation Key	4 Function Key
5 Key Pad	6 Speaker Mesh
7 Camera	

## Special key

Left Navigation Key: The Shortcuts for the default Write messages.

Right Navigation Key: The Shortcuts for the default Shortcuts.

Up Navigation Key: The Shortcuts for the default Camera.

Down Navigation Key: The Shortcuts for the default Calendar.

OK Key: The Shortcuts for the default Music Player.

Long press on 0 Key: Launch the FM radio function.

Long press on # key: Switch profiles between Silent mode and General mode.

Long press on the Right Soft Key: Turn on/off the Torch.

**Note:** "Press" in this manual, means to press and release the key; "Long Press/Press and hold" means to press and hold the key for at least 2 seconds.

## Text Input Method

This phone provides various text input methods that allow you to use less key strokes to input and search for text:

- English input method
- Hindi input method.

## Getting Started

### Batteries

The battery is included in the package. It is not fully charged out of factory but it may still be able to power on your phone. Please completely use up the power of the battery and then charge it for at least 12 hours with your phone turned off. Your battery will reach its optimal state after three cycles of charge and discharge.

### Installing and uninstalling battery

To install the battery, remove the back cover from the phone by pressing firmly on the cover and slide

it down. Align the golden contacts of the battery to the contacts in the phone, and then gently snap down the battery into place. Re-assemble the back cover.

To uninstall the battery, flip the battery out from the bottom of the battery.

### **Charging battery**

Plug the charger into the socket on the side of your phone. Connect the charger to an AC wall socket. The blinking of the battery level icon indicates the battery is being charged. When the blinking stops, it indicates the charging is finished.

During charging, the phone and charger will feel warm to the touch. This is normal.

### **Memory Card**

To install the T-flash card, remove the back cover and battery from the phone. Pull card deck and then put it up, then the T-Flash card can be installed

Make the same operations to uninstall the T-flash card.

### **Keypad Lock and Unlock**

In the standby mode, press the Left Soft Key and then \* Key in quick succession to lock the keypad manually and Left Soft key and \* key to unlock the keypad.

### **Emergency call**

If any emergency arises, dial 112 (or other emergency call number) for emergency help.

### **Call Function**

After the setup described in the previous sections is completed, you are ready to make and receive calls using the basic information provided in this section.

**Note:** When you are using headset, please plug/unplug the headset gently to avoid damaging the headset jack.

### **Dialing**

When the network carrier is shown on the screen, your phone has entered the Standby mode and you may make or receive calls. If you have installed two SIM cards, the two network carriers will both appear on the screen.

To make phone calls, you may dial the number from the Dial screen or from your phonebook.

### **Direct dial**

Press the function key with respect to the dial icon on the Home screen.

### **Dialing from Contacts**

Enter Phonebook from the Main Menu. You may use alphabet for quick search of the names.

### **Unanswered call**

If you have set up Auto Re-dial, your phone will automatically re-dial the last unanswered number

that you called.

## Answering a call

When there is an incoming call, the phone will notify you through vibration, ringing, vibration plus ringing, etc, according to your setting. The name and phone number of the caller is shown on the screen if the network supports the service. You may answer or reject the call.

If call waiting is on when you are on the phone and there is another incoming call, your phone will notify you with a short tone. You may answer or reject that second call. If you choose to answer the second call, the current call will be on hold.

## Contacts

There are two separate phonebook, one stored on the SIM card and the other in the phone.

Each entry in your SIM card's phonebook consists of a phone number and a name. When you change to another phone, the contact information can be transferred to your new phone with the SIM card. The total number of entries allowed in a SIM card varies with different SIM cards.

The contacts stored in the phone can include name and phone number.

You may set up various groups to categorize your contacts. You may also put contacts into the Blacklist to block all their calls and messages.

## Call Log

In idle screen, press the Call key to directly access Call history menu.

For SIM1 call history, in idle screen, press the Call key or go to Menu > Log> view the call history. Enter All calls, all call logs will display, including Missed calls, Dialed calls, Received calls.

## Message

This chapter introduces the messaging services provided by the network. Some services may not be supported by the local network.

Enter the message screen, and then select the **"Write message"** item to create new message. You can press the Options to get more operations, and also you can press **"\*\*"**key to insert symbol, press **"#"**key to switch input method.

## SMS Settings

You can adjust the various settings of the message functions including: **Blacklist, Text msg. counter, Memory status, save sent message and preferred storage.**

## Camera

Your cellphone provides the function of camera. Access Camera and you can take photograph directly by pressing the OK key. Press the camera shortcuts key again to enter:



**Switch to Video recorder:** You can select for Video Recording function.

**Photos:** Enter into the album and view the image.

**Camera settings:** Set the related parameters of the camera.

**Image settings:** Set the size and the quality of the image.

**White balance:** Set the white balance such as Auto, Daylight, Tungsten, Fluorescent, Cloudy and Incandescent.

**Scene mode:** Choose Auto or Night.

**Restore default camera:** Set to return to the default settings.

## Media

After entering the Media feature, your phone provided include Image viewer, Video Recorder, Video Player, Sound Recorder, FM Radio.

### Image viewer

Enter it and select the picture you need, then press the Left soft key to choose Options, you can see the submenus as follows:

**View:** View the picture you have chosen.

**Browse style:** You can set view style, including list style and matrix style.

**Send:** Transmit the appointed documents via Bluetooth or in the way as multimedia message.

**Use as:** Use the current photo as wallpaper, screen saver picture or power on/off display..

**Rename:** Change the name of the selected picture.

**Delete:** Delete this picture.

**Image information:** View the picture detailed information.

### Video recorder

Select [Video recorder] to get into the interface of recording directly, and then press the OK key to start recording video.

press the Left/Right key can adjust the focal distance of recording.

Get into the following menus by pressing Options:

**Switch to camera:** chang to the camera mode ;

**Camcorder settings:** Set the anti-flicker 50Hz or 60Hz;

**Video settings:** Set up the quality parameter of the video.sharing video, Normal, Good and High.

### Video player

Enter it and select the Video document you need, then press the Left soft key to choose Options.

### Sound Recorder

If you choose it, you can get into the state of sound-recording; choose the following options to get into:

**New record:** Record a new sound-recording.

**List:** Get into the list to see the recorder documents which have recorded and saved.

Select one and enter the Options, you can operate it as follows:

**Play:** Telecast the current sound-recording that you have chosen.

**Rename:** Change the name of the current sound-recording.

**Delete:** Delete the current documents of the current sound-recording.

**Use as:** Set with incoming call, message, Power on/off ringtone.

**Send:** Via Bluetooth.

**Details:** Display of recording time and file size of the file.

## **FM Radio**

This cellular phone provides the function of the radio. In the interface of the radio, pressing the Left/right key can carry on the forward searching or the backward searching automatically, until a channel is found. When you can carry on searching by yourself manually, press the the Left/right key will increase/reduce 0.1 HZ. Pressing the Up/Down, You can adjust to the level of volume.

Press the OK Navigation key can start/close the broadcasting of the broadcast. Get into the interface of the radio; press [options] can carry on the following operations:

**Channel list:** Getting into this menu, it will show all the detailed list of channels that have been edited and kept in your phone. You can also add one channel or edit the channels.

**Manual input:** You can input the broadcast frequency that you want to hear by hand, it will broadcast

**Auto search:** Choose this menu can search broadcast channels automatically and save channels.

**Settings:** You can open or close the function of Background player and Loudspeaker. You can carry on the function of Loudspeaker after inputting the headphones and opening the cellular phone trumpet.

**Record :** Record the current program which is playing right now in the FM radio.

**File list :** View all the files you have recorded.

## **Music**

The phone comes with a Music player that plays all songs stored in your phone or memory card.

Press OK key to start /pause playing music, press the NKL/NKR to play the previous/next song, long press the Left/Right Navigation key to rewind/forward. Press the Up Key/Down Key for increasing or decreasing volume.

**Play:** Play this song.

**Details:** View the size and the total play time about this song.

**Refresh list:** You can refresh the music lists.

**Settings:** Open or close some function about the audio player, such as list auto gen., Repeat, Shuffle, Background play and so on.

## **Gallery**

You can use Gallery to organize your files in folders. If the memory card is inserted, the files stored on it are organized separately. Scroll up and down to view files on the current screen.

## **Services**

### **Internet service**

This mobile phone supports services based on Wireless Application Protocol (WAP). You can access the services supported by your network operator. You can get information on news, weather and flight number.

Note: GPRS service needs network support and it is available only when you apply this service and locate in GPRS network coverage.

**Homepage:** Enter it and you can get into the web site which you have set already in the WAP directly.

**Bookmarks:** Display existing web site which have saved in bookmarks. Select the web address that

**Search or input address:** Select this option and you can enter any WAP or internet website.

**Setting:** Set internet surfing options. Such as Data account, Browser options and Preferences.

## **Organizer**

### **Torch**

Turn on/off the flashlight, long press the right soft key in the standby interface can quickly open/close.

### **Bluetooth**

You may do functions for your Bluetooth settings such as: Turn on/off, Paired devices, Search devices, Settings.

### **Calendar**

In addition to the western calendar, you can add, edit and look up events on different dates.

### **Alarm**

You can set up to 6 alarm clocks.

### **World clock**

A basic world clock is provided.

## **Tools**

The Tools includes the following functions: Calculator, Ebook reader

## **Fun & Games**

There are in-built games: F1 race.

## **Settings**

Upon entering the settings, you can customize your phone as per your need, includes the following settings: User profiles, Phone settings, Display Settings, Call settings, Dual SIM settings, Network settings, Security settings, battery information and Restore factory settings. The default password is :4321.

### **User profiles**

The user can choose different scene mode and self-define the scene mode. The mobile phone provides six kinds of scene modes: General, Meeting, Outdoor, Earphone and Power saving. You can choose to activate one of them or set it personally.

**Activate:** Press the Left soft key to activate the mode you have chosen.

**Customize:** Choose it to enter and you can self-define the general modes.

**Tone settings:** Include set the tone of Incoming call, Message and Keypad tone.

**Volume:** Pressing the up/Down key to adjust the volume of the Ringtone and the Key tone.

**Alert type:** Pressing the Up/Down key to select Ring only, Vibrate Only, Vibrate and ring or Vibrate then ring.

**Ring type:** Pressing the Up/Down key to choose Repeat or Beep once.

The Headset mode don't have the menu of Activate. The Headset mode will open automatically while inserting headphones or use; the Bluetooth mode will open automatically while the earphone of Bluetooth is opened.

Advise you to set the User profiles as Meeting mode or Indoor mode when you are in public place.

### **Phone settings**

Enter this feature, you can set the date and time, language, preferred input method and so on.

**Time and date:** set time and date.

Set home city: Select a city for the time setting of the mobile phone.

Set time/date: Set current time and date.

Set format: Set the display format of time and date.

Update with time zone: When you set the other zone, the time will automatic update.

Auto update time: Set Auto update time, including Off, First confirm and On.

**Schedule power on/off:** Set the time at which the mobile phone will power on/off.

**Language:** Set the displaying language of mobile phone menus.

**Pref. input method:** Select the preferential input method for writing message, editing the text content of SMS, searching the contacts and so on.

**Shortcuts :**set the shortcuts function.

**Dedicated key :**Set the navigation key shortcuts.

**LCD backlight:** Set LCD brightness and backlight time.

### **Display settings**

Enter this feature, you can set the Wallpaper, Show data and time and so on.

**Wallpaper:** Select standby interface wallpaper.

**Show data and time:** Choose to open or close the time it shows on the screen when the cellphone is open.

### **Call settings**

You can customize the following features as per your preference.

#### **SIM call settings**

**Call waiting:** You can activate/deactivate this function and also check its status.

**Call divert:** You can set to divert the incoming calls in different conditions/to different Numbers.

**Call barring:** Network support is required to activate this service.

**Line switching:** You can switch the line.

### **Advanced settings**

**Back list:** You can add the contacts in the contact list to the blacklist thereby blocking the voice calls from these contacts.

**Auto redial:** You can set whether or not to auto redial the number last called that was unanswered.

**Speed dial:** Set the status of the Speed dial to on or off; view and edit the number which can be dialed quickly.

**Call time reminder:** You can set the duration of the call for the phone to remind you when the time is reached.

**Call limit:** Turn on/off this function.

**Reject by SMS:** Turn on this function, when you reject other call, you can send a message to the caller and tell him you don't convenient to answer.

**Vibrate when call connect:** Open the function, when the phone is switched on when the vibration.

**Answer mode:** You can set "any key" or "auto to answer when headset mode" when incoming call.

**Auto call record:** You can set on/off for this feature, when it is set on, phone will record automatically

during you answer/make a call.

## **Dual SIM Settings**

You can set enable one/both SIM card, and also you can setup the Flight Mode.

## **Network settings**

This menu has connection with the network supplier, so please get touch with them when you use this function.If you want to get into one network which doesn't have the roaming protocol with the original network you have been in.

### **SIM1 network settings/SIM2 network settings:**

#### **Network selection:**

**New search:** Start to find the network again.

**Select network:** Select the network which you prefer.

**Selection mode:** Press the Left soft key to choose Done or press the Hung\_Up key to exit the submenu.

## **Security settings**

You can set SIM security, Phone security, Privacy protection, Mobile Tracker , Auto keypad lock and so on.

**SIM security:** Allow you to check the SIM card lock status and change password.

**Phone security:** Turn the phone lock on/off and edit your phone password.

**Privacy Protection:** Open the privacy Protection, when you access to corresponding function, you need to enter the password.

**Mobile Tracker:** Open this function, when new SIM card insert your phone.After a period of time, it will automatically send the message to the setting number.

**Key lock:** Set the waiting time of keypad lock. After setting, the keypad will be locked automatically if the mobile phone hasn't been used in specified time.

## **Restore factory settings**

Restore your phone to the factory or default settings through this option. You need to input your phone password (default is 4321) for this operation. All data will be deleted when your phone is restored to its factory settings.

## **Care & Maintenance**

### **Using the Mobile Phone and Charger**

#### **Warning**

The operating ambient temperature range of the charger is 0°C-50°C. Do not use the charger when the temperature exceeds this limit.

Use only chargers approved by the phone manufacturer to ensure safety. Failing to comply with this will violate the terms and conditions of the warranty.

## **Using battery**

The waiting time and calling time capacities specified by the phone manufacturer are obtained under ideal operating environment. The actual values will vary with the network condition, operating environment and operation method.

Please comply with the local regulations on battery disposal (such as recycling). Do not dispose it as household waste.

## **Safety First**

- Switch off the phone in hospitals and aircraft. Obey any restrictions. Wireless devices can affect the medical treatment and cause interference in aircraft.
- Some medical devices such as hearing aids and pacemaker may be sensitive to external radio frequency emissions. Consult the device manufacturers or your doctor before using the phone around the medical devices.
- Pay special attention to the ring tone volume and vibration settings if you have a heart problem.
- In areas with potentially explosive atmosphere, such as gas stations, fuel or chemical transfer or storage facilities, obey all signs and instructions.
- Your phone will emit radio frequency even in the standby mode. Turn off your phone when so instructed.
- Always obey all the local laws and regulations. Do not use your phone while driving. Use Hands-free operation, if available, and give full attention to driving and to the road. Pull off the road and park before making or answering a call if driving conditions so require.
- If your phone is lost or stolen, notify your service provider immediately to stop the SIM card from being used.
- When you contact your service provider, they will need your IMEI number. It is printed on the back of your phone set (you can find it when you remove your battery), or call \*#06# to look up your IMEI number. Copy this number and save it for future need.
- To prevent your phone from misuse, lock your SIM card or phone, and change passwords when necessary.
- Do not remove the battery without turning off the phone. Failure to follow this instruction may result in data loss.
- When you leave your vehicle, take the phone with you or place it in the glove compartment to avoid theft.

- Keep the phone, battery or charger out of reach of children.

### **Mobile Phone Usage Precautions**

- Your phone will give off electromagnetic waves. Do not place it near storage medium such as floppy disk.
- Using the phone near television, land phone, radio and office automatic devices may cause interference and affect the function of the mobile phone.
- Keep the phone dry; all kinds of liquid can erode electronic circuit.
- Keep the phone away from extreme temperatures.
- Keep the phone away from fire or a lighted cigarette.
- Do not paint the phone.
- Do not drop the phone or violently crush or shake the phone.
- Do not keep the phone near magcards and other object with magnetism. The phone's magnetism may clear the information stored on floppy disk, pre-paid phone card and credit card.
- Keep the phone away from hot places where the temperature may exceed 60°C, such as dashboard, windowsill, or areas exposed to direct sunlight.
- Do not disassemble or modify your phone. This can damage the phone, cause leakage and break the internal circuit.
- Use only damp cloth or non-static cloth to clean your phone.
- Do not use alcohol, thinner, benzene or other chemicals or abrasive cleaner to clean your phone.
- The phone will become warm under normal use and while in battery charging.
- Do not leave the phone with battery uninstalled or with the battery empty for a long period of time. This may cause data loss.
- The metal parts of the phone may irritate your skin depending on your health condition.
- Do not put the phone in the back pocket. Sitting on it may damage the phone. Do not put the phone at the bottom of a bag. You may crush it.
- When the vibrate mode is on, place the phone carefully to prevent it from being dropped from a height or being moved to a heat source due to the vibrating.
- Use only the stylus approved by the phone manufacturer.
- Using stylus of unauthorized source will violate the terms and conditions of the warranty and may damage the touch screen.
- Handle the stylus with care. Place it back to its proper storing place when not in use. Keep it



away from children.

- Do not press the touch screen with needles, pen point or other sharp objects; it can damage the LCD and violate the terms and conditions of the warranty.

### **Battery Precautions**

- Do not short-circuit your battery. It can damage battery, and cause leakage, over heat, fire or explosion.
- Disposing battery in a fire can cause fire or explosion. Old batteries should be returned to your dealer or be disposed according to local regulations. Do not treat the battery as household waste.
- Keep metal objects (such as coins or key rings) away from the battery to avoid short circuit.
- Do not remove the battery without turning off the phone.
- Do not hold the battery in your mouth. The liquid of the battery can be toxic.
- Embedded battery shall be replaced by authorized dealers. Use only batteries approved by the phone manufacturer; otherwise, it may cause explosion.
- Damage resulting from using un-authorized batteries and chargers will not be covered by the warranty.
- Avoid contact with any leaked liquid of the battery. If it touches your skin, wash your skin with fresh water and go to the hospital immediately.

## **Trouble shooting**

### **Service Center number**

**No.: 1860-200-7500**

### **Frequently Asked Questions**

Frequently Asked Questions	Cause and Solution
Fail to turn on	Press the power key for over 1 second. Check if the battery is properly connected. Please remove and install it again and retry; Check if battery is appropriately charged.

<p>Fail to connect to network</p>	<p>In case of Weak signal, please try and move to a location with strong signal and try connecting to the network again; Please ensure that you are not beyond the network coverage of service providers; Please ensure you have a valid SIM card. Please contact your network provider for further information.</p>
<p>Display information while turning on</p>	<p>Check if the SIM card is installed correctly Handset lock password: If the handset lock is activated, you have to input handset password. Input PIN: if Inputting PIN while turning the phone on each time is activated, you have to input the PIN code. Input PUK code: When you've input wrong PIN code for 3 times will lock the SIM card. You need to input the PUK code provided by your network provider.</p>
<p>Poor quality of calling</p>	<p>Please check if the sound volume is tuned properly In an area with poor network conditions, example: basement, the signal might be weak. Try searching a location with stronger signal reception and call again. While using the mobile phone in the peak period of communication, like commute time, you may not be able to call because of line congestion.</p>
<p>Standby duration shortened</p>	<p>The standby duration is relative to the network systems. While the mobile phone is in an area with poor signal strength and cannot receive the signal, the handset will continuously search for a base station. This will significantly reduce battery charge. It is recommended that you turn off your mobile in area with no signal reception to save battery. Need replacing the battery: Please change to a new battery as battery performance may decrease after prolonged usage.</p>
<p>SIM Card Error</p>	<p>Dirt on the metal surface of an SIM card: Use clean cloth to wipe the metal touch point on an SIM card. The SIM card is not installed. The SIM card is damaged. Please contact your network service provider.</p>

Fail to dial out	<p>Please check if you press the dial key after typing the number.</p> <p>Please check if calling is forbidden because of default settings.</p> <p>Please check if the SIM is valid.</p> <p>Please check if the call barring is set.</p> <p>Please check if the fixed dial function is set.</p>
Callers can not contact you	<p>Please check if the mobile phone is on and connected with the network.</p> <p>Please check if the Call barring or call divert is activated.</p> <p>Please check if the SIM card is valid.</p>
Fail to charge	<p>May be due to poor contact. Please check if the plug is connected well.</p> <p>Please confirm if the environment temperature is within the range of 0°C ~40°C while charging.</p> <p>The battery or charger is damaged in which case you need to replace it.</p>

## SAR

- The highest SAR value for this mobile phone is < 1.6 W/Kg, in accordance with the requirements of the ICNIRP, which recommended the limit for exposure to radio waves is 1.6 watts/kilogram(W/kg) averaged over 1 gram of tissue. For more information, please visit website ([www.lavamobiles.com](http://www.lavamobiles.com)) to query

## Safety precautions:

- Use cell phone when the signal quality is good
- People having active medical implants should preferably keep the cell phone at least 15cm away from the implant
- Use a wireless hands-free system ( Headphone, headset) with a low power Bluetooth emitter
- Make sure the cell phone has a low SAR
- Keep your calls short or send a text message (SMS) instead. This advice applies especially to children, adolescents and pregnant women.

## E-waste Disposal Mechanism

'E-waste' means waste electrical and electronic equipment (WEEE). In other words E-waste is a popular, informal name for electronic products nearing the end of their "useful life". For more details about e-waste please refer e-waste rules, 2011 [www.moef.nic.in](http://www.moef.nic.in)

## Do's and Don'ts for disposal e-waste

**Do's:**

- Ensure that an Authorized Person repairs your Lava products
- Call Our Local Authorized Collection Centers to Dispose Lava products
- Always drop your used electronic products, batteries or any accessories thereof after the end of their life at nearest Authorized Collection Point or Collection Center.
- Separate the packaging material according to responsible waste disposal options and sorting for recycling.
- Always remove the battery from the product, when you do not intend to use the product anymore it in future.

**Don'ts:**

- Do not Dismantle your Lava Product on your own
- Do not give your e-waste to Kabbadi Wala / Scrap Dealer/ Rag Pickers.
- Do not dispose-off the e-waste in landfills
- Never dump E-waste in garbage bins.
- Do not dispose of your product at municipal waste bins or rooms.
- Do not throw used batteries into household waste.

**Consequences of improper handling and disposal of E-Waste**

- Improper disposal of waste prevents natural resources from being re-used.
- Some waste contains hazardous chemicals and if not disposed of properly may release toxins into the soil and water, and also releases greenhouse gases into the environment
- If e-waste is not properly disposed of, it can threat to the health and well-being of humans and animals and it also has adverse effect on the environment.
- Placing of batteries or devices on or in heating devices, such as microwave, ovens, stoves, or radiators and improper disposal of batteries may lead to explosion.
- If the battery terminals are in contact with metal objects, it may cause a fire.

For more details on how to dispose of your Lava products at the end of life, Please refer the list of our Services Centers on Pan India basis on our website [www.lavamobiles.com](http://www.lavamobiles.com) or please view this link for the details of Service Centers <http://www.lavamobiles.com/support-services>.

## **Lava warranty certificate**

### **Limited warranty:**

LAVA international Ltd. (LAVA) provides limited warranty for your mobile phone and original accessories delivered with your mobile phone (hereinafter referred to as “product”)

The warranty period for the transceiver is one (1) year and for battery, charger and headset is six (6) months from the date of purchase.

### **LAVA Warranty**

Subject to the conditions of this Limited Warranty, LAVA warrants a product to be free from defects in design, material and workmanship at the time of its original purchase by you, and for a subsequent period of one (1) year for transceiver and six (6) months for battery & charger.

You shall have to coverage or benefits under this warranty in the event that any of the following conditions are applicable:

- The product has been subjected to abnormal use or conditions, improper storage, exposure to 1.excessive moisture or dampness, exposure to excessive temperature, unauthorized modification, unauthorized repair (including but not limited to use of unauthorized spare parts in repairs),abuse, accidents, Acts of God, spills of food or liquids, improper installation
- You have not notified Lava of the defect in the product during the applicable warranty period.
- The product serial no. code or the accessories date code has been removed, defaced or altered.
- The product has been used with or connected to an accessory (i) Not supplied by Lava or its affiliates, (ii) Not fit for use with the product or (iii) Used otherwise than in manner intended.
- The seals of the product's battery enclosure have been broken or shown evidence of tempering or the product's battery has been used in equipment other than that for which it has been specified usable by LAVA.
- All plastic surfaces and all other externally exposed part that is scratched or damaged due to normal use.

To get maximum of your new product, we recommend you to:

- Read the guidelines for safe and efficient use as mentioned in the manual.
- Read the terms and conditions of your Lava warranty in the manual.
- Keep your original receipt; you will need it for warranty services if asked to produce.
- Present this Lava Warranty Certificate along with original proof of purchase whenever you

require any warranty services.

In case Lava product needs service, please visit the nearest Lava service centers given in the service guide. Please visit our Website [www.lavamobiles.com](http://www.lavamobiles.com) for updated list of Authorized Service Centers near to your location.

Important note: for your warranty to be valid, all information on the warranty certificate has to be completed including the stamp from the authorized distributor/retailer.

All warranty information, product features and specifications are subject to change without notice.

IMEI No.	.....
Dealers Stamp	.....
Date of purchase	.....
Model No.	.....