lenovo.

Lenovo A526

Quick Start Guide v1.0

Read this guide carefully before using your phone.

Technical specifications



Model and system

Model: Lenovo A526 System: Android 4.2.2



^①Size and weight

Height: 132 mm Width: 67.6 mm Depth: 11.1 mm

Weight: 145 g



CPU

CPU: MT6582M Quad Core 1.3GHz



Camera

Type: CMOS

Pixels: 5.0 MP (back) + 0.3 MP (front)



Power and battery

Battery: 2000 mAh



Display

Size: 4.5" FWVGA Screen: 1 point touch

Resolution: 854 × 480 LCD type: TN




Wireless communication

²Bluetooth 4.0 WLAN WCDMA, GSM, EDGE



- ① Based on actual measurements.
 - 2 Launch with Android 4.2 which only supports BT 4.0 PXP profile.

First glance

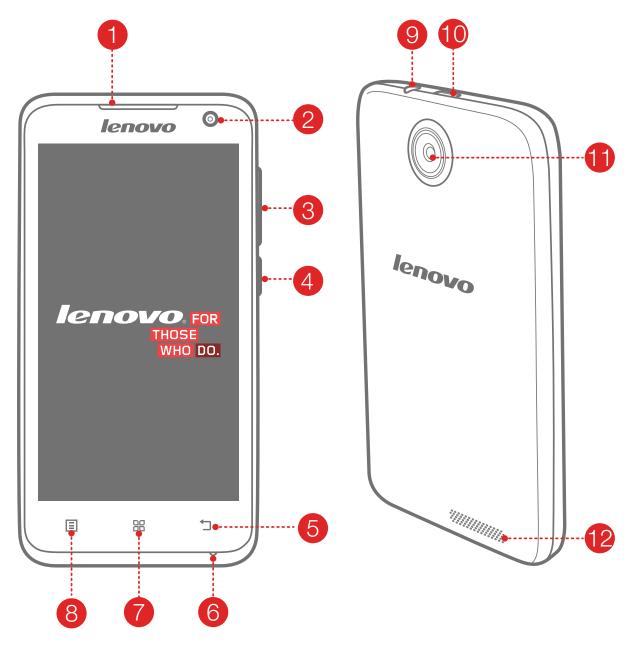


- Receiver
- 4 On/Off button
- 7 Home button
- Micro USB

- 2 Front camera
- 6 Back button
- 8 Menu button
- **11** Back camera

- 3 Volume key
- 6 Microphone
- 9 Earphone jack
- 12 Speaker


Preparing your phone

You need to insert the SIM card provided by your carrier to use cellular services. Install your phone as shown.

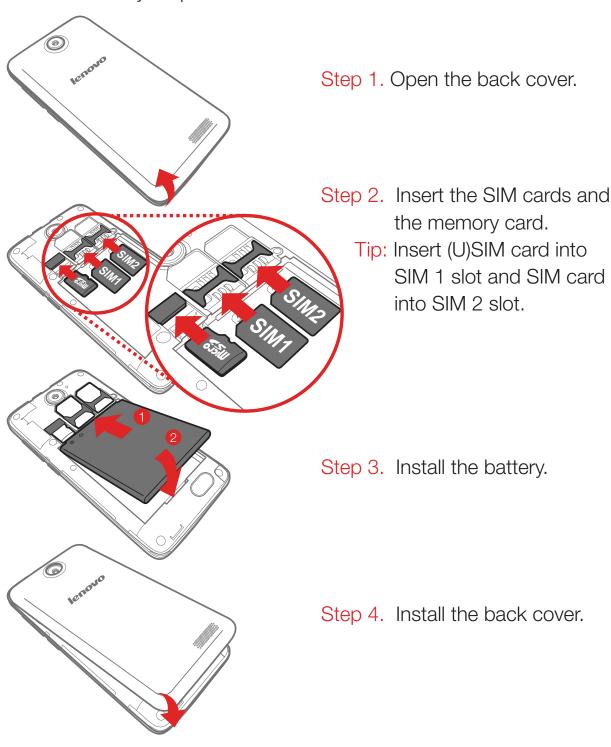



Charging the battery

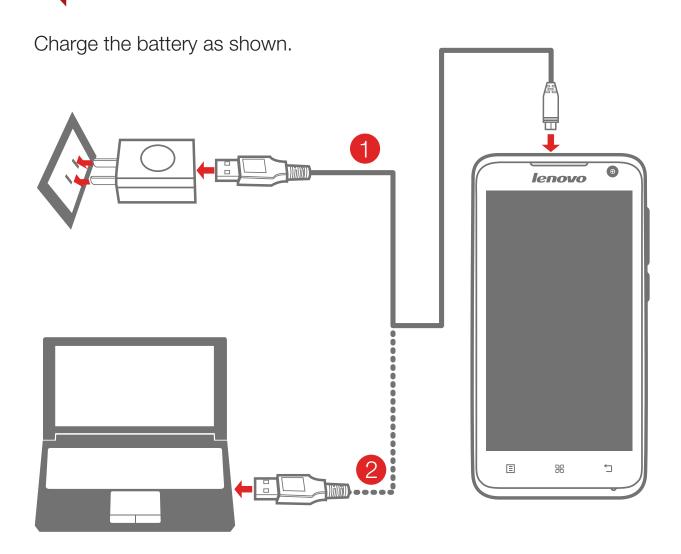

- Method 1. Connect your phone to a power outlet using the included cable and USB power adapter.
- Method 2. Charge the battery using a computer.
- Low battery Fully charged 5 Charging
- For more information about battery safety, see the Important Product Information Guide.

Learn more

For more information about Lenovo Mobile Phone functions, Regulatory Notices and other useful manuals, go to http://support.lenovo.com/.

Legal notices

Lenovo and the Lenovo logo are trademarks of Lenovo in the United States, other countries, or both.

Other company, product, or service names may be trademarks or service marks of others.

First Edition (January 2014) © Copyright Lenovo 2014.

Reduce | Reuse | Recycle





8306LV8001W Printed in China