


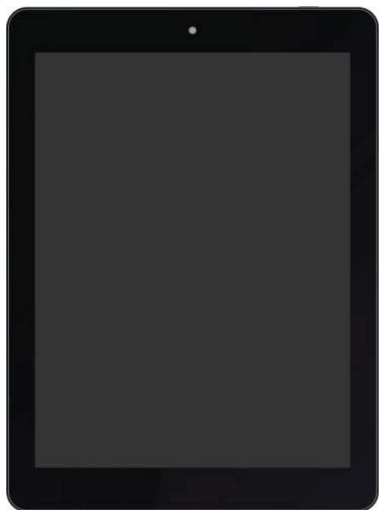

VIVA Q10 PRO



User manual.....	3
Ръководство за употреб....	14
Οδηγός Χρήστη.....	22
Betriebsanleitung.....	46
Használati utasítás.....	59
Instrukcja użytkownika.....	81
Manual de utilizare.....	79
Uputstvo	90



EN

- 1 Camera
- 2 Power button
- 3 MicroUSB plug
- 4 Microphone
- 5 Earphone jack
- 6 Volume
- 7 MicroSD slot
- 8 Speaker
- 9 HDMI slot

HU

- 1 Kamera
- 2 Bepapcsoló
- 3 MicroUSB
- 4 mikrofon
- 5 fülhallgató jack
- 6 hangszóró
- 7 MicroSD slot
- 8 hangszóró
- 9 HDMI slot

BG

- 1 стая
- 2 бутона за захранване
- 3 Micro USB щепсел
- 4 микрофон
- 5 жак за слушалки
- 6 обем бутон
- 7 MicroSD слот
- 8 говорител
- 9 HDMI слот

PL

- 1 Aparat
- 2 Przycisk zasilania
- 3 Złącze micro USB
- 4 Mikrofon
- 5 Złącze słuchawek
- 6 Przycisk głośności
- 7 Złącze microSD
- 8 Głośnik
- 9 HDMI SIM

GR

- 1 κάμερα
- 2 κουμπί λειτουργίας
- 3 φικς micro USB
- 4 μικρόφωνο
- 5 ακουστικά
- 6 όγκου κουμπί
- 7 MicroSD
- 8 μεγάφωνο
- 9 υποδοχή HDMI

RO

- 1 Camera
- 2 Buton pornire
- 3 Mufa MicroUSB
- 4 Microfon
- 5 Mufa casti
- 6 Buton volum
- 7 Slot MicroSD
- 8 Difuzor
- 9 Slot HDMI

DE

- 1 Kamera
- 2 Einschaltungsknopf
- 3 MikroUSB Muffe
- 4 Mikrofon
- 5 Muffe des Kopfhörers
- 6 Lautstärke
- 7 MikroSD Slot
- 8 Lautsprecher
- 9 HDMI -Slot

SR

- 1 Kamera
- 2 Dugme za napajanje
- 3 MicroUSB konektor
- 4 mikrofon
- 5 Priključak za slušalice
- 6 запремина дугмедугме
- 7 MicroSD slot
- 8 zvučnik
- 9 HDMI слот

User manual

Viva Q10 PRO

Foreword

Thank you for purchasing our product.

These operational guidelines for the user, to ensure you a quick and convenient to use, read the instructions carefully before use.

This player is a specialized top quality portable player product with a series of remarkable functions. There will be no separate notice in the case of any change in content of this text.

This company will continue to provide new functions for the development of the product, and there will be no separate change in the case of any change in the product's performance and functions. While this unit is used as a mobile hard disk, this company will not be held liable for the security of files saved in the disk.

If the actual setup and the application methods are not identical to those as set forth in this manual, please access to the latest product information of this company's website.

Basic Operations

Power on

In the shutdown state, long press Power button

Power off

In the power on state, long press the Power key 3 seconds then pop-up device options, select " Power off " for shut down.

Sleep

Under normal operating conditions, short press the power button, into hibernation. Now, the screen will close. Short press the power button again to resume the normal mode. You can set the device to enter sleep mode automatically after a desired time of non-operation.

Power reset

If you experience a slow operation of the device in normal use, you can shutdown and power on again to reset the operating system.

Screen time out

If you do not contact the player within the set time, and do not operate by the button, the screen will be automatically turned off.

In any state, short press Power button and for activation; Then slide the lock upwards to the green of spotted which will accomplish to access to the upper interface.

If it is necessary to deactivate the screen time out function, you can set the [Screen time out] option under [Display] function into "Never".

Using the Micro SD card

After this unit is connected with the computer, you will find two moving disks. The first one is the built-in memory disk for this unit and the other is the disk for the MicroSD card. If no card is inserted, the second disk can not be opened. This unit supports the extension of the MicroSD card from 128MB to 64GB.

Inserting and Pulling out the Micro SD card

Inserting:

Put the Micro SD card face up (side with words), and slightly force the card into the socket of the card, i.e. connecting the unit. Under this state, you can play the content in the Micro SD card.

Pulling:

Slightly push the Micro SD, and it will bounce by a section, and then you can take it out.

Caution:

Please perform inserting and pulling operation when power is off! Otherwise, it will lead to the loss or damage to the files within the unit! If no card is inserted, the computer will be unable to perform read and write operation for the disk notes of the later removable disk (Micro SD card).

Battery:

High capacity Polymer battery is used for this unit.

The duration available of the battery power depends on volume, types of playing files and operation of batteries. The player can be set up by the user as "user define power off time" or "display setup" to save batteries.

Charging:

This unit can be recharged by USB port, you can also use DC Charger:

- take out the DC charger, plug it into the wall outlet with AC 220V (output current 1A output voltage 5V~5.2V), then plug in the charging jack into the device usb plug.

Warnings for charging:

A new battery may be empty and not charged before you get the device.

If the device is not used for long time, it is better to charge it to full capacity every 2 or 3 months during storage.

Power adapter is a key component of the portable player, which play a crucial