




VIVA Q8 PRO

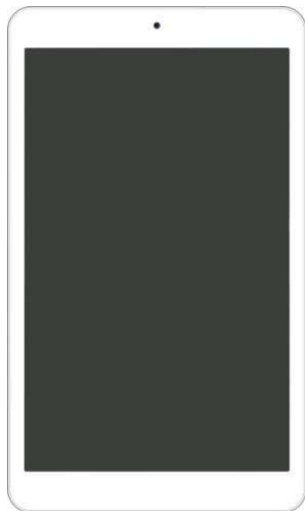

User manual.....3

РЪКОВОДСТВО за употреб....14

Οδηγός Χρήστη.....22

Betriebsanleitung.....46

Használati utasítás.....59

Instrukcja użytkownika.....69

Manual de utilizare.....79

Uputstvo90



EN

- 1 Camera
- 2 Power button
- 3 MicroUSB plug
- 4 Microphone
- 5 Earphone jack
- 6 Volume
- 7 MicroSD slot
- 8 Speaker

HU

- 1 Kamera
- 2 Bekapcsoló
- 3 MicroUSB
- 4 mikrofon
- 5 fülhallgató jack
- 6 hanggő
- 7 MicroSD slot
- 8 hangszóró

BG

- 1 стая
- 2 бутона за захранване
- 3 Micro USB щепсел
- 4 микрофон
- 5 жак за слушалки
- 6 обем бутон
- 7 MicroSD слот
- 8 говорител

PL

- 1 Aparat
- 2 Przycisk zasilania
- 3 Złącze micro USB
- 4 Mikrofon
- 5 Złącze słuchawek
- 6 Przycisk głośności
- 7 Złącze microSD
- 8 Głośnik

GR

- 1 κάμερα
- 2 κουμπί λειτουργίας
- 3 φικς micro USB
- 4 μικρόφωνο
- 5 ακουστικά
- 6 όγκου κουμπί
- 7 MicroSD
- 8 μεγάφωνο

RO

- 1 Camera
- 2 Buton pornire
- 3 Mufa MicroUSB
- 4 Microfon
- 5 Mufa casti
- 6 Buton volum
- 7 Slot MicroSD
- 8 Difuzor

DE

- 1 Kamera
- 2 Einschaltungsknopf
- 3 MikroUSB Muffe
- 4 Mikrofon
- 5 Muffe des Kopfhörers
- 6 Lautstärke
- 7 MikroSD Slot
- 8 Lautsprecher

SR

- 1 Kamera
- 2 Dugme za napajanje
- 3 MicroUSB konektor
- 4 mikrofon
- 5 Priključak za slušalice
- 6 запремина дугмедугме
- 7 MicroSD slot
- 8 zvučnik

User manual

Viva Q8 PRO

Foreword

Thank you for purchasing our product.

These operational guidelines for the user, to ensure you a quick and convenient to use, read the instructions carefully before use.

This player is a specialized top quality portable player product with a series of remarkable functions. There will be no separate notice in the case of any change in content of this text.

This company will continue to provide new functions for the development of the product, and there will be no separate change in the case of any change in the product's performance and functions. While this unit is used as a mobile hard disk, this company will not be held liable for the security of files saved in the disk.

If the actual setup and the application methods are not identical to those as set forth in this manual, please access to the latest product information of this company's website.

Basic Operations

Power on

In the shutdown state, long press Power button

Power off

In the power on state, long press the Power key 3 seconds then pop-up device options, select " Power off " for shut down.

Sleep

Under normal operating conditions, short press the power button, into hibernation. Now, the screen will close. Short press the power button again to resume the normal mode. You can set the device to enter sleep mode automatically after a desired time of non-operation.

Power reset

If you experience a slow operation of the device in normal use, you can shutdown and power on again to reset the operating system.

Screen time out

If you do not contact the player within the set time, and do not operate by the button, the screen will be automatically turned off.

In any state, short press Power button and for activation; Then slide the lock upwards to the green of spotted which will accomplish to access to the upper interface.

If it is necessary to deactivate the screen time out function, you can set the [Screen time out] option under [Display] function into "Never".

Using the Micro SD card

After this unit is connected with the computer, you will find two moving disks. The first one is the built-in memory disk for this unit and the other is the disk for the MicroSD card. If no card is inserted, the second disk can not be opened. This unit supports the extension of the MicroSD card from 128MB to 64GB.

Inserting and Pulling out the Micro SD card

Inserting:

Put the Micro SD card face up (side with words), and slightly force the card into the socket of the card, i.e. connecting the unit. Under this state, you can play the content in the Micro SD card.

Pulling:

Slightly push the Micro SD, and it will bounce by a section, and then you can take it out.

Caution:

Please perform inserting and pulling operation when power is off! Otherwise, it will lead to the loss or damage to the files within the unit! If no card is inserted, the computer will be unable to perform read and write operation for the disk notes of the later removable disk (Micro SD card).

Battery:

High capacity Polymer battery is used for this unit.

The duration available of the battery power depends on volume, types of playing files and operation of batteries. The player can be set up by the user as "user define power off time" or "display setup" to save batteries.

Charging:

This unit can be recharged by USB port, you can also use DC Charger:

- take out the DC charger, plug it into the wall outlet with AC 220V (output current 1A output voltage 5V~5.2V), then plug in the charging jack into the device usb plug.

Warnings for charging:

A new battery may be empty and not charged before you get the device.

If the device is not used for long time, it is better to charge it to full capacity every 2 or 3 months during storage.

Power adapter is a key component of the portable player, which play a crucial

 


role in keeping the portable player's normal work and protecting your security when using the player, a long-term customer surveys and after-sales service Practice shows that the malfunction of the portable player, in many cases were caused by using inappropriate accessories, in particular the power adapter.

Using the substandard power adapter will shorten the life of the portable player by considerably, the voltage instability will seriously affected the normal work of the portable player and bring permanent damage on the player's performance and reliability. Using the substandard power adapter will also reduce the vocal quality of the players, shutdown the player when you use it. In addition, using the substandard power adapter will cause combustion and explosion which will disserve the safety of the consumers.

Return to main interface

In any interface, touch icon " " to access to main interface.

Return to upper interface or menu

In any interface, touch icon "", click the "  " key to access to upper interface or menu. You can also click short press the "  " key to accomplish it.

Points for Attention

1. Do not use the player in exceptionally cold or hot, dusty, damp or dry environments;
2. Do not allow the player to fall down while using it.
3. Please charge your battery when:
 - A. Battery power icon shows an empty icon;
 - B. The system automatically shuts down and the power is soon off when you switch on the unit once again;
 - C. There is no response if you operate on any key;
4. Please do not disconnect power abruptly when the player is being formatted or in the process of uploading or downloading. Otherwise it may lead to the error in the program;
5. When this unit is used as a mobile disk, the user shall store or export files in

the proper file management operation method. Any improper operation method may lead to the loss of files, for which this Company will be held no liable;

6. Please do not disassemble this unit by yourself. If there is any issue, please contact the dealer;

7. There will be no separate notice in the case of any change in the functions and performance of this product;

To avoid the problems that might occur with the service shops approved by Visual Fan Ltd. (because Visual Fan reserves the right to stop the collaboration with any service shop which was previously approved and mentioned in the warranty card on the date on which the product batch was sold on the market), before taking a product to the service shop, please check the updated list of approved service shops on Allview website at the section: “Support&Service – Approved service”.

We do not assume the responsibility in case the product is used other way than stated in the user guide. Our company reserves the right to bring modifications in the content of the user guide without making this fact public.

All the modifications will be listed on the company website (www.allviewmobile.com) in the section dedicated to the specific product which is subject to modifications. The content of this guide may vary from the one existing in electronic format within the product. In such case the latter one will be taken into consideration

Settings

In the main menu, select the "Settings" option to be able to access the System Settings folder. Directly click can assess picture set options interface.



Description of functions:

1. WiFi

Wi-Fi: Open/close the wireless connection

2. Bluetooth

Wi-Fi: Open/close the bluetooth connection

3. Data usage

Display data usage

4. Sound setting

Volumes: set the notification, the media and the alarm clock volume.

Default notification: click to open notifications settings menu.

Touch sounds: if checked, the touch screen pressing will make a sound

5. Display settings

Brightness: adjust brightness of the screen.

Wallpaper: you can choose wallpaper from Gallery and Wallpaper

Sleep: Setting screensaver standby time.

When the device is in stand-by the Wi-Fi function will be deactivated to save

battery.

Font size: set the font size

6. Storage

Check the PMP memory and available storage.

7. Battery

Shows information about battery status and usage

8. Apps

Here you can view and manage the installed applications

9. Accounts and sync

Information and sync settings for your user accounts.

10. Location services

Contains settings for activation or deactivation of the localization options.

11. Security

Screen lock: set screen lock method: slide, pattern, PIN, password and so on many kinds of mechanisms.

Make passwords visible: if marked you may see the letters typed in the password box.

Unknown sources: allows you to install applications that do not come from Google Play Store.

12. Language & input

Set language and area, input method etc.

13. Backup & reset

Can backup, restore the machine settings and data

14. Date & time

Set the date, time, time zone and time display format

15. Accessibility

Options for screen rotation, text magnifier, password spelling etc