 
 




Allview Viva H8+

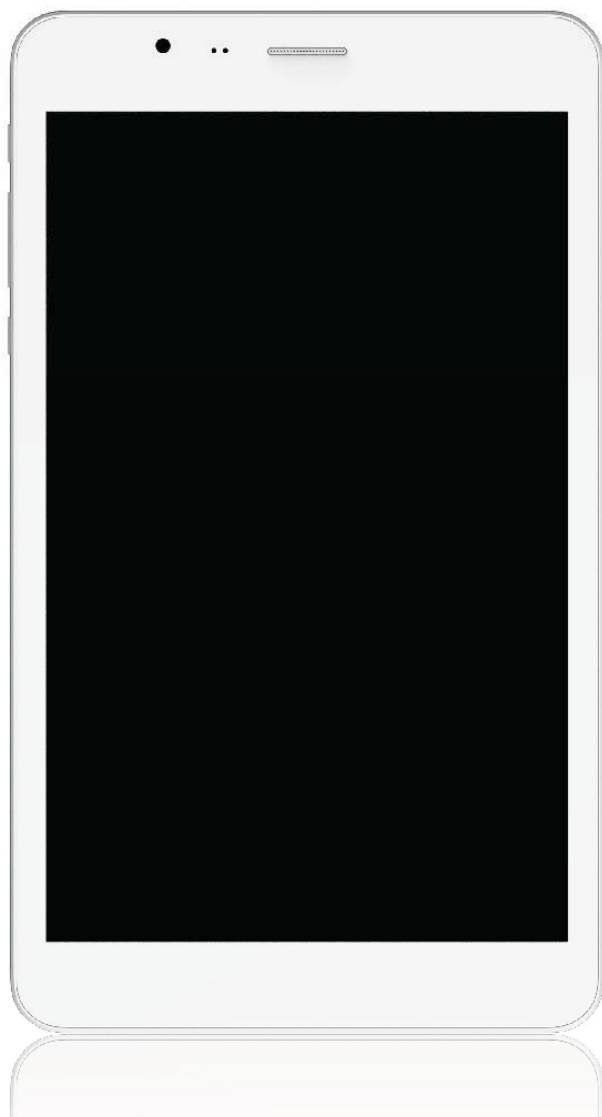

User manual.....	3
Ръководство за употреба....	34
Οδηγός Χρήστη.....	61
Betriebsanleitung.....	102
Használati utasítás.....	131
Manual de utilizare.....	159

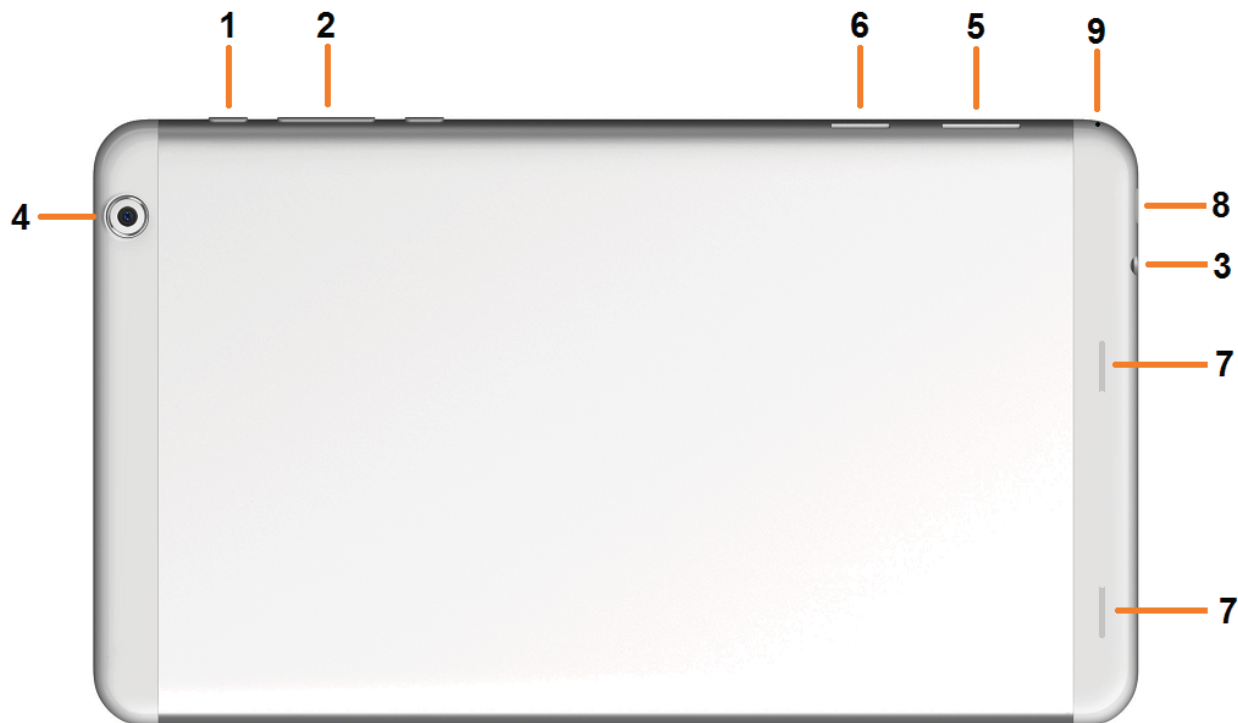

EN		BG		GR	
1	Power button	1	Включване	1	Πλήκτρο ενεργοποίησης
2	Volume buttons	2	Сила на звука	2	κουμπιά έντασης
3	Earphones jack	3	Гнездо за слушалки	3	Υποδοχή ακουστικών
4	Back camera	4	Задна Камера	4	πίσω κάμερα
5	SIM slot	5	Слот за SIM картата	5	υποδοχή της κάρτας SIM
6	MicroSD slot	6	Слот за MicroSD карта	6	Υποδοχή κάρτας MicroSD
7	Loud speaker	7	Високоговорител	7	μεγάφωνο
8	Micro USB	8	Micro USB	8	Micro USB
9	Microphone	9	Микрофон	9	Μικρόφωνο
DE		HU		RO	
1	Power-Taste	1	Bekapcsoló gomb	1	Buton pornire/oprire
2	Lautstärketasten	2	Hangerő gombok	2	Butoane volum
3	Ohrhörer Anschluss	3	fülhallgató jack	3	Mufa casti
4	Zurück Kamera	4	hátsó kamera	4	Camera spate
5	SIM-Slot	5	SIM slot	5	Slot SIM
6	MicroSD-Slot	6	MicroSD slot	6	Slot MicroSD
7	Lautsprecher	7	hangszóró	7	Difuzor
8	Micro USB	8	Micro USB	8	Micro USB
9	Mikrofon	9	mikrofon	9	Buton Inapoi

User manual

Allview Viva H8+

Foreword

Thank you for purchasing our product.

These operational guidelines for the user, to ensure you a quick and convenient to use, read the instructions carefully before use.

This player is a specialized top quality portable player product with a series of remarkable functions. There will be no separate notice in the case of any change in content of this text.

This company will continue to provide new functions for the development of the product, and there will be no separate change in the case of any change in the product's performance and functions. While this unit is used as a mobile hard disk, this company will not be held liable for the security of files saved in the disk.

If the actual setup and the application methods are not identical to those as set forth in this manual, please access to the latest product information of this company's website.

Key Functions

- Capacitive touch screen, support multi-touch;
- Support WIFI, 3G wireless Network;
- Integrates dual cameras, front 2MP, back 5MP AF
- Network video conversation and support photography function;
- Adopt Android 4.4 system;
- Support auto rotation the screen horizontally or vertically;
- Support Web browsing, chat online, online video, online games and download etc;
- Support ten thousands games and programs download and install.
- Supporting lyric synchronous display;
- Supports maximum 1080P resolution video file putout
- Supporting picture browsing, rotation and lantern slide playing in multiple formats;
- Support E-book function, playing in multiple formats;
- USB2.0 high rate transmission;
- Built-in microphone and long time recording;
- Supporting firmware upgrade;
- Supporting Micro SD Card; Support OTG function, can expand storage space

Basic Operation

Power on

In the shutdown state, long press "⏻" button boots

Power off

In the power on state, long press the "⏻" key 3 seconds then pop-up device options, select "Power off " for shut down.

Sleep

Under normal operating conditions, short press the power button to get tablet into hibernation. Now, the screen will close. Short press the power button again to resume the normal mode. You can set the device to enter sleep mode automatically after a desired time of non-operation.

Power reset

If there is shutdown to the player in the process of operation, you can turn off and restart the player by pressing "reset" key.

Screen time out

If you do not contact the player within the set time, and do not operate by the button, the contact screen will be automatically turned off.

In any state, short press "⏻" button and for activation; Then skid the lock upwards to the green of spotted which will accomplish to access to the upper interface.

If it is necessary to deactivate the contact screen time out function, you can set the [Screen time out] option under [display] function into "Never ".

Using the Micro SD card

After this unit is connected with the computer, you will find two moving disks. The first one is the built-in memory disk for this unit and the other is the disk for the Micro SD card. If no card is inserted, the second disk can not be opened. This unit supports the extension of the Micro SD card from 128MB to 32GB.

Inserting and Pulling out the Micro SD card

Inserting:

Put the Micro SD card face up (side with words), and slightly force the card into the socket of the card, i.e. connecting the unit. Under this state, you can play the content in the Micro SD card.

Pulling:

Slightly push the Micro SD, and it will bounce by a section, and then you can take it out.

Caution:

Please perform inserting and pulling operation when power is off! Otherwise, it will lead to the loss or damage to the files within the unit! If no card is inserted, the computer will be unable to perform read and write operation for the disk notes of the later removable disk (Micro SD card).

Battery:

High capacity Polymer battery is used for this unit.

The duration available of the battery power depends on volume, types of playing files and operation of batteries. The player can be set up by the user as "user define power off time" or "display setup" to save batteries.

Charging:

This unit can be recharged by USB port, you can also use DC Charger:

Take out the DC charger, plug it into the wall outlet with AC 220V, then plug in the DC jack into the device DC-in jack.

Warnings for charging:


- 1. A new battery may be empty and not charged before you get the device.*
- 2. If the device is not used for long time, it is better to charge it to full capacity every 2 or 3 months during storage.*

Power adapter is a key component of the portable player, which play a crucial role in keeping the portable player's normal work and protecting your security when using the player, a long-term customer surveys and after-sales service Practice shows that the malfunction of the portable player In many cases were caused by using inappropriate accessories, in particular the power adapter.


Use the substandard power adapter will shorten the life of the portable player by

considerably, the voltage instability will seriously affected the normal work of the portable player and bring permanent damage on the player's performance and reliability, Use the substandard power adapter will also reduced the vocal quality of the players, shutdown the player when you using it, In addition, Use the substandard power adapter will cause combustion and explosion which will disserve the safety of the consumers.



Gravity induction and horizontal、vertical screen switch

Through the clicked "", open/locking gravity induction and horizontal 、vertical screen switch function.

Return to main interface

In any interface, touch icon " " to access to main interface.

Return to upper interface or menu

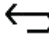In any interface, touch icon "", click the ":" key to access to upper interface or menu. You can also click short press the " " key to accomplish it.

Points for Attention

1. Do not use the player in exceptionally cold or hot, dusty, damp or dry environments.
2. Do not allow the player to fall down while using it.
3. Please charge your battery when
 - A. Battery power icon shows an empty icon;
 - B. The system automatically shuts down and the power is soon off when you switch on the unit once again;
 - C. There is no response if you operate on any key
4. Please do not disconnect power abruptly when the player is being formatted or in the process of uploading or downloading. Otherwise it may lead to the error in the program.
5. When this unit is used as a moving disk, the user shall store or export files in the proper file management operation method. Any improper operation method may lead to the loss of files, for which this Company will be held no liable.
6. Please do not dismantle this unit by yourself. If there is any inquiry, please

contact the dealer.

7. There will be no separate notice in the case of any change in the functions and performance of this product.

Warning: We take no responsibility for situations where the phone is used other than as provided in the manual.

Our company reserves the right to make changes in the content of the manual without making this fact public. These changes will be posted on the company website to the product it amends.

 
The contents of this manual may be different from that in the product. In this last case will be considered.

To avoid the problems that might occur with the service shops approved by Visual Fan Ltd. (because Visual Fan reserves the right to stop the collaboration with any service shop which was previously approved and mentioned in the warranty card on the date on which the product batch was sold on the market), before taking a product to the service shop, please check the updated list of approved service shops on Allview website at the section: “Support&Service – Approved service”.

Main interface

 
The main interface is separated into 5 screens display.

Slide screen left or right which will accomplish to flip file.

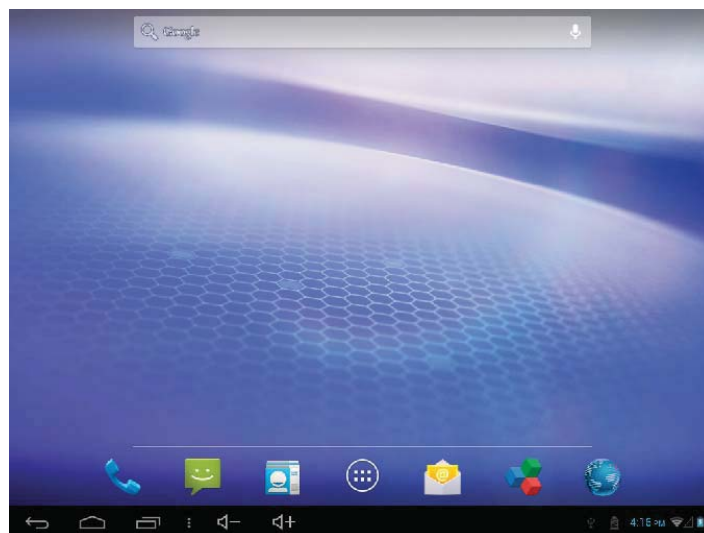


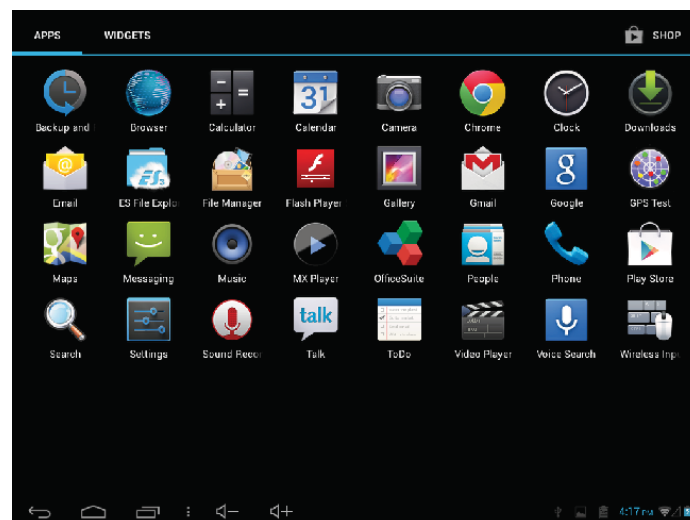 
- Change desktop wallpaper

Press on a blank space on the main interface, can pop up desktop wallpaper Settings menu

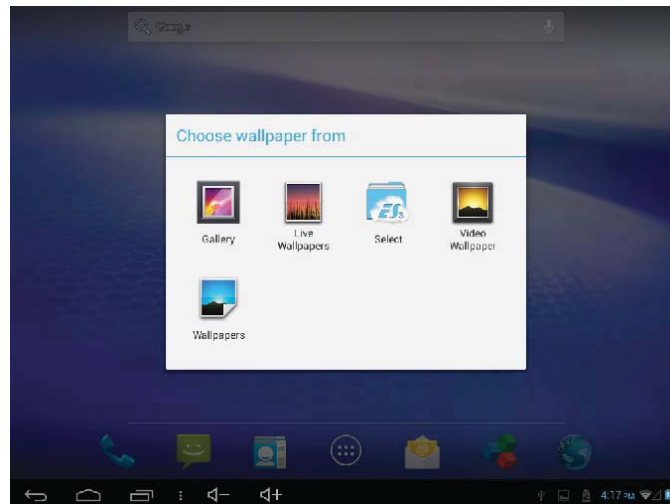

- Display all functional icon

 
Short press the  icon will display the installed functions icon, click on corresponding functional icon to be able to access the function menu. In the main menu, the system can be set to run existing applications, install a new application, start the touch calibration, music player, video player, web browsing, games and other operations.




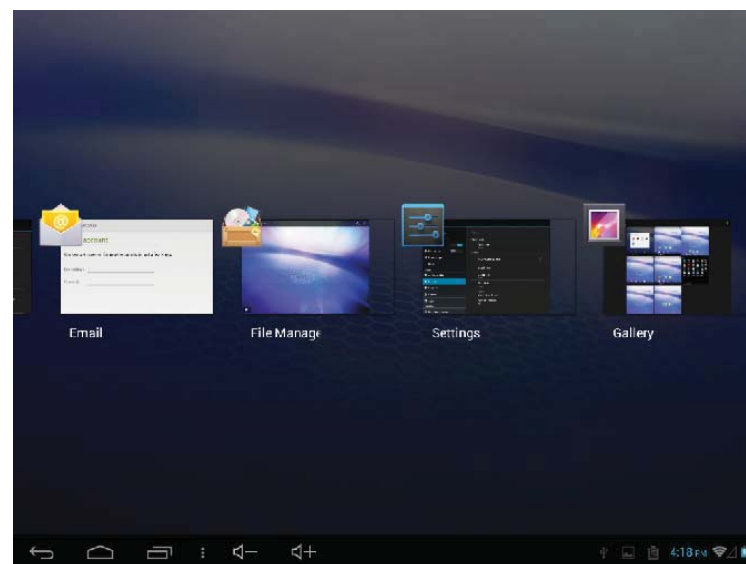 
- Add window small plugin

The main interface, touch the screen on the right side of the " " control icon,

and then click above on the screen "WIDGETS" long according to select small plugin, can add to desktop .

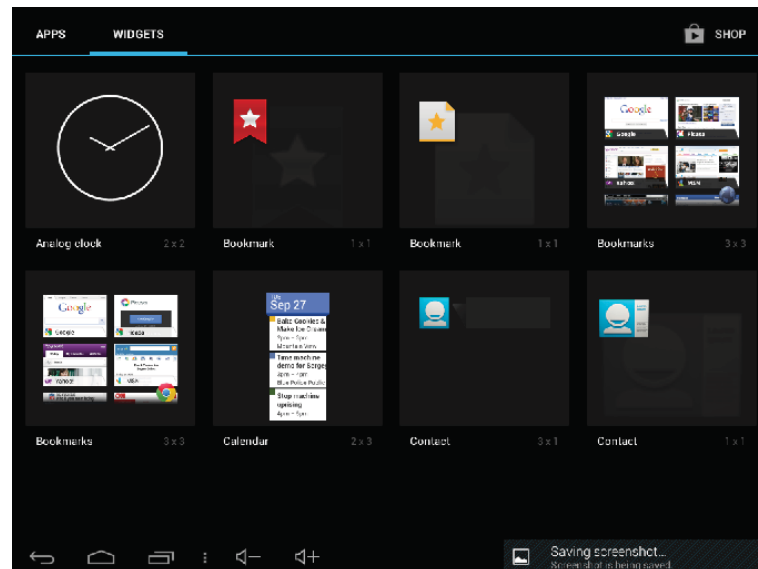

- Display the background programs that are running
Any interface, click the "  " icon to the left of the screen, pop up the background is run the program list, click on the program icon, can switch over to the background of the open programming interface. To right sliding program icon, can close this program in the operation.



- Shows notice information
The main interface, click on the lower right corner of the screen the clock

display area, can open notice , notice can show the current USB state, networking state and the battery power and other information

- Delete the desktop icon

 
The main interface, long press on the application of the interface program icon, stay icon amplification, will be selected to screen the icon of the mobile above a garbage can, this icon region shows orange, let go can delete.

- Move desktop icon


The main interface, long press the interface of the application program icon, stay icon amplification, may to the selected icon of move.

Installed APK

1. take the need to install the software of the APK format downloaded to the player or TF card
2. Click "file manager" icon and select the need to install the APK application

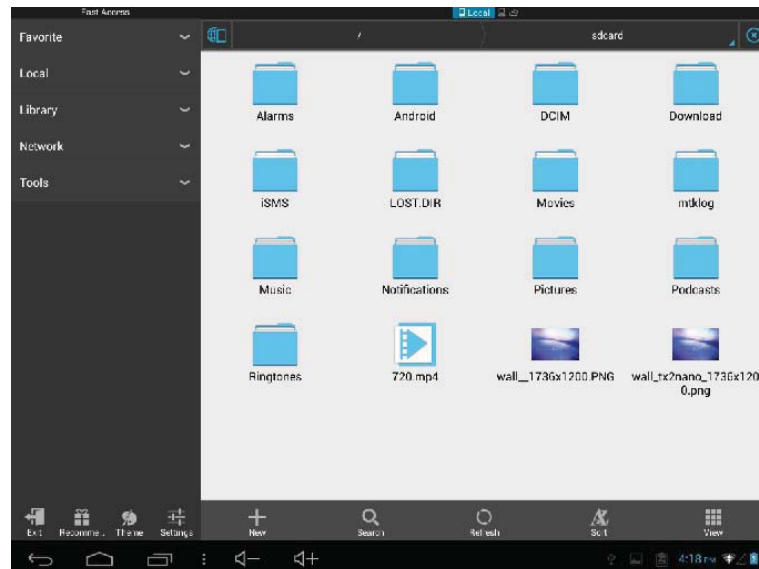


 3. Choose the path of the APK is application, click on the APK program to install, to start the installation

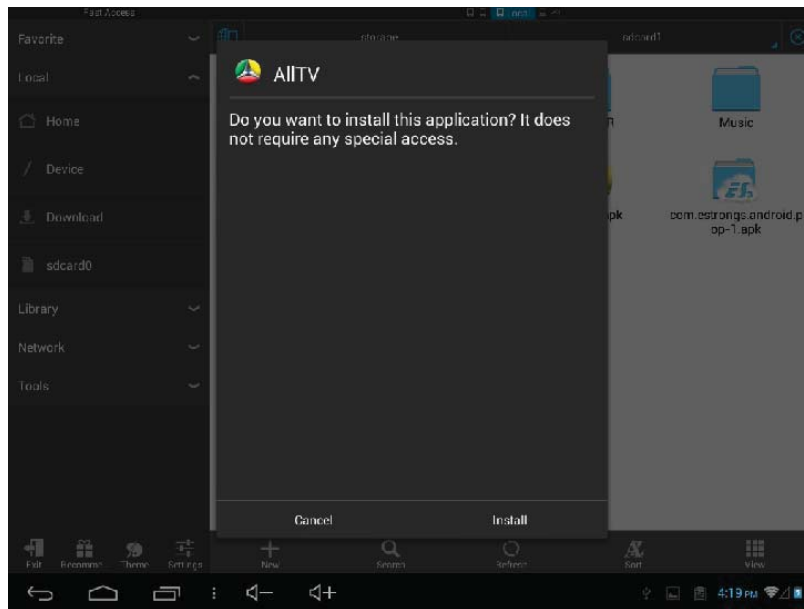


Uninstall APK application

 1. Click on the desktop "Settings", into the "Settings"- application, select and click on the need to uninstall program

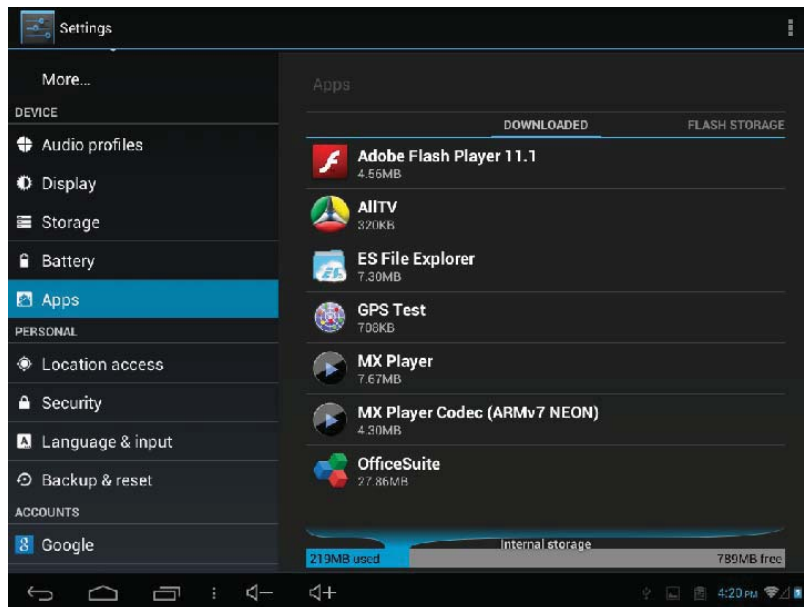

 
2. Click on the "uninstall" icon to start program the unloading

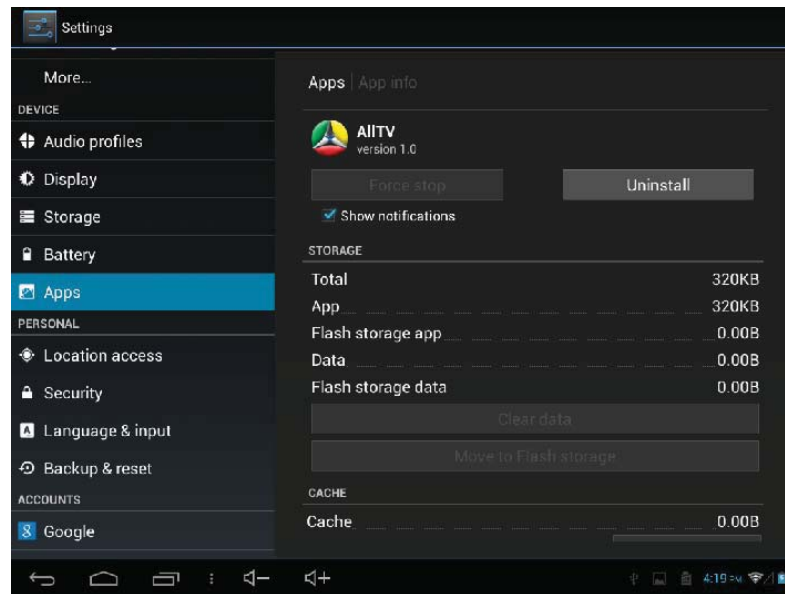

Video Player

In the main menu, select the option of "Gallery" to be able to access video folder.

 File list interface

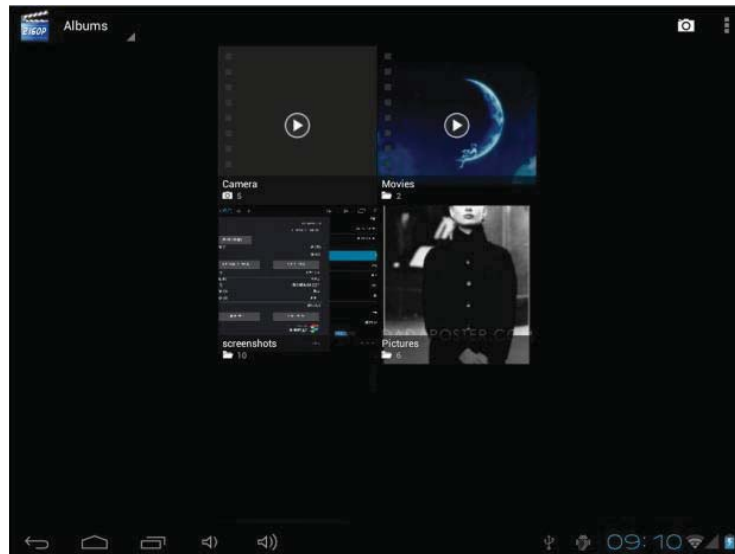

Function of keys

- "⏮": Shot press it to come back to the main interface
- "⏪": Short press it to return to the upper interface
- Touch & slide screen upward and downward which will accomplish to

flip video folder.

Video playing interface



Function of keys

- "▶ / ⏸": play or pause current movie
- "◀◀ / ▶▶": short press to play the last /next movie, long press for fast rewind / forward;
- "🔊- / 🔊+": press it to volume up or down
- "🏠" key: short press it to return to the upper interface "M" key: short press it to popup movie setting interface.

Tips:

1. This player support maximum 2160 resolution video files.

2. Subtitle display

This player supports "*.SRT" subtitle files (The user can download it from the website) for the synchronous playing of subtitle and video.

When there is any subtitle file with the same name in the folder for playing video, the player will be able to achieve synchronous subtitle display

3. It supports video playing in multiple formats, high-definition video etc.

As parameters such as formats, coding modes, definition and code flow rates of video files provided by the internet differ, the player is unable to be compatible with all video files (especially those video files with high definition or high code rates). If the

 
downloaded video files are out of the range supported by the player, which renders it impossible to play normally in the player, it is recommended that the video conversion software from a third party be used, and file formats be converted via computers into the ones within the range supported by the player before the same are duplicated into the player for playing.

Player Progress, Drag the line to change the player progress.

Audio Player

In the main menu, select the option of "Music" to be able to access music folder.


Music folder interface

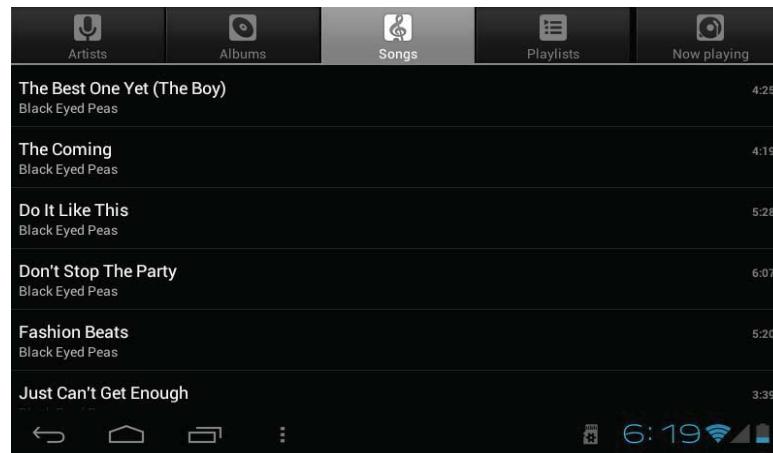

Function of keys

- "🏠": Return to main interface
- "⬅️": Return to upper interface
- Up/down to touch screen, can realize the file list to scroll function
- Artist: according to the singer classification music files
- Album: according to album classification music files
- Song: display all music files
- Playlist: to display the play music files in the list
- Now playing: into the background music played interface

 Music playing interface

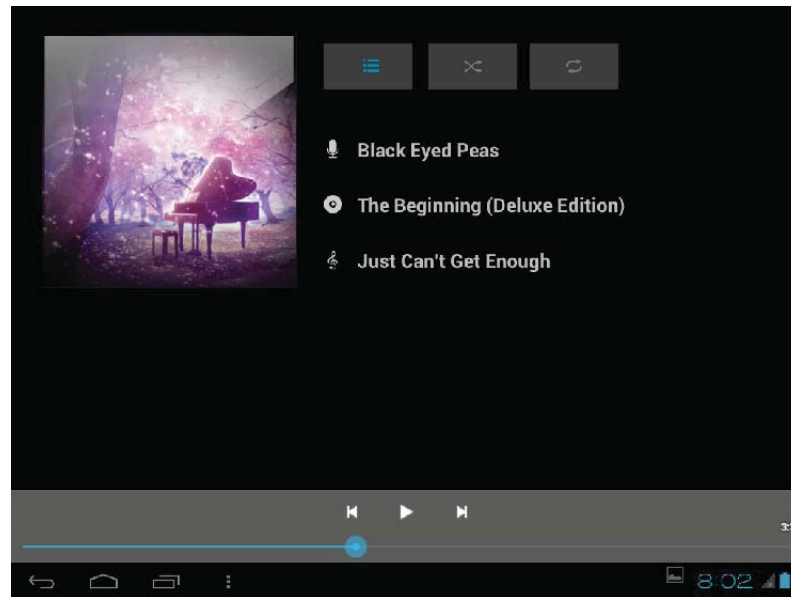

Function of keys

- "🏠": Return to main interface
- "↶": Return to upper interface
- "⏮ / ⏭": short press to play the last /next music, long press for fast rewind / forward;
- "▶ / ⏸": Click start/stop playing music
- "☰": Click into play lists
- "🔀": Click on open/close songs random play mode
- "🔄" key: short press it to return to the upper interface

Lyric Display

 
When there is any lyric file with the same name in the folder for playing music, the player will directly access the lyric display interface.

This player supports "*.Lrc" lyric files (The user can download it from the website of "<http://www.51lrc.com>", or search "LRC Lyric" to have the lyric file) for the synchronous playing of lyrics and music.

Pictures


In the main menu, select the option of "Gallery" to be able to access Photo folder.

Picture viewing interface

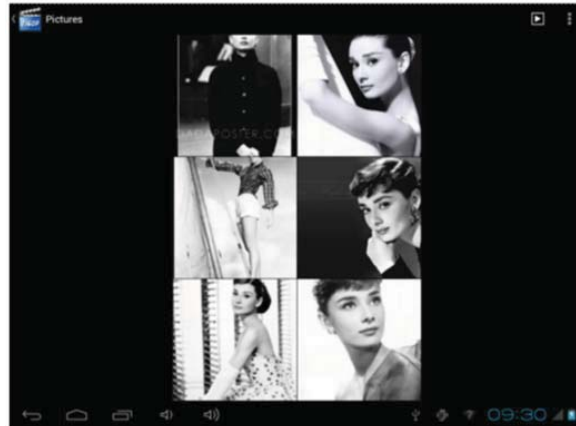

Function of keys

 - "▶": In slide form browse all pictures
- "⋮": Pictures management: delete, Rotate left, Rotate right, you can also sort according to the location, time, people and tags setting picture group

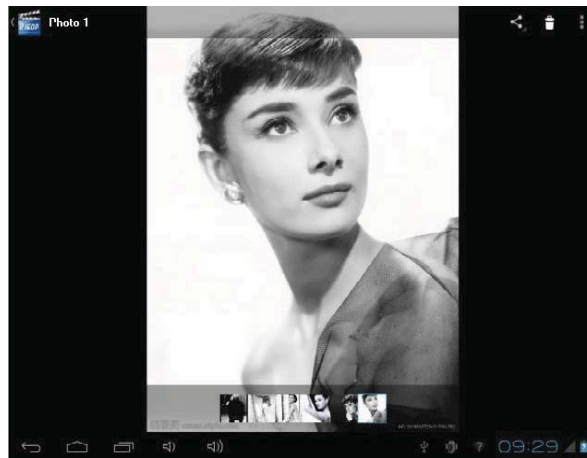

- "🗑️": Delete picture
- "⋮": Through you can click on the icon to set and understand pictures information, including: Slideshow, Edit, Rotate left, Rotate right, Crop, Details, Set picture as

Call function

Make a call

Take one of the following to make a call:

 
1. In phone tab: Input the phone numbers and press the green Send key; ÿIn call log tab: press the contact in the list and select the call item to call; ÿIn contacts tab: press the contact in the list and select the call item to call; ÿIn favorites tab: press the contact in the list and select the call item to call;
2. Smart Dialing: press the Smart Dialing, and direct input the phone numbers and press the green send key;

Answer calls

To answer a call, press the green Send key.

Hang up the phone

Press hang up key to hang up the phone

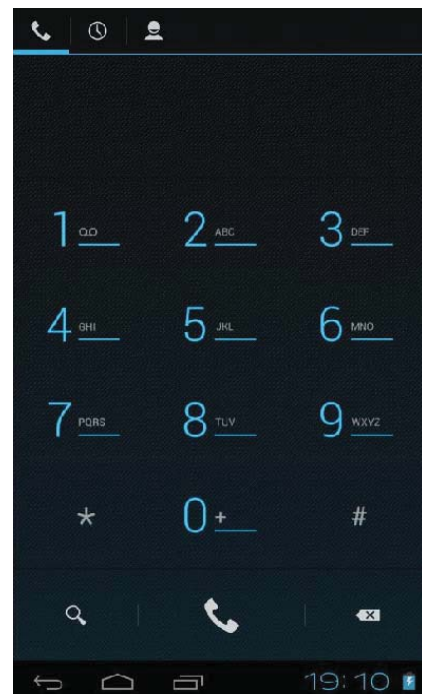

Contacts

To view the contacts, touch Phone icon, and then touch the Contacts tab from the top of the screen. In the contacts tab contacts is a specific group that can be stored by favorites item.

TIP: To search a contact, press the Menu key, touch the search item in the popup menu. Then touch the input box to open the keyboard, type the name to search, the contact will list below if it exists.

Add contacts

1. Press the green Send key whenever;

2. Touch the Contacts tab;
3. Press the Menu key;
4. Touch New contact;
5. Type the contact's information;
6. Touch Done.

Messaging

 
All the received messages are classified by contact name. The inbox includes SMS and MMS.

Read messages

1. In the Menu screen, touch the Messaging icon;
2. Touch the message to open.

Send text messages

1. In the Menu screen, touch the Messaging icon;
2. Touch new message;
3. Touch to select the To field, type the phone number that will receive the message;
4. Touch to select the Type to compose field and type the message that will send;
5. Touch Send.

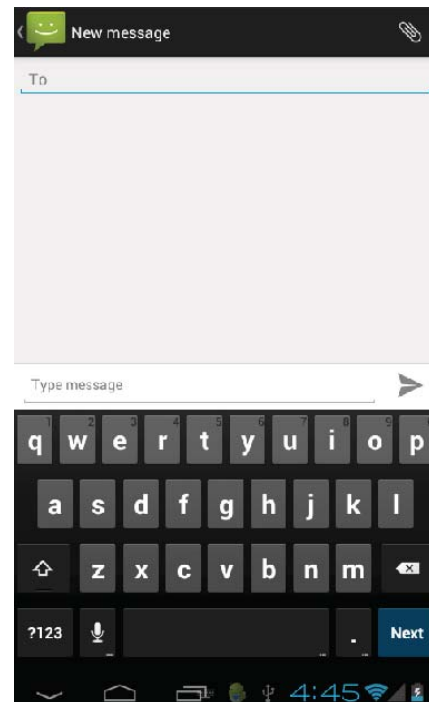

MMS

MMS stands for Multi-media Message Service, it could transmit the message contains Multi-media file, including text, picture, sound etc.

Send MMS

Photos taken by camera are stored on the memory card. Make sure the memory card has been installed before using the camera.

1. Touch Attach symbol from top-right corner of the screen;
2. Select one of the following options:

Pictures

Touch to find and attach one of the existing pictures

Camera picture

Touch to take a new picture to attach

Videos

Touch to find and attach one of the exiting videos files

Capture video

Touch to make a new video file to attach

Audio

Touch to find and attach one of the existing audio file

Record Audio

Touch to record an audio file to attach

Slideshow

Touch to attach one of existing slideshow.

 
 
 
1. Touch to select the To field and type the phone number;
2. Touch to select Type to compose field and type message;
3. Touch Send.

Activate your Sygic GPS Navigation (optional)

The world's most popular offline GPS navigation app from Sygic is preinstalled on this device. Enjoy navigation in **90 countries around the globe for 30 days for free.**


1. Click on Sygic icon and launch application.
2. The application will download necessary files.
3. Select "World TRIAL" button.
4. Choose one or more **maps** and click "Proceed" to download.
5. Please don't close the application and wait until the end of the **download.**
6. Select "Continue trial" to use Sygic GPS navigation for **30 days for free.** Or purchase the full lifetime license of the navigation. If you choose trial you can purchase full lifetime license later in "My Sygic" menu.
7. Select the navigation voice.
8. You can join to Sygic community by entering your email.
9. **Enjoy all your journeys with Sygic GPS navigation!**

For more information and support, please visit our website <http://help.sygic.com/>.

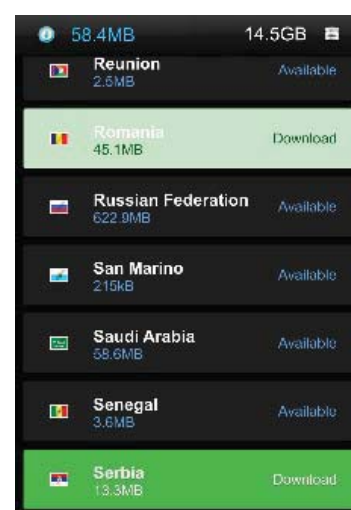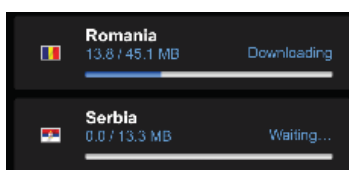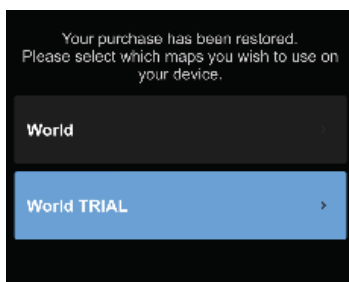

Settings

 In the main menu, select the option of "Settings" to be able to access the System Set fold. Directly click can assess picture set options interface.

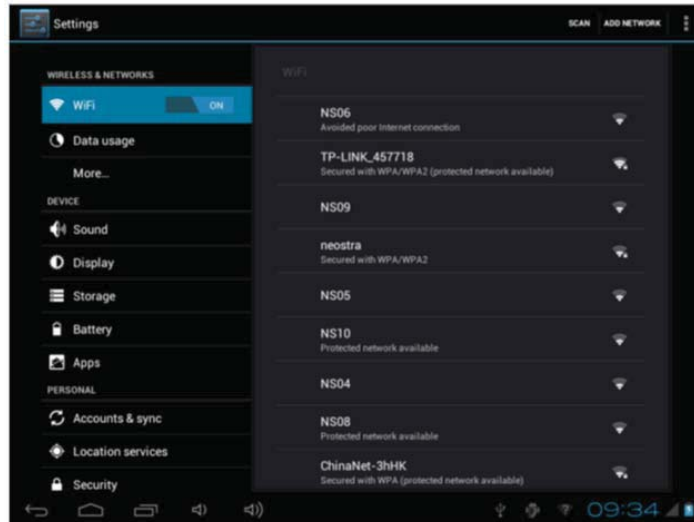

Description of functions:

1. WiFi

Wi-Fi: Open/close the wireless connection

Wi-Fi setting: touch the "WiFi" icon, can enter WIFI senior set items

2. Date usage

Display Date usage

3. Sound setting

Volumes: set the Notice, the media and the alarm clock volume.

Default notification: Click to open notification bell menu, select the item is set to default notification bell

Touch sounds: After checked, Touch screen will make sound

Screen lock sound: After checked, Touch screen will make sound

4. Display settings

Brightness: Set adjust brightness of the screen

Wallpaper: you can choose wallpaper from Super-HD player and wallpaper

Sleep: Set off the screen saver standby time. When the player in the standby screen saver, WIFI function will be closed to save electricity;

Font size: Set shows the font size

Accelerometer coordinate system: you can set Accelerometer coordinate system

Screen adaption: Used to adjust size of some games display screen

5. Storage

Check the PMP memory and available storage

6. Apps

Can display and management of the installation applications

7. Security

Screen lock: Settings screen lock way, slide, Pattern, PIN, and password and so on many kinds of mechanisms.

Make password visible: After the check, in the password input box, can show the input password.

Unknown source: allow installation of non- Google Market applications, the default setting is open

8. Language & input

Set language and area, input method etc.

9. Backup & reset

Can backup, restore the machine Settings and data

10. Date & time

 
Set the date, time, time zone and time display format

11. About device

Check the machine software version and other information.

GPS localization

Now you can navigate anywhere in the world thanks to the incorporated GPS receiver. If you want to use the GPS function with this device, open the main menu, click the "Settings" icon, and go to the "Location services". Here, check the "GPS Satellites" option. Go back to main menu and open "*navi*" application to start your navigation.

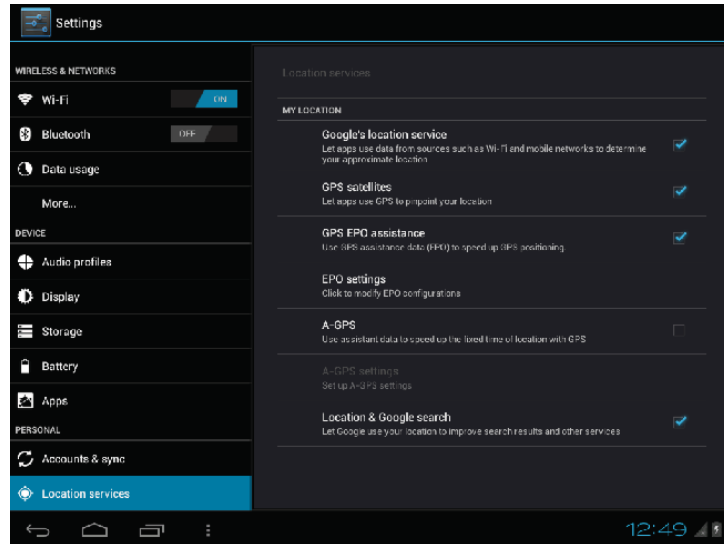

OTG

OTG is the On-The-Go abbreviation. It is a technology that realizes data transmission between portable devices without a host. Specifically, computers are not needed to act as a medium when share data with or transfer documents from other portable devices to your player such as flash disk, audio player and portable hard disk.

OTG Connection Steps:

1. Please check if devices connected to your machine have USB connection activated.
2. In order to access external storage devices from main screen click on File Manager application and then select “Mobile disk”.

Remarks:

 
1. Due to large varieties of portable devices, the player might not recognize some of them.
2. Compatibility with more and more portable devices will be realized through firmware improvement.
3. While using OTG connection, the other portable device relies on the player's power supply. Thus if your player maintains less than 1/3 battery or the other device is a heavy electric consumer, OTG connection might not be proceeded

successfully. As an alternative, please provide power supply to the other device exclusively

4. Currently the OTG only supports one-way operation. That is, documents in other devices can be read or copied to your player. But files in your player can't be pasted to the other device. Nor could you delete files in the other device.

Connect the computer

This machine can be connected through the USB cable to to a personal computer and the data is copied or delete. The specific procedure is as follows.

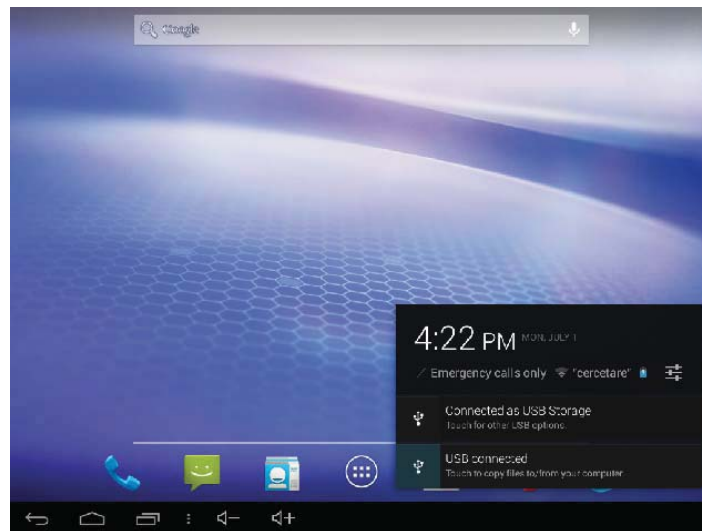

1. Connect the machine through the USB cable to the PC's USB port and you will get notification "USB already connected".

2. Click "USB already connected" notice options, and choose the "open USB storage devices", and then in the personal computer see mobile operators disk dish, can as U disk the use of the machine disk data operation

3G network Settings

1. Insert the SIM card into the dedicate slot.
2. Into the machine "Settings" under a "wireless and network", will be closed Wifi option, Wifi and 3G are not used in the same time.

Note

Make sure that you turn off the tablet before you insert a SIM card. Also, you must turn off the tablet before you remove any SIM card.

Ethernet network Settings

1. Please deactivate Wi-Fi option from menu “Settings”;
2. Connect the Ethernet USB card to the USB port of the device by OTG.
The system will automatically identify the attached device.
3. From “Settings” menu, “Ethernet Settings” please choose “Ethernet” option.
4. If it is necessary to configure IP and Gateway they can be entered by accessing option "Ethernet configuration".

 
Note

1. Due to the different communication systems Ethernet card more, this machine Ethernet function can't ensure that is compatible with all equipment.
2. Due to external Ethernet card equipment from the machine to the USB interface take electricity, so in Ethernet connection, please ensure that the battery power in one case above.

Calendar


In the main menu, touch "calendar" icon to be able to access the calendar interface.

Under this menu, Touch & slide screen left and right which will accomplish to flip increase or decrease month by month. Before you can add any event, you must add at least one Calendar account to the device and make a calendar visible.

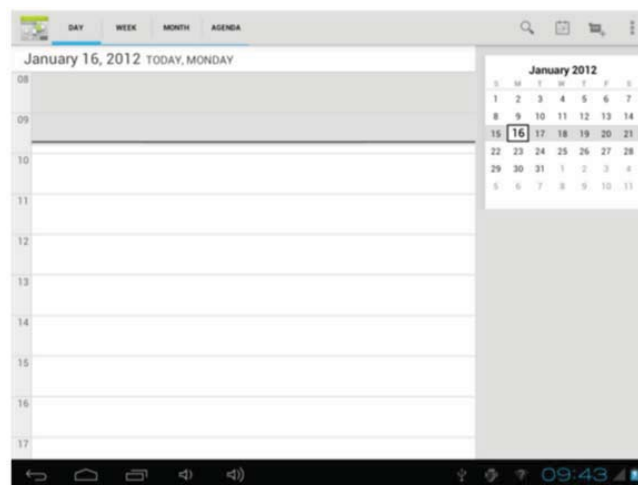

Sound Recorder

 In the main menu, select the option of "Sound Recorder" to be able to access recorder interface.

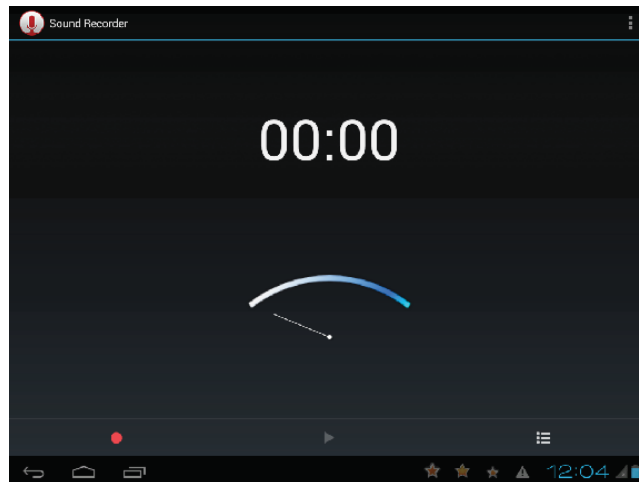


Keys of functions:

- "☰": Return to the recorder folder
- "●": Start or pause record
- "■": Stop current record and select save the current record.
- "⚙️": Record playing setting menu

Calculator

 In the main menu, touch "Calculator" icon to be able to activate the function of Calculator. The calculators can be used like normal others. It's a good assistant for your work and study.

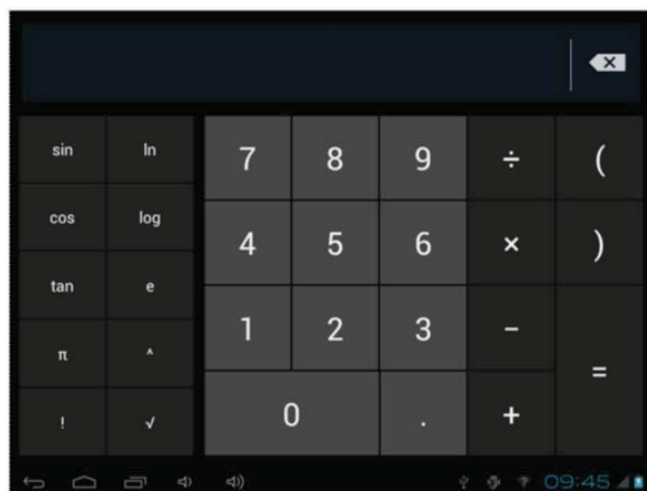


Clock

In the main menu, touch "Clock" icon to be able to activate the function. It's a good assistant for your everyday life.

1. Click "clock" appear as follows interface



 2. "🕒": Click on it you can set alarm

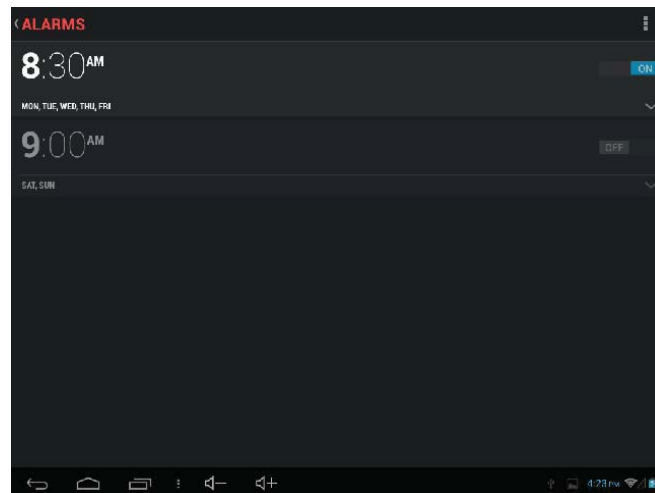


It will be automatically alarming when you set time.

You can set time, ring tone, repeat options for every alarm clock.

Factory data reset

If this machine is infected, or third party software installed to run this machine is unusual, but through the recovery factory Settings, remove the third party software, and restore the state out by default. Into this machine "Settings"-> "privacy ", select

 "Factory data reset" item, confirmed, will remove all of the data.

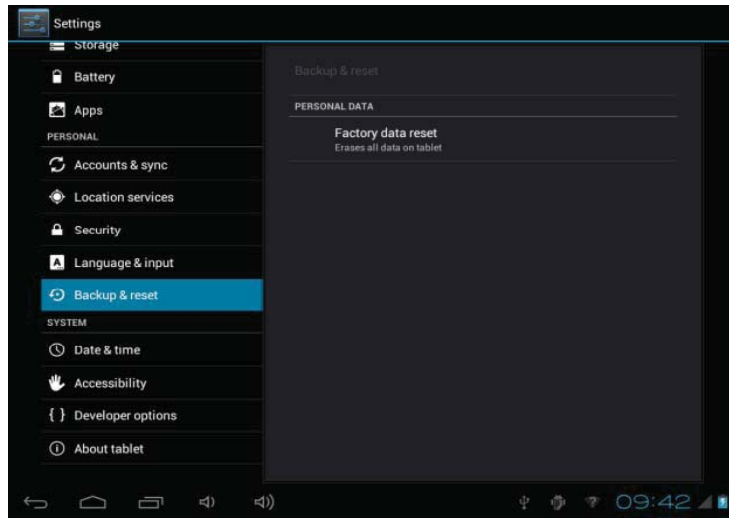

Upgrade Player Driver

The firmware is a built-in program, by which you can run various hardware functions. By upgrading the firmware, you can improve or enhance the performance and functions of the player. No upgrading the firmware will not affect the normal operation of the player itself.

The upgrading of firmware may lead to the unit unable to work properly due to error operation. Please read carefully the instructions for upgrading before upgrading. **Note.** Please make sure that players have the upgrading at more than 60% of the battery power. Avoid because the battery power leads to upgrade failure to boot.

2. The upgrade process do not reset or shutdown operation, avoid accident interrupt upgrade can't boot.

3. Through our company provide formal or test versions of the firmware update, but without notice in the premise of the function of the products and the menu changes.

4. When the firmware upgrade stored in all the data in the player will be deleted. So in the firmware upgrade will be stored in the user must be before the important data within the player for backup.

5. The machine firmware does not apply to other types of products, resulting

from the negative consequences, our company does not undertake any related responsibility.

Common troubleshooting

1. What is the APK file? It and Android PMP have what relation?

A: APK is the abbreviation of Android Package, that Android installation Package. Through the APK files directly to Android system can be installed in execution PMP players.

2. How to get the APK application

A: You can download via PC-side installation, you can also “Android market” online to download and install.

3. Why WIFI connection will interrupt

A: If set "screen time", when the player overtime in standby screen saver, WIFI function will be closed to save electricity purpose; When sensei player, WIFI function will be in about 5 seconds to resume automatic connection.

4. Why some download APK program, not working properly

A: Download the APK software, mostly by the user to development, without the platform compatibility testing, and part of the hardware and software for Android system version has a special requirements, so there could be downloaded APK documents not compatible, not the normal operation of the phenomenon, the player itself quality problems

5. Why connected the charger not show charging state

A: When the battery is extremely low, need to use DC charger charging half an hour or more to show charging status

6. Why can't realize the gravity induction function

A: This machine support gravity feeling function, can be through the shaking to switch the screen machine did show, but some of the application does not support the gravity induction function, it can't realize the screen of switching function, this is the software support question, the functionality of the player.

7. Players can't boot

1. Check the battery no electricity
2. Connect the ac adapter after inspection again
- 3 .If after charging still unable to boot, please contact our customer service

8. Can't Hear the voice in the headset

- 1) Please check the volume is set to 0
- 2) Please check whether the connection headphones

9. Player charging abnormalities

- 1) Please confirm that the use of the equipment complies with the charger of the player charger requirements
- 2) Such as connection USB charging, please do not connect to computers lead USB interface

10. Why some download video can't normally broadcast

This player can be compatible with the Internet video files of the play, but because the Internet provide video format, coding method, the resolution, code flow rate in the parameters are different, and may result in part of the video file cannot be played or play anomaly, it is recommended to use a third party video conversion software, in the computer support convert player within the scope of the file format and then copied to the player to play.

Specification

General	Network	2G: 900/1800/1900 MHz; 3G: UMTS 900/2100 MHz HSPA+
Dimensions	Dimensions	212x123,4x7,9mm
	Weight	359,7 g
Display	Type	IPS-LCD
	Touchscreen	Capacitive touchscreen, Multitouch
	Dimension	8"
	Resolution	1280x800 px
	Format	16:9
Characteristics	OS	Android 4.4 KitKat
	CPU	Cortex A7 - 1.3 GHz Quad Core
	GPU	MALI 400MP2
	GPS	Yes

	AGPS	Yes
	Call function	Yes
	Video call 3G	Yes
	Languages	Romanian, English, German, Spanish, French, Italian etc.
	Flash memory	16GB
	RAM memory	1GB DDR3
	External memory	Up to 32GB with microSD card
	Widget	Yes
	Multitasking	Yes
	Design	Slim
Sound	3.5mm jack	Yes
	Loudspeaker	Yes
	Play audio files	Yes
	Ringtone type	Vibrations, audio ringtones
Video	Render	HD video with resolution 1080p
	Internet render	HD resolution 1080p
Camera	Main camera resolution	5MP AF
	Second camera resolution	2MP
Data	3G	HSPA+
	EDGE	Yes
	GPRS	Yes
	Bluetooth	Version 4.0 with EDR/
	WLAN	WiFi 802.11 b/g/n,
	USB	Da 2.0, micro USB
Sensors	G-sensor	Yes
	Orientation sensor	Yes
Internet	Social networking	Yes
	E-mail	Yes
	Applications	Yes
	Hotspot	Tethering by Wi-Fi
Battery	Capacity	Li-Polymer 4000 mAh / 3,7v
	Charger type	DC 5V, 2000mA
Package content	Tablet, user manual, warranty card, charger, data cable, OTG cable	

DECLARATION OF CONFORMITY

Nr.1298

We, SC VISUAL FAN SRL, importer located in Brasov, 61 Brazilor STR., registered at the Commerce Chamber Brasov no. J08/818/2002, CUI 14724950, assures, guarantee and declare on our own responsibility, in accordance with art.4 from HG nr. 1.022/2002 regarding the statute of the products and services that can jeopardize life, health, work security and environmental protection, that:

The product ALLVIEW VIVA H8+ tablet PC, ALLVIEW brand- and the accessories that came with the product: 220V charger, headphones and battery don't jeopardize life, health, work security and environmental protection and they are according to:

- Directive. 2011/65/EU regarding the restriction of use of certain substances in electrical and electronic equipment.
- The Stipulations of HG nr.982/2007 witch transpose the essential requirements specified in Direction 2004/108/CE, regarding electromagnetically compatibility;
- The Direction regarding the low voltage equipment users assurance 73/32/CEE, modified by Direction 93/68/CEE (HG 457/2003) and tests EN 55013:2001+A1:2003+A2:2006, EN 55020:2007, EN 61000-3-2:2006, EN 61000-3-3:1995+A1:2001+A2:2005;
- The Direction regarding the radio and telecommunication equipments R&TTE 1999/5/CE (HG 88/303).
- The safety requirements of the European Directive 2001/95/EC and of EN standards 60065:2002/A12:2011 and EN 60950-1:2006/A12:2011, EN62209-1(2006), EN62311(2008) of the decibels level emitted by the sold devices.

The Product described upstairs in this Declaration and all the accessories are according to the next standards:

- Health EN 50360, EN 50361;
- Safety EN 6095-1;
- EMC EN 301 489-1-7/17;
- Radio spectrum EN 301511 EN 300328;

After the performed tests emerge that the samples comply with the upstairs specification, as the test results show. Documentation is stored on VISUAL FAN LTD - Brasov, 61 Brazilor STR.

Also available on web: www.allviewmobile.com

CE: 0678

SAR: 0,83W/KG

Director
Cotuna Gheorghe

