

ight is influenced by interference caused by the tablet. It is illegal to use a phone/tablet on the airplane.

Your device is a product of superior design and craftsmanship and should be handled with care. The following suggestions will help you protect your device.

• Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can rust the electronic circuits. If your device gets wet, remove the battery, wipe it with a dry cloth and take it to an authorized service center.

• Do not store the device in high or cold temperature. Extreme temperatures can shorten the life of electronic devices and damage batteries.

• Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can get damaged.

• Do not attempt to open the device other than as instructed in this quide.

Do not attempt to open the device other than as instructed in this guide.

Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.

Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.

Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.

our authorized service agents/centers goes against the warranty rules.

Taking Care of Your Device

and other software details through SMS\* automatically. This information may be used as further specified in Micromax privacy policy\*\*.

usage patterns. Services and some features may be dependent on the network, service/content providers, SIM cards, compatibility of the devices used and the content formats supported.

• Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.

• Talktime and standby time are affected by network preferences, type of SIM cards, connected accessories and indivi-

Welcome

Read Me First

Thank you for purchasing the Micromax P480. You are now the proud owner of the P480 tablet which offers you a wide range of exciting features designed to give you a rich and fulfilling tablet PC experience.

and an implanted medical device such as pacemaker or cardiverter defibrillator to avoid issues arising

only open the device to replace the battery (if not inbuilt), SIM card and micro SD card. You must no e battery under any circumstances. All other changes to this device are strictly prohibited and wil

use Micromax specified batteries and charging devices.

attery may cause damage, injury or burns if a conductive material closes the circuit of the terminals.

ise care in handling any charged battery, particularly when placing it inside your pocket, purse or other

iner with metal objects. Do not dispose of batteries in fire as they may explode.

not use the device while driving. When you have to use the device, please use the earphones.

e may cause interference in the vicinity of TV sets, radios and PCs.

it may fall down during collision or emergency braking.

vice. The power supply must be plugged into an easily accessible AC power socket when charging

**Understand Your Device** 

Battery Recommendations

Recycle your Device

Batteries have life cycles. After a full charge, if the power reserve of the battery tend to deplete inordinately faster than usual, the battery life is at an end. Replace the battery with a new battery of the same make and specification.

Use manufacturer approved batteries, chargers, accessories and supplies. Micromax will not be held responsible for user's safety when using unapproved accessories or supplies.

Do not discard the battery with household trash. Please dispose of used battery according to your local environmental laws and guidelines.

The WEEE logo (shown at the left) appears on the product (battery, handset, and charger) to indicate that this product must not be disposed off or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste.

Collection and proper recovery of your electronic waste equipments at the time of disposal will allow us to help preserve

Note: Micromax will not bear any responsibility for any incompliance with the above mentioned guidelines or improper

• Please put the battery in a cool and well-ventilated place out of direct sunlight. We recommend you to charge the battery at room temperature range.

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Micromax is strictly prohibited.

Insert SIM and Memory Card

To store additional files and applications, you need to insert a memory card.

P480 is a dual SIM tablet with one standard SIM slot and another Micro SIM card slot. Switch off your device before SIM

Device Keys

Power Key

Volume Keys

Adjust the in-call, media, and ringtone volume from the volume keys available on the right side of the device.

2 Insert the SIM card(s) and the memory card in the card slot(s), as illustrated below:

Gravity Sensor .....

Unlocking Methods ....

Using the Touch Screen .......

Device Specification

4°C - 40°C

Input: AC: 100-240V, 50-60 Hz Output: DC: 5V/2.0 A

AC-DC adaptor I/P & O/P

Environmental Rating

Humidity Range

Music Player .....

Settings, Networks, & Applications .....

Safety Precautions

Switch off your device in any area with potential explosive atmosphere. Sparks arising out of radio frequency

Your tablet's radio waves may interfere with inadequately shielded medical devices. Consult a physician or manufacturer of the medical device to know whether they are adequately shielded from external Radio Frequency. Switch off your device when regulations require you to do so.

tways keep the tablet and accessories out of reach of small children. Small parts such as the SIM card or icroSD card can be dismantled and swallowed by small children.

not place the device near electromagnetic data carriers such as credit/Debit cards. Information stored on

o a safe level. If you experience discomfort in your ears, reduce the volume or discontinue the use of

FM Radio .....

Device Security .....

Google Search .....

Read Me First .....

Disclaimer .....

Pair With Bluetooth Devices

To pair your P480 with some other Bluetooth device:

2. Tap the ID of the other device in the list to pair with it.

Enable location access from  $\bigoplus 
ightharpoonup \wp 
ightharpoonup 
i$ 

1. If Bluetooth is off, turn it on. Tap **Bluetooth** for your tablet to scan and display the list of Bluetooth devices in range

You will be prompted to confirm passkey on both devices. Tap Pair to confirm the passkey and pair the devices. On successful pairing, your tablet connects to the device.

If the device you want to pair with is not in the list, make it discoverable and then tap SEARCH FOR DEVICES.

view various streets, landmarks and can even plan your routes with the help of Google Maps. It comes with a navigation system (GPS required) which gives step-by-step route guidance while driving or walking. You can even download maps for offline usage. This serves as a useful application for your day-to-day usage.

Go to ⊕ → 🕸 → Bluetooth

Understand Your Device ...

Go to 🏻 🛶 🌉 to start using Google Maps.

Play Store. View the details and download items, as desired.

Not all items are free of cost in the Google Play Store.

Manage Applications

(1) Internet connection is required for using Google Maps. When you use the map, you use your Internet connection to transfer data to and from your device.

Your Android tablet lets you access unlimited entertainment sources. You can download applications, games, movies, and books from the ever-increasing Play Store. New items get added almost daily to the market to give users a never-ending fun experience.

download applications, games, movies, and books from the Google Play Store, go to 📻 📦 🝺 to access the Google

To view and manage the list of all inbuilt, downloaded, and running applications, go to 
Apps.

You need to have an Internet connection and be signed in to your Google Account to use the Google Play Store.

31

The Google Maps application may not be available in every street, country or region.