

User Manual

Iris Alfa L

1- WELCOME	4
1.1. <i>Exciting Feature.....</i>	4
1.2. <i>Technical Specification</i>	5
2- PHONE LAYOUT	6
2.1. <i>Keys and Parts.....</i>	6
2.2. <i>Icons and Indicators</i>	6
3- GETTING STARTED	7
3.1. <i>Insert SIM Card.....</i>	7
3.2. <i>Insert Memory Card</i>	7
3.3. <i>Unlock the Phone</i>	8
3.4. <i>Using the Touch Screen</i>	9
3.5. <i>Using the Phone's Buttons.....</i>	10
3.6. <i>Context Menus</i>	11
3.7. <i>Options Menus</i>	11
3.8. <i>Menu Icons.....</i>	12
4- PLACING AND RECEIVING CALLS	13
4.1. <i>Make a Call</i>	13
4.2. <i>Disable Phone Calls (Airplane Mode)</i>	13
4.3. <i>Disable SIM Card.....</i>	14
5- THE HOME SCREEN.....	15
5.1. <i>Open and Close the Launcher.....</i>	16
5.2. <i>Switch to Recently Used Application</i>	17
5.3. <i>Customize Home Screen</i>	17
6- MANAGING NOTIFICATIONS	19
6.1. <i>Open the Notifications Panel.....</i>	19
6.2. <i>Respond to Notifications</i>	20
6.3. <i>Close Notifications Panel.....</i>	20
7- MESSAGING	21
7.1. <i>Message Environment & Settings.....</i>	21
7.2. <i>Using the Onscreen Keyboard</i>	22
7.3. <i>Create and Send Multimedia Message.....</i>	24

7.4. Operation on a Message	24
7.5. Lock a Message	25
8- MULTIMEDIA.....	26
8.1. Camera.....	26
8.2. Gallery.....	26
8.3. Share an album	27
8.4. Music.....	27
8.5. FM Radio.....	27
8.6. Record Sounds.....	28
8.7. Make Screenshot.....	28
9- CONNECT TO NETWORKS AND DEVICES.....	28
9.1. Transfer Data between Phone and PC.....	28
9.2. Use Data Services on Your Phone	29
9.3. Connect to Wi-Fi Networks	30
9.4. Pair with Bluetooth Devices.....	30
9.5. Connect to Internet on Your PC via Phone	31
10- DOWNLOAD APPLICATIONS.....	32
11- PHONE SETTINGS	33
12- HEALTH AND SAFETY INFORMATION.....	35
LAVA support and contact Information	38
LAVA warranty certificate	39

1- WELCOME

1.1. Exciting Feature

Congratulations on becoming a proud owner of the iris Alfa L Android mobile phone. You have now joined the millions of satisfied customers spread across the Globe. Your iris Alfa L device offers you these exciting features and much more:

- Android 5.0
- 5.5 inch Screen
- Cameras (front and back)
- 1.3GHz Quad Core Processor
- External Memory (Expandable to 32 GB)
- Dual SIM
- Multimedia player
- GPS
- Gravity sensor
- Wi-Fi
- Bluetooth 4.0

1.2. Technical Specification

GENERAL:

- Android 5.0
- Dimensions: 152 x 78 x 9.35 mm
- 3000mAh Li-Pol battery

SCREEN:

- 5.5 IPS touch screen
- 540*960 pixels

HARDWARE:

 
- 1.2 GHz Quad Core Processor / 8GB RAM
- 8GB built-in memory
- External SD-card slot up to 32GB
- 8 MP Back Camera + 2MP Front Camera
- LED flash
- Gravity Sensor

COMMUNICATION:

- DUAL SIM
- Support GPRS, EDGE networks. GSM850 / 900 / 1800 / 1900MHz. WCDMA 900 / 2100MHz
- Support GPS
- Bluetooth 4.0
- Wi-Fi 802.11 b/g/n
- 3.5mm Jack Plug
- Micro-USB 2.0

2- PHONE LAYOUT

2.1. Keys and Parts

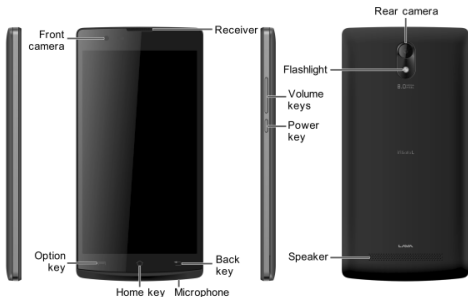

2.2. Icons and Indicators

Icons	Indicators	Icons	Indicators
	Signal strength indicator		Alarm has been set
	New misses calls		Wi-Fi is activated
	USB is connected		Bluetooth is on
	The headphone inserted		Battery charging symbol
	New message		Airplane mode is activated

 
3- GETTING STARTED

3.1. Insert SIM Card

The iris alfa L is a Dual SIM mobile phone allowing you to use the facility of two networks. To insert SIM card(s):

- Switch off the mobile phone and remove the rear cover and battery.
- Insert the SIM card correctly in the card slot(s) (See figure below).

Insert SIM card carefully!

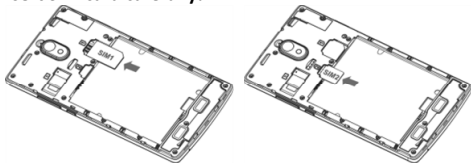


- Finally replace the battery and rear cover of the mobile phone.

3.2. Insert Memory Card

The iris alfa L allows you to expand external memory with a micro SD card, up to 32GB.

 - Power off the mobile phone, and then remove the rear cover and battery.
- Insert the memory card into the slot.

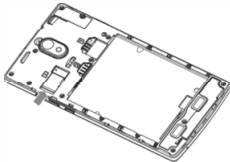

- Finally replace the battery and rear cover of the mobile phone.

 
Use only compatible memory cards approved by with this device. Incompatible memory cards may damage the card or the device will corrupt the data stored in the card.

3.3. Unlock the Phone

You may need to provide PIN, Password, or draw a pattern to unlock your phone.

To unlock the screen:

- Press the power key to wake up the phone.
- Hold and drag the unlock icon upwards to unlock.

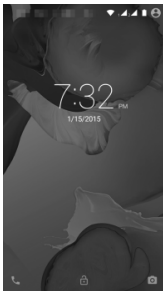

You may be required to unlock your phone based on the unlock method in settings.

To set the unlock method:

- On the main menu, touch **Settings > Security**.
- Touch **Screen lock**.
- Choose the type of locking as desired. You can set your screen lock on the basis of Swipe, Voice Unlock, Pattern, PIN, Password, None.




3.4. Using the Touch Screen

You can use the touch screen in the following ways:

- **Touch:** Acts on items on the screen, such as application and settings icons, to type letters and symbols using the onscreen keyboard, or to press onscreen buttons.
- **Touch and hold:** Touch and hold an item on the screen until an action occurs.



- **Drag:** Touch and hold an item and move your finger on the screen until you reach the target position.
- **Swipe or slide:** Quickly slide your finger across the surface of the screen, (without dragging an item). For example, slide the screen up or down to scroll a list.
- **Double-tap:** Tap quickly twice on a webpage, map, or other screen to zoom. For example, double-tap a section of a webpage in Browser to zoom that section to fit the width of the screen. You can also double-tap to control the zoom, in Maps, and in other applications.
- **Pinch:** In some applications (Such as Maps, Browser, and Gallery) you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).
- **Rotate the screen:** On most screens, the orientation of the screen changes as you rotate it. You can turn this feature on and off.

3.5. Using the Phone's Buttons


Button	Press
	<u>Menu</u> : opens context menu with further options and actions, content depends directly on applications.
	<u>Home</u> : returns to Home screen. Hold it to access the list of last used applications.
	<u>Back</u> : returns to the previous screen you were working in, even if it was in a different application. Can be used to hide the keyboard.

The phone provides you with **Context** menus and **Options** menus for accessing the features in an intuitive way.

3.6. Context Menus

You can open context menu by touching  key. Not all screens have context menus. If you touch  key inside application that has no context menu, nothing happens.

 Examples of context menu from contacts environment:

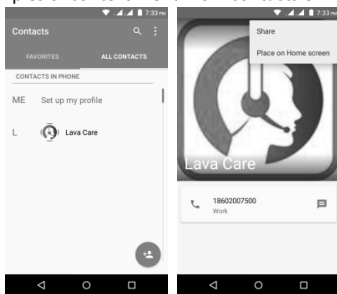

3.7. Options Menus

Options menus contain tools that apply to specific items on the screen. You can open an option by touching and holding an item on the screen. Not all items have

options menus.

When you touch and hold some items on a screen, an Options menu opens.

3.8. Menu Icons



Opens the dialer



Opens the contacts list



Opens the main menu



Opens the message







Opens the browser

4- PLACING AND RECEIVING CALLS

You can dial a phone number or touch a number in your contacts. You can also place from the call log or contacts.

4.1. *Make a Call*

- Tap the  icon on main menu or the home screen to dial the desired number.
- Touch the  icon on main menu or the home screen to make a call from contact, groups or favorites.
- To dial an international number, touch and hold the 0 key to enter the Plus (+) symbol, and then enter the international country prefix, followed by the phone number.
- Touch the  icon and select SIM card to call.
- Press the **Volume Up/Down** keys to adjust the call volume.
- You can access call Logs, contacts from the dialer screen.
- While during a call, touch the  icon to end a call.

4.2. *Disable Phone Calls (Airplane Mode)*

Some locations like airplanes may require you to turn off

your mobile, Wi-Fi, and Bluetooth wireless connections.

- Press and hold the **Power** button.
- Touch the **Airplane mode**.

 
4.3. Disable SIM Card

If you want to close the SIM card, to do it go to:

Settings

> **SIM cards**


> Turn off **SIM 01/SIM 02**

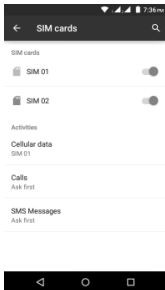

5- THE HOME SCREEN

When you sign in, the home screen opens.

 The Home screen is your starting point to access all the features on your phone. Touch the main menu icon at the bottom of the screen to view all installed applications.

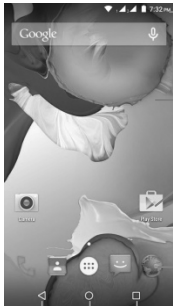

The status bar shows the time, signal strength, battery status, and notification.

Touch and hold an empty spot to change wallpapers, add widgets, or enter settings menu.

Touch an icon to launch the corresponding application; bottom icons are accessible from all desktop screens.

Touch and hold to move or remove an icon or a widget.

 
Touch to show recently used applications list.

Touch to return to home screen.

Touch to return to the previous screen or hide the keyboard.

5.1. Open and Close the Launcher

Touch the Launcher  icon to open the main menu.

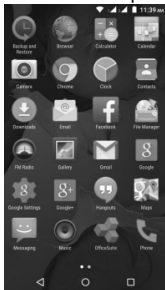

You have access to all applications installed on your device and their widgets when available.

Touch an application to open and launch it.




To add an application shortcut to the desktop screen, press and hold it until it expands in size and enters Home screen. Place it and release your finger.

Slide the Launcher left or right to bring more icons into view.



As soon as you install a new application, it comes in this list.

You cannot launch widget like an application; you can only place it on desktop screen.

Press and hold it until it vibrates and enters Home screen. Place it and release your finger. A context menu opens to configure the widget or resize it, naturally, it depends on the widget.

Press  icon,  icon,  icon or  icon to close the Launcher.




5.2. Switch to Recently Used Application

- Press and hold the  icon for a few seconds or touch  icon.
- Touch an item to open its application.

5.3. Customize Home Screen

You can add applications, shortcuts, widgets, and other items to any part of the Home screen or change the wallpaper.

Applications:

- Press  icon or  icon to open the Home screen.
- Touch the Launcher  icon to open the main menu.
- To add an application shortcut to the desktop screen, press and hold it until it expands in size and enters Home screen. Place it and release your finger.

Widgets:

- Touch and hold anywhere on a desktop Home

screen that's not occupied. A list of options appears.

- Touch **WIDGETS** in the list.

You are in the main widgets screen, you can

- Move between screens: Swipe left or right
- Drag a widget to a home screen: Touch and hold the widget's icon, slide your finger where you want to place it, and lift your finger.
- You may be asked to make further choices before the widget activates. If there isn't room where you dropped it, the widget won't get added to the Home Screen.

Wallpapers:

Wallpapers are images from Gallery, still images included with the system, and live images. They take the place of the default background for your Home Screen.

- Touch and hold anywhere on a Home screen that's not occupied. A list of options appears.
- Touch **WALLPAPERS**.
- Touch **Pick image** or slide to choose a system wallpaper.
- For set wallpaper, touch **Set wallpaper** on screen.

Folders:

You can very easily regroup desktop icons in a folder on screen to save space and access more applications.

- Touch and hold any icon on Home screen to move it.
- Go on another icon and release to create a folder containing both icons.
- Then add as many icons as folder can hold, give it a name, move it where you want.

You have all the tools to customize your iris alfa L Smart Phone.

6- MANAGING NOTIFICATIONS


Notification icons inform you of new messages and events. When you receive a notification, its icon appears in the status bar, along with a summary that appears only briefly.

6.1. Open the Notifications Panel

Drag the status bar down from the top of the screen as shown below:



 Slide the screen down again from the top as shown below:

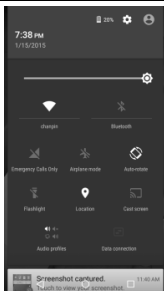



The Notifications panel displays your network provider name and a list of your current notifications.

6.2. Respond to Notifications

Open the notification panel and touch a notification to respond to it. What happens next depends on the notification.

6.3. Close Notifications Panel

Drag the tab at the bottom of the Notifications panel to the top of the screen twice. Or just press the  icon or  icon twice. The panel also closes when you touch a notification to respond to it.

7- MESSAGING

7.1. *Message Environment & Settings*


You can use **Messaging** to exchange text messages and multimedia messages with your friends.

 


Touch to compose a new text or multimedia message.

Touch to open a message conversation



You can also press the  icon and open the context menu to work on messages and their settings.

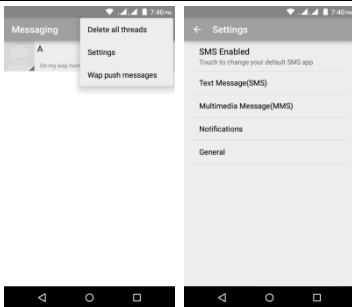



The **Settings** allow you to set SMS/MMS limits, notifications, vibrate or ringtones, delivery reports and many others.

Take a tour and explore messages settings, you'll find interesting things.

7.2. Using the Onscreen Keyboard

Some applications display the keyboard by default. In others, you touch a text field where you want to enter text, to open the keyboard.

 
Write your message here. After typing, press  icon or  icon to close the keyboard.

Touch and hold the text field to open a menu and to copy/cut texts.


Touch once to capitalize the next letter you type.

Touch and hold or double tap for Caps Lock.

Secondary characters panel (special, symbols, numbers)

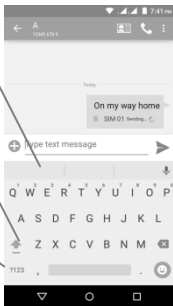

 Recipient zone: write the name, the number or tap the icon on right to access contacts list.

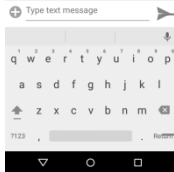



Press the send icon and select the SIM card you want to send your message with.

This is to erase characters.

7.3. Create and Send Multimedia Message

A Message becomes an MMS if you send it to an email address, or add multimedia media file(s).

- Touch compose new message.
- Enter or select a mobile phone number.
- Touch the composition text box and write your message.
- Touch the  icon to open the context menu.
- Touch  to attach various types of files.
- Send the MMS.

7.4. Operation on a Message

- Open the message thread containing the message you want to operate.
- Touch and hold this message until a context menu opens.



- Make your choice.

To forward a message:

- Touch **Forward** in this menu.
- Add a contact.
- Touch send icon and select desired SIM card to send the message.

You can also copy message text, view message details and delete message.

7.5. Lock a Message

You can lock a message so it won't be deleted if you reach your storage limits.

 
- Touch and hold message in a message window.
- Touch **Lock** in the menu that opens.

Unlock a message by touching and holding it and then touch **Unlock**.

8- MULTIMEDIA

8.1. Camera

Your camera's pictures and videos are stored in both the SD card and device. You can copy pictures and videos from both the SD card and device to a PC and vice versa.

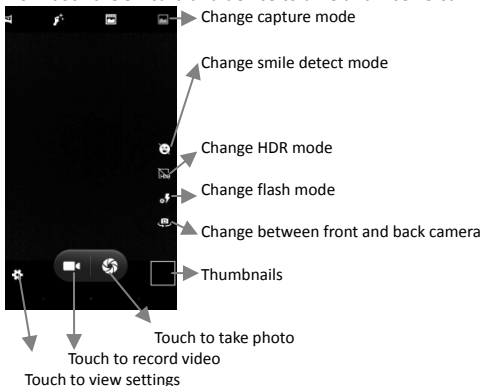


8.2. Gallery

You can use the Gallery to view pictures and play videos and share files.

- Touch the **Gallery** icon in the main menu.


- Touch an album to pen and view its contents.
- Touch a picture or a video in an album to view it.

8.3. Share an album

- Open the main Gallery window.
- Check or uncheck the albums you want to share.
- Touch the  icon at the top of screen to share via Messaging, Bluetooth, Email, and so on.

8.4. Music

You can easily transfer your favorite music from your PC to the SD card and experience a whole world of interesting and melodious music.

Touch the  icon or the intuitive buttons and icons on the phone in music interface to enjoy the features of your music player.

Press the phone's volume up/down keys on the right side of the mobile phone to adjust the volume.

8.5. FM Radio

You can listen to your favorite FM channels using the inbuilt receiver of your phone and a corded earphone (the wire is used as antenna).



Touch the option icon at up-right corner on the phone in radio interface to explore and enjoy the features of your inbuilt FM radio:

- Auto scan channels

- Input channel manually
- Enable speaker
- Record sound

Press the phone's volume up/down keys on the right side of the mobile phone to adjust the volume.

8.6. Record Sounds

- Touch the **Sound Recorder** in the main menu.
- Tap  to start recording a voice clip. "Recording" appears when it is recording a voice clip.
- Tap  to stop the recording.

8.7. Make Screenshot

Press and hold for 1 second both Volume Down and Power buttons together.

 
9- CONNECT TO NETWORKS AND DEVICES

Your phone can connect to a variety of networks and devices, including Wi-Fi, GPRS, Bluetooth devices, such as headsets. You can also transfer files to/from your PC through the data cable.

9.1. Transfer Data between Phone and PC

Connect the phone to your PC with the help of USB cable.

USB mass storage window with option to turn on USB storage will be shown.

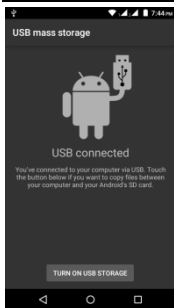

Touch **TURN ON USB STORAGE**.

You can now exchange/manage data between your phone and PC.

Once finished, click again (**TURN OFF USB STORAGE**) to unmount storage from computer and use it with phone again.

Note: During USB connection, phone storage could not be accessed on phone.

9.2. Use Data Services on Your Phone

- Ensure that your device has an active data connection. To use the data services please follow below steps:
- To select the SIM for data services, Go to **Menu > Settings > SIM cards > Cellular data** > Select the SIM with which data needed to be activated.
- To start the service, Go to **Menu > Settings > Data usage** > Select the SIM with which data needed to be activated > Ensure that Cellular data is activated.
- To select Preference for type of network (2G/3G), Go to **Menu > Settings > More > Cellular networks > Network Mode**.

Note: to use 3G services on your phone ensure that your 3G SIM card is inserted in 3G SIM slot.

Note: You now need not to worry about the operator

setting of your device. Your device detects and installs the operator settings automatically as soon as you insert your SIM card.

WARNING: to avoid any over cost contact your operator to know more about best plans.

9.3. Connect to Wi-Fi Networks

To browse the Internet via Wi-Fi:

- Go to **Menu > Settings > Under Wireless & networks** field select **Wi-Fi** and then turn it on, select the Wi-Fi connection listed under Wi-Fi networks with which you want to connect > Enter the password of Wi-Fi network with which you want to connect.

Note: Make sure that Wi-Fi network with which you want to connect is in the range and is active.

9.4. Pair with Bluetooth Devices

- Go to **Menu > Settings > Under Wireless & networks** field select **Bluetooth**.
- If Bluetooth is off, check Bluetooth to turn it on. Your phone scans and displays the Bluetooth devices in range.
- If the device you want to pair with is not in the list, make it discoverable.
- If your phone stops scanning before you make the other device discoverable, touch **Refresh** to search devices.
- Touch the ID of the other device in the list to pair them. If you are prompted to for a password, enter any password on one device and enter the same password you entered in the other device to be

paired, If the pairing is successful, your phone connects to the device.

9.5. Connect to Internet on Your PC via Phone

You can browse the Internet on your PC using your mobile phone. This can be done in 2 ways:

To access both the options make sure your phone has an active data plan and mobile data is ON.

USB Tethering:

- Connect your mobile phone to your PC via the USB cable.
- Go to **Settings > Wireless & networks > More > Tethering & portable hotspot > USB tethering.**
- Your PC will then read the necessary drivers of your phone and you can then access internet on your PC.

Note: In case you are unable to connect to internet please get in touch with customer care executive.

Wi-Fi Hotspot

- Go to **Settings > Wireless & networks > More > Tethering & portable hotspot > Turn on Wi-Fi hotspot.**
- Once the device Wi-Fi Hotspot is active you can see a grey icon denoting wireless network on the notification pane.

Note: You can select the desired security settings for your hotspot network by following below steps:

- Go to **Settings > Wireless & networks > More > Tethering & portable hotspot > Wi-Fi hotspot > Set up Wi-Fi hotspot > Select desired security and configure your password**
- Now go to your PC and check for the Hotspot

network created by your device.

- Select the network and input the password configured for the hotspot network on your device.

You can now browse internet on your PC with the help of data connection on your phone.

Note: In case you are unable to connect to internet please get in touch with customer care executive.

 
 
10- DOWNLOAD APPLICATIONS

The phone has a default configuration which includes some applications. Discover all others apps by using play store. You will be able to connect with 3G or Wi-Fi for example,

and by signing in the application with just an email.



This is what it looks like:

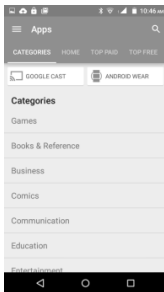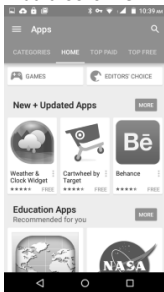

11- PHONE SETTINGS

You can go to **Settings** to customize your phone's preferences and behavior in a variety of ways:

Wi-Fi	Lets you configure and manage connections to networks and devices by using Wi-Fi.
Bluetooth	Lets you manage Bluetooth to communicate with other Bluetooth devices, such as headsets and other portable devices.
SIM cards	Lets you turn on or turn off your SIM card and configure your SIM card to be used to voice call, video call, SMS send and data connection.
Data usage	Data usage refers to the amount of data uploaded or downloaded by your device during a given period.
More	Lets you configure and manage connections to networks and devices.
Display	Lets you configure brightness and other screen settings.
Sound & notification	Lets you configure how and at what volume the phone rings, vibrates etc.
Storage	Lets you see and manage available space on your phone and on your SD card.
Battery	Lets you check the battery level and status.
Apps	Lets you view all applications downloaded or on SD card and manage all running applications in devices.
Location	Lets you set the location related settings like Wi-Fi and mobile network , GPS settings you're your phone and check to take account of your location in search results and other services.

User Manual

Security	Lets you protect personal information, like adjust your phone's lock, set SIM card lock etc.
Accounts	Lets you add, remove and manage your Google and other supported accounts.
Language & input	Lets you select the language for the text on your phone and for configuring the onscreen keyboard.
Backup & rest	Lets you backup your personal data and settings and reset your phone.
Date & time	Lets you choose preferences such as format and time zones.
Scheduled power on & off	Set time to turn on/off the phone automatically.
Accessibility	Enable your installed accessibility applications and adjust related settings.
Printing	Enable you to use print services.
About phone	View information about your phone, such as signal strength, status, phone information and battery use.

12- HEALTH AND SAFETY INFORMATION

Please read the following guidelines regarding the use of your phone. Not following them may be dangerous or illegal.

Certification Information (RoHS)

We at LAVA take our social responsibility seriously and are committed to the cause of saving our environment, it is in keeping with these commitments that we are proud to state that LAVA phones are RoHS compliant.

Certification Information (SAR)

Your phone is designed not to exceed the limits of emission of radio waves recommended by international guidelines. These guidelines include safety margins designed to assure the protection of all persons, regardless of age and health.

SAR (specific absorption rate) is the unit of body-absorbed RF quantity when the phone is in use. SAR value is ascertained according to the highest RF level generated during laboratory tests.

The true SAR level during phone usage will be far lower than this level.

The SAR value of the phone may change depending on factors such as how close you are to a network tower, use of accessories and other enhancements.

The highest SAR value of the device is less than 1.6W/Kg averaged over 10 gm of human tissue.

The SAR value may differ depending on national reporting, testing requirements and the network band.

SAR Recommendations

Use a wireless hands-free system (headphone, headset) with a low power Bluetooth emitter.

Please keep your calls short and use SMS whenever more convenient. This advice applies especially to children, adolescents and pregnant women.

Prefer to use your cell phone when the signal quality is good.

People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant.

Maintain a preferable distance of 15 mm from the device.

Safe Driving

Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit.

Please do not put the phone onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.

During Flight

Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone or switch to flight mode during a flight.

In Hospitals

Your Phone's radio waves may interfere with the functioning medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external Radio Frequency. Switch off your device when regulations instruct you to do so.

Do not carry the wireless device in the breast pocket.

Turn off the phone if there is any reason to suspect that interference is taking place.

Unsafe Areas

Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.

Taking Care of Your Device

Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:

Keep the device dry. If your device gets wet, remove the battery without turning on the device, wipe it with a dry cloth and take it to the service center.

Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.

Do not use or store the device in dusty, dirty areas. Its moving

parts and electronic components can be damaged.

Do not attempt to open the device other than as instructed in this guide. Repairing the phone by yourself fother than our authorized service agents/centers goes against the warranty rules.

Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.

Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.

Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.

Recycle Your Phone



The WEEE logo (shown at the left) appears on the product (battery, handset, and charger) to indicate that this product must not be disposed off or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by relocating over the specified collection point for recycling of such hazardous waste.

Collection and proper recovery of your electronic waste equipments at the time of disposal will allow us to help preserve the environment. Recycling of the electronic waste equipment will ensure safety of human health and environment.

Disclaimers

The colors and specifications shown/mentioned in the user manual may differ from the actual product. Images shown are for representation purpose only. Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.

The content of this manual may vary from the actual content displayed in the mobile phone. In such a case, the later shall govern.

We keep the right to make modifications to any of the content in this user guide without public announcement or prior notification.

For devices with external power supplies, plug socket should be placed in short distance and easily accessible.

Using the wrong type battery replacement there is a danger of explosion, be sure to follow the instructions disposal of used batteries.

Copyrights

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of is strictly prohibited.



To prevent possible hearing damage, do not listen at high volume levels of long periods.

To use the device only with the earphones included, never change the earphones included for another one.

LAVA support and contact Information

Visit www.Lavamobiles.com for additional information, downloads and services related to your LAVA product.

To check for the nearest LAVA service center location for maintenance services, please visit www.lavamobiles.com/support-services

Service Center number

No.:1860-200-7500

Kindly note: Please send area code of your location through SMS to this No. and in return you will get address of service center nearest to you by SMS.

LAVA warranty certificate

Limited warranty:

LAVA international Ltd. (LAVA) provides limited warranty for your mobile phone and original accessories delivered with your mobile phone (hereinafter referred to as “product”).

The warranty period for the transceiver is one (1) year and for battery, charger and headset is six (6) months from the date of purchase.

LAVA Warranty

Subject to the conditions of this Limited Warranty, LAVA warrants a product to be free from defects in design, material and workmanship at the time of its original purchase by you, and for a subsequent period of one (1) year for transceiver and six (6) months for battery & charger.

You shall have no coverage or benefits under this warranty in the event that any of the following conditions are applicable:

- The product has been subjected to abnormal use or conditions, improper storage, exposure to 1.excessive moisture or dampness, exposure to excessive temperature, unauthorized modification, unauthorized repair (including but not limited to use of unauthorized spare parts in repairs), abuse, accidents, Acts of God, spills of food or liquids, improper installation.
- You have not notified Lava of the defect in the product during the applicable warranty period.
- The product serial no. code or the accessories date code has been removed, defaced or altered.
- The product has been used with or connected to an accessory (i) Not supplied by Lava or its affiliates, (ii) Not fit for use with the product or (iii) Used otherwise than in

manner intended.

- The seals of the product's battery enclosure have been broken or shown evidence of tempering or the product's battery has been used in equipment other than that for which it has been specified usable by LAVA.
- All plastic surfaces and all other externally exposed part that is scratched or damaged due to normal use.

To get maximum of your new product, we recommend you to:

- Read the guidelines for safe and efficient use as mentioned in the manual.
- Read the terms and conditions of your Lava warranty in the manual.
- Keep your original receipt; you will need it for warranty services if asked to produce.
- Present this Lava Warranty Certificate along with original proof of purchase whenever you require any warranty services.

In case Lava product needs service, please visit the nearest Lava service centers given in the service guide. Please visit our Website www.lavamobiles.com for updated list of Authorized Service Centers near to your location.

Important note: for your warranty to be valid, all information on the warranty certificate has to be completed including the stamp from the authorized distributor/retailer.

All warranty information, product features and specifications are subject to change without notice.

IMEI No.....
Dealers Stamp
Date of purchase
Model No.