

ZTE[®] PARAGON[™]

USER MANUAL

Z8090171100MT



www.zteusa.com

Z753G

Bringing you Closer

About This Manual

Thank you for choosing this ZTE mobile device. In order to keep your device in its best condition, please read this manual and keep it for future reference.

Copyright © 2015 ZTE CORPORATION

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

Notice

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this manual without prior notice. This manual has been designed with the utmost care to ensure the accuracy of its content. However, all statements, information and recommendations contained therein do not constitute a warranty of any kind, either expressed or implied. Please refer to chapter *For Your Safety* to be sure to use your phone properly and safely.

We offer self-service for our smart terminal device users. Please visit the ZTE official website (at www.ztedevice.com) for more information on self-service and supported product models. Information on the website takes precedence.

Disclaimer

ZTE Corporation expressly disclaims any liability for faults and damages caused by unauthorized modifications of the software.

Images and screenshots used in this manual may differ from the actual product. Content in this manual may differ from the actual product or software.

Trademarks

ZTE and the ZTE logos are trademarks of ZTE Corporation.

Google and Android are trademarks of Google, Inc.

The *Bluetooth*® trademark and logos are owned by the *Bluetooth* SIG, Inc. and any use of such trademarks by ZTE Corporation is under license.

The microSDHC logo is a trademark of SD-3C, LLC.

Qualcomm® Snapdragon™ processors are products of Qualcomm Technologies, Inc. Qualcomm and Snapdragon are trademarks of Qualcomm Incorporated, registered in the United States and other countries. Used with permission.

Other trademarks and trade names are the property of their respective owners.

Edition Time: January 2015

Manual No.: Z8090171100MT



Table of Contents

Getting Started	5	Editing Text	19
Installing the Battery and microSDHC™ Card	5	Opening and Switching Apps.....	20
Charging the Battery	5	Connecting to Networks and Devices	21
Extending the Battery Life.....	6	Connecting to Mobile Networks	21
Powering Your Phone On/Off	6	Connecting to Wi-Fi®	21
Setting Up Your Phone for the First Time	6	Connecting to <i>Bluetooth</i> ® Devices	23
Locking/Unlocking the Screen and Keys.....	6	Connecting to Your Computer via USB	24
Using the Touch Screen	7	Connecting to Virtual Private Networks.....	25
Getting to Know Your Phone	8	Phone Calls	27
Getting to Know the Home Screen.....	10	Placing and Ending Calls	27
Personalizing	11	Answering or Rejecting Calls	27
Changing the System Language.....	11	Working With the Call Log.....	27
Setting the Date and Time	11	Calling Your Contacts	28
Changing the Ringtone and Notification Sound... 11		Checking Voicemail	28
Turning Touch Sounds On/Off.....	11	Using Options During a Call	28
Adjusting Volumes.....	11	Managing Multi-party Calls	29
Switching to Silent Mode.....	11	Adjusting Your Call Settings.....	30
Applying New Wallpapers.....	12	People	31
Changing the Screen Brightness	12	Checking Contact Details.....	31
Protecting Your Phone With Screen Locks.....	12	Adding a New Contact.....	31
Protecting Your Phone With Encryption	13	Setting Up Your Own Profile	31
Knowing the Basics	14	Importing, Exporting, and Sharing Contacts	31
Monitoring the Phone Status	14	Working With Favorite Contacts.....	32
Managing Notifications	15	Working With Groups	32
Managing Apps and Widgets	17	Searching for a Contact	33
Organizing With Folders.....	17	Editing Contacts.....	33
Rearranging the Favorites Tray	17		
Entering Text	18		

Table of Contents

Accounts	34	Calendar	43
Adding or Removing Accounts.....	34	Viewing Your Calendars and Events.....	43
Configuring Account Sync.....	34	Creating an Event.....	43
Email	35	Editing or Deleting an Event.....	44
Setting Up the First Email Account.....	35	Changing Calendar Settings.....	44
Checking Your Emails.....	35	Google+™	45
Responding to an Email.....	35	Getting Started With Google+.....	45
Writing and Sending an Email.....	36	Changing Google+ Settings.....	45
Adding a Signature to Your Emails.....	36	Browser	46
Adding and Editing Email Accounts.....	36	Opening the Browser.....	46
Changing General Email Settings.....	37	Working With an Opened Page.....	46
Gmail™	38	Using Multiple Browser Tabs.....	47
Opening Your Gmail Inbox.....	38	Downloading Files.....	47
Switching Accounts.....	38	Using Bookmarks.....	47
Writing and Sending a Message.....	38	Viewing Your Browsing History.....	48
Adding a Signature to Your Gmail Messages.....	38	Changing Browser Settings.....	48
Replying to or Forwarding a Message.....	38	Google Maps™	49
Working With Received Attachments.....	39	Activating Location Services.....	49
Working With Labels.....	39	Getting Your Location.....	49
Changing Gmail Settings.....	40	Searching for a Location.....	49
Messaging	41	Getting Directions to Your Destination.....	49
Opening the Messaging Screen.....	41	Searching for Local Places.....	50
Sending a Text Message.....	41	Google Now™ and Search	51
Replying to a Message.....	41	Enabling Google Now.....	51
Forwarding a Message.....	41	Searching With Text.....	51
Deleting Messages or Threads.....	42	Searching by Speaking.....	51
Changing Message Settings.....	42	Changing Search and Voice Search Settings.....	51

Table of Contents

Camera	52	More Apps	62
Capturing a Photo.....	52	Clock.....	62
Using Manual Camera Mode.....	52	Calculator.....	62
Recording a Video.....	52	Chrome™.....	62
Customize Camera Settings.....	53	Downloads.....	62
Gallery	54	File Manager.....	63
Opening the Gallery.....	54	Note.....	63
Working With Albums.....	54	Play Books.....	63
Working With Pictures.....	54	Play Movies & TV.....	63
Playing Videos.....	55	Task Manager.....	63
Music	56	YouTube™.....	63
Copying Music Files to Your Phone.....	56	Play Store	64
Viewing Your Music Library.....	56	Browsing and Searching Apps.....	64
Playing Music.....	57	Downloading and Installing Apps.....	64
Managing Playlists.....	57	Creating a Google Wallet™ Account.....	64
Play Music	58	Requesting a Refund for a Paid App.....	64
Playing Your Music.....	58	Managing Your Downloads.....	65
Managing Playlists.....	59	Settings	66
Video Player	60	General Settings.....	66
Opening the Video Library.....	60	Wireless and Networks.....	67
Playing and Controlling Videos.....	60	Device.....	68
Managing Video Files.....	60	Personal.....	68
Sound Recorder	61	Accounts.....	69
Recording a Voice Memo.....	61	System.....	69
Playing a Voice Memo.....	61	Upgrading the Phone Software	70
		Troubleshooting	71

Table of Contents

For Your Safety	74
General Safety.....	74
Radio Frequency (RF) Energy.....	75
FCC Compliance.....	75
Hearing Aid Compatibility (HAC) Regulations for Mobile Phones	76
Distraction	77
Product Handling	77
Electrical Safety.....	79
Radio Frequency Interference.....	80
Explosive Environments	81
Specifications	82
Notes	83

Getting Started

Installing the Battery and a microSDHC Card

Power off your phone before installing or replacing the battery. You have the option to install a microSDHC card of up to 32 GB to expand your phone's storage capacity. The microSDHC card can be installed and removed while the phone is turned on. Unmount the microSDHC card before removing it.

1. Place your finger in the slot at the bottom of the back cover to lift and remove the cover.



2. Insert the battery by aligning the contacts on the battery with the gold contacts in the battery compartment. Gently push down on the battery until it clicks into place.



WARNING! Do not handle a damaged or leaking Li-Ion battery as you can be burned.

3. Hold your microSDHC card with the metal contacts facing down and slide it into the microSDHC card slot until you hear a click.



4. Press the cover gently back into place until you hear a click.

Charging the Battery

When you first get your new phone you'll need to charge the battery. If the battery is low, there will be a pop-up message on the screen. As you charge your phone, the screen will tell you the exact battery level each time you wake up your phone.

WARNING! Use only ZTE-approved chargers and cables. The use of unapproved accessories could damage your phone or cause the battery to explode.

1. Connect the adapter to the charging port. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charging port.



2. Connect the charger to a standard AC wall outlet. If the phone is on, you'll see a charging icon, such as  or , appear in the Status Bar.
3. Disconnect the charger when the battery is fully charged.

NOTE: If the battery is extremely low, you may be unable to power on the phone even when it is being charged. In this case, try again after charging the phone for at least 10 minutes. Contact customer service if you still cannot power on the phone after prolonged charging.

Extending the Battery Life

Active applications, screen brightness levels, *Bluetooth* and Wi-Fi usage, and GPS functionality can drain your battery. You can follow the helpful tips below to conserve your battery power:

- Reduce the screen backlight time.
- Lower the screen brightness.
- Turn auto-sync, Wi-Fi, and *Bluetooth* off when not in use.
- Disable the GPS function when not in use. Most applications using this function will periodically query the GPS satellites for your current location; each query drains your battery.

Powering Your Phone On/Off

- Press and hold the **Power/Lock Key** to turn on your phone.

- To turn it off, press and hold the **Power/Lock Key** to open the options menu. Tap **Power off** and then tap **OK**.

Setting Up Your Phone for the First Time

When you first power on your phone after you purchase it or reset it to factory settings (see *Settings – Personal – Backup & Reset*), you may need to set it up before using it.

1. Tap the **language field**, select the language you want, and tap **Start**.
2. Connect to a Wi-Fi network and tap **Next**. Otherwise, tap **Skip**.
3. Set the date, time, and time zone, or use date and time data provided by the network. Then tap **Next**.
4. If you have a Google™ account, tap **Existing** to sign in. Tap **New** to create a Google account or tap **Not now** to set up an account later.
5. Configure the Google location options and tap **Next**.
6. Enter your name, which the phone uses to personalize some apps, and then tap .
7. You will be prompted to accept the Google terms of service. Tap **Next** to continue.
8. Tap **Finish** to complete the setup.

Locking/Unlocking the Screen and Keys

Your phone allows you to quickly lock the screen and keys (put the phone into Sleep mode) when not in use,

and also to turn the screen back on and unlock it when you need it.

To lock the screen and keys:

To quickly turn the screen off and lock the keys, press the **Power/Lock Key**.

NOTE: To save battery power, the phone automatically turns off the screen after a certain period of time when you leave it idle. You will still be able to receive messages and calls while the phone screen is off.

To unlock the screen and keys:

1. Press the **Power/Lock Key** to turn the screen on.
2. Press and hold a blank area of the screen.

NOTE: If you have set an unlock pattern, PIN, or password for your phone (see *Personalizing – Protecting Your Phone With Screen Locks*), you'll need to draw the pattern or enter the PIN/password to unlock your screen.

Using the Touch Screen


Your phone's touch screen lets you control actions through a variety of touch gestures.

- **Tap** – When you want to type using the on-screen keyboard, select on-screen items (such as application and settings icons), or press on-screen buttons, simply tap them with your finger.
- **Tap and Hold** – To open the available options for an item (for example, a message or link in a web page), tap and hold the item.

- **Swipe or Slide** – To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.
- **Drag** – To drag, press and hold your finger with some pressure before you start to move your finger. While dragging, do not release your finger until you have reached the target position.
- **Pinch** – In some apps (such as Maps, Browser, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).
- **Rotate the screen** – For most screens, you can automatically change the screen orientation from portrait to landscape by turning the phone sideways.

Getting Started

Getting to Know Your Phone

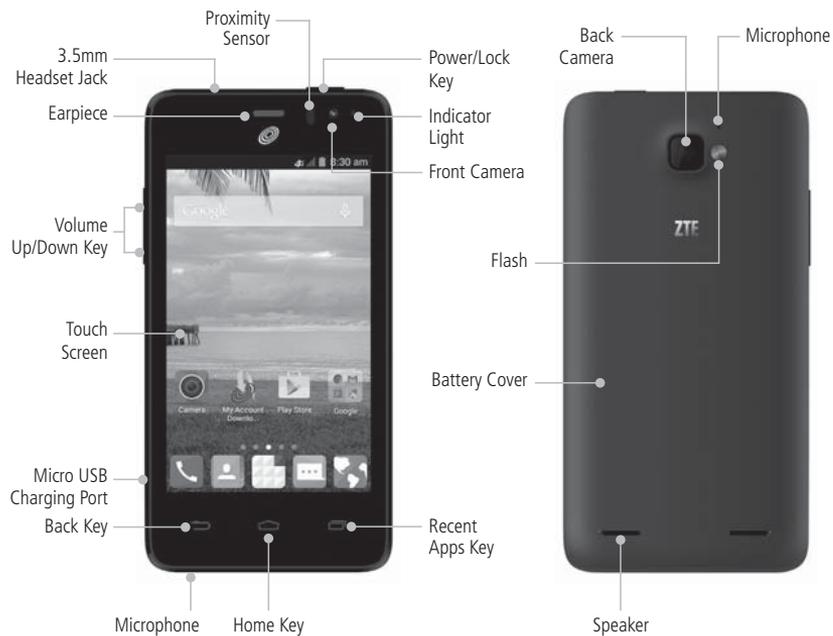

Getting Started

Key Functions

Key	Description
Power/Lock Key	Press and hold to turn Airplane mode on or off, restart, enable silent mode/vibration mode/sound, or to power off. Press to change your phone to Sleep mode. Press to wake up your phone.
Home Key	Press to return to the home screen from any application or screen. Press and hold to access Google Now.
Recent Apps Key	Press to see recently used applications.
Back Key	Press to go to the previous screen.
Volume Up/Down Key	Press or hold to turn the volume up or down.

Getting Started

Getting to Know the Home Screen

The home screen is the starting point for your phone's applications, functions, and menus. You can customize your home screen by adding application icons, shortcuts, folders, widgets, and more. Your home screen extends beyond the initial screen. Swipe the screen left or right to display additional screens.



Personalizing

Changing the System Language

1. Press the **Home Key** > **Apps icon** > **Settings** > **Language & input** > **Language**.
2. Select the language you need.

Setting the Date and Time

1. Press the **Home Key** > **Apps icon** > **Settings** > **Date & time**.
2. Uncheck **Automatic date & time** and **Automatic time zone** if you want to set the date, time, and time zone by yourself.
3. Set the date, time, time zone, and date/time format.

Changing the Ringtone and Notification Sound

You can customize the default ringtone for incoming calls and the default notification sound quickly.

1. Press the **Home Key** > **Apps icon** > **Settings** > **Sound**.
2. Tap **Phone ringtone** or **Default notification sound**.
3. Scroll through the list and select the ringtone you'd like to use.
4. Tap **OK**.

NOTE: See *People – Editing Contacts – Setting a Ringtone for a Contact* for how to assign a special ringtone to an individual contact.

Turning Touch Sounds On/Off

1. Press the **Home Key** > **Apps icon** > **Settings** > **Sound**.
2. Check or uncheck **Touch sounds**.

Adjusting Volumes

1. Press the **Home Key** > **Apps icon** > **Settings** > **Sound** > **Volumes**.
2. Drag the sliders to adjust the volume for each type of audio.
3. Tap **OK** to save.

NOTE: You can adjust the media volume when a media application is in use by pressing the **Volume Up/Down Key**. If no media application is active, press the **Volume Up/Down Key** to adjust ringtone volume (or the earpiece volume during a call).

Switching to Silent Mode

You can set the phone to silent mode by using one of the following methods:

- Press and hold the **Power/Lock Key** and then tap  to enable silent mode, tap  to enable silent mode with vibration, or tap  to disable silent mode.
- Keep pressing the **Volume Down Key** when no media application is active. When the  icon appears in the Status Bar, the phone is set to silent mode with vibration. When the  icon appears in the Status Bar, the phone is in silent mode.