

Spark Icon



User Manual



- 5. The seals of the product's battery enclosure have been broken or shown evidence of tempering or the product's battery has been used in equipment other than that for which it has been specified usable by LAVA.
- 6. All plastic surfaces and all other externally exposed part that is scratched or damaged due to normal use.

To get maximum of your new product, we recommend you to:

- Read the guidelines for safe and efficient use as mentioned in the manual.
- Read the terms and conditions of your Lava warranty in the manual.
- Keep your original receipt; you will need it for warranty services if asked to produce.
- Present this Lava Warranty Certificate along with original proof of purchase whenever you require any warranty services.

In case Lava product needs service, please visit the nearest Lava service centers given in the service guide. Please visit our Website www.lavamobiles.com for updated list of Authorized Service Centers near to your location.

Important note: for your warranty to be valid, all information on the warranty certificate has to be completed including the stamp from the authorized distributor/retailer.

All warranty information, product features and specifications are subject to change without notice.

MEI No.	
Dealers Stamp	
Model No.	

16

User Manual Spark Icon

Contents

Basic Information	4
Brief Introduction	4
Safety Notice	5
Before Using	5
SIM	5
Phone Unlock	5
SIM Unlock	5
Function menu Introduction	6
Call Logs	6
Contacts	6
Music	6
Camera	6
Messages	6
Multimedia	6
Image viewer	6
Video recorder	6
Video player	6
Sound recorder	6
FM radio	7
File manager	7
Fun & Games	7
Lava Zone	7
Games	7

LAVA WARRANTY CERTIFICATE

Limited warranty:

LAVA international Ltd. (LAVA) provides limited warranty for your mobile phone and original accessories delivered with your mobile phone (hereinafter referred to as "product")

The warranty period for the transceiver is one (1) year and for battery, charger and headset is six (6) months from the date of purchase.

LAVA Warranty

Subject to the conditions of this Limited Warranty, LAVA warrants a product to be free from defects in design, material and workmanship at the time of its original purchase by you, and for a subsequent period of one (1) year for transceiver and six (6) months for battery & charger.

You shall have no coverage or benefits under this warranty in the event that any of the following conditions are applicable:

- 1. The product has been subjected to abnormal use or conditions, improper storage, exposure to excessive moisture or dampness, exposure to excessive temperature, unauthorized modification, unauthorized repair (including but not limited to use of unauthorized spare parts in repairs), abuse, accidents, Acts of God, spills of food or liquids, improper installation
- 2. You have not notified Lava of the defect in the product during the applicable warranty period.
- 3. The product serial no. code or the accessories date code has been removed, defaced or altered.
- 4. The product has been used with or connected to an accessory (i) Not supplied by Lava or its affiliates, (ii) Not fit for use with the product or (iii) Used otherwise than in manner intended

(battery, handset, and charger) to indicate that this product must not be disposed of or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste.

Specified collection points for recycling of such hazardous waste. Collection and proper recovery of your electronic waste equipment at the time of disposal will allow us to help preserve the environment. Recycling of the electronic waste equipment will ensure safety of human health and environment. For more information on best practices for disposal of electronic and electrical waste, please visit to our web site: www.Lavamobiles.com

Disclaimers

- 1. The colors and specifications shown/mentioned in the user manual may differ from the actual product. Images shown are for representation purpose only. Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.
- 2. SPARK Icon keeps the right to make modifications to any of the content in this user guide without public announcement in advance. The content of this manual may vary from the actual content displayed in the mobile phone. In such a case, the latter shall govern.

Copyrights

All rights reserved. Reproduction, transfer, distribution or storage of part of all of the contents in this document in any form without the prior written permission of Lava International is strictly prohibited.

Organizer	8
Calendar	8
Alarm	8
World clock	8
Tools	8
Torch	8
Bluetooth	8
Calculator	8
SIM toolkit	8
Settings	8
User Profiles	8
Phone Settings	9
Call settings	9
Security Settings	9
Flight mode	10
Connectivity	10
Restore factory settings	10
Internet	10
Internet service:	10
Health and Safety Precautions	
Taking Care of Your Device	12
LAVA WARRANTY CERTIFICATE	15

Basic Information

Brief Introduction

Thank you for choosing Lava Spark Icon mobile phone. You can read the manual, a comprehensive understanding for the use of mobile phones and enjoy its perfect functionality and simple method of operation.

Spark Icon supports two SIM cards function.In addition to basic call functions, it also have featues like phone book, personalized ring tones, alarm, camera, image viewer, video recorder, video player, audio player, FM, One Memory Card (T-Flash card) slot, calculator, calendar etc.

Our Company reserves the right to make any changes in the contents of the manual without any prior notice.

Keys and Parts:



authorized service agents/centers goes against the warranty rules

- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.

Battery Recommendations:

- Please put the battery in a cool and well-ventilated place out of direct sunlight. We recommend you to charge the battery at room temperature range.
- Batteries have life cycles. If the time that the battery powers equipment becomes much shorter than usual, the battery life is at an end. Replace the battery with a new battery of the same make and specification.
- Do not discard the battery with household trash. Please dispose of used battery according to your local environmental laws and guidelines.
- Use manufacturer approved batteries, chargers, accessories and supplies. SPARK Icon will not be held responsible for user's safety when using unapproved accessories or supplies.

Recycle Your Handset



The WEEE logo (shown at the left) appears on the product

devices such as a pacemaker or cardioverter defibrillator:

- Always keep your phone at least 15.3 centimeters (6 inches) from the medical device
- Do not carry the wireless device in chest pocket.
- Turn off the phone if there is any reason to suspect that interference is taking place.
- Follow the manufacturer directions for the implanted medical device.
- If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

Unsafe Areas

 Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.

Taking Care of Your Device

Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery without turning on the device, wipe it with a dry cloth and take it the service center.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not attempt to open the device other than as instructed in this guide. Repairing this phone by you other than our

Safety Notice

If your phone is lost or stolen, immediately notify the telecom service provider, or its outlet, to stop the SIM service. To make you mobile phone more secure, please take precautionary measures, such as:

- Set up mobile phone SIM card PIN password, PIN password to prevent your SIM is unauthorized use by others.

Before Using

SIM

Before using your phone you must insert a valid SIM (Subscriber Identity Module) card. SIM card provide by the network provider.

Phone Unlock

In order to prevent illegal use, your phone can set the phone lock password protection. To use this function you must enter the phone lock password so that you can unlock the phone for the normal use state.

Enter the phone lock password, press the LSK to confirm. For example, if the phone lock password is set to 4321, then the following input: 4321.

SIM Unlock

In order to prevent illegal uses of your SIM use PIN (Personal Identification Number) password encryption protection. Use this function, if you have set the PIN password protection, every time you must enter the PIN password at boot time, so that you can unlock the SIM card and phone to normal use. Enter the PIN password, press the LSK to confirm. For example, if the PIN is set to 1234, then the following input: 1234.If there consecutive incorrect, your SIM will be network locked, the phone will ask for PUK password.

Function menu Introduction

Call Logs

Missed Calls / Dialled Calls/ Received Calls/ All calls/Delete call logs and Call timers.

Contacts

The mobile phone can store up to 1000 telephone numbers .

Music

Use this function to play audio files. In audio player interface, you can press Up key or Down key to tune volume.

Camera

Use this function to take photos.

Messages

You can send and receive text message and Multimedia message. If the short message memory is full, a blinking message icon appears on the top of the screen. While entering the Messaging interface, you will see the following menu options: Write message, Inbox, Drafts, Outbox, Sent Messages, SMS templates, SMS settings, SMS Export and SMS Import.

Multimedia

Image viewer

You can view the pictures or images through this function.

Video recorder

You can record videos through this function.

Video player

Use this function to play video files.

Sound recorder

Use this function to record audio files. The phone supports amr format.

accessories

 The highest SAR value of the device at the head and body are below 1.6W/kg respectively averaged over 1 gm. of human tissue

SAR Recommendations

- Use a wireless hands-free system (headphone, headset) with a low power Bluetooth emitter.
- Please keep your calls short and use SMS whenever more convenient. This advice applies especially to children, adolescents and pregnant women
- Prefer to use your cell phone when the signal quality is good.
- People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant.
- Maintain a preferable distance of 15 mm from the device.

Safe Driving

- Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit.
- Please do not put the phone onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.

During Flight

 Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone during a flight.

In Hospitals

- Your Phone's radio waves may interfere with the functioning of inadequately shielded medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external Radio Frequency. Switch off your device when regulations posted instruct you to do so.
- To avoid potential interference with implanted medical

Keypad lock and etc.

• Screen auto lock: You can set the screen lock automatically after a specific time you set.

Flight mode

You can switch between Normal mode and Flight mode.

Connectivity

Data connection SIM

You can choose SIM 1/SIM 2 to access internet.

o Data accounts.

You can choose the data accounts type.

Restore factory settings

Use this function to restore factory settings. The initial password is 4321.

Internet

Internet service:

It includes the following submenus: Homepage, Bookmarks, Search or input URL, recent pages and Settings.

Health and Safety Precautions

Please read these simple guidelines. Not following them may be dangerous or illegal.

SAR Compliance

- Your phone is designed not to exceed the limits of emission of radio waves recommended by international guidelines.
- SAR (specific absorption rate) is the measurement of body-absorbed RF quantity when the phone is in use. SAR value is ascertained according to the highest RF level generated during laboratory tests.
- The SAR value of the phone may depend on factors such as proximity to the network tower, use of accessories or other

FM radio

You can use the application as a traditional FM radio with automatic tuning and saved channels. Up key or Down key to tune volume. While listening to radio, you can dial or receive a call normally. During call conversation, the radio will turn mute automatically. If some applications are using GPRS or CSD to send or receive data, they may interfere with the radio.

When the FM radio is activated, the mobile phone will display the number and name (if having been saved) and frequency of the radio channel.

Option menu:

- Channel list: You can edit and save 30 channels.
- Manual input: You can edit the specified radio frequency band.
- Auto Search: You can have automatic search and save the searched channels into the list.
- Settings: You can set the Background play, Audio quality, Loundspeaker.
- Record: You can record new files.
- File list: The recorded files.

File manager

The phone supports the memory card. You can use the file manager to conveniently manage various directories and files on memory card.

Fun & Games

Enter it to play the games stored in the phone; set up the correlative parameters about games.

Lava Zone

You can go to internet service.

Games

It provides default games Snake & Tweety Bird and Game settings.

Organizer

Calendar

Once you enter this menu, there is a monthly-view calendar for you. It also support Indian calendar.

Alarm

Five alarm clocks are set but deactivated by default. For each alarm clock, the time can be set with ringing alert.

World clock

Users can search for a city's current time.

Tools

Torch

Switch on/off the torch here.

In addition, when in the idle screen, long press Right soft key to turn on/off the torch.

Bluetooth

You can transfer files via bluetooth when connected with other devices and listen to music , watch videos , call via bluetooth earphone

Calculator

This calculator provides limited precision and is only applicable to simple arithmetic calculation.

SIM toolkit

It offers kinds of entertainments and applications by different operators.

Settings

User Profiles

The mobile phone provides multiple user profiles General, Silent, Meeting, Outdoor and headset.

You can customize settings on profile and then activate corresponding profiles.

Phone Settings

- Time and date: Set the home city, Set time/date, Set format, on/off the function of Update with time zone and Auto update date&time.
- Language: Set the displaying language of mobile phone menus..
- Preferred input method: Select one of the input methods as the prior. So while you write SMS, it will automatically display the selected input method by default.
- Display: Users can access this item to set wallpapers, Show date and time, Show operator name, LCD backlight.
- Shortcuts: Add/Edit/Delete the shortcuts, or change their order.
- Dedicated key: Customize the shortcut functions of the Up, Left, and Right direction keys. In the standby interface, you can press a direction key to directly enter the function menu corresponding to that direction key.

Call settings

· Advanced settings

Through this function, you can set Blacklist, Reject by SMS, Call connect notice, Answer mode and Auto Call Recording.

Security Settings

This function provides you with related settings about safety use.

- Phone security: Set the phone lock, the password is 4321 by default.
- Mobile tracker: Open this function, when new SIM card insert your phone, after a period of time, it will automatically send the message to the setting number.
- Privacy protection: Your phone gives you a good privacy lock here. The password is 4321 by default. You can manage the Message, Contacts, Call history, File manager and