

InFocus

InFocus

Quick Start Guide

M2 3G




Introduction

Thank you for choosing InFocus M2 3G phone. It is recommended that you first read this **Quick Start Guide** to understand the basic operation of the phone.

Content

Your Phone	2
Installing SIM Card(s) and Memory Card ..	3
Charging the Battery	4
Initial Start Up	4
Home Screen	4
Making Your First Call	5
Contacts	6
Sending a Text Message	7
Setting up WLAN	7
Setting up Email Account	8
Sending and Receiving Emails	8
Using Browser	9
Using Bluetooth	10
Taking Photos and Videos	10
Viewing Photos and Videos	12
Basic Phone Settings	13

Your Phone


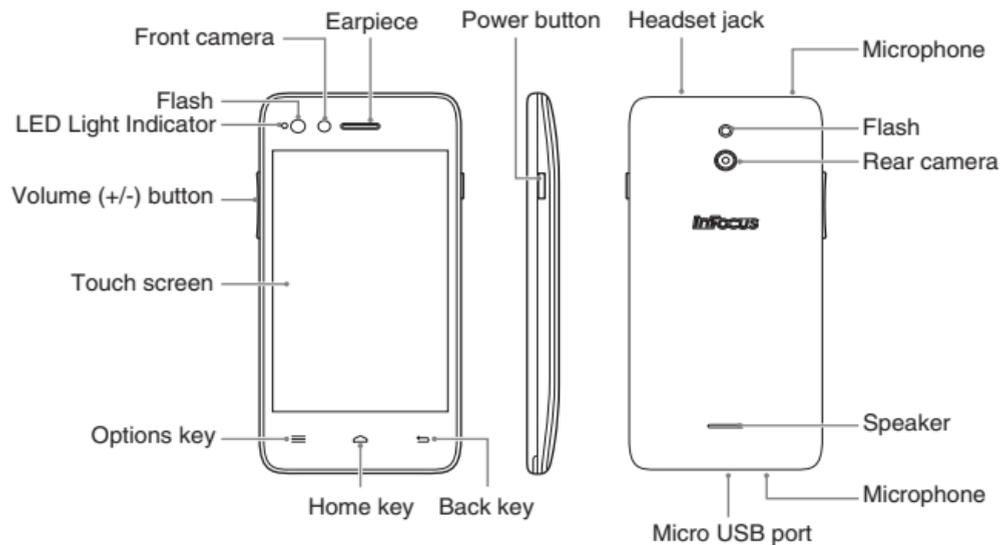


Installing SIM Card(s) and Memory Card



1. Place your phone face down on a flat surface.
2. Locate the small gap on the lower left corner of the back cover, gently pull up to release the latches and slowly remove the cover.
3. Insert the SIM card(s) into the slot(s) as illustrated.

NOTE:

- To remove the SIM card, push the SIM card firmly into the slot first to eject it, then pull it out.

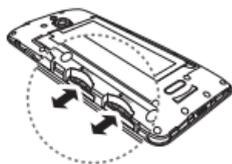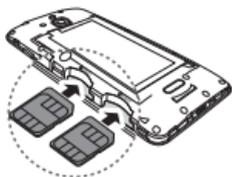

- When using the card adapter (Nano SIM -> Micro SIM), do not use excessive force to remove the SIM card as this can damage the card.
 - The SIM1 supports 3G data network. However, the SIM2 only supports voice call.
4. Insert the memory card into the slot with gold connectors facing up.
 5. Replace the back cover and press along the edges until the latches are fully sealed.

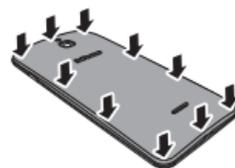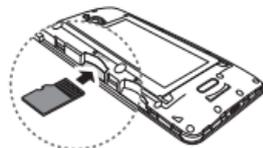

Charging the Battery

Before using the phone, it is recommended to fully charge the battery first.

1. Connect the smaller end of the USB cable to the USB port of the device.
2. Connect the other end of the cable to the USB charger or other USB port with power source (for example, laptop).
3. Plug the AC adapter to a wall outlet to start charging.



Warning

- Charge only indoors and in dry environments.
- For safety, the overheat protection will be active during charging. If the system temperature reaches above the maximum level, the device will automatically stop charging. The device will only resume charging when normal operating temperature is reached.
- If there is no response after you press the Power button or touching the screen, press and hold the Power button for 8 seconds to force shutdown. If you hold the Power button for 2 seconds more, it will restart.

Initial Start Up

After installing the SIM card(s) and charging the battery, the device is ready to be used.

Home Screen

From the Home screen, you can quickly access common features and view notifications of missed calls, received messages, check battery and connection status.

Swipe your finger to the left or right to access the applications installed on the device.




Making Your First Call

From the Home screen, tap .

To make a call


1. Enter the phone number on the keypad.
2. Tap  to correct any number. Tap and hold  to erase the entire number.
3. Tap  to make a call.
4. To end the call, tap .

NOTE: If you have inserted two SIM cards, select the desired SIM network.

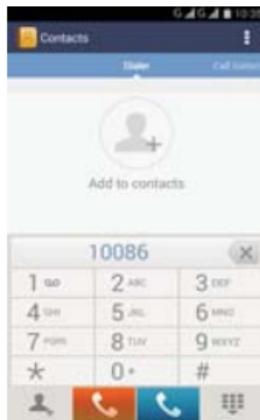

To receive a call

To answer a call, tap  and drag it to the right (.

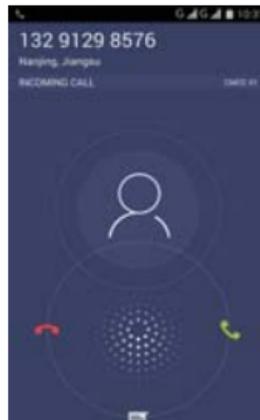


NOTE: When you tap , it automatically changes to .

Contacts


Adding contacts

1. From the Home screen, tap .
2. Tap  to add a contact.
3. Select one of the location to store the contact to.
4. Enter the contact information such as name, phone number, email address, etc.
5. Tap **Done** to save the contact.

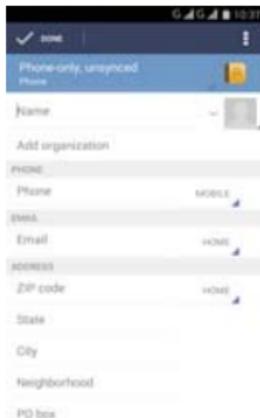

Importing contacts

1. From the Home screen, tap .
2. Tap  > **Import/export**, and choose one of the Import options.
3. Select the contacts location that you want to copy to.
4. Select the contacts to copy and tap **Done**.

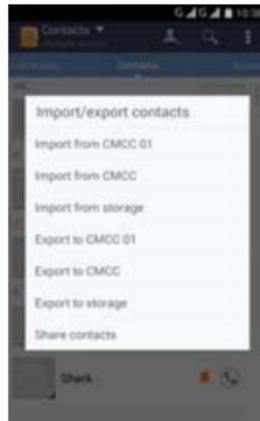


Sending a Text Message

1. From the Home screen, tap .
2. Tap .
NOTE: If you have inserted two SIM cards, select the desired SIM network first before tapping .
3. In the **To** field, enter the recipient's phone number or name.
4. Compose your message.
5. Tap  to send your message.



Setting up WLAN

1. From the Home screen, tap .
2. In **WIRELESS & NETWORKS**, tap **WLAN** and turn it to on.
3. Available networks are listed. Tap a network to connect to or tap  to manually add a connection.
NOTE: Connecting to a secured network will prompt for a password. Enter the password, then tap **Connect**.

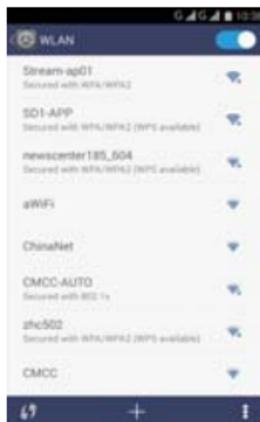

Setting up Email Account

1. From the Home screen, tap .
2. Enter your email address and password. Then tap **Next**.
3. Set the Inbox checking frequency settings and tap **Next**.
4. Enter **Name** and **Account display name**.
5. Tap **Next**. Once the account setup is complete, the device will automatically retrieve your emails.




Sending and Receiving Emails

Composing and sending emails

1. From the Home screen, tap .

NOTE: If you have more than one email account, select an email account that you want to access.

2. Tap .
3. In the **To** field, enter the recipient's email address.
4. Tap **Subject** and type a subject.
5. Compose your email.
6. Tap  to send your email.

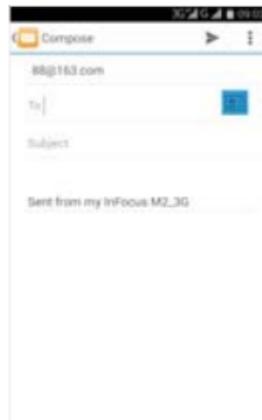

Receiving emails


Emails are automatically received in the Inbox folder when the device connects to a network. To manually retrieve new emails, swipe down to refresh or tap  > **Refresh**.



Using Browser

To open a web page

1. From the Home screen, tap .
2. Tap the address bar.
3. Type the URL then tap **Go**.
4. Tap  to access more functions.

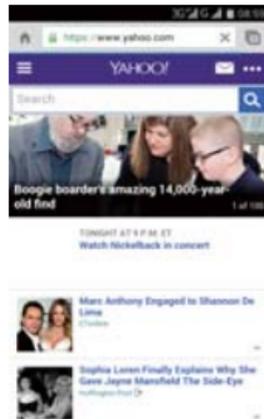

Using Bluetooth

1. From the Home screen, tap .
2. In **WIRELESS & NETWORKS**, tap **Bluetooth** and turn it to on.
3. Available devices are listed. To search for a new device, tap **SEARCH FOR DEVICES**.
4. Tap a detected device.
5. To start pairing, enter the **PIN** then tap **OK**.

NOTE:

- The PIN of the device must be the same PIN on the other bluetooth device.
 - On some devices, tap **Pair** to start pairing.
6. The paired bluetooth device name is displayed.

Taking Photos and Videos

This device is equipped with rear and front cameras to take photos and videos.

1. From the Home screen, tap .

NOTE: To switch between front and rear cameras, tap .

2. Aim the device at the subject.
 - Pinch the screen to zoom in or out.
 - Tap  to change the flash mode.
3. Tap  to take the shot.




To record a video

1. From the Home screen, tap .
2. Aim the device at the subject.
3. Tap  to start recording.
4. Tap  to stop recording.



To take a panorama shot

1. From the Home screen, tap .
2. Tap  and select **Panorama**.
3. Aim the device at the subject.
4. Tap  to take the shot.
5. Move the device slowly toward the direction shown on the screen.

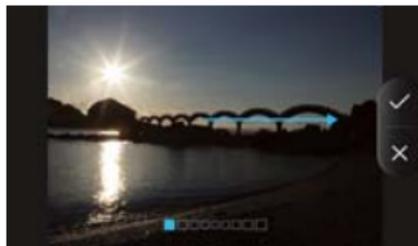

6. When the shooting guide reaches the end point, the shooting ends. You can also manually stop recording by tapping .

Viewing Photos and Videos

1. From the Home screen, tap .
 2. Tap a folder to view the recorded files in thumbnails.
 3. Tap an image or a video to view in full screen.
4. Swipe your finger to the left/right to view the previous/next file.
 - To delete the photo, tap  and then tap **OK**.
 - To play the video, tap .
 - To upload the file to the cloud storage, tap  and tap **login** to access to your account.
 - To play the slideshow, edit an image, share the photo, or show more options, tap .



Basic Phone Settings

Adjusting the volume

There are two ways to adjust the volume:

- Press the volume (+/-) button repeatedly to adjust the volume.
- Press the volume button once. Drag the volume slider to adjust the volume.



Setting an alarm

1. From the Home screen, select **Tools** folder and tap .
2. Tap .
3. To add an alarm, tap .
4. To set the time, slide the pointer, and tap **Done**.
5. To set repeat mode, check **REPEAT** and select the desired week days.
6. To set the ringtone, tap , and select the alarm sound.
7. To vibrate when the alarm sounds, check **VIBRATE**.
8. To enter an alarm label, tap **Label** and tap **OK**.

NOTE: By default the alarm is set on.

Important Safety Information

Please read before proceeding

- DO NOT place objects on top of the device, as they may scratch the screen.
- DO NOT drop your device or subject it to severe impacts. Bending the body and pushing the display or keys with extreme force could damage the device.
- DO NOT use a pen or any sharp object to tap the screen.
- DO NOT expose the device to dirty or dusty environments.
- DO NOT place the device on an uneven or unstable surface.
- DO NOT insert any foreign objects into the device.
- DO NOT expose the device to strong magnetic or electrical field.
- DO NOT use or store this equipment in a place where it will be exposed to high temperatures, such as near an open flame or heat-emitting equipment.
- DO NOT use it or store it where fluids such as water can splash onto it. Raindrops, water spray, juice, coffee, steam, or other types of liquids will also cause malfunctions.
- Using this device for long periods of time may cause the device to get warm. If you feel the device is too warm, avoid sustained contact with exposed skin otherwise this might cause discomfort, or eventually a burn.
- Refer to the rating label on the device and be sure that the power adapter complies with the rating. Only use accessories specified by the manufacturer.
- Disconnect the device from an electrical outlet and power off before cleaning the device.
- NEVER attempt to connect or disconnect the power adapter with wet hands.
- Clean the touch screen with a soft cloth. If needed, dampen the cloth slightly before cleaning. Never use abrasives or cleaning solutions.
- DO NOT disassemble the device. Only a certified service technician should perform repair.
- Please check with your Local Authority or retailer for proper disposal of electronic products.
- For USB connection, users must use a USB 2.0 (or higher version) cable.
- Please make sure the temperature for adapter will not be higher than 50°C.
- DO NOT STORE YOUR PHONE IN TEMPERATURES HIGHER THAN 50°C.
- The operating temperature for this device is from 0°C to 40°C.
- The adapter shall be installed near the equipment and shall be easily accessible.

- The temperature of the device might increase while the CPU is busy handling resource consuming activities such as high resolution video decoding. The SW protection mechanism will ensure stop charging whenever the temperature is over the predefined threshold and prepare for shut down if necessary. Please worry not.

Safety Precautions for Battery Use

- Keep the battery dry and away from any liquid since this may cause a short circuit.
- Keep the battery away from metal objects since this may cause a short circuit.
- Do not use damaged or deformed batteries.
- If the battery emits a foul odor, discontinue use.
- Keep the battery away from babies and small children.
- If the battery leaks:
 - Do not allow the leaking fluid to come in contact with your skin, eyes or clothing. If already in contact, rinse with clean water immediately and seek medical advice.
 - Keep the battery away from fire since this may cause the battery to explode.
- Do not attempt to open or service the battery yourself.
- Do not dispose battery in fire or water.
- Recycle or dispose used batteries according to the local regulations.



Road and Environmental Safety

- Turn off the phone in areas with a potentially explosive atmosphere or where flammable objects exist such as gas stations, fuel depots, and chemical plants among others. Sparks from these areas could cause explosion or fire and result in injury or even death.
- Do not use hand-held phones while driving a vehicle. Use hands-free devices as an alternative.

Safety in Aircraft

Do not use the phone on board an aircraft. The phone's network signals may cause interference to the navigation system. As a safety measurement, it is against the law in most countries to use the phone on board an aircraft.

Copyright Information

Copyright © InFocus Corporation, 2014. All rights reserved.

This product has an Android™ platform based on Linux, which can be expanded by a variety of JME-based application SW.

Android · Google · Google Play · Chrome · Gmail and other marks are trademarks of Google Inc.

microSD™ is a trademark of SD Card Association.

Bluetooth and the Bluetooth logo are trademarks owned by Bluetooth SIG, Inc. 

All products use in this device and trademarks mentioned herein are trademarks or registered trademarks of their respective owners.

Intellectual Property Right Information

Right to all technologies and products that comprise this device are the property of their respective owners:

This product has an Android platform based on Linux, which can be expanded by a variety of Java-Script-based application SW.

Compliance Information

SAR Information

THIS MOBILE DEVICE MEETS GUIDELINES FOR EXPOSURE TO RADIO WAVES. Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 1.6 W/kg averaged over 1 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station. The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 1.356 W/kg and at the body is 1.516 W/kg (The measure distance of 1.5 cm). Use of device accessories and enhancements may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band.

WEEE Notice

The WEEE logo on the product or on its box indicates that this product must not be disposed of or dumped with your other household waste. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste. Isolated collection and proper recovery of your electronic and electrical waste equipment at the time of disposal will allow us to help conserve natural resources. Moreover, proper recycling of the electronic and electrical waste equipment will ensure safety of human health and environment. For more information about electronic and electrical waste equipment disposal, recovery, and collection points, please contact your local city center, household waste disposal service, shop from where you purchased the equipment, or manufacturer of the equipment.

RoHS Compliance

This product is in compliance with Directive 2002/95/EC of the European Parliament and of the Council of 27 January 2003, on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS) and its amendments.

European Union Regulatory Conformance

The equipment complies with the RF Exposure Requirement 1999/519/EC, Council Recommendation of 12 July 1999 on the limitation of exposure of the general public to electromagnetic fields (0–300 GHz). This equipment meets the following conformance standards: EN50360, EN62209-1/-2, EN62311, EN62479, EN60950-1, EN50332-1/-2, EN301489-1/-3/-7/-17/-24, EN55022, EN55024, EN61000-3-2/-3-3, EN301511, EN301908-1/2/-13, EN300328, EN301893, EN300440-1/2, EN302291-1-2, EN55013, EN55020, EN50581, EN50566.

For the device which tests accordance to EN60950-1:2006, it is mandatory to perform audio tests for EN50332.

This device have been tested to comply with the Sound Pressure Level requirement laid down in the applicable EN 50332-1 and/or EN 50332-2 standards. Permanent hearing loss may occur if earphones or headphones are used at high volume for prolonged periods of time.

Prevention of Hearing Loss

Warning statement requirement under EN 60950-1:A12.



To prevent hearing damage, do not listen at high volume levels for long periods.

Note: For France, headphones/earphones for this device are compliant with the sound pressure level requirement laid down in the applicable EN50332-1:2000 and/or EN50332-2:2003 standard as required by French Article L.5232-1.



A pleine puissance, l'écoute prolongée du baladeur peut endommager l'oreille de l'utilisateur.

The conformity assessment procedure has been followed with the involvement of the following Notified Body:

Cetecom TESTLAB
Identification mark: CE0700
(Notified Body) CE

CE 0700

Changes or modifications to this product not authorized by the manufacturer could void the EMC compliance and negate your authority to operate the product. This product has demonstrated EMC compliance under conditions that included the use of compliant peripheral devices and shielded cables between system components. It is important that you use compliant peripheral devices and shielded cables between system components to reduce the possibility of causing interference to radios, televisions, and other electronic devices.

We, hereby, declare that this Smartphone is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

This equipment may be operated in:

AT	BE	BG	CH	CY	CZ	DE	DK
EE	ES	FI	FR	GB	GR	HU	IE
IT	IS	LI	LT	LU	LV	MT	NL
NO	PL	PT	RO	SE	SI	SK	TR

This device is restricted to indoor use only when operating in the 5150 to 5350 MHz frequency range.

DFS controls related to radar detection shall not be accessible to the user.

Warranty Statement

Limited warranty

InFocus provides "Product Warranty Statement", at the time of its original purchase, from the InFocus or its authorized distributor, describing the product warranty service.

Notes: InFocus does not provide global cross border warranty.

This limited warranty (free of defects in materials and workmanship causing malfunction and defective) shall last for twelve (12) months for the device and six (6) months for the battery from the purchase date. Other than battery, the in-box accessories, including cosmetic parts, button, cables, earphone, AC ... etc. if applied; six (6) month open-box functional failure warranty is provided. The customer shall present the PROOF OF PURCHASE upon claiming the warranty.

Throughout the warranty period InFocus or its authorized agent will, at own discretion and subject to section Non-Warranty below repair or replace a defective product. All replaced defective parts or components will become the property of InFocus after returning the repaired/replaced product in good working condition. This repair on the same symptom, one (1) month repair warranty is provided.

Non-Warranty

No warranty may be asserted or claimed if (1) the product serial number, date code, IMEI, water indicator or the warranty seal has been removed, erased, defaced or altered; or (2) the defect is found to be caused by:

- (1) By engineering judgement, the product is mishandled/misused carelessly or accidentally. Unauthorized disassembling or repair, repair by use if unauthorized spare parts, or other actions beyond the reasonable control of InFocus.
- (2) Improper shipping and packing.
- (3) Forces of nature of willful misconduct.

(4) Rough handling, exposure to moisture, dampness or extreme thermal or environmental conditions or a rapid change in such conditions, corrosion, oxidation, unauthorized modifications or connections.

(5) Deterioration of the product due to normal wear and tear. Products installed or integrated with software or applications which are not made or authorized by InFocus.

Be sure to back up data and remove any confidential, proprietary or personal information from the product when asking service. InFocus is not responsible for the damage to or loss of any programs, data, or removable storage media inside or sent with the products. As to Non-warranty product, InFocus will check if a repair is economical/ available and provide a chargeable service to customer's consideration.

IN NO EVENT SHALL InFocus BE LIABLE UNDER THIS LIMITED WARRANTY FOR LOSS OF PROFIT. LOSS OF ANTICIPATED SAVINGS, LOSS OF DATA OR INDIRECT LOSS, LOSS OF THE PRODUCT OR ANY ASSOCIATED EQUIPMENT, INCIDENTAL OR CONSEQUENTIAL LOSSES OR DAMAGES OF ANY NATURE WHATSOEVER TO THE FULLEST EXTENT THAT THOSE LOSSES OR DAMAGES CAN BE DISCLAIMED BY LAW.







7810550016401