

**LAVA MOBILE  
PHONE  
Flair Z1  
User Manual**

© 2010. All rights are reserved. No part of this document may be reproduced without permission.

While all efforts have been made to ensure the accuracy of all the contents in this manual, we assume no liability for errors or omissions or statements of any kind in this manual, whether such errors or omissions or statements resulting from negligence, accidents, or any other cause. The contents of this manual are subject to change without notice.

Protect our environment! We strive to produce products in compliance with global environmental standards. Please consult your local authorities for proper disposal.

**Note:** User Manual is just to guide the user about the functionality of the phone. It is not a certificate of technology. Some functions may vary due to modifications and upgrade of software, or due to printing mistake.

# Index

<b>WELCOME</b>	<b>3</b>
<b>FOR YOUR SAFETY</b>	<b>4</b>
<b>1 .INTRODUCTION</b>	<b>5</b>
1.1 PHONE DISPLAY	5
<b>2 .GETTING STARTED</b>	<b>6</b>
2.1 INSERTING THE SIM CARD AND THE BATTERY	6
2.2 INSERTING A SD (EXTERNAL MEMORY) CARD IMAGE	7
2.3 SWITCH ON/OFF	7
2.4 UNLOCK SIM CARD	8
2.5 CONNECTION TO NETWORK	8
<b>3 .BASIC FUNCTIONS</b>	<b>9</b>
3.1 MAKE CALLS	9
3.2 MAKE DOMESTIC CALLS	9
3.3 CALL EXTENSION PHONE	9
3.4 MAKE INTERNATIONAL CALLS	9
3.5 MAKE LISTED CALLS	10
3.6 EMERGENCY CALLS	10
3.7 ANSWER CALLS	10
3.8 CONNECTION OPTION	10
<b>4 .MENU FUNCTIONS</b>	<b>12</b>
4.1 BROWSER	12
4.2 CALCULATOR	12
4.3 CALENDAR	12
4.4 CAMERA	12
4.5 CLOCK	12
4.6 CONTACTS	12
4.7 DOWNLOADS	13
4.8 EMAIL	13
4.9 FILE EXPLORER	13
4.10 FLASHLIGHT	13
4.11 FM RADIO	13
4.12 GALLERY	13
4.13 GMAIL	13
4.14 GOOGLE	13
4.15 GOOGLE+	13
4.16 MAPS	14
4.17 MESSAGES	14
4.18 MUSIC	14
4.19 PHONE	14
4.20 PLAY STORE	14
4.21 SETTINGS	14
4.22 SIM TOOLKIT	19
4.23 SOUND RECORDER	20
4.24 VIDEO PLAYER	20

<u>Lava</u>	
4.25 VOICE SEARCH .....	20
4.26 YOUTUBE.....	20
5.0INPUT .....	20
<b>FREQUENTLY ASKEDQUESTIONS AND TROUBLESHOOTING .....</b>	<b>21</b>
<b>SAFETY INFORMATION AND NOTICES .....</b>	<b>23</b>

## **Welcome**

Congratulations on your purchase of the LAVA mobile phone. Your phone provides many functions which are practical for daily use, such as a hands-free loudspeaker, camera, MP3 player, internet and much more.

You can read the manual to understand how to use Flair Z1 Mobile phone and experience the well-established functions and simple operation method. Please use the original accessory in order to achieve the best use of effects. Use of non-original components may lead to damage caused to the machinery, in which case Lava shall not be responsible. Lava Warranty Certificate enclosed at the end.

## **LAVA support and contact Information**

Check [www.lavamobiles.com](http://www.lavamobiles.com) web site for additional information, downloads, and services related to your LAVA product.

To check for the nearest LAVA service center location for Maintenance services, you can visit below link.

<http://www.lavamobiles.com/support>

**Customer Care number**

**No: 1860 200 7500**

**Available from Monday to Sunday, between 10.00AM to 7.00PM**

 
**For your safety**

Read these simple guideline. Avoiding them may be dangerous or illegal. Read the complete usermanual for further information.

	Do not switch your phone on when the use of wireless devices is prohibited or when the wireless device may cause interference or danger.
	Do not use your phone while driving.
	Follow relevant rules or regulations in hospitals and health care facilities. Switch your phone off near medical devices.
	Switch your phone off in an aircraft. The radio signal from it may cause interference in signals of the aircraft.
	Switch your phone off near high-precision electronic devices. It may affect the performance of these devices.
	Do not attempt to disassemble your phone or its accessories. Only qualified personnel may service or repair the phone.
	Do not place your phone and its accessories in containers with strong electromagnetic field.
	Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them.
	Do not put your phone in a high-temperature place or use it in a place with flammable gas such as a petrol pumps.
	Keep your phone and its accessories away from children. Do not allow children to use your phone without guidance.
	Respect others' privacy and legal rights when using your phone.

# 1.Introduction

## 1.1 Phone Display

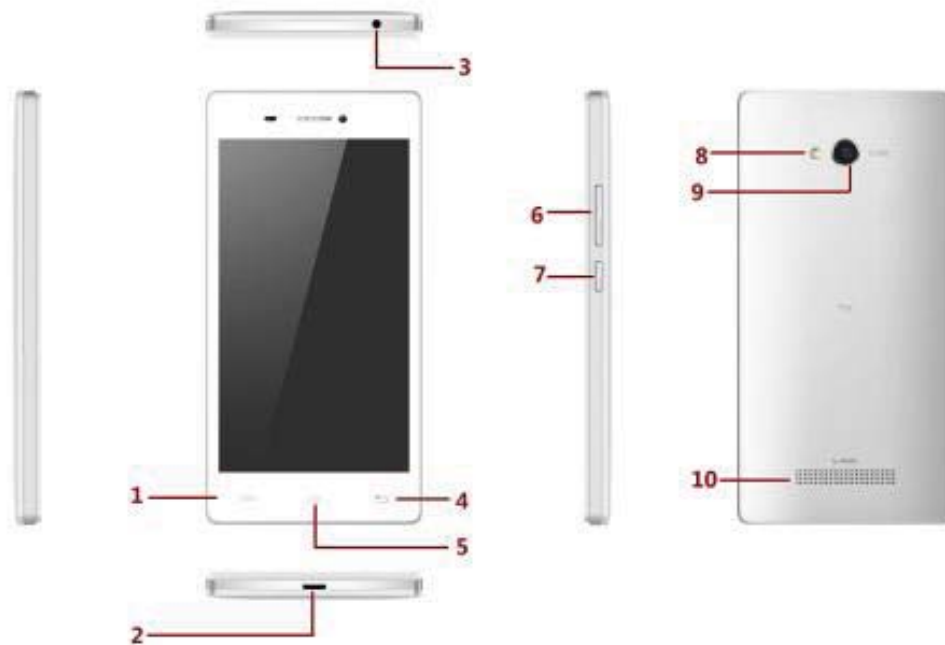

### Key

No	Key Description	No	Key Description
1	Menu key	2	USB jack
3	Earphone jack	4	Back key
5	Home key	6	Volume +/- key
7	Power on/off key	8	Flashlight
9	Back Camera	10	Loudspeaker

#### ➤ Home Key

Press Home key at a non- standby screen to go back to IDLE screen

Long Press to open recently used applications.

#### ➤ Volume +/- Key

Press Volume Up/Down key to change the volume.

#### ➤ Menu Key

Press Menu key to open a context menu related with current screen or Application.

#### ➤ Back Key

Press Back key to open the previous screen you were working on.

## 2. Getting Started

Please read the safety instructions in the "Safety Information and Notices" section before use.

### 2.1 Inserting the SIM Card and the battery

 
#### Remove the back cover

Make sure that the phone is switched off. You need to remove the back cover of your phone before you can insert the SIM card. Hold the phone with the front facing downwards; pull the battery cover downwards and lift the cover upwards to remove it.



#### Insert the MicroSIM card

Make sure that the clipped corner of the MicroSIM card is facing the correct direction and the metallic contacts are facing downwards. Slide the SIM card into the card slot until it stops.

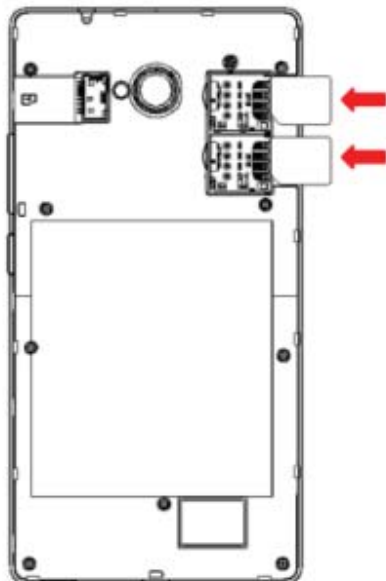



## Lava

 
Install the back cover

Align and hook the back cover to the top of the battery slot and then push the cover upwards until it locks into place.



## **2.2 Inserting a SD (External Memory) Card Image**

With the metal contacts facing down, gently slide the SD card into the slot.

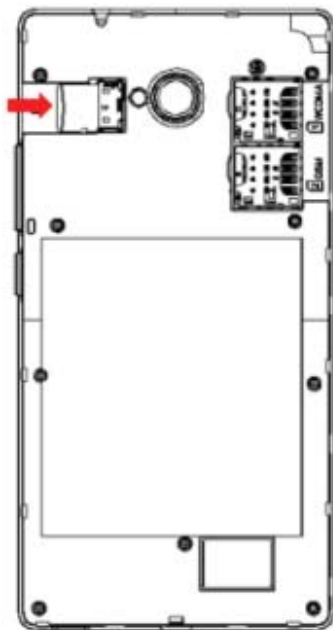

## **2.3 Switch ON/OFF**

long press the power key to switch on/off the phone.

After inserting the SIM card, the screen will show the notes in the following order when the phone is switched on:

Type in PIN— if you have already set the SIM code.

Search— The handset will be searching for proper network connection.

## 2.4 Unlock SIM Card

To avoid illegal use, the SIM card is enciphered with PIN (personal identification number) as a protection. When this function is ON and you have already set a PIN code, you need to type in PIN code every time, the handset is switched on in order to unlock SIM card and use the handset.

You can turn off the SIM PIN code. Yet in this situation, the SIM card can't prevent illegal use.

Input PIN code, press arrowhead icon to erase typing error and press OK to end typing. For example, if the PIN code is set as 1234, then type "1234" then press OK.

The SIM card will be locked if you type in wrong code for three times continuously. The handset will inform you to type in PUK code.

Attention: Your network provider will set a standard PIN code (four to eight numbers) for your SIM card. It is recommended that you change the code into a personal code as soon as possible.

## 2.5 Connection to Network

When the SIM card is successfully unlocked, the handset will automatically search for available network (the lock screen shows searching). The handset will show the information of the network provider, the status bar will show the signal strength and the network condition once the handset is successfully connected to a network.



Note: If the lock screen shows "Emergency", it means that you're out of network coverage (service coverage) or your card is not valid, yet you can still have emergency calls based on signal strength.

**Note:** "your battery is non removable, Please don't try to remove your battery".

**Charging the battery:** plug in the charger connector at the bottom of your phone (USB interface) and then plug the other end into an AC power socket. The battery symbol indicates the charging status. While charging, the charge indicators will scroll. When all the scroll bars are steady, the battery is fully charged disconnect the charger from the AC power socket.



Note: If the battery is powerless, the battery icon will reappear after a few minutes of charging.

## **3.Basic Functions**

### **3.1 Make calls**

When the network provider icon appears on the standby screen, you can call out or answer calls. The indicator on the upper right part shall show the signal strength.

Quality of connection will be greatly influenced by obstructions. So movement in a small range may effectively improve the quality of connection.

### **3.2 Make Domestic Calls**

Use virtual keyboard to enter phone numbers and then press Dial icon to call. If you need to change the phone number, please press the delete key on the touch screen to delete. When the call is answered, the screen shall show the connection status.

### **3.3 Call Extension Phone**

Some of the extension phones can't be directly connected. Use the virtual keyboard, enter switchboard number, open the option menu and choose " Add 2-sec pause", and then dial the extension phone number.

Type in as follows to call extension phone:

Zone description > switchboard number > Add 2-sec pause> extension phone number › call

### **3.4 Make International Calls**

If you need to make an international call, long press on the 0 key on the virtual keyboard until there appears the sign "+" for international call prefix, which helps you call from any country even if you don't know the international call prefix of that country.

You can make an international call according to the following typing order: +› country code › complete phone number › dialing icon (type in the prefix code, and then continue to enter the country code and complete phone number). Country code usually follows conventional practice: German is +49, Britain + 44, Sweden +46 and so on.

### 3.5 Make Listed Calls

Every dialed and received phone number is recorded in the call history list. Recently dialed, answered and missed phone numbers are chronologically (newest to oldest) listed in the "ALL" log. You can also choose and check missed, answered and dialed list according to your need.

Listed phone numbers can be called out by pressing the respective log.

Press the small icon on the right side to enter the details interface of the log. In the call history interface, users can do a long press to save or delete the number. In the details interface, the phone number save function is preset.

### 3.6 Emergency Calls

You can call for emergency service as long as you are in the network coverage (check the signal strength indication bar on the upper right side of the handset screen). If your network provider doesn't provide roaming service in this area, there will be "Emergency Calls " on the lock screen. If you are in the network coverage, you can have emergency calls even without a SIM card.

### 3.7 Answer Calls

Drag the middle icon to right side to answer an incoming call. If your headphone is connected to the handset, you can use the headphone key on the headphone answer calls.

**Attention:** A short press of the headphone key will answer the call while a long one will refused to answer the phone.

### 3.8 Connection Option

This option can only be seen during a call. The waiting call, hold call, multi-party call functions require the support of the network. Please contact with the network provider.

In the connection option, you can do the following operations:

**Dialpad:**Enter the dialing screen of the current call.

**Speaker:**Switching hands-free and handheld.

**Mute:**Turn on/off Mute. When the mute is ON, the other person can't hear this handset's sound.

**Hold:**Temporarily hold the current one-line call.

## Lava

**Start recording:**Record the current call.

**Add Call:**Enter the dialing screen for a new call.

**End:**End the current call.

**Conference\*:**Conference call facilitates you to connect more than two people.



Note: Menu items marked by \* happen only under certain situations. Users need to apply for opening the conference call functions to relevant service provider.

## 4.Menu Functions

### 4.1 Browser

Your mobile phone comes with a browser. You can use Browser to access and browse the Internet. Open the browser options menu and perform one of the operations, press Menu key then tap it.

### 4.2 Calculator

The handset is provided with a calculator with basic functions. Use the calculator to solve simple arithmetic problems or use its advanced operators to solve more complex equations.

1. Touch Calculator to open the application.
2. Switching to the Advanced panel On the Calculator screen, flick the screen to the right or left to switch between Advanced panel and Basic panel.

**Attention:** the accuracy is limited and round-off error may occur.

### 4.3 Calendar

Use Calendar to create and manage events, meetings, and appointments. Depending on your synchronization settings, the calendar on your phone stays in synchronization with your calendar on the web.

Press the touch screen to browse date and the calendar information on the screen shall be correspondingly updated.

### 4.4 Camera

Under viewing condition, press the bottom icons to do the corresponding operations. Press the Capture icon to capture a picture. Press the Record icon to record video. The Thumbnail icon shows the currently captured picture or video.

### 4.5 Clock

Enter the clock menu and touch the alarm icon to enter the alarm list interface. You can adding a new alarm. And the count down and stopwatch function can be used.

### 4.6 Contacts

Entering the Contacts, you can check all the contacts, search for contacts or add new contact. New contact means a newly added phone number that is recorded in the SIM card or the handset.

You can also check contact group.

## **4.7 Downloads**

You can check the downloaded or being-downloaded contents.

## **4.8 Email**

When using the Email application for the first time, you must configure your email account. The Email setup wizard helps you set up your account for many popular email systems.

Using the Email, you can send or receive emails from other email accounts.

## **4.9 File Explorer**

You can manage files, including music, videos, documents and other formats files. Enter the file manager, you can select external or internal SD card, and touch the icons of the lower screen to do some operations.

## **4.10 Flashlight**

Tap the icon to turn on/off the flashlight.

## **4.11 FM Radio**

FM Radio lets you listen to FM radio stations on your mobile phone. Since FM Radio uses the provided wired stereo headset as the antenna, connect the headset first to the audio jack of your phone before you open the application.

## **4.12 Gallery**

In the gallery interface, there are different folders. Select a folder and press to enter it. Press image or video to view pictures or videos.

When viewing the picture, if you touch the screen, you will see the share icon. Touch "share icon" to send the file through Bluetooth or via a messages. Touch the Delete icon to delete the picture.

## **4.13 Gmail**

Gmail also known as Google Mail is a free email service with innovative features like "conversation view" email threads, search-oriented.

## **4.14 Google**

Google is a web search engine owned by Google Inc. you can search the world's information, including webpages, images, videos and more.

## **4.15 Google+**

Google Plus is a (SNS) social networking site, you can sign in through your Gmail account

#### **4.16 Maps**

The phone provide maps service for your travel.

#### **4.17 Messages**

##### **Compose new message**

Press edit new message to get a new text message:

1. Click the edit frame, type in after a virtual keyboard pops out.
2. Press the number frame and enter number, or press add contact icon and select stored contact number from Contacts.
3. Input contents into the typing frame on the touch screen.
4. Touch the add attachment icon of lower left screen to add files.
5. Press menu key to Add subject, Discard and so on.
6. After editing, press send icon to send the text.

##### **Message Settings**

Include SMS Enabled, Font Size Setting, Storage, SMS forwarding settings and so on.

#### **4.18 Music**

Use the Music player to play music files. The songs saved in your SD Card can be played using the Music Player of the device.

The songs are categorized by Artists, Albums and Songs. You can make your favorite playlist by long pressing on a song and selecting Add to playlist. While listening to the music, you can choose among the various sound effects.

#### **4.19 Phone**

Press the keyboard, enter the phone number, and press Dial icon.

#### **4.20 Play Store**

Play Store is dedicated to establish the latest, fastest and most comprehensive third-party application store that makes Android system simpler. You can pick software and games to your taste from more than 10,000 applications anywhere and anytime.

#### **4.21 Settings**

**Wi-Fi**



## Lava

To use Wi-Fi on your mobile phone, you need to have an access to wireless access points (hotspots). Obstacles that block the Wi-Fi signal will reduce its strength.

### **Bluetooth**

If you are using Bluetooth, remember to stay within 10 meters (33 feet) of other Bluetooth devices. Be aware that obstacles like walls or other electronic equipment may interfere with your Bluetooth connection.

1. Touching your Bluetooth device name lets others to find your Device
2. Touch SEARCH FOR DEVICES to scan and to search devices
3. Touch other device name to Pair with that device.
4. Press the menu key to do other operations Such as to Rename phone, Visibility timeout, Show received files and Advanced settings.

### **SIM card management**

The contents in this menu will differ according to different network providers.

### **Data usage**

You can view the data usage conditions including SIM card and wifi.

### **More**

In this menu, it is including Airplane mode, Default SMS app, Tethering & portable hotspot, VPN, Mobile networks.

### **Display**

You can Change the settings of Brightness level, Wallpaper and so on.

### **Audio profiles**

Include General, Silent, Meeting and Outdoor. You can also add custom profiles.

### **Prompt&notification**

Include Prompt, Notification. you can do the relevant settings.

### **Storage**

Include the SD card storage, available storage, insert SD card (If a SD card has already been inserted, then this option will become "Unmount SD card "), Erase SD card and all available storage in the internal storage space.

### **Battery**

**“Kindly note that your Battery is non-removable”**

- **Please Don't try to remove your battery.**

You can view your available Battery percentage.

### **Apps**

Include the management of applications, to view and manage the applications of downloaded, running and all.

### **Location**

Locate your position through tools like wireless network and GPS satellite.

### **Security**

Change the settings of Screen security, Encryption, SIM card lock, Password and so on.

#### **Screen lock:**

1. **Pattern:** unlock the screen through designed pattern.  
Draw a private pattern to unlock the screen so as to avoid unauthorized use of the handset.
2. **Smart Lock:** To use this feature first enable the pattern lock. then Once that's done, you'll notice a small face icon at the bottom of the lock screen. That lets you know it's looking for your face. If it sees you, the lock screen automatically switches to the simple swipe version. If not, the device will ask for your PIN or pattern normally when you swipe up.
3. **PIN:** Type in PIN numbers to unlock the screen.
4. **Password:** Type in code to unlock the screen.

### **Accounts**

The type of account include Corporate, Facebook, Google and so on.

### **Language & input**

Include language settings, keyboard & input method and so on.

### **Backup & reset**

If you reset your phone to the settings that were configured at the factory, all of your personal data from internal phone storage, including information about your Google Account, any other accounts, your system and application settings, and any downloaded applications will be erased. Resetting the phone does not erase any system software updates you've downloaded or any files on your SD card, such as music or photos.

### Scheduled power ON/OFF

You can set the time for ON/OFF, which include setting time and repeated date.

### Date & time

Include Automatic date & time, Automatic time zone, Set date, Set time, Select time zone.

### Accessibility

Power button ends call: press power button to end calls.

### ❖ Air Shuffle:

This is the amazing feature in your device and to enjoy this feature you only need to wave your hand in front of proximity sensor (on the top) left side of your receiver .

**Air Shuffle**

Music

Disable Air-Shuffle for Music

☐

FM Radio

Disable Air-Shuffle for FM Radio

☐

Image

Disable Air-Shuffle for Image

☐

Camera

Disable Air-Shuffle for Camera

☐

Launcher

Disable Air-Shuffle for launcher

☐

## **Guideline to use Airshuffle:**

### **Example**

#### **1.Music:**

##### **Steps**

1. Enable air shuffle for music
  - 2.Go to Music player and play any song
  - 3.Now wave your hand infront of proximity sensor on the top side of your device
  - 4.Now your music track will change automatically.
- Similarly You can change theFM channel and to view images in gallary

#### **2.Camera:**

##### **Steps**

- 1.Enable air shuffle for camera.
- 2.Open your camera.
- 3.Now wave your hand infront of proximity sensor on the top side of your device
- 4.now your image will get captured automatically.

### **Magic Gesture**

Magic Touch is basically function based upon touch panel gesture.

In Magic Touch you have to perform the specific gesture on the touch screen and the associated task will open.

 
 
you can choose a different gestures to trigger the corresponding function.

#### **Example:**

**If you want to open camera then please follow the below Steps**

- 1.Open Settings
- 2.Go to Magic gesture
- 3.Check all the boxes-> Open Gesture Controller
- 4.Select "C" gesture for Camera
- 5.Now lock your phone
6. after screen lock make C gesture on the black screen
- 7.Now You can directly logged into the Camera screen.

## Lava

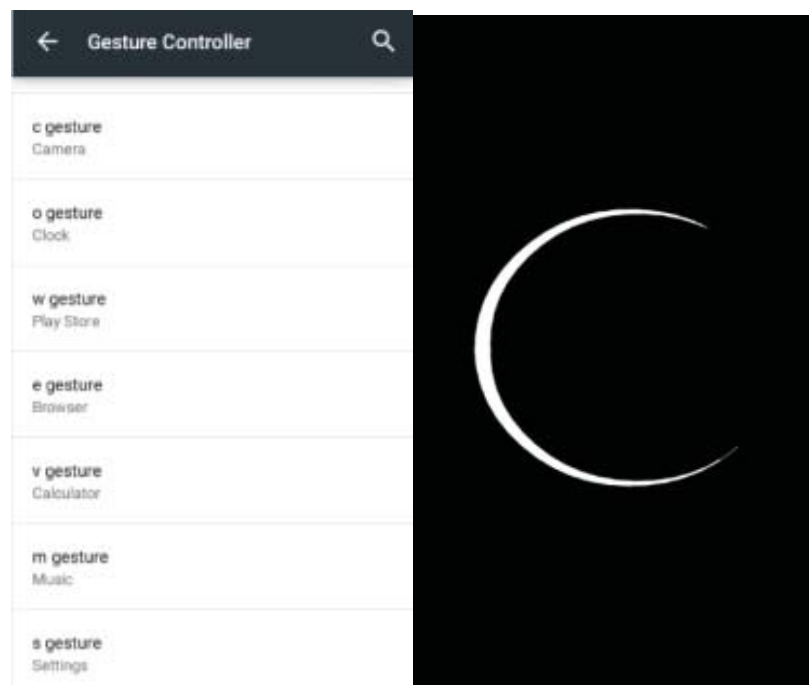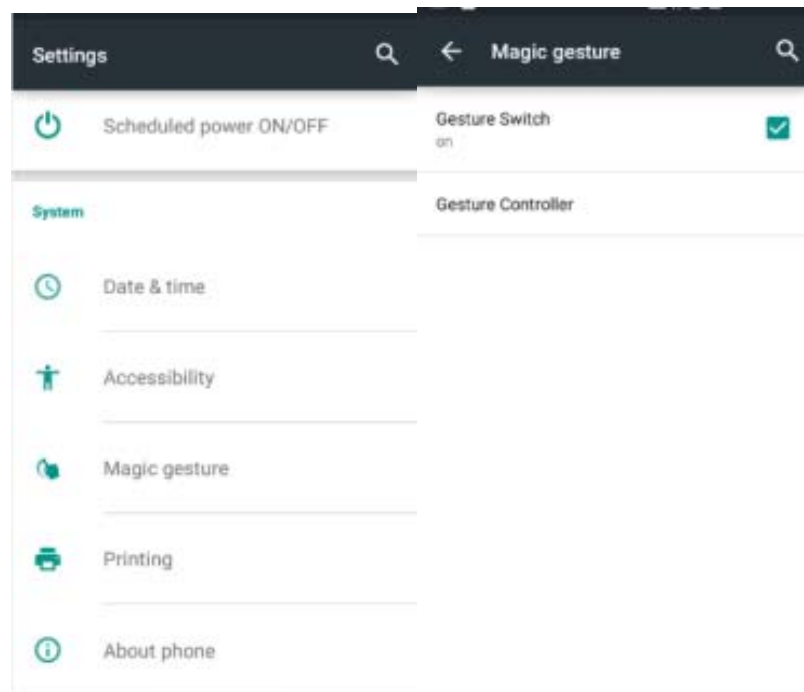

### Printing

Can print files through cloud print.

### About phone

It Includes Software update, Status, Legal information, Model number, Android version, Baseband version, Kernel version and Build number.

## 4.22 SIM Toolkit

The contents in this menu will differ according to different network providers. For detailed information, please look at the phone.

## 4.23 Sound Recorder

Press Recording icon to start recording. In the middle of the screen is a timer. Press Stop Key to stop recording and select "Save" in the popped out "Discard/Save" option to save the record. You can press play key to listen to the record before selecting "Discard/Save".

## 4.24 Video Player

Play video. Enter the video list, scroll the screen to browse and choose the file you want to play.

## 4.25 Voice Search

Search the web and your phone by voice and control your phone with Voice Actions Quickly search your phone, the web, and nearby locations by speaking, instead of typing. Call your contacts, get directions, and control your phone with Voice Actions.

 
## 4.26 YouTube


YouTube is a video-sharing website, it is the leader in online video, and the premier destination to watch and share original videos worldwide through a Web.

# 5.0Input

1.Click the editing frame

Now input option menu will pop out which include upper-case letters, lower-case letters and number mode.

2. Press  to switch freely between English and Number typing.

3. Press , you can switch the input method between ABC and abc.

### Widgets:

In Idle screen, press Menu icon, select WIDGETS. In the widgets list, you can select desired widget to add to idle screen.

## Frequently Asked Questions and Troubleshooting

Frequently Asked Questions	Cause and Solution
Unable to turn on phone	<p>Press the power on key for over 10 second.</p> <p>Check if the battery is properly connected. Please remove and install it again, retry to turn on.</p> <p>Check if battery is appropriately charged</p>
Unable to connect to a network	<p>Weak signal. Please Try and move to a location with strong signal and try connecting to the network again;</p> <p>Please ensure that you are not beyond the network coverage of service providers.</p> <p>Please ensure you have a valid SIM card. Please contact your network provider for further information;</p>
Display information while turning on	<p>Check if the SIM card (insert the SIM card) is installed correctly</p> <p>Handset lock password. If the handset lock is activated, you have to input handset password before using.</p> <p>Input PIN. Inputting PIN while turning on each time is activated, you have to input the PIN code.</p> <p>Input PUK code: Having input wrong PIN code for 3 times straight will lock the SIM card. You need to input the PUK code provided by your network provider.</p>
Poor quality of calling	<p>Please check if the sound volume is tuned improperly</p> <p>In an area with poor receiving condition, example: basement, the signal might be weak. Try reaching a location with stronger signal reception and call again.</p> <p>While using the mobile phone in the peak period of communication, like commute time, you may be unable to call because of line congestion.</p>
Standby duration shortened	<p>The standby duration is relative to the system setting of network. While the mobile phone is in an area with poor signal strength and can not receive the signal, the handset will continuously search for a base station. This will significantly reduce battery charge. It is recommended that</p>

## Lava

	<p>you turn off your mobile in area with no signal reception to save battery.</p> <p>Need replacing the battery. Please change a new battery.</p>
SIM Card Error	<p>Dirt on the metal surface of an SIM card. Use clean cloth to wipe the metal touch point on an SIM card.</p> <p>The SIM card is not installed.</p> <p>The SIM card is damaged. Please contact your network service provider.</p>
Unable to dial call	<p>Please confirm if you have pressed the dial key after dialing.</p> <p>Please confirm if calling is forbidden because of default settings.</p> <p>Please confirm if the SIM is valid.</p> <p>Please confirm if the call barring is set.</p> <p>Please confirm if the fixed dial function is set.</p>
Callers unable to contact you	<p>Please confirm if the mobile phone is on and connected with the network.</p> <p>Please confirm if calling is forbidden because of defaulting.</p> <p>Please confirm if the SIM card is valid.</p> <p>Please confirm if the call barring is set.</p>
Unable to charge handset	<p>Poor contact. Please check if the plug is connected well.</p> <p>Please confirm if the environment temperature is within the range of 0°C ~40°C while charging.</p> <p>The battery or charger is damaged. You need to replace it from service center.</p>
Unable to set some functions	<p>Wrong operation.</p> <p>The network provider does not support the function, or you have not applied for it.</p>

**Note:** If the above instructions doesn't help you then please record:

Mobile phone model and serial number

Specific content of warranty

Clear statement of problems

Then contact your local dealer or a LAVA authorized service center in your area.



## **Safety Information and Notices**

### **Using the Cellular Phone and Charger**

Only use authorised battery and charger. Using other brands may cause battery leakage, overheating, explosion or even fire.

#### **Caution:**

Keep the phone away from dust, water and damp areas. Dust, water or other liquids may cause overheating, electrical leakage, and/or phone failure.

The phone, battery, charger and AC adapter are not waterproof. Keep them away from rain and liquid.

#### **Warning:**

Do not bump, shake or tamper with the phone or charger. This may cause battery leakage, overheating, explosion or even fire.

Do not place the battery, phone or charger near a microwave or high-voltage device. This may cause battery leakage, overheating, explosion or even fire; also prevent the phone and AC adapter from overheating, smoking or short circuiting.

Do not use the phone around volatile oil. This may cause fire, breakdown or damage.

To avoid any damage or breakdown, do not disassemble the phone, battery, charger or internal components by yourself.

### **Using the Cellular Phone**

#### **Warning:**

Do not use the phone while you are driving. Pull over and stop your automobile to dial or listen to a phone call.

Usage of cellular phones in aircrafts or hospitals is prohibited. Switch the phone off to prevent interference with electronic medical devices. Follow any rules or regulations in such places.

Do not use the phone at a gas station, near fuel or near chemicals.

Do not use the phone near electronic medical devices such as hearing aids, pacemakers and auto-control devices such as fire detectors and automatic doors.

If you have to use your cellular phone near an electronic medical device such as a pacemaker, please contact your manufacturer or dealer for information about preventing interference.

#### **Caution:**

Electronic systems in automobiles such as anti-lock brakes, speed control, or fuel spraying systems, are usually not influenced by wireless devices. Manufacturers

## Lava

of these systems will tell you whether they are provided with good screening functions. If you suspect that an automobile failure is caused by a wireless wave, please contact your automobile dealer.

Avoid using your phone in crowded places.

Do not store your cellular phone near or with a credit card, disk or other magnetic materials. This may effect information stored on your phone.

Keep your phone away from pins. Pins can be absorbed by the phone's receiver magnet, which may cause harm.

## **Using the Battery**

### **Your Battery is non removable.**

Keep metal objects away so they do not come in contact with the battery or its connectors as it may cause the battery to short circuit, overheat or explode.

Do not weld the polarities of the battery directly together. This may cause battery leakage, overheating, explosion or even fire.

Battery liquid is severely harmful for your eyes. If battery liquid gets in your eyes, do not rub them. Instead, wash your eyes with water first and then go directly to a doctor for help.

Do not use or store your phone in high temperature areas. This may cause battery leakage, overheating, explosion or even fire.

### **Warning:**

- Your device is powered by a rechargeable battery. When the power is weak, please charge the battery. In order to extend the lifespan of the battery, use all the battery's power before recharging.

- Unplug the charger from the electrical plug and the device when not in use. Do not leave the battery connected to a charger more than a week. Overcharging may shorten its lifespan.

- Extreme temperatures can affect the ability of your battery to charge. Battery needs the fit temperature. If the surrounding temperature is over 40°C, the battery cannot be charged.

- Use the battery only for its intended purpose. Never use any charger or battery that is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.)

Short-circuiting the terminals may damage the battery or the connecting object.

- Leaving the battery in hot or cold places, such as in a closed car in summer or a freezer in winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the

## Lava

battery between 59°F and 77°F (15°C and 25°C). A hot or cold battery may not function temporarily, even when the battery is fully charged.

If battery liquid leaks onto your skin or clothes, immediately wash the affected parts with water.

If the battery begins to leak or emits a strange odor, properly dispose of the battery according to local regulations. Do not throw it into a fire.

### **Caution:**

Do not leave the product or its battery inside a vehicle or in places where the temperature may exceed 60°C (140°F), such as on a car dashboard, window sill, or behind a glass that is exposed to direct sunlight or strong ultraviolet light for extended periods of time. This may damage the product, overheat the battery, or pose a risk to the vehicle.

**Caution: The manufacturer assumes no responsibility for the consequences of the users does not comply with the above suggestions or misuse of the phone.**

## **Using the Charger**

Only use the charger that came with the phone. Using a different charger may cause the phone to breakdown or explode.

If the charger short circuits, a fire may occur.

Do not use a damaged, worn or broken charger. This may cause a fire.

Clean dust away from the power socket to avoid the possibility of a fire.

Do not store the charger near any liquids. If liquids spill onto the charger it may cause it to overheat or breakdown.

If liquid does spill onto the charger, immediately unplug the power cable to prevent overheating, fire or another type of breakdown.

Do not use the charger in places with high humidity like a bathroom. This may cause a fire or other breakdown.

Do not touch the charger, power cable or socket with wet hands. This may cause an electric shock.

### **Caution:**

Keep the environment temperatures within the range of 0°C ~40°C while charging. Temperature below 0°C or higher than 40°C will cause insufficient charging, terminate charging or even cause the battery to explode.

Unplug the charger from its power source before cleaning it.

## Lava

Do not place heavy objects on the power cord. This may cause electric shock or fire.

Hold the plug while unplugging the power cord. This will avoid any potential damage or even fire.

### **Requirements for Cellular Phone**

Avoid using your cellular phone in extremely high or low temperatures. Use the phone in a temperature range between -10~55°C and humidity of 35%~85%.

It is recommended that you do not use your cellular phone near a telephone, TV set, radio or other radio frequency sensitive devices.

### **Requirements for the Battery**

When not in use, store the battery in a cool, well-ventilated place with sunshine.

If you will not be using the cellular phone for an extended period of time, charge the battery on a regular basis to avoid battery breakdown.

The phone battery wears out fast. If charging the battery does not improve its performance, it is time to replace the battery. Properly dispose of the battery according to local regulations. Do not throw it into a fire.

### **Requirements for the Charger and AC Adapter**

Do not charge your phone under the following circumstances: sunshine, temperatures equal to or lower than 0°C, temperatures equal to or higher than 40°C, high humidity, dust, high vibration areas, or near a TV, a radio, etc.

### **Cleaning and Maintenance**

The cellular phone, the battery and the charger are not waterproof. Do not use them in places with high humidity like a bathroom and also avoid spilling any liquids on them.

Use a soft cloth to clean the cellular phone, the battery and the charger.

Do not use alcohol, diluted liquid or benzene to clean the cellular phone.

If dust gets in the sockets the phone can be damaged, short-circuit or even the lose the ability to be re-charged. Be sure to clean the socket regularly.

### **SAR declaration**

The highest SAR value for this mobile phone is < 1.6 W/kg, in accordance with the requirements of the ICNIRP, which recommended the limit for exposure to radio waves is 1.6 watts/kilogram(W/kg) averaged over 1 gram of tissue.

For more information, please visit ([www.lavamobiles.com](http://www.lavamobiles.com)) to query

Safety precautions:

- a. Use a wireless hands-free system ( Headphone, headset) with a low power Bluetooth emitter
- b. Make sure the cell phone has a low SAR
- c. Keep your calls short or send a text message (SMS) instead. This advice applies especially to children, adolescents and pregnant women
- d. Use cell phone when the signal quality is good
- e. People having active medical implants should preferably keep the cell phone at least 15cm away from the implant

## **E-waste Disposal Mechanism**

'E-waste' means waste electrical and electronic equipment (WEEE). In other words E-waste is a popular, informal name for electronic products nearing the end of their "useful life". For more details about e-waste please refer e-waste rules, 2011 [www.moef.nic.in](http://www.moef.nic.in)

Do's and Don'ts for disposal e-waste

### **Do's:**

- a. Ensure that an Authorized Person repairs your Lava products
- b. Call Our Local Authorized Collection Centers to Dispose Lava products
- c. Always drop your used electronic products, batteries or any accessories thereof after the end of their life at nearest Authorized Collection Point or Collection Center.
- d. Separate the packaging material according to responsible waste disposal options and sorting for recycling.
- e. Always remove the battery from the product, when you do not intend to use the product anymore it in future.

### **Don'ts:**

- a. Do not Dismantle your Lava Product on your own
- b. Do not give your e-waste to KabbadiWala / Scrap Dealer/ Rag Pickers.
- c. Do not dispose-off the e-waste in landfills.
- d. Never dump E-waste in garbage bins.
- e. Do not dispose of your product at municipal waste bins or rooms.
- f. Do not throw used batteries into household waste.
- g. Consequences of improper handling and disposal of E-Waste
- h. Improper disposal of waste prevents natural resources from being re-used.
- i. Some waste contains hazardous chemicals and if not disposed of properly may release toxins into the soil and water, and also releases greenhouse gases into the environment

## Lava

- j. If e-waste is not properly disposed of, it can threat to the health and well-being of humans and animals and it also has adverse effect on the environment.
- k. Placing of batteries or devices on or in heating devices, such as microwave, ovens, stoves, or radiators and improper disposal of batteries may lead to explosion.
- l. If the battery terminals are in contact with metal objects, it may cause a fire.

For more details on how to dispose of your Lava products at the end of life, Please refer the list of our Services Centers on Pan India basis on our website [www.lavamobiles.com](http://www.lavamobiles.com) or please view this link for the details of Service Centers

<http://www.lavamobiles.com/support>

## **Troubleshooting**

Check [www.Lavamobiles.com](http://www.Lavamobiles.com) web site for additional information, downloads, and services related to your LAVA product.

To check for the nearest LAVA service center location for maintenance services, you may like to visit

<http://www.lavamobiles.com/support>

**Customer Care number**

**No: 1860 200 7500**

**Available from Monday to Sunday,between  
10.00AM to 7.00PM**

## **LAVA WARRANTY CERTIFICATE**

### **Limited warranty:**

LAVA international Ltd. (LAVA) provides limited warranty for your mobile phone and original accessories delivered with your mobile phone (hereinafter referred to as “product”)

The warranty period for the transceiver is one (1) year and for battery, charger and headset is six (6) months from the date of purchase.

### **LAVA warranty**

Subject to the conditions of this Limited Warranty, LAVA warrants a product to be free from defects in design, material and workmanship at the time of its original purchase by you, and for a subsequent period of one (1) year for transceiver and six (6) months for battery & charger.

You shall have to coverage or benefits under this warranty in the event that any of the following conditions are applicable:

- The product has been subjected to abnormal use or conditions, improper storage, exposure to excessive moisture or dampness, exposure to excessive temperature, unauthorized modification, unauthorized repair (including but not limited to use of unauthorized spare parts in repairs), abuse, accidents, Acts of God, spills of food or liquids, improper installation
- You have not notified Lava of the defect in the product during the applicable warranty period.
- The product serial no. code or the accessories date code has been removed, defaced or altered.
- The product has been used with or connected to an accessory (i) Not supplied by Lava or its affiliates, (ii) Not fit for use with the product or (iii) Used otherwise than in manner intended.
- The seals of the product's battery enclosure have been broken or shown evidence of tempering or the product's battery has been used in equipment other than that for which it has been specified usable by LAVA.
- All plastic surfaces and all other externally exposed part that is scratched or damaged due to normal use.



## Lava

To get maximum of your new product, we recommend you to:

- Read the guidelines for safe and efficient use as mentioned in the manual.
- Read the terms and conditions of your Lava warranty in the manual.
- Keep your original receipt; you will need it for warranty services if asked to produce.
- Present this Lava Warranty Certificate along with original proof of purchase whenever you require any warranty services.

In case Lava product needs service, please visit the nearest Lava service centers given in the service guide. Please visit our Website [www.lavamobiles.com](http://www.lavamobiles.com) for updated list of Authorized Service Centers near to your location.

Important note: for your warranty to be valid, all information on the warranty certificate has to be completed including the stamp from the authorized distributor/retailer.

All warranty information, product features and specifications are subject to change without notice.

IMEI No.....  
Dealers Stamp.....  
Date of purchase .....

Model No. ....