

Quick Start Guide

Thank you for buying ALCATEL ONETOUCH 6042D. We hope you will enjoy your high-quality mobile communication experience.

For more information about how to use the cellphone, please access to www.alcatelonetouch.com to download the complete user manual. From the website you can also consult the FAQ, upgrade software, etc.



1 Your Mobile

1.1 Keys and connectors



Home key:

. Touch to return to the home screen.

Back key:

 Touch to go back to the previous screen, or to close a dialog box, options menu, the notification panel, etc.

Menu key:

- · Touch to set wallpaper, manage apps, access to system settings, etc.
- . Touch and hold the key to view recently accessed features.



Power key:

- · Press to lock/light up the screen.
- Press and hold to power on your phone. In idle screen, keep press to generate a pop-up menu such as Power off. Restart, Airplane mode, etc.
- · Press to mute the ringtone when there's an incoming call.

Volumes key:

- Volume +: Press to increase volume
- . Volume -: Press to decrease volume.
- Press and hold **Power** key and **Volume** key to capture a screenshot.
- Press to mute the ringtone when there's an incoming call.

1.2 Getting started

1.2.1 set-up

Inserting or remove your SIM card

You must insert your SIM card to make phone calls. You do not need to power off your phone before inserting or removing the SIM card as this phone can support hot swap.

Before you insert or remove the SIM card, press the raised dot on the card slot cover to open it. Insert the SIM card until it locks in place. To remove it, press the SIM card until it unlocks.



For dual SIM models, both SIM 1 and SIM2 can support 2G and 3G networks. If both of them are 3G SIM cards, only one card can support 3G network. Your phone only supports micro-SIM card. Do not attempt to insert other SIM types like mini or nano cards, otherwise you may damage your phone.

Charging your phone

Connect the battery charger to your phone and mains socket respectively.

If the battery is very low, there will be no indication that power is



being received until the charge is sufficient to show the charging status bar. To reduce power consumption and energy waste, once the battery is fully charged, disconnect your charger from the plug; switch off Wi-Fi, GPS, Bluetooth or background-running applications when not in use: reduce the backlight time, etc.

1.2.2 Power on your phone

Hold down the **Power** key until the phone powers on. It will take a few seconds before the screen lights up.

1.2.3 Power off your phone

Hold down the Power key until the Phone options appear, select Power off.

1.3 Home Screen

You can bring all the items (applications, shortcuts, folders and widgets) you love or use most frequently to your Home screen for quick access. Slide the Home screen horizontally left and right to get a complete view of the home screen. Touch the **Home** key to switch to Home screen. Drag the screen upwards to access the application list.



1.3.1 Using your touchscreen

Touch 3

To access an application, touch it with your finger,

Touch and Hold

Touch and hold the application, until the corresponding operation.



Place your finger on any item to drag it to another location.

Slide/Scroll

Slide the screen to scroll up and down the applications, images, web pages... at vour convenience.



Similar to swiping, but flicking makes it move quicker.



Place your fingers of one hand on the screen surface and draw them apart or together to scale an element on the screen.

1.3.2 Status Bar

From status bar, you can view both phone status (to the right side) and notification information (to the left side).

Touch and drag down the Status bar to open the Quick setting panel or Notification panel. Touch and drag up to close it.

Status icon

| الن | GPRS connected | • | GPS is on |
|--------------------|------------------------------------|-----------|------------------------------|
| G H | GPRS in use | al l | Roaming |
| āП | EDGE connected | , III | No SIM card inserted |
| E III | EDGE in use | \$ | Vibrate mode |
| 3G 11 | 3G connected | Á | Ringer is silenced |
| 3G ₁ ‡ | 3G in use | | Battery is very low |
| äı | HSPA (3G+) connected | | Battery is low |
| H 11\$ | HSPA (3G+) in use | | Battery is partially drained |
| ((10 | Connected to a Wi-Fi network | | Battery is full |
| * | Bluetooth is on | * | Battery is charging |
| * | Connected to a Bluetooth device | | Headset connected |
| 尕 | Airplane mode | ul | No signal (gray) |
| ල | Alarm is set | al | Signal strength (blue) |

Notification icons

| e | New text or multimedia message | c | Call forwarding is on |
|----|--|----|-------------------------------------|
| μ | Problem with SMS MMS delivery | Ť | Uploading data |
| Φ | New Hangouts message | Ī | Downloading data |
| 00 | New voicemail | Ţ | Download finished |
| 1 | Upcoming event | | Select input method |
| Þ | Song is playing | Ŧ | An open Wi-Fi network is available |
| ψ | USB tethering is on | P | Phone is connected via USB cable |
| ş | Portable Wi-Fi hotspot is on | à | Radio is on |
| •• | Screenshot captured | Ť | System update available |
| A | Carrier data use threshold approaching | 0- | Connected to VPN |
| × | Missed call | | |

Notification panel

When there are notifications, touch and drag down the Status bar to open the Notification panel and read the detailed information.



Quick setting panel

Touch and drag down the Status bar to open Quick setting panel, where you can enable or disable functions or change modes by touching the icons.



1.3.3 Lock/Unlock your screen

To protect your phone and privacy, you can lock the phone screen by creating a variety of patterns, face unlock, voice unlock, etc.

1.3.4 Personalize your Home screen

Add

You can touch and hold a folder, an application or a widget to activate move mode, and drag the item to any Home screen as you prefer.

Reposition

Touch and hold the item to be repositioned to activate Move mode, drag the item to the desired position and then release. You can move items both on the Home screen and the Favourite tray. Hold the icon on the left or right edge of the screen to drag the item to another Home screen.

Create folders

To improve the organization of items (shortcuts or applications) on the Home screen, you can add them to a folder by stacking one item on top of another.

Wallpaper customization

Touch Menu key then touch Wallpaper to customize wallpaper.

1.3.5 Volume adjustment

You can set ringer, media and phone ringtone volume to your preference by pressing **Volume up/down** key or touching **Settings\ Sound**.

2 Text input

2.1 Using onscreen keyboard

When the program is required to input words or numbers, the phone automatically display onscreen keyboard.

Onscreen Keyboard settings

From the home screen, select Settings\Language & input, touch the Settings icon on the right of Android keyboard, and then series of settings are available for your selection.

2.2 Text editing

Long press the kevin word text to bring up the edit button.



- Touch B to shear the word text.
- Touch 🗓 to copy and paste the word text.
- Touch REPLACE. to replace the word text or delete.

3 Phone call

3.1 Dial the call ...

Touch son the home screen to access Phone application.

Dial screen



You can dial the phone number directly from the keyboard to make a phone call.

3.2 Answer or reject a call

- Slide to _____,answer the call
- Slide to _____,reject the call
- Slide to , quick reply by message

If you want to mute the ringing tone, you can press the power key or volume key.



3.3 Consulting your call memory

You can access your call memory by touching from the Dial screen to view call history in categories of Missed call. Dialed call and Received call.

3.4 Speed Dial

You can access this setting screen by touching **Menu** key and **Speed dial** on Dial screen, then select contacts to define 2-9 screen keys as a speed dialer.

4 People

Through the phonebook function, you can view or manage your contacts
4.1 Add contacts

- Press 🏝 to add a new contact
- Press S to find the contact



Need to add contacts to the phone or Sim card when the first time use, or synchronize your phone with other applications account contacts.

4.2 Importing, exporting and sharing contacts

From Contacts screen, touch **Menu** key to open the options menu, touch **Import/Export**, then choose to import/export contacts from/to SIM card, Phone, Phone storage, Accounts, etc.

You can share a single contact or contacts with others by sending the contact's vCard to them via Bluetooth, Email, etc.

4.3 Synchronizing contacts in multiple accounts

Contacts, data or other information can be synchronized from multiple accounts, depending on the applications installed on your phone.

5 Messaging

You can create, edit and receive SMS and MMS with this phone.

To access this feature, touch from the Home screen.



- Press 4 to add a new contact or directly type person's name or number.
- Press to add attachments such as picture or videos, etc.It will automatically be changed into MMS.
- Press man to change to Symbol keyboard.
- Press (to change to Emoticons keyboard to make messages cute.
- Press ➤ to send the message.

All messages you receive or send out can be saved in phone memory or SIM card.
To consult the SMS messages stored in SIM card, touch Menu key from
Messaging screen. then touch Settings/ Text message (SMS) / Manage SIM

Card messages.



An SMS of more than 160 characters will be charged as several SMS. Specific (accented) letters will also increase the size of the SMS, this may cause multiple SMS to be sent to your recipient.

6 Email

To access this function, touch **Email** from the All Apps. An email wizard will guide you through the steps to set-up an email account.

- Enter the email address and password of the account you want to set-up.
- Touch Next. If the account you entered is not provided by your service provider in the phone, you will be prompted to go to the email account settings screen to enter settings manually. Alternatively, you can touch Manual setup to directly enter the incoming and outgoing settings for the email account you are setting up.
- Enter the account name and display name in outgoing emails.
- Touch Next to Finish.
- To add another email account, you can touch Menu key and Settings, and finally touch Add account on the right of the title to create the account.

To create and send emails

- Touch the icon 💻 from Inbox screen.
- Enter recipient(s) email address(es) in To field.
- If necessary, touch Menu key and touch Add Cc/Bcc to add a copy or a blind carbon copy to the message.
- \bullet Enter the subject and the content of the message.
- Touch Menu key touch Attach file to add an attachment.
- Finally, touch > to send.
- If you do not want to send the mail right away, you can touch **Menu** key and **Save draft** or touch **Back** key to save a copy.

7 Getting connection.....

To connect to the Internet with this phone, you can use GPRS/EDGE/3G networks or Wi-Fi, whichever is most convenient.

7.1 Connecting to the Internet

7.1.1 GPRS/EDGE/3G

The first time you turn on your phone with a SIM card inserted, it will automatically configure network service: GPRS, EDGE or 3G. If the network is not connected, you can touch on Quick setting panel.

To check the network connection you are using, touch Settings\ More...\Mobile networks\Access Point Names.

7.1.2 WLAN

Using Wi-Fi, you can connect to the Internet when your phone is within range of a wireless network. Wi-Fi can be used on the phone even without a SIM card inserted.

To turn Wi-Fi on and connect to a wireless network

- Touch on Quick setting panel to get to Settings.
- Touch the switch beside Wi-Fi to turn on/off Wi-Fi.
- Touch **Wi-Fi**, detailed information of all detected Wi-Fi networks is displayed in the Wi-Fi networks section.

. Touch a Wi-Fi network to connect to it. If the network you selected is secured. you are required to enter a password or other credentials (contact network operator for details). When finished, touch Connect.

7.2 Browser

Using Browser, you can enjoy surfing the Web. To access this function, touch the Browser icon on the All APPs.

To go to a web page

On Browser screen, touch the URL box at the top, enter the address of the web page, then touch Go to confirm.

7.3 Connecting to a computer

With the USB cable, you can transfer media files and other files between internal storage and a computer.

Before using MTP or PTP, first mark USB debugging. Touch Settings\About phone, then touch Build number 7 times. Then touch Settings\Developer options\USB debugging

To connect your phone to the computer:

• Use the USB cable that came with your phone to connect the phone to a USB port on your computer. You will receive a notification that the USB is connected.

• If you use MTP or PTP, your phone will be automatically connected. For Windows XP or lower operating systems, you should download and

install Windows Media Player 11 on your computer from the following link: http://windows.microsoft.com.

All data you have downloaded is stored in File Manager, where you can view media files (videos, photos, music and others), rename files, install applications on your phone, etc.

7.4 Sharing your phone's mobile data connection You can share your phone's mobile data connection with a single computer via a

USB cable (USB tethering) or with up to eight devices at once by turning your phone into a portable Wi-Fi hotspot.

To turn on USB tethering or Wi-Fi hotspot

- Connect your phone to the computer via USB cable.
- Touch on Quick setting panel to get to Settings.
- Touch More...\Tethering & portable hotspot.
- Mark the checkbox of USB tethering or Wi-Fi hotspot to activate this function.



These functions may incur additional network charges from your network operator. Extra fees may also be charged in roaming areas. You can check data usage by touching Settings\Data usage.

8 Data backup

This phone enables you to back up your phone's settings and other application data to Google Servers, with your Google Account.

If you replace your phone, the settings and data you've backed up are restored onto the new phone the first time you sign in with your Google Account. To activate this function:

Touch on Quick setting panel to get to Settings.

backups are deleted from Google Servers.

•Touch Backup and reset\Back up my data to mark the checkbox. Once activated, a wide variety of settings and data are backed up, including your Wi-Fi passwords, and other settings to Google servers, a list of the applications you've installed, the words you've added to the dictionary used by the onscreen keyboard, and most of the settings configured within the Settings application. If you deactivated this option, settings are no longer backed up, and any existing

To activate factory data reset: • Touch on Quick setting panel to get to Settings.

- Touch Backup and reset\Factory data reset
- Touch Reset phone\Erase everything

Phone reset will erase all of your personal data from internal phone storage.

including information about your Email account, any other accounts, your system and application settings and any downloaded applications. If you need to keep the content in your phone storage, please mark Reserve the content of Phone storage. When you are unable to power on your cellphone, there is another way to

9 Factory data reset

perform a factory data reset by pressing the Volume up key and the Power key simultaneously until the screen lights up.

10 Other Apps

There are some other third-part APPs in your phone such as YouTube, Hangouts. etc. You can also download and install more applications.

11 Upgrade

Download Mobile Upgrade from ALCATEL ONETOUCH website (www.alcatelonetouch.com) and install it on your PC. Launch the tool and update your phone by following the step by step instructions (refer to the User Guide provided together with the tool). Your phone's software will now have the latest software.

12 Safety

Safety Precautions Please read through the following briefings carefully, and act

in accordance with these rules, so as to prevent causing any danger or violating any law. Information about the meaning of Logo WEEE (Waste

Electrical and Electronic Equipment):

The WEEE logo on the product or on its box indicates that this product must not be disposed of or dumped with your

other household waste. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste. Isolated collection and proper recovery of your electronic and electrical waste equipment at the time of disposal will allow us to help conserving natural resources. Moreover, proper



recycling of the electronic and electrical waste equipment will ensure safety of human health and environment. Caution: risk of explosion if battery is replaced by an

incorrect type.

Dispose of used batteries according to the instructions.

For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.

Using your phone safely



Using a phone while driving is illegal in many countries. Please follow local laws and drive safely at all times.



Don't use your phone near sensitive electronic equipment – particularly medical devices such as pacemakers – as it could cause them to malfunction. It can also interfere with the operation of fire detectors and other automatic-control equipment.

For more information about how your phone affects pacemakers or other electronic equipment, please contact the manufacturer or your local distributor. Your phone may cause interference when used near TVs, radios or automated office equipment.



While Flyin

Your phone can cause interference with aircraft equipment. So it's essential you follow airline regulations. And if airline personnel ask you to switch off your phone, or disable its wireless functions, please do as they say.



In Hospit

Your phone may interfere with the normal operation of medical equipment. Follow all hospital regulations and turn it off when you're asked to by posted warnings or medical staff.



At a Datual Chatlan

whenever you're near fuels, chemicals or explosives.

Don't use your phone at petrol stations. In fact, it's always best to switch off



.

Keep your phone away from water (or any other liquid). It's not a waterproof model.



Making Repairs

Never take your phone apart. Please leave that to the professionals. Unauthorized repairs could break the terms of your warranty.



Broken Antenna

Don't use your phone if the antenna is damaged, as it could cause injury.



Around Children

Keep your mobile out of children's reach. It should never be used as a toy and it might not be good for their health.



Original Accessories

Only use the original accessories supplied with your phone or those approved by the manufacturer. Using unapproved accessories may affect performance, make the warranty void, break national regulations on the use of mobile phones, or even cause injury.



Near Explosives

Turn off your phone in or near areas where explosive materials are used. Always obey local laws and turn off your phone when requested.



Emergency Calls

To make an emergency call your phone must be turned on and in an area where there's network coverage. Dial the national emergency number and press 'send'. Explain exactly where you are and don't hang up until help has arrived.



Working Temperature

The working temperature for the phone is between 0 Degree and 40 Degree Celsius. Please don't use the phone outside the range. Using the phone under

too high or too low temperature might cause problems.



www.sar-tick.com

This product meets applicable national SAR limits of $2.0\,W/kg$. The specific maximum SAR values can be found on this user guide.

When carrying the product or using it while worn on your body, either use an approved accessory such as a holster or otherwise maintain a distance of 10 mm from the body to ensure compliance with RF exposure

requirements. Note that the product may be transmitting even if you are not making a phone call.

RADIO WAVES

Specific Absorption Rate (IEEE)

THIS Device MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your device is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio-frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. These guidelines include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for devices employs a unit of measurement known as the Specific Absorption Rate, or SAR.

The SAR limit set by public authorities such as the Federal Communications Commission of the US Government (FCC), or by Industry Canada, is 1.6 W/kg averaged over 1 gram of body tissue.

Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual

SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output of the device.

Before a device model is available for sale to the public, compliance with national regulations and standards must be shown.

Maximum SAR value for this model:

Maximum SAR value in the head: 0.284 W/Kg Maximum SAR value in the body: 0.724 W/Kg

While there may be differences between the SAR levels of various devices and at various positions, they all meet the government requirement for RF exposure. For body-worn operation, the device meets FCC RF exposure guidelines provided that it is used with a non-metallic accessory with the handset at least 10 mm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

Additional information on SAR can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site: http://www.phonefacts.net.

The World Health Organization (WHO) considers that present scientific information does not indicate the need for any special precautions for use of devices. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using "hands-free" devices to keep devices away from the head and body. (fact sheet n°193).

Additional WHO information about electromagnetic fields and public health are available on the following website: http://www.who.int/peh-emf.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reprient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For the receiver devices associated with the operation of a licensed radio service (e.g. FM broadcast), they bear the following statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

For other devices, they bear the following statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference

(2) This device must accept any interference received, including interference that may cause undesired operation.



To prevent possible hearing damage, do not listen at high volume levels for long periods.



Information about the meaning of marking CE: That means that the product answers to essential requirements of the European Directive 93/68/EEC applicable in the conformity

assessment procedures.

Maintenance

Use a dry soft cloth to wipe general dirt.

Do not use a hard cloth, benzene or thinner to wipe the phone, otherwise, the surface of the phone will be scratched or could even result in the fading of color.

Take Care of your Device

Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:

- Always keep the small parts of the phone away from children.
- Keep the device dry, Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery, and allow the device to dry completely

Before replacing it

- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use indoor chargers.

ALACTEL is a trademark of ALCATEL-Lucent and is used under license by TCT Mobile Limited.

© Copyright 2014 TCT Mobile Limited All rights reserved TCT Mobile Limited reserves the right to alter material or technical specification

without prior notice.