













User Manual

KKT Ultra

1

1. PRECAUTIONS

Read these simple guideline. Not following them may be dangerous or illegal. Read the complete user manual for further information.

	Do not switch your phone on when the use of wireless devices is prohibited or when the wireless device may cause interference or danger.
	Do not use your phone while driving.
	Follow relevant rules or regulations in hospitals and health care facilities. Switch your phone off near medical devices.
	Switch your phone off in aircraft. The radio signal from it may cause interference in signals of the aircraft.
	Switch your phone off near high-precision electronic devices. It may affect the performance of these devices.
	Do not attempt to disassemble your phone or its accessories. Only qualified personnel may service or repair the phone.
	Do not place your phone and its accessories in containers with strong electromagnetic field.
	Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them.
	Do not put your phone in a high-temperature place or use it in a place with flammable gas such as a petrol pumps.
	Keep your phone and its accessories away from children. Do not allow children to use your phone without guidance.
	Observe any laws or regulations on the use of phone. Respect others' privacy and legal rights when using your phone.
	Your device is not water resistant. Keep it dry.

5

All rights are reserved. No part of this document may be reproduced without permission.

While all efforts have been made to ensure the accuracy of all the contents in this manual, we assume no liability for errors or omissions or statements of any kind in this manual, whether such errors or omissions or statements resulting from negligence, accidents, or any other cause. The contents of this manual are subject to change without notice.

Protect our environment! We strive to produce products in compliance with global environmental standards. Please consult your local authorities for proper disposal.

Note: User Manual is just to guide the user about the functionality of the phone. This does not seem any certificate of technology. Some functions may vary due to modifications and upgrade of software, or due to print mistake.

2

2. KNOW YOUR PHONE

2.1 Keys and parts



1	Navigation key	8	Ending/Power key
2	Left soft key	9	Keypad
3	Dial/Answer key	10	Torch
4	Earpiece	11	Headset port
5	Display	12	Charger port
6	Center key	13	Camera
7	Right soft key	14	Speaker

6

Table of Contents

Table of Contents.....	3
1. Precautions.....	5
2. Know your phone.....	6
2.1 Keys and parts.....	6
2.2 Installing the battery, SIM card, memory card.....	7
3. Basic Operations.....	8
3.1. Switch Phone ON/OFF.....	8
3.2. Make a call.....	8
4. Secure your Phone.....	8
5. Main Menu Introduction.....	8
5.1. Call log.....	8
5.2. Contacts.....	9
a) Add New Contact.....	9
b) Send SMS.....	9
c) Call a Contact.....	9
d) Delete a Contact.....	9
e) Delete multiple contacts.....	9
f) Delete from Phone.....	9
g) Move.....	9
h) Add to Blacklist.....	9
i) Import/Export Contacts.....	9
j) Send vCard.....	10
k) Contact settings.....	10
5.3. Music.....	10
5.4. Camera.....	10
5.5. Messages.....	10
a) Write message.....	10
b) Use message Templates.....	10
c) Broadcast message.....	10
d) Voice mail server.....	10
e) Settings.....	11
f) Delete all.....	11
g) Message capacity.....	11
5.6. Multimedia.....	11
a) Camcorder.....	11


3

2.2 Installing the battery, SIM card, memory card

1. Open the battery cover as shown below.





2. Insert the SIM card and the memory card correctly in the card slot(s) as shown below.

 The Memory Card gives you extra storage capacity for content such



as pictures, music and video clips.

 Do not remove the memory card while reading or writing to the card. Doing so may cause data corruption on the card or on the phone.

 Use only compatible memory cards approved by LAVA. Incompatible cards may damage the slot or corrupt the data stored in the card.

3. Finally, insert the battery and the rear cover of the mobile phone as shown below.

7

b) Video Player.....	11
c) FM Radio.....	11
d) Image Viewer.....	12
e) Sound Recorder.....	12
5.7. File manager.....	12
5.8. Fun & Game.....	12
5.9. Organizer.....	12
a) World clock.....	12
b) Alarm.....	12
c) Calendar.....	12
d) Stopwatch.....	12
e) Timer.....	12
f) Torch.....	12
g) Calculator.....	12
h) Converter.....	13
i) Bluetooth.....	13
5.10. Tools.....	13
a) Ebook.....	13
b) To Do list.....	13
c) SIM tool kit.....	13
5.11. Settings.....	13
5.12. Internet.....	13
6. Health and Safety Precautions.....	13
6.1. SAR Compliance.....	14
6.2. SAR Recommendations.....	14
6.3. Recycle Your Handset.....	14
6.4. Disclaimers.....	14
7. LAVA WARRANTY CERTIFICATE.....	15
7.1. Limited warranty.....	15
7.2. LAVA warranty.....	15

4

3. BASIC OPERATIONS

3.1. Switch Phone ON/OFF

To switch ON/OFF your phone, press and hold the End key for a few seconds.

Unlock the phone

If you do not use the phone for a while, the screen is replaced with a locked screen.

1. Press any key to activate the screen.

2. Press Left key, and then press * key.

3.2. Make a call

You can make a call in the following ways:

Enter the desired number in standby mode and press the Call key to make the call.

Go to Menu > Contacts and then select and dial the desired number.

Just press the Call key to dial the contacts listed in Call logs.

You can also dial a contact from the messages.

4. SECURE YOUR PHONE

Menu > Settings > Security > Phone Lock

Let you lock/unlock your phone via a security password which you can change anytime.

The default security code to unlock the phone is 4321.

Note: After you activate the phone lock, you would be asked for a password when you power on your phone next time.

5. MAIN MENU INTRODUCTION

5.1. Call log

Menu > Call Logs

Tip: Directly access the call logs of by pressing the Call key in idle mode.

The Call log lists the calls you have recently dialed, received, missed for SIM1 and SIM 2.

8

Press the Left/right navigation keys to access various call logs and work on the call logs.

5.2. Contacts

Your contacts stores all your saved contacts for anytime use. Your contacts data can be stored in your SIM card or your phone memory. You can manage your contacts from here.

Menu > Contacts

a) Add New Contact

Menu > Contacts > Left Key > Create contact

b) Send SMS

Menu > Contacts > Left Key > SMS

c) Call a Contact

Menu > Contacts > Left Key > Call>Voice call

Allow you to make a call to the contact you are viewing. Or you can just highlight a number and press the Call key.

d) Delete a Contact

Menu > Contacts > Left Key> Delete

In the Contacts list, select the entry you want to delete.

e) Delete multiple contacts

Menu > Contacts > Left Key> Delete multiple

In the Contacts list, select the entry you want to delete.

f) Delete from Phone

Menu > Contacts > Left Key> Delete from Phone

In the Contacts list, you can delete the whole contacts saved in phone.

g) Move

Menu > Contacts > Left Key> Move

In the Contacts list, you can select the entry you want to move.

h) Add to Blacklist

Menu > Contacts > Left Key > Add to Blacklist

Allow you to black list selected numbers. In this case the contact will be blocked from calling you up.

i) Import/Export Contacts

Menu > Contacts > Left Key > Import/Export

You can copy, Import or Export contacts entries stored in the SIM card to the phone memory and vice-versa.

To arrange your journey according to calendar.

h) Converter

Menu > Organizer > convertor

Weight and the length of the conversion between the units

i) Bluetooth

Menu > Organizer > Bluetooth

Open the bluetooth, for file transfer and acceptance

5.10. Tools

a) Ebook

Menu > Tools > Ebook

To read the e-book with text format.

b) To Do list

Menu > Tools > To Do list

Edit Time

c) SIM tool kit

Your phone supports STK (SIM TOOL KIT) function for SIM1/2.

5.11. Settings

Choose various preferences to customize your handset according to your requirements. You can set:

- Phone Settings
- Display Settings
- Security Settings
- Call settings
- Connections
- Dual SIM settings
- Profiles
- Restore factory settings

5.12. Internet

Menu > Settings>Internet

To access this menu, enter the Main Menu in the standby mode and then select Internet. You can use the network-related services with this function.

You also can choose Goole, MSN, Facebook, Yahoo, Ebuddy and STK.

6. HEALTH AND SAFETY PRECAUTIONS

Please read these simple guidelines. Not following them may be dangerous or illegal.

j) Send vCard

Menu > Contacts > Left Key >Contacts> vCard

Allow you to send vCard to other numbers and export vCard.

k) Contact settings

Speed dial

Menu > Contacts > Left Key >Others> Speed dial

Set speed dial and view memory status.

Memory status

Menu > Contacts > Left Key >Others> Memory status

Check the memory status of SIM, and Phone.

5.3. Music

The phone comes with an inbuilt audio player that plays all your favorite songs stored in the phone memory or memory card.

- While in music mode, press the Left key to choose various music options
- Adjust Volume: Press Up and Down keys to adjust volume.

a) **Camera**

Press the left key in camera mode to choose various settings

Shortcut keys: Press the number keys on the phone's keypad to choose various settings.

5.5. Messages

a) Write message

Menu > Messages > Write message > New SMS

You can compose and send SMS . Pressing the Left Key during/after composing the message gives you a host of messaging features.

b) Use message Templates

Menu > Messages > Templates

Enter into preset message templates and use them. These preset templates can save you time if the theme of your message is the same as those existing in the template.

c) Broadcast message

Menu > Messages > Broadcast message

. To receive public messages on all different subjects from your network operator

d) Voice mail server

Menu > Messages > Voice mail server

6.1. SAR Compliance

Your phone is designed not to exceed the limits of emission of radio waves recommended by international guidelines.

SAR (specific absorption rate) is the measurement of body-absorbed RF quantity when the phone is in use. SAR value is ascertained according to the highest RF level generated during laboratory tests.

The SAR value of the phone may depend on factors such as proximity to the network tower, use of accessories or other accessories.

The highest SAR value of the device at the head and body are below 1.6W/kg respectively averaged over 1 gm. of human tissue.

6.2. SAR Recommendations

Use a wireless hands-free system (headphone, headset) with a low power Bluetooth emitter.


Please keep your calls short and use SMS whenever more convenient. This advice applies especially to children, adolescents and pregnant women

Prefer to use your cell phone when the signal quality is good.

People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant.

Maintain a preferable distance of 15 mm from the device.

6.3. Recycle Your Handset

 The WEEE logo (shown at the left) appears on the product (battery, handset, and charger) to indicate that this product must not be disposed of or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste.

Specified collection points for recycling of such hazardous waste. Collection and proper recovery of your electronic waste equipment at the time of disposal will allow us to help preserve the environment. Recycling of the electronic waste equipment will ensure safety of human health and environment. For more information on best practices for disposal of electronic and electrical waste, please visit to our web site: www.Lavamobiles.com

6.4. Disclaimers

The colors and specifications shown/mentioned in the user manual may

You can activate voicemail service to redirect your incoming calls (based on your call settings) to a voicemail server and retrieve them later via SMS alerts.

To divert incoming calls to a voicemail server, go to Settings>Phone tab > Call Divert> Voice> (choose the desired call divert condition)> Activate> Phone Number/Voicemail Number.

e) Settings

Menu > Messages > Options>Settings

You can set your desired parameters for SMS, push message and Others.

f) Delete all

You can choose all messages in the Inbox or others to delete.

g) Message capacity

Menu > Messages >Options> Message capacity

View the memory status of your SMS .

5.6. Multimedia

a) Camcorder

Menu > Multimedia > Camcorder

Press the OK Key to start recording.

You can press Options switch to Camera and vice versa.

You can also press Options key to choose memory

Press Left key to choose various settings

Shortcut keys: Press the number keys as shortcuts on the phone's keypad to choose various video settings.

b) Video Player

Menu > Multimedia > Video Player

Let you play videos stored in your phone or memory card.

Press 2 key while playing a video to change the display mode.

c) FM Radio

Menu > Multimedia > FM radio

Your phone comes with an FM radio to let you listen to FM channels.

Go to Options> Search Channels> Auto Search to fill up the channels.

Press the number keys on your keypad in accordance to the channel list.

Press OK key to start/stop the radio.

Press the Up or Down key to increase/decrease the volume.

Press the Left key for various radio options.

differ from the actual product. Images shown are for representation purpose only. Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.

LAVA keeps the right to make modifications to any of the content in this user guide without public announcement in advance. The content of this manual may vary from the actual content displayed in the mobile phone. In such a case, the latter shall govern.

Copyrights

All rights reserved. Reproduction, transfer, distribution or storage of part of all of the contents in this document in any form without the prior written permission of Lava International is strictly prohibited.

7. LAVA WARRANTY CERTIFICATE

7.1. Limited warranty

LAVA international Ltd. (LAVA) provides limited warranty for your mobile phone and original accessories delivered with your mobile phone (hereinafter referred to as "product")

The warranty period for the transceiver is one (1) year and for battery, charger and headset is six (6) months from the date of purchase.

7.2. LAVA warranty

Subject to the conditions of this Limited Warranty, LAVA warrants a product to be free from defects in design, material and workmanship at the time of its original purchase by you, and for a subsequent period of one (1) year for transceiver and six (6) months for battery & charger.

You shall have no coverage or benefits under this warranty in the event that any of the following conditions are applicable:

1. The product has been subjected to abnormal use or conditions, improper storage, exposure to excessive moisture or dampness, exposure to excessive temperature, unauthorized modification, unauthorized repair (including but not limited to use of unauthorized spare parts in repairs),abuse, accidents, Acts of God, spills of food or liquids,improper installation
2. You have not notified Lava of the defect in the product during the applicable warranty period.
3. The product serial no. code or the accessories date code has been removed, defaced or altered.

d) Image Viewer

Menu > Multimedia > Image Viewer

Let you to view your saved images. You can also send the images via MMS or Bluetooth or use it as contact icon or wallpaper, etc.

e) Sound Recorder

Menu > Multimedia > Sound recorder

You can record surrounding sounds using this feature.

5.7. File manager

To manage the space of phone or memory card.

5.8. Fun & Game

Snake

You may play the built-in game and perform the game .

Lava Zone

Menu>Fan & Games<Lava zone

5.9. Organizer

a) World clock

Menu > Organizer > World clock

To use the world clock function.

b) Alarm

Menu > Organizer>Alarm

To use the alarm service available with your mobile phone.

c) Calendar

Menu > Organizer > Calendar

To provide a calculator with 4 basic functions to facilitate simple calculations.

d) Stopwatch

Menu > Organizer > Stopwatch

For different time

e) Timer

Menu > Organizer > Timer

Set up time, time will have ring tone hint

f) Torch

Menu > Organizer > Torch

To turn on/off Torch.

g) Calculator

Menu > Organizer > Calculator

4. The product has been used with or connected to an accessory (i) Not supplied by Lava or its affiliates, (ii) Not fit for use with the product or (iii) Used otherwise than in manner intended.

5. The seals of the product's battery enclosure have been broken or shown evidence of tempering or the product's battery has been used in equipment other than that for which it has been specified usable by LAVA.

6. All plastic surfaces and all other externally exposed part that is scratched or damaged due to normal use.

To get maximum of your new product, we recommend you to:

- Read the guidelines for safe and efficient use as mentioned in the manual.
- Read the terms and conditions of your Lava warranty in the manual.
- Keep your original receipt; you will need it for warranty services if asked to produce.
- Present this Lava Warranty Certificate along with original proof of purchase whenever you require any warranty services.

In case Lava product needs service, please visit the nearest Lava service centers given in the service guide. Please visit our Website www.lavamobiles.com for updated list of Authorized Service Centers near to your location.

Important note: for your warranty to be valid, all information on the warranty certificate has to be completed including the stamp from the authorized distributor/retailer.

All warranty information, product features and specifications are subject to change without notice.

IMEI No.

Dealers Stamp

Date of purchase

Model No.