



Aquaris A4.5

Complete User Manual

Aquaris A4.5

The BQ team would like to thank you for purchasing your new Aquaris A4.5. We hope you enjoy using it.

With this unlocked smartphone you can enjoy even faster mobile network speeds with **4G** coverage. It comes with dual SIM functionality (micro-SIM), which means you can use two SIM cards at the same time, even of different operators. You can browse the internet rapidly, check your email, enjoy games and apps (which you can download directly onto the device), read e-books, transfer files via Bluetooth, record audio, watch movies, take photos and record videos, listen to music, chat with your friends and family or enjoy your favourite social networks.

About This Manual

- To make sure that you use your smartphone correctly, please read this manual carefully before you start using it.
- Some of the images and screenshots shown in this manual may differ slightly from those of the final product. Due to firmware updates, it is possible that some of the information in this manual does not correspond exactly to the operation of your device. To obtain the most up-to-date version, please go to www.bq.com.
- BQ shall not be held liable for any issues relating to performance or incompatibility resulting from modification of the registry settings by the user. Nor shall it be held liable for any incompatibility issues with third-party applications available through the app stores.

Icon guide



Danger: This icon indicates situations that could pose a risk to personal safety or health.



Warning: Situations which pose no risk to personal safety or health, but could pose a risk to the correct functioning of the device.



Tip: Additional information to help you get the best out of your device.

Trademarks

The BQ logo is a registered trademark of Mundo Reader, S.L.

The Android and Google Search™ logos are registered trademarks of Google Inc.

Wi-Fi® is a registered trademark of the Wi-Fi Alliance.

Bluetooth® is a registered trademark of Bluetooth SIG, Inc.

MicroSD™ and the corresponding logo are registered trademarks of SD-3D, LLC.

Dolby, Dolby Audio and the double-D symbol are registered trademarks of Dolby Laboratories.

All other trademarks are the property of their respective owners.
All rights reserved.

Contents

07	Before You Start
07	Box Contents
08	Product Overview
09	Getting Started
09	Inserting a SIM Card
10	Inserting and Removing the MicroSD Card
11	Switching the Device On and Off
12	Charging the Device and Transferring Files
14	Setup Wizard
15	Desktop
15	Screen Lock
16	Home Screen
17	Customising the Home Screen
17	Moving and Deleting Icons on the Home Screen
17	Creating App Folders
18	Adjusting Screen Rotation
18	Learning to Use the Multi-Touch Screen
20	Icons
20	Status Bar
21	Notifications Bar
22	Keyboard

23	Phone
23	Managing Contacts
23	Adding a Contact
24	Editing an Existing Contact
24	Using a Contact
25	Contacts to Display
25	Importing and Exporting Contacts
26	Calls
28	Options Available During a Phone Call
29	Hiding Your Caller ID
29	SMS and MMS
30	Message Settings

31 **Settings**

31 **WI-FI AND NETWORK SETTINGS**

31	Wi-Fi
32	Bluetooth
33	SIM cards
34	Data Usage
34	More...

36 **DEVICE SETTINGS**

36	Display
36	Sounds and Notifications
38	Storage
38	Battery
38	Apps
38	Users

39 **PERSONAL SETTINGS**

39	Location
40	Security
41	Accounts
41	Language and Input
42	Backup and Reset

43 **SYSTEM SETTINGS**

43	Date and Time
43	Scheduled Power On and Off
44	Accessibility
47	Printing
47	About Phone
48	Developer Options

49	Performance Settings
49	Optimising Battery Life
49	Monitoring Battery Usage Information
50	Email address
50	Setting up a Gmail Account
50	Sending an Email
50	Replying to an Email
51	Multimedia
52	Camera Mode
53	Video Mode
54	Settings
55	Panoramic Mode
55	Photo Sphere mode
55	Lens Blur mode
56	Photos
57	Play Music
57	Play Movies
58	Apps
58	Play Store
58	Apps from Unknown Sources
58	Preinstalled Apps
58	Internet Browser
59	Hangouts
59	Calendar
60	Maps and GPS Navigation
60	Dolby Audio
60	News and Weather (Genie Widget)
61	Tools
61	Calculator
61	Clock
61	Voice Search
62	Appendices
62	Appendix A: OTA Updates
62	Appendix B: Technical Specifications
63	Appendix C: Cleaning and Safety
65	Appendix D: Information on Exposure to Radio Waves and SAR (Specific Absorption Rate)
65	Appendix E: Disposing of this Product Correctly
66	Appendix F: Declaration of Conformity



Before You Start


Box Contents

Before using your BQ smartphone for the first time, please check the contents of the box. If any of the following items are missing, please contact the vendor that sold you the device.

- ✓ Aquaris A4.5
- ✓ USB to micro-USB cable
- ✓ SIM key
- ✓ Documentation:
 - Quick Start Guide
 - Warranty and Safety Manual
 - BQ Accessories



Product Overview

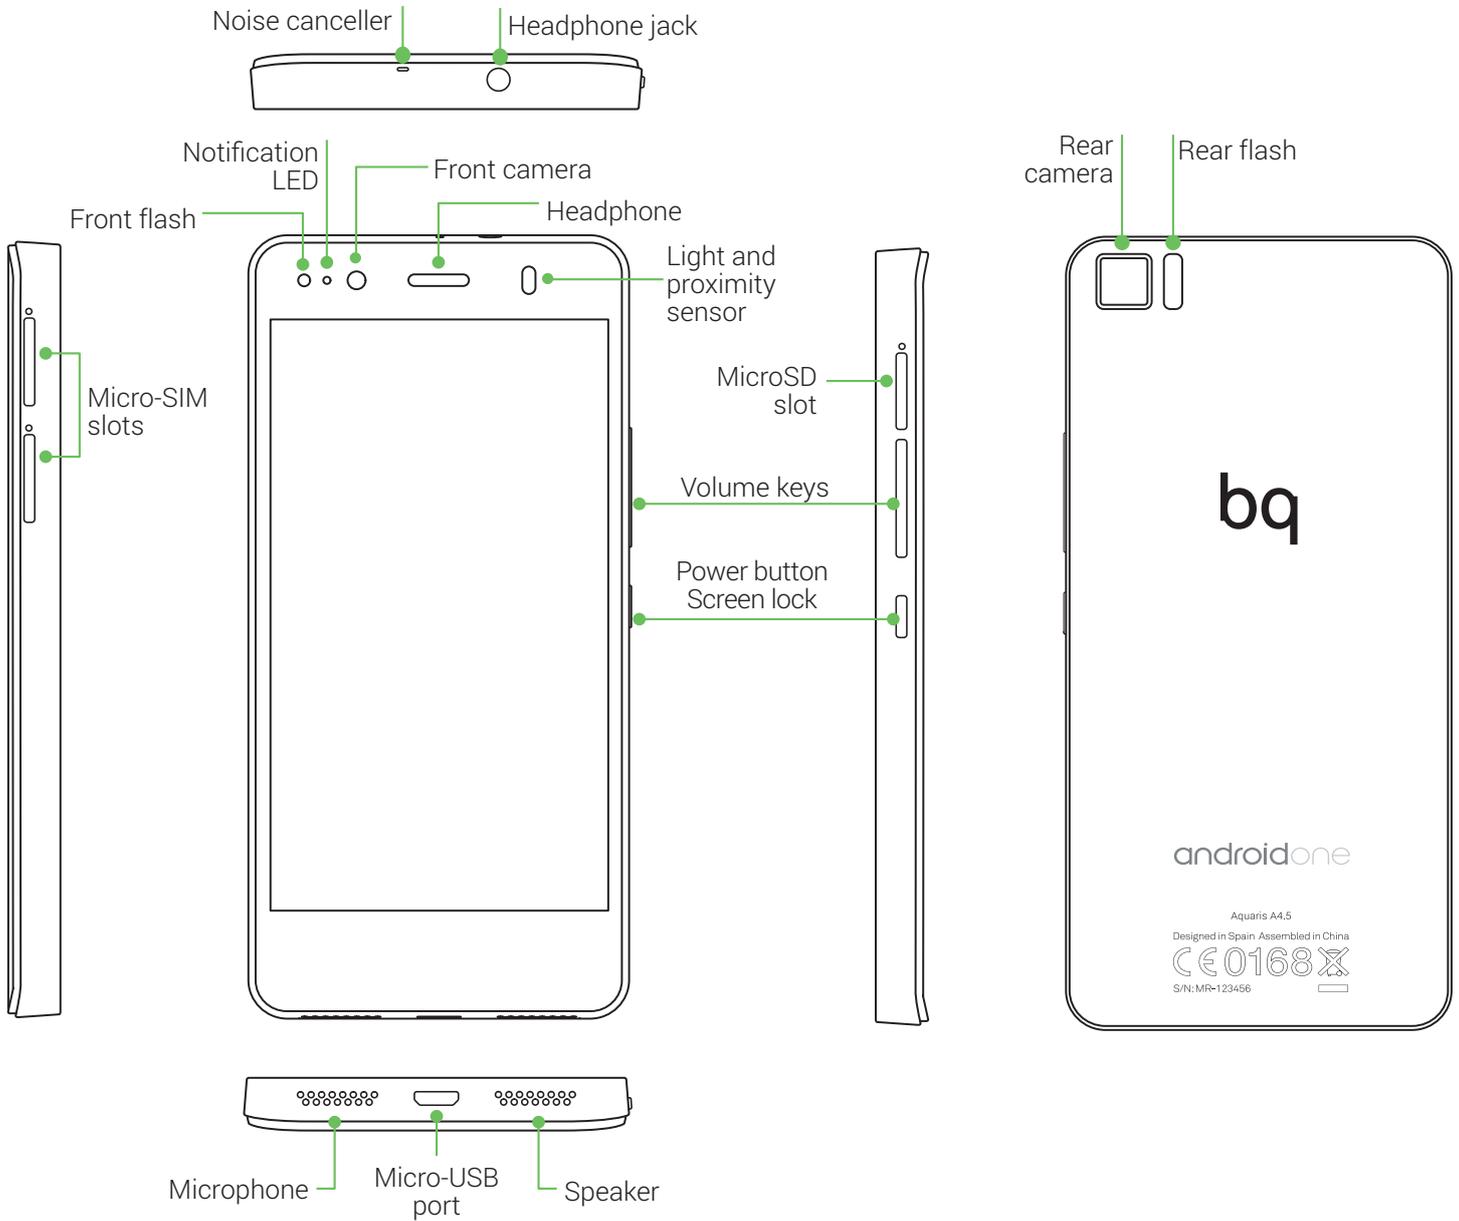


Do not attempt to remove the rear cover of your BQ Aquaris A4.5, as this may damage the device.
Do not remove the battery by any means. Removing it may invalidate the Warranty.



Getting Started

Inserting a SIM card

Your Aquaris A4.5 is a dual SIM smartphone (micro-micro) which accepts 4G cards in both slots.

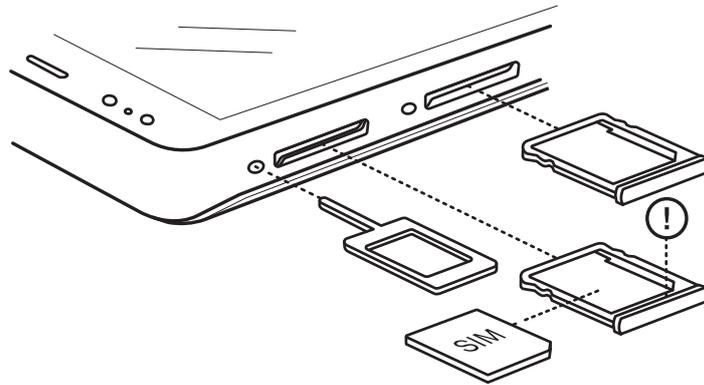

You can access the SIM trays from the exterior of the device. Do not attempt to remove the battery cover.


You will find the SIM key inside the box containing your device. Make sure the device is switched off first, then insert it into the SIM slot and extract the tray. Place your SIM card into the tray. Make sure it is in the correct position by using the notch on the corner to guide you (see image). Insert the tray into the slot with the SIM inside it.



Inserting and Removing the MicroSD Card

The internal memory of your Aquaris A4.5 can be expanded to 64 GB using a MicroSD card.

To insert a MicroSD card, follow these steps:

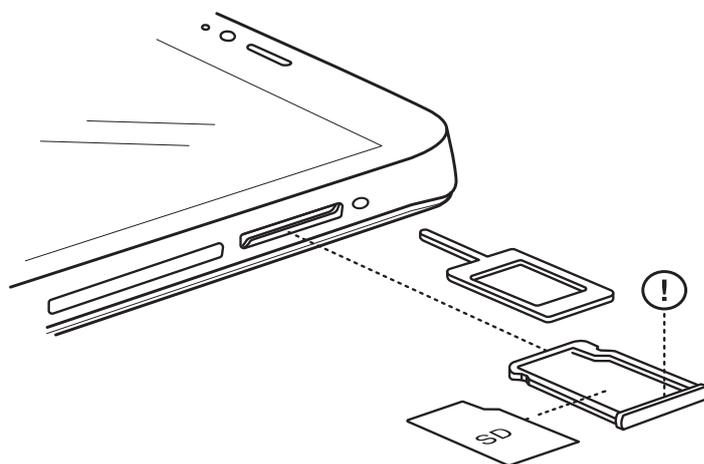

Insert the end of the SIM key into the hole of the MicroSD tray.

Extract the tray and insert the MicroSD card, making sure the metal pins are at the bottom and facing towards the back of the device (see image).

To remove the MicroSD card, follow the steps above in reverse, bearing in mind the following recommendations:

- a. For greater security, we recommend switching the device off before removing the MicroSD card
- b. If you need to remove the MicroSD card while the device is switched on, unmount it first to avoid damaging the card and losing any data. To unmount the card, open the Settings menu on your smartphone and go to **Storage > Remove SD card**.
- c. Make sure you reinsert the tray to prevent dust or dirt from entering the device.





You can choose whether to store your multimedia files on your phone's internal memory or directly onto the external MicroSD card. Remember that any content stored on the MicroSD card will not be available when the card is removed, and any apps stored on there will no longer function.



Switching the Device On and Off

To switch on your Aquaris A4.5, press and hold down the power button for a few seconds, which is located on the side of the smartphone.

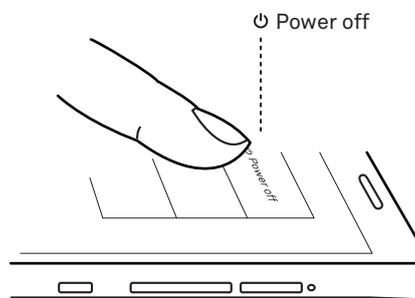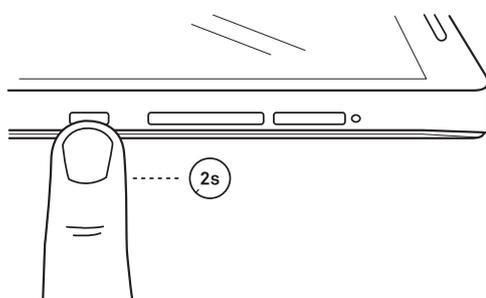

If you have inserted two micro-SIM cards into your device, you will need to enter the pin for each card when you switch it on. Every time your Aquaris A4.5 detects a new SIM, a pop-up window will appear informing you of the default settings for making phone calls, video calls, SMS and the data connection.

To switch off your device, hold down the power button for a few seconds. A menu will appear with various options. Select **Power off**.



If you press briefly on the power button, the screen will switch off but not the device.




Charging the Device and Transferring Files

Your smartphone contains a rechargeable (non-removable) 2470 mAh battery, which is charged via the micro-USB port located at the bottom of the device. A USB (type A) to micro-USB (type B) cable is provided with the phone for charging the battery. To charge it, follow these simple steps:

A) Using a mains adapter (not included):

1. Plug the USB cable into the mains adapter.
2. Connect the mains adapter to any standard plug socket (220 V/50 Hz).
3. Connect the other end of the cable to the micro-USB port on your smartphone.

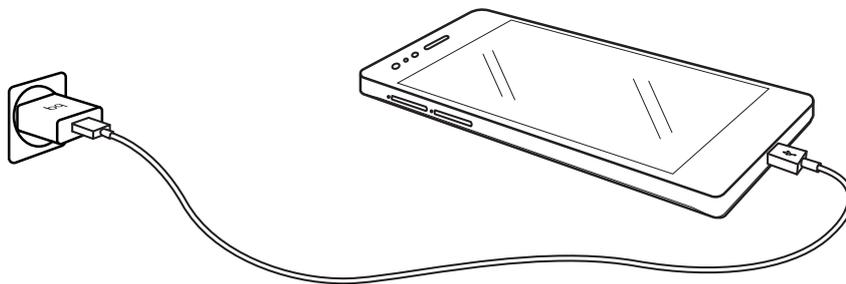

B) Using a laptop or desktop computer:

1. Connect the USB cable to a compatible USB port on your computer.
2. Connect the other end of the cable to the micro-USB port on your smartphone.



The battery in your Aquaris A4.5 is non-removable. If it is removed by anyone other than our Technical Support staff, your device could be damaged and the Warranty invalidated.



Allowing the battery to charge fully is recommended when you charge it for the first time as this will help calibrate the battery meter. Bear in mind that some batteries perform better after completing a number of charge/discharge cycles.



The time required to charge your device may vary slightly depending on whether it is charged via the mains adapter or via a computer USB port.




For optimum charging, we recommend using a 5 V 1 A charger with your device.



If you connect your smartphone to a computer using the USB cable, you can also transfer files between the two devices (to/from the internal memory, or the MicroSD card, if in use). This will allow you to use, copy or store images, videos, music, text documents, etc. on one or both devices.

You can select the file transfer mode when you connect your Aquaris A4.5 to a computer. When you connect it, press the Touch for other USB options message to see the **USB computer connection** menu. You can connect it as a **Media device (MTP)** or **Camera (PTP)**.

There are a number of ways to transfer files. The steps below will show you how to transfer them via USB:

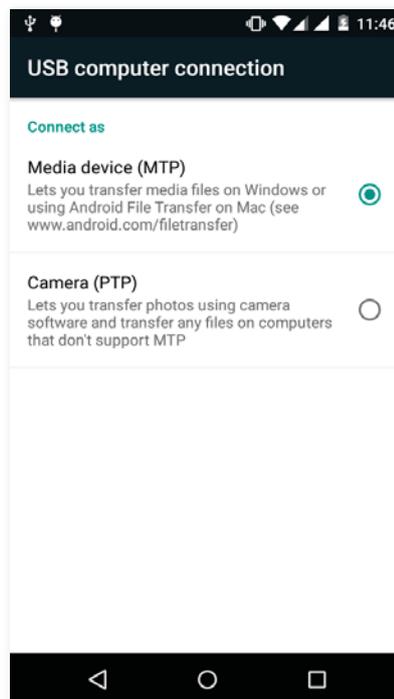

1. Connect your Aquaris A4.5 to a computer using the micro-USB to USB cable provided. Insert the micro-USB connector into the corresponding port on the device, and the generic USB connector into the corresponding port on the computer.
2. Select and copy the desired files onto your smartphone or computer. Remember that you can store them on either the phone's internal memory or on the MicroSD card, if you are using one.



To transfer files in **MTP** or **PTP** mode from your mobile (and/or MicroSD card) to a computer running Mac OS and vice versa, you will need to download and install the free **Android File Transfer** app on your computer: www.android.com/filetransfer/.








Do not disconnect the cable while files are being transferred.



Setup Wizard

The first time you switch on your Aquaris A4.5, a setup wizard will help you to configure the basic settings for your device:

- Language
- SIM cards
- Wi-Fi network
- Protect your phone
- Name of phone
- Google services

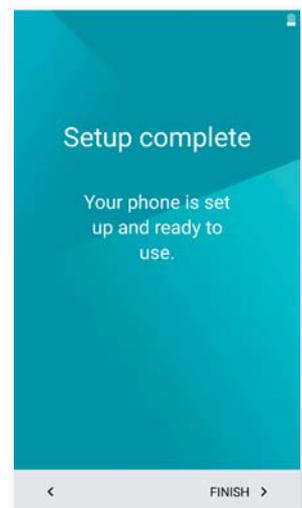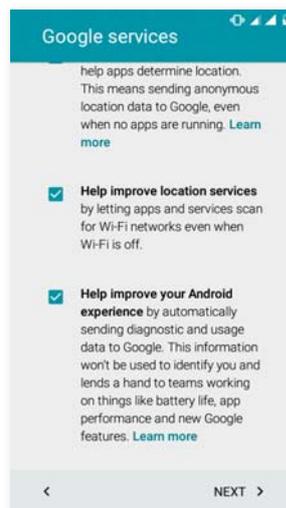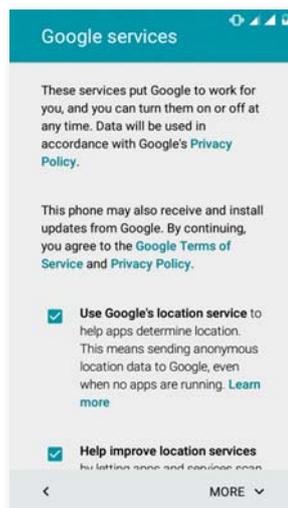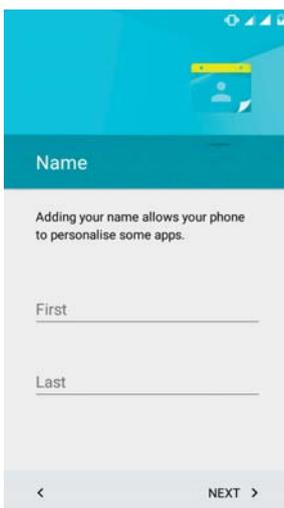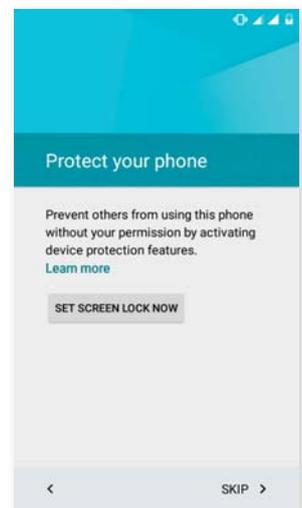



Desktop

Screen Lock

Your smartphone screen will lock itself automatically after a prolonged period of inactivity. To configure the screen timeout interval, press the **Menu button** , go to **Settings > Display > Sleep** and select the desired interval. To switch the screen off manually, press the power button briefly.


To unlock the screen, press (but do not hold down) the power button and the screen will come on, displaying the unlock option. To change the unlock option, press the **Menu button**, go to **Settings > Security > Screen lock** and choose from the following options: **None**, **Swipe**, **Pattern**, **PIN** and **Password**. For more information on each of these options, go to **Settings > Security**.



If you forget how to unlock the screen, after various wrong attempts, the Forgot pattern message will appear at the bottom of the screen. If you press it you will be asked to enter the email address and password used to set up your smartphone. The screen lock will then be removed.

Your Aquaris A4.5 includes a new feature that enables you to lock and unlock your phone by double-tapping the screen. Simply tap any part of the screen twice in quick succession so that it lights up and requests the unlock pattern. When the screen is activated, a double tap anywhere in the notifications bar will lock and deactivate it.

This feature is disabled by default. You can activate it via **Settings > Display > Double tap control**.

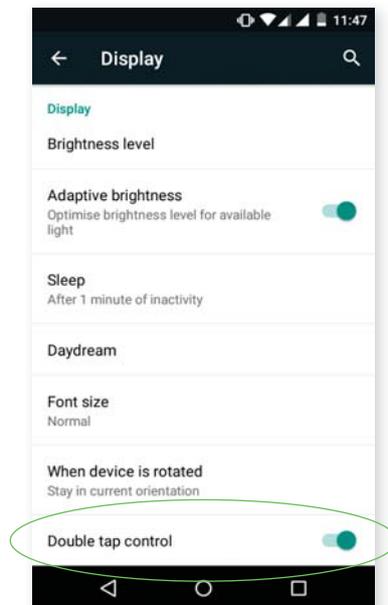



Home Screen

The **Home screen** or **Desktop** is your main access route to the tools and apps installed on your Aquaris A4.5. From here, you can check the status of your device, visit websites, open apps, and much more.




- 1 Status and Notifications bar.** Check the Wi-Fi signal, the network coverage for each SIM, the audio profile, the Bluetooth status and remaining battery power. Notifications such as missed calls, messages, etc. and the quick settings menu will also appear here. Slide from the top of the screen once to see the notifications and twice to access the quick settings.
- 2 Google Search.** Press the search bar to enter the text you want to search for on the internet. You can also carry out a voice search.
- 3 Widget.** Add widgets such as Power control, time, news and weather, etc.
- 4 Shortcuts.** These give you quick access to the apps you use most frequently.
- 5 Apps menu.** Here you can access all the apps installed on your device.



Customising the Home Screen

The **Home screen** contains an initial desktop which can be extended to the right. To scroll through the **Home screen** and **extended screens**, simply slide your finger left or right across the screen.

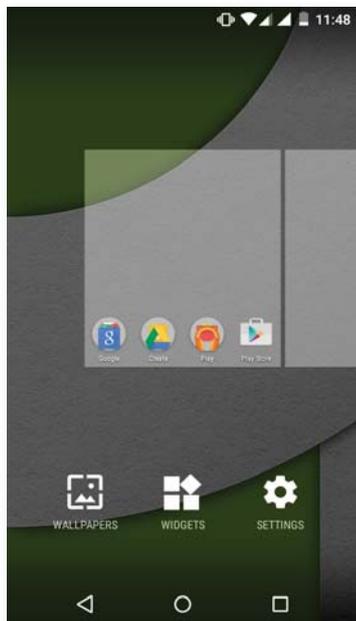

You can customise these screens with images, shortcuts, apps and widgets. To change the wallpaper or add a widget, press and hold on one of the screens until a pop-up window appears containing these options:

- **Wallpapers:** Select the image you want to use as a background for the **Home screen** and **extended screens** and press Set wallpaper to confirm. If the image selected is too large, you will need to crop it.
- **Widgets:** Select the widgets you want to appear on the **Home screen**.
- **Settings:** A shortcut to the device **Settings menu**.

To create a new shortcut to an app or contact, go to the Apps menu, press on the relevant icon and drag it into the desired position on the desktop.

Moving and Deleting Icons on the Home Screen

To move an element on the **Home screen**, press and hold to detach it from the background, then drag it to the desired position and release. You can also move icons from one extended screen to another by dragging them to the edge.

To delete an icon, drag it to the top of the screen until an X and the word "**Remove**" appear. When the icon turns red, release it to delete.

Creating App Folders

To create a folder, drag one icon on top of another that you want to store in the same folder. A folder will automatically be created and the icons placed inside it. You can add more icons to the folder by simply dragging them into it. To name a folder (or rename an existing one), press briefly on it and then on the "Unnamed folder" option. You can remove icons from the folder by opening it and dragging them out.



Adjusting Screen Rotation

For some apps, the screen will rotate automatically from portrait (vertical) into landscape (horizontal) mode and vice versa, depending on how you are holding your device. To lock the screen rotation, go to **Settings > Display > When device is rotated** and select **Stay in current orientation**.

You can also enable and disable automatic screen rotation using the Auto-Rotate toggle in the quick settings menu.

Learning to Use the Multi-Touch Screen

Your smartphone has a capacitive multi-touch screen with five simultaneous detection points. Different movements can be made over these points which are linked to different functions:




Touch. Touch the screen briefly to select an icon, open an app, activate a text-entry box, etc.



Touch and hold. Touch the screen and hold for approximately 2 seconds to bring up the menu of available options.


Drag. To move an icon, press and hold down, drag it to the desired position and then release.

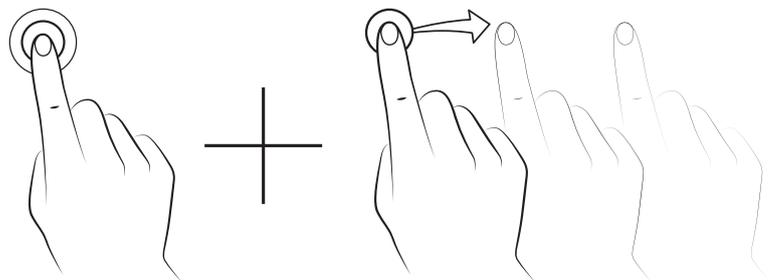



Swipe or slide. Press briefly on the Home screen and slide your finger left or right across it to access the extended screens, or slide your finger up and down the screen to scroll through a website, list or menu.

Pinch. Place two fingers on the screen at the same time and move them towards one another or spread them apart to reduce or enlarge an image.

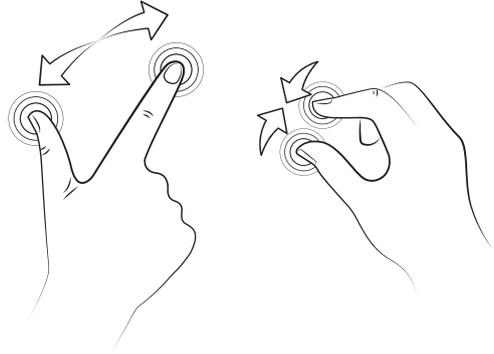

Double-tap. Tap the screen twice in quick succession to increase the zoom. Repeat the action to decrease it. You can also use it to activate the screen.





Icons

The navbar is shown by default on screen to enable you to navigate through your device more easily.

When using an app, you can return to the previous screen by pressing the **Back** icon .

You can go to the **Home screen** at any time by pressing the **Home** button . You can also touch and hold to access the Google Now application.

You can access the recent applications list by pressing the **Menu** button .

Status Bar


The Status bar contains important information on the device and is always visible at the top of the screen.

-  Battery almost empty.
-  Battery charging.
-  Battery fully charged.
-  Wi-Fi enabled and connected to a network.
-  Sound off and vibrate on.
-  Sound and vibrate off..
-  Aeroplane mode.
-  Data services enabled (this could be 4G, H+, H, 3G, E or G, according to the type of data connection and transfer speed).
-  USB connected.
-  Bluetooth enabled.




Notifications Bar

To view your notifications, pull the bar down with one finger. Delete all notifications by pressing the  icon, or delete them individually by swiping it to the side. Using the , icon, you can access the other quick settings and the multi-user option. You can also access this screen by pulling the bar down with two fingers. The notifications and quick settings have now been integrated into one screen. To receive notifications, you will need to configure the settings of each app that you download and/or for each account by going to: **Settings > Accounts > Add an account**. To go back to the **Home screen**, slide the bar upwards.

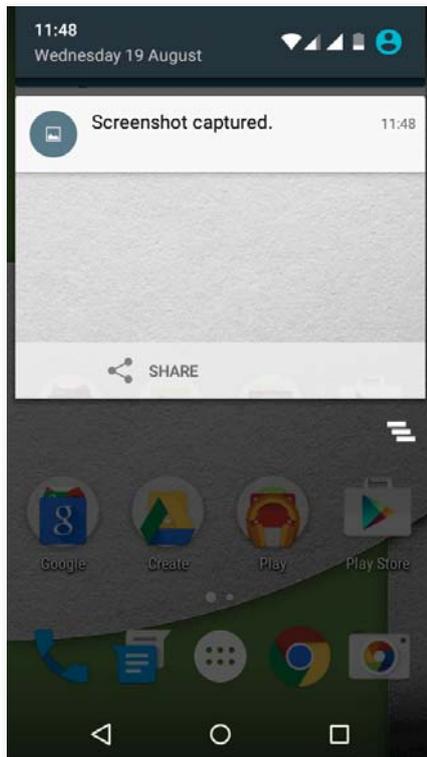

Swipe with 1 finger

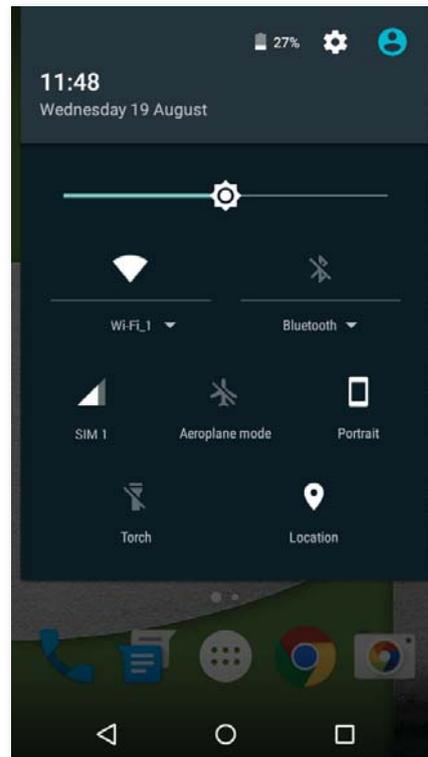


Swipe with 2 fingers



Keyboard

Pressing on any text field will bring up the virtual keyboard.

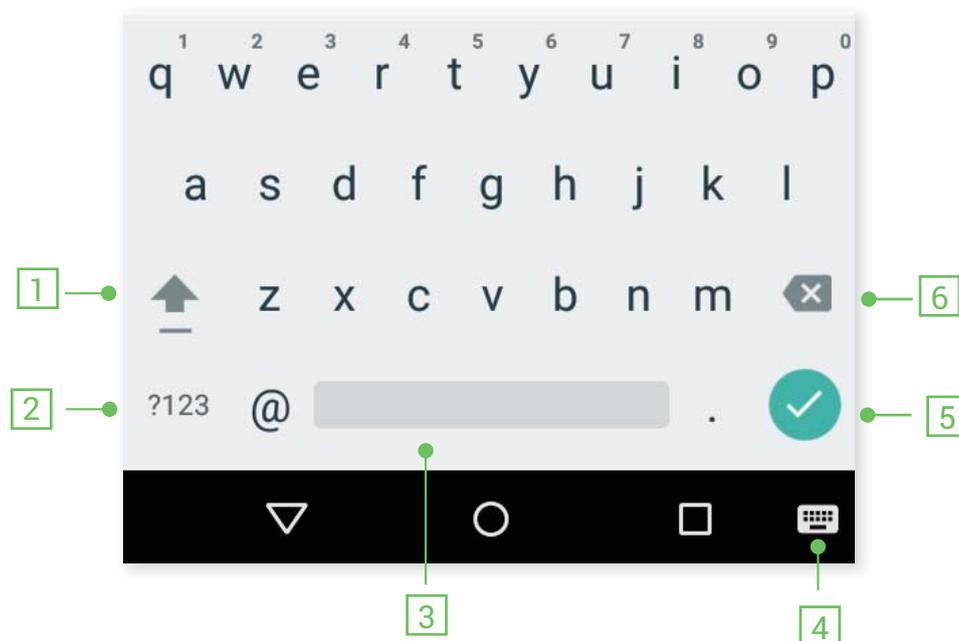

- 1 Enable/disable caps lock.
- 2 Change from letters to numbers and symbols, or vice versa.
- 3 Space.
- 4 Enables the keyboard function.
- 5 Enter/return.
- 6 Delete.



The keyboard options may vary depending on which application is being used.



You can find more information on the keyboard settings and languages for text entry via **Settings > Personal > Language and input**.



Phone

Managing Contacts

The **Contacts** application provides access to all of your saved contacts on your SIM card, the internal memory of your device and any online accounts you have set up. Different options will be available depending on where you have saved your contacts.

Using this application you can:

- Create new contacts.
- Update existing contacts.
- Create a group of contacts.
- Select the lists to be displayed.
- Make phone calls or send SMS.

Adding a Contact

You can add a new contact manually to your list via the **Contacts** app or via the **Call history**.

To add a contact manually:

1. Access the **Contacts** app via the **Home screen**.
2. Press the  icon and the list of available accounts will appear on screen enabling you to save the contact in the desired list of contacts.
3. Fill in the fields as desired:
 - a. First name and surname
 - b. Photo
 - c. Phone numbers
 - d. Email address
 - e. Postal address
 - f. Dates
 - g. Organisation
 - h. Notes
 - i. Chat
 - j. SIP
 - k. Groups
 - l. Website
 - m. Relationship
4. Press  to save the contact.



To add a contact via **Call history**, press on **Add to contacts** or the icon to the left of the number you want to add (pressing directly on the number will call it) and then press the  icon in the top right corner followed by **Add to contacts**. You can also select an existing contact and add a new number to it. Then select the account where you want to store the new contact, and fill in the details as described above.

Editing an Existing Contact

1. Access the **Contacts** app via the **Home screen**.
2. Select the contact you want to edit.
3. Press the  icon.
4. Press on an existing field to edit it.
5. Press on  to save the changes.

Using a Contact

You can use the **Contacts** app to make a call, send a text message or communicate with the contacts you have added to the list via various channels.

Simply press the name of the person you want to contact and select the corresponding option. You can also press on the contact photo to bring up a quick menu. Here you can:

- Make a phone call
 - Press the phone icon  of the number you want to call.
- Send an SMS
 - Press on  and enter your message.
- Send an email
 - Press on the desired email address.
- Other options (press the  icon in the top right corner)
 - Delete: Delete the selected contact.
 - Share: Share this contact with another of your contacts.



Contacts to Display

Select which contacts you want to be displayed from those saved to your Gmail account, your phone, your Facebook contacts and other lists.

To select the lists:

1. Open the contacts list and press the  icon.
2. Select the Contacts to display option.
3. Select which contact groups you want to be displayed:
 - a. All contacts.
 - b. Gmail contacts.
 - c. SIM 1 contacts.
 - d. SIM 2 contacts.
 - e. Phone contacts.
 - f. Customise: Select sub-groups from within any of the previous options (family, friends, etc.)

Importing and Exporting Contacts

This option allows you to copy a series of contacts from one source and paste it to another account, app or the internal phone memory. To do this:

1. Press on the  icon in the contact list.
2. Press on **Import/Export**.
3. Select the location for copying contacts.
4. Select the destination for pasting them.
5. Select the contacts to be copied.
6. Press **OK** to start the process.



We recommend that you always save contacts to your Google account, so that you always have a backup copy if your device is lost or stolen. This will also give you remote access to your contacts from any other device.



Calls

Press the  phone icon on the **Home screen** to access the call menu where favourites and the numbers you call frequently will appear. Press on the **Contacts** app to access the list of contacts. From **Recents**, you can access the incoming and outgoing **Call history**, in chronological order. You can also access this menu when your device is locked by swiping from the bottom left corner to the right. This menu enables you to:

- View the contacts that you call the most
- View the incoming and outgoing call history
- Make calls

There are a number of ways to make a phone call:

VIA CONTACTS


1. Access the **Contacts list** by any of the above methods.
2. Press the name of the contact you want to call.
3. Press on the number or the  icon to call.

VIA CALL HISTORY

1. Press the  phone icon on the **Home screen**.
2. Press on **Recents**.
3. Press the contact you want to call and then select **Call Back**.

VIA THE KEYPAD

1. Press the  phone icon on the **Home screen**.
2. Press the  icon to display the keypad.
3. Enter the number you want to call.
4. Press the  phone icon at the bottom of the screen to call the number you have entered.

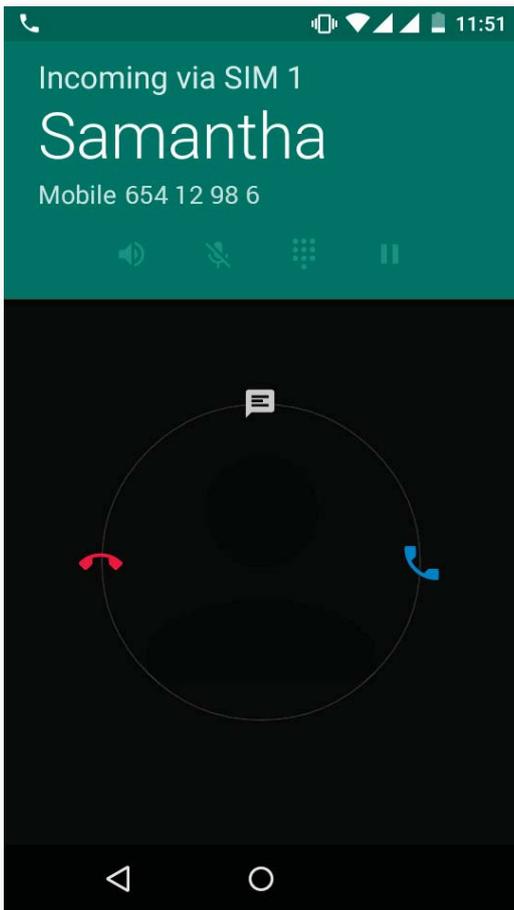

When you receive an incoming call, you can choose to answer it, reject it or respond via text message.

When a call is received, the screen will display the phone number calling you and a circle of blinking dots. Choose from the following options:

1. Press the circle and drag it to the left to reject the call.
2. Press the circle and drag it to the right to answer the call.
3. Press the circle and drag it upwards to respond with a text message.

If you receive a call when your device is not locked, a dialogue box will appear at the top of the screen to notify you. Press on **Answer** to take the call or **Dismiss** to reject it.






Options Available During a Phone Call

If you have answered the call, the top of the screen will show the caller's name (if stored on your lists of contacts), the phone number (mobile and/or landline) and the SIM card network in use for this call.

Various options will be displayed at the bottom of the screen during the call:

-  Activate the external speaker for hands-free operation.
-  Mute the internal microphone.
-  Open the keypad.
-  Pause the call and place the caller on hold.
-  Enables you to add another call and start recording.
-  End the call.

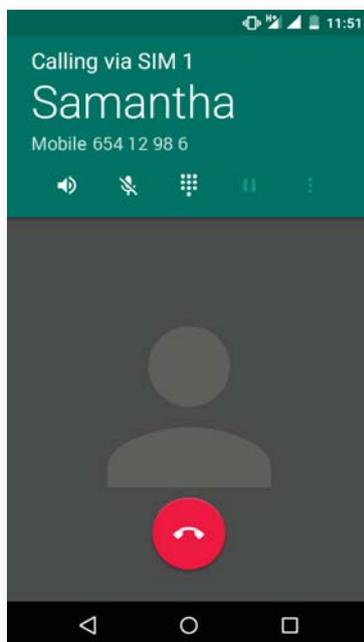

When you are connected to the new contact, you will be able to alternate the conversations or combine them in a conference call.

You can also hide your number for outgoing calls, so that the person you are calling won't see your number.



Hiding Your Caller ID

1. Press the  icon on the **Home screen**.
2. Press the  icon and select **Settings**.
3. Select **Calling accounts**.
4. Select the SIM that you want to configure.
5. Additional settings.
6. Press Caller ID.
7. Select the **Hide number** option.



Making a test call is recommended to check that you have hidden your number correctly. Some network operators do not allow hidden numbers and your number may still be displayed on outgoing calls.

SMS and MMS

Go to **Messenger** via the apps menu or the shortcut on the **Home screen**.

You can then specify the recipient(s) by entering their name(s) in the bar at the top of the screen or by pressing on the contact. If the recipient's number is not stored on your contact list you can type it in directly.

You also have to option to send an MMS (multimedia message). Press the  icon located to the left of the text entry bar. On pressing this icon, a variety of multimedia options will appear for attaching files to the MMS:

- Capture picture.
- Capture video.
- Access saved files.
- Emoticons.
- Record audio.
- Location.

Text messages are limited to a maximum of 140 characters per message. You can write longer texts which will be sent as a single message, but for billing purposes, your network operator will treat them as several messages. In contrast, there is no limit to the text you can send with an MMS after attaching the multimedia file.

Once you have entered the recipient, the text and any multimedia files (if sending an MMS), press the  **Send** icon.



Message Settings

Via the **Messenger** app you can configure various options for sending and receiving SMS and MMS. Press the  icon and go to **Settings** to configure:

- Default SMS app.
- Outgoing message sounds.
- Notifications.
- Sound.
- Vibrate.
- Advanced options.
 - MMS
 - * Your phone number.
 - * Auto-retrieve.
 - * Roaming auto-retrieve.
 - Advanced options.
 - SMS delivery reports.




Settings

Wi-Fi and Network Settings



Go to *Settings > Wireless and networks > Wi-Fi*.

If Wi-Fi is disabled, move the selector to the right and your BQ device will automatically search for and display a list of available Wi-Fi networks, which updates automatically.

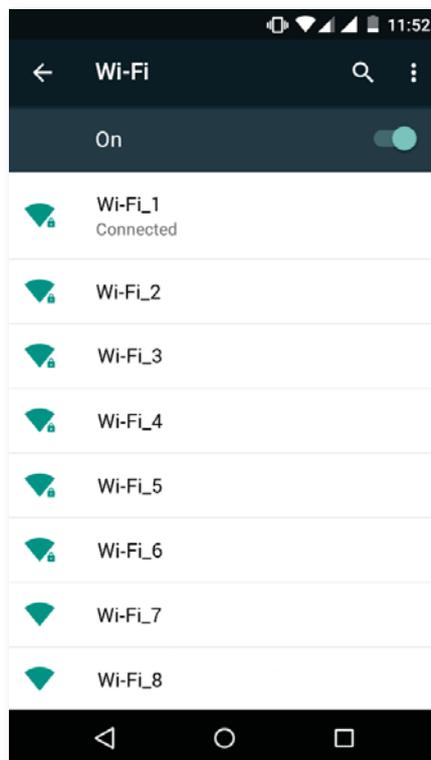

Press the name of the network you want to connect to, enter the password if necessary and press **Connect**. If it connects successfully, **Connected** will appear below the name of the network.

There is a time limit for entering the Wi-Fi password, after which the Wi-Fi will be disabled. We recommend selecting the **Show password** option before entering it, so that you can write it quickly and correctly.

When Wi-Fi is enabled, the device will automatically connect to the chosen network. If your BQ smartphone detects a network that has never been configured, it will notify you.




To access the **Network notification**, **Scanning always available**, **Keep Wi-Fi on during sleep**, **Install certificates**, **Wi-Fi Direct**, **WPS Push Button** and **PIN options**, go to **Settings > Wireless and networks > Wi-Fi**. Then press the  icon and select **Advanced settings**.

PIN-WPS. Depending on the router you are using, this tool makes it easier to connect to your Wi-Fi network securely, using a pin. You can connect and sync your smartphone with your router by going to **Menu  > WPS PIN** or by pressing the physical WPS PIN button on your router.

BLUETOOTH

Enable Bluetooth by going to **Settings > Bluetooth** and moving the tab to the right.

To rename your smartphone, show received files or access the advanced settings, press the  icon.

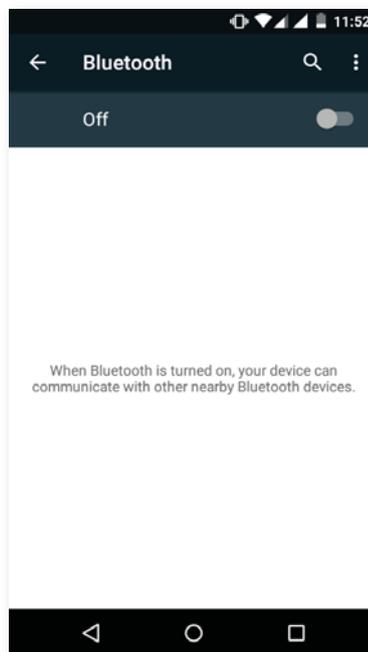

To connect your smartphone to other devices, go to **Settings > Wireless and networks > Bluetooth** and select the name that corresponds to your device. The device will be visible as long as the user remains in the Bluetooth settings area.



To connect to another device, provided that both devices are visible, simply press the name of the device you want to connect to. A pop-up window will appear on your screen with a **Bluetooth pairing request**. Press Pair on your BQ and confirm on the other device to sync them.



SIM CARDS

If you are using two SIM cards in your device, you can configure them here. To access information on the two cards, you will need to enable them first by sliding each of the tabs to the right.

You can enable, disable and configure each card for making voice calls, video calls, sending texts and for mobile internet. You can also customise each SIM with a different colour. This way it will be easier for you to identify the notifications received for each of your SIMs.

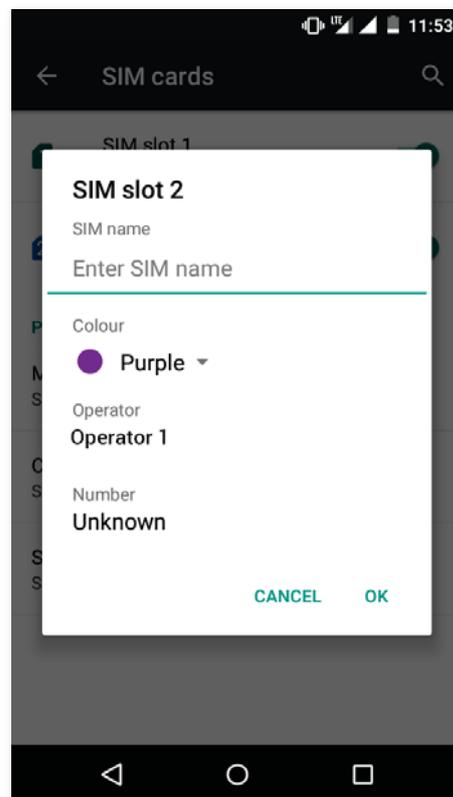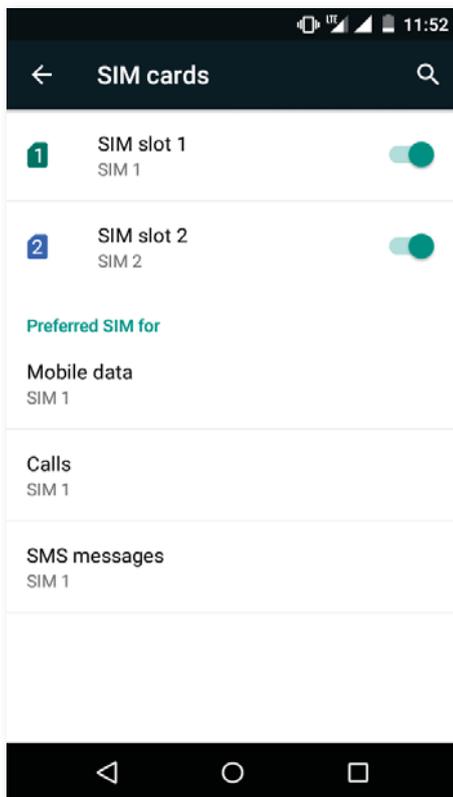

You cannot enable the connection on both SIM cards at the same time, but you can alternate between the two while the device is switched on.




DATA USAGE

In this section, you can view the statistics of each application for data transfers via Wi-Fi or mobile internet.

You can also **Restrict background data**, **Show data consumption** on the Lock screen and see how much data is consumed by the various resources and apps for each SIM card.

If you set a limit for mobile data usage, the data connection will be disabled once the limit has been reached.

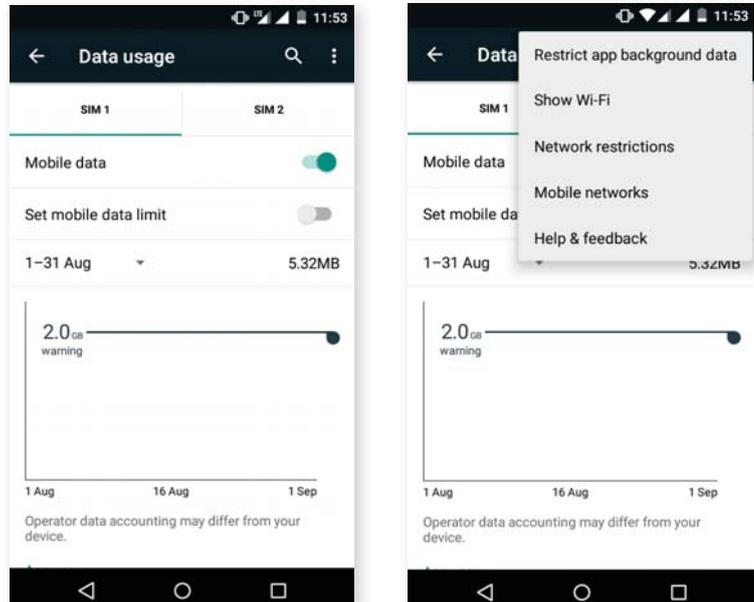

Press the  icon to access the advanced settings and **Restrict background data**, **Show Wi-Fi**, **Network** restrictions and **Mobile networks** options, where you can enable **roaming**.



Both SIM slots support 4G coverage and you can choose the either one of them.

••• MORE


Here you can enable the following:



Aeroplane mode: Enabling it will disable all wireless connections.

Default SMS app: Choose from SMS or instant messaging.

Tethering and portable hotspots: You can convert your BQ into a Wi-Fi, USB or Bluetooth access point to share the connection with one or multiple devices.

Simply press on **Portable Wi-Fi hotspot** and configure it so that the settings are the same as those on the device you want to connect to your shared Wi-Fi network.

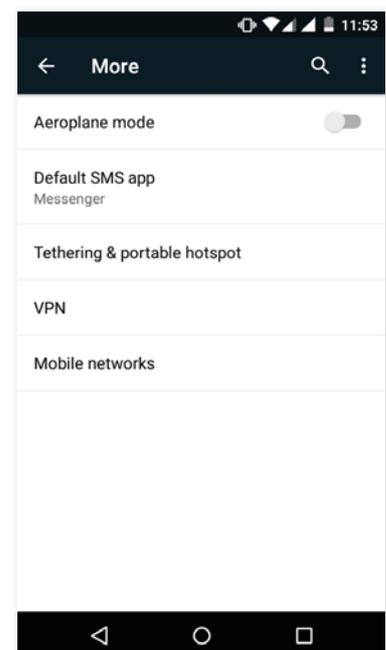

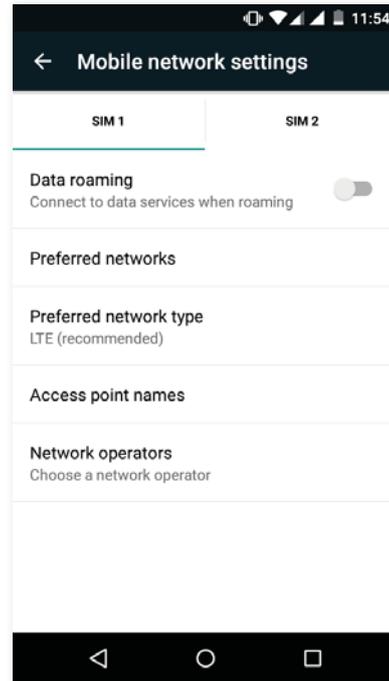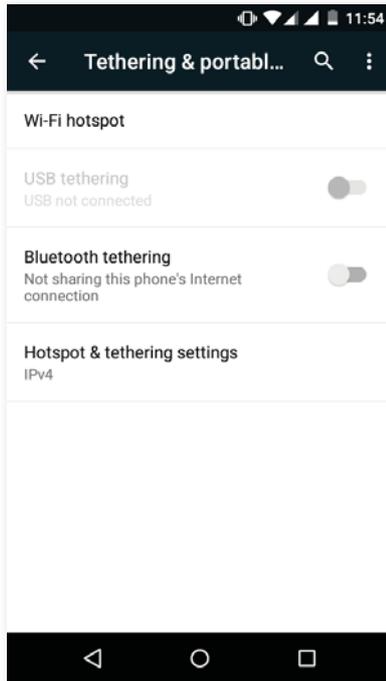

To share your connection via USB, connect your BQ to a computer using the cable and select the **USB tethering** option.

To share your connection via Bluetooth, select the **Bluetooth Tethering** option. To share your device's network with a computer, Bluetooth must be enabled on both devices.


VPN: This option enables you to configure a virtual private network.

Mobile networks: Access the settings for both SIM cards where you can enable **data roaming**, select the preferred **network type**, set up the **APN** and select a **network operator**.



Device settings

DISPLAY

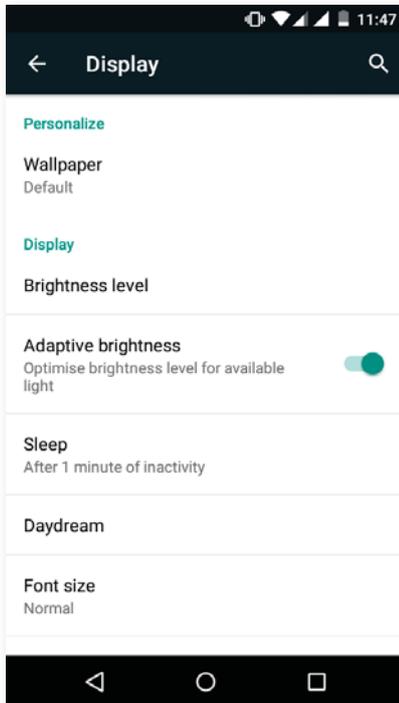

Wallpaper: Select an image or video to use as wallpaper. You can choose between live wallpaper, system wallpaper or photos from your Gallery or video images.

Brightness level: Adjust the brightness of the screen.

Adaptive brightness: Optimise the brightness level to the light available.

Sleep: Set the time delay before the screen automatically switches off.

Screensaver: Enable or disable this option.

Font Size: Choose from four different font sizes.

When device is rotated: Enable or disable automatic screen rotation when turn your smartphone sideways.



Double tap control: Enable or disable this option so you can switch the display on or off by double tapping the screen.

SOUNDS AND NOTIFICATIONS

Sound

You can adjust the **volume of the ringtones, alarms and notifications**, as well as your multimedia content by moving the volume sliders up or down.

Here you can select the ringtone for incoming calls for each SIM, the notification sounds, and you can also enable or disable sound and vibrate for some system features, such as: **Dial-pad touch tones, Touch sounds, Screen lock sounds and Vibrate on touch.**

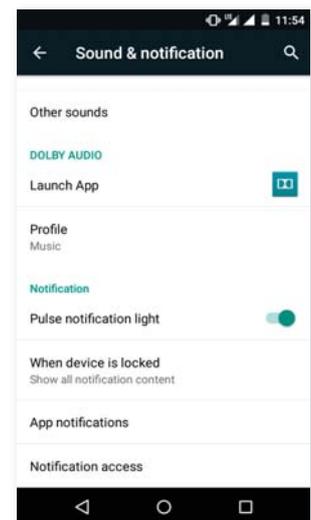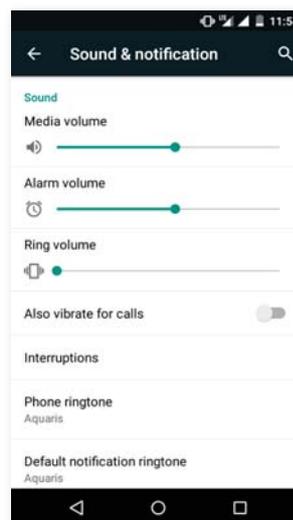



You can quickly access these settings using the volume keys. You can also configure interruptions. Choose from the following options: **None**; Allow only **priority** interruptions (you can also configure it by pressing ) or **All**, which enables sound for all notifications.



Dolby Audio

Under Dolby Audio, you can Launch the app to configure it, which is explained later, or you can select a Profile.


Notification

To make it easier to identify notifications, you can enable the **Pulse notification light**, a white LED that flashes on and off when you receive one.



STORAGE

You can also check the usage of the various storage units, **unmount the SD card** to remove it safely and **erase all data** from the SD card or internal memory.

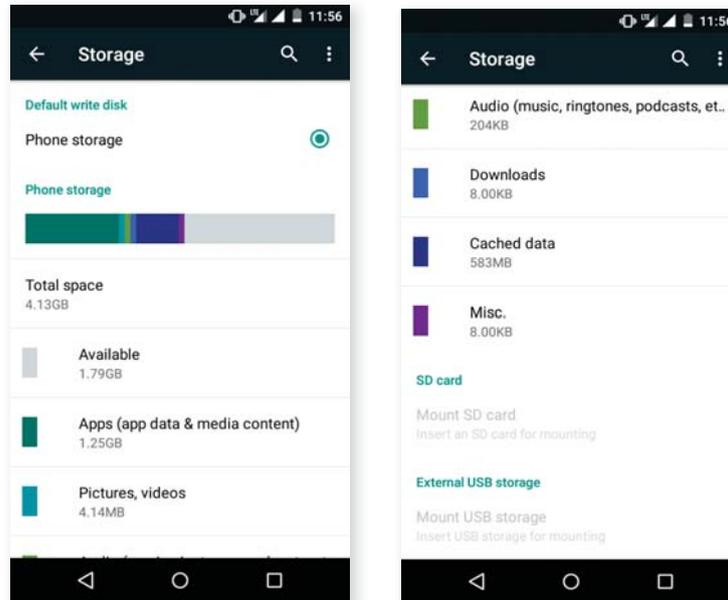

If you remove the MicroSD card from the device and continue using it, some of your apps might not function until you reinsert it. Make sure you switch off the phone or safely remove the MicroSD card (via the Storage menu) every time you remove it or insert it, otherwise the card could get damaged and data could be lost.



BATTERY

You have the option of displaying the remaining battery life as a percentage in the status bar. You can also view a graph showing battery duration and usage.



APPLICATIONS

Access all the settings and information for all your apps.



USERS

If you want to share this device with others you can create additional users.

You can also access this option by pulling down the notifications bar and pressing the  icon. Each user has their own space and can personalise it with their own applications and wallpapers, etc. Any user can accept update app permissions on behalf of all users.




Personal Settings



LOCATION

Activating this option allows **access to your location** to apps that request it (such as preinstalled navigation maps). The **Power Control** widget also allows you to activate the **GPS satellites** option, or alternatively, it can be activated by pulling the Notifications bar down with two fingers and selecting the **Location** option.

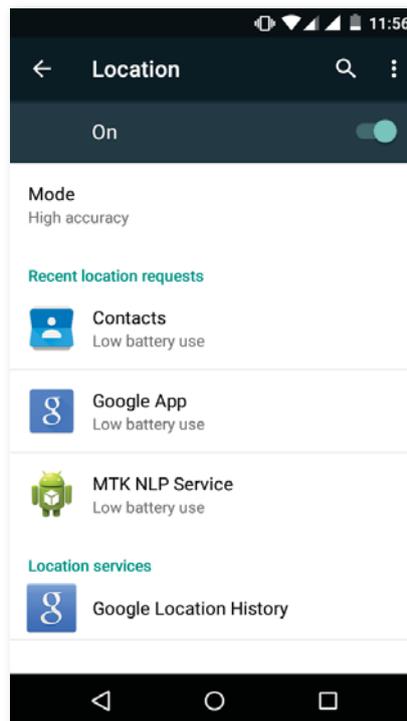

There are two ways of providing access to your location: **GPS satellites** and **Wi-Fi & mobile network location**.

Under **Mode** you can choose from:

- High accuracy: GPS, Wi-Fi and mobile networks.
- Battery saving: Only Wi-Fi and mobile networks.
- Device only: GPS only.



Under the **Location** menu, you can also view a list of apps that have recently requested location access and the battery usage involved.



SECURITY

Here you can configure the **Screen lock** (the locking method and the owner information displayed on screen when locked), enable **Encryption** with an access password or PIN number, and set up SIM card lock.

The **Smart Lock** option allows you to add Trusted devices, Trusted places or a Trusted face. Trusted places can be easily added by dragging the marker on the map or searching by name of location. The device will not request the password, PIN or pattern if you are in a location which has been saved as a Trusted place.

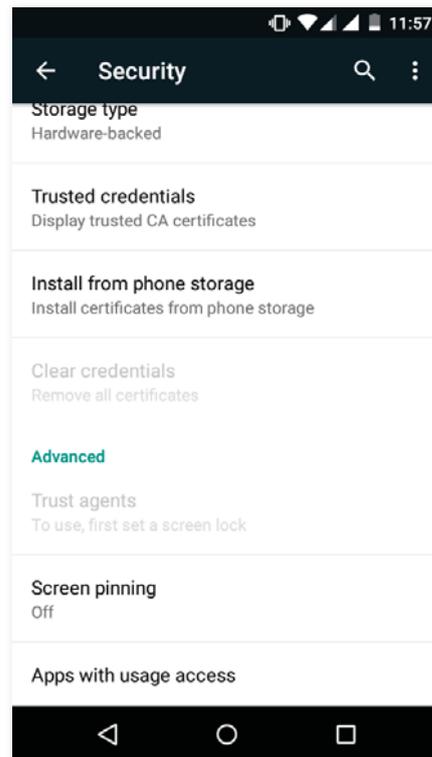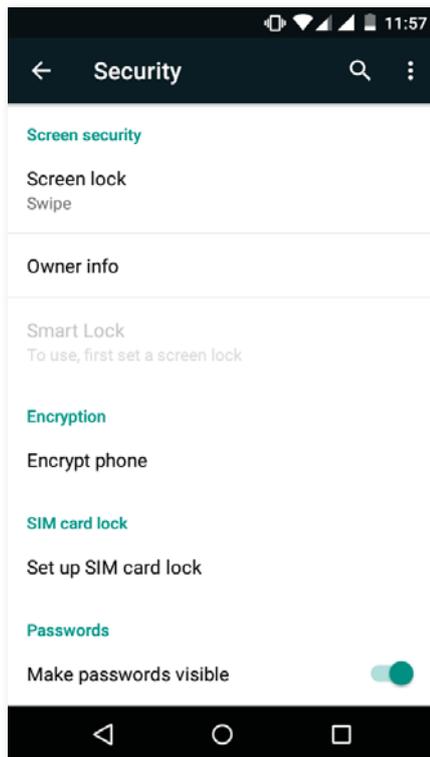

Under **Device administration**, you can view, enable and disable administrators, or you can permit or deny installation of apps from outside the preinstalled app store. You can also manage the **Credential storage**, view trusted CA certificates and install certificates from your SD card.

Under the **Advanced** section, you can turn on **Screen pinning**, which enables the current screen to remain in view until you disable it.






ACCOUNTS

Here you can choose which email accounts (POP, IMAP or Exchange) you want to sync with your BQ. To add a new account, press the **Add account** icon. Select an Exchange (email for business) or Google account. Set up the account by following the instructions that appear on the screen. Then press on the email address to sync your email, contacts, calendar and other options (provided that syncing is permitted by the service provider). You can enable or disable automatic syncing by pressing the  icon.



LANGUAGE AND INPUT

Here you can set up the system language, activate spell checker and personal dictionary. You can also configure the keyboard, text input methods, voice typing and pointer speed.

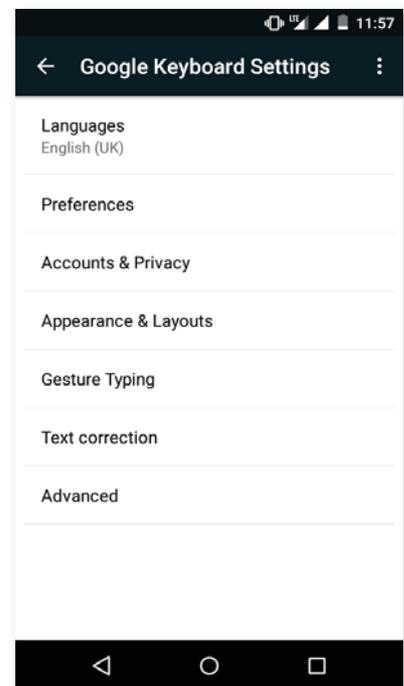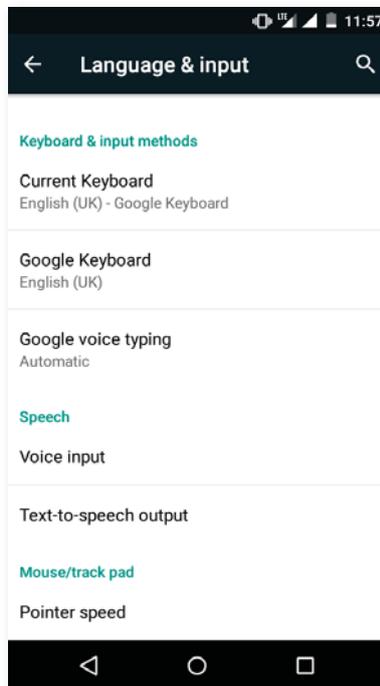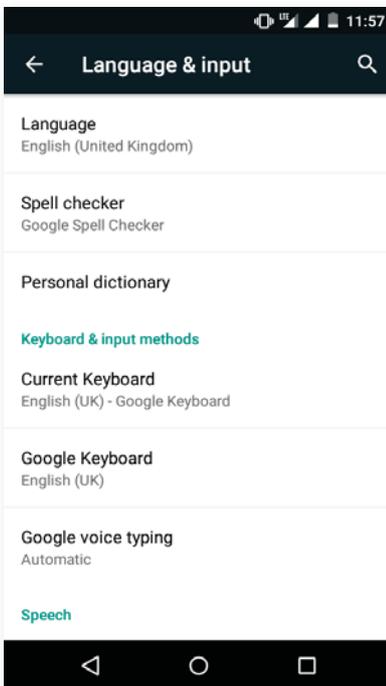


The advanced settings for each entry method allow various options to be selected, such as vibrate and sound on keypress.



BACKUP AND RESET

Here you can back up your data, app settings, Wi-Fi passwords, etc. to the Google data servers. To back up your data, a Google account must be configured on your device.

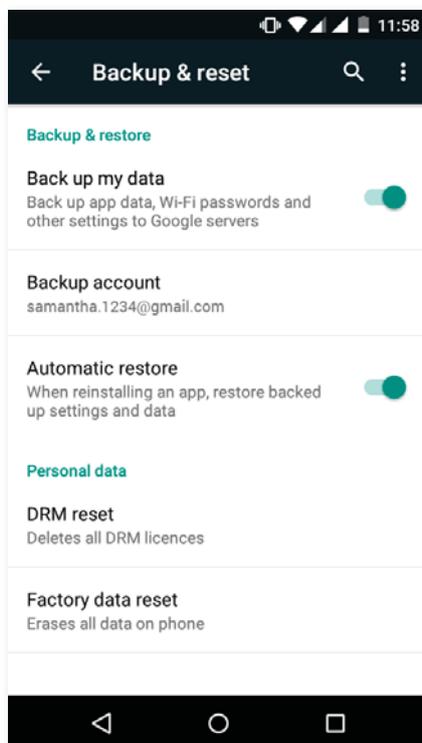

You can also carry out a factory data reset and delete all pending DRM (digital content protection) licences if you have already deleted the corresponding files.




Carrying out a factory data reset will erase all the data on your phone's internal SD and remove any additional programs and apps installed. Making backup copies of all your multimedia files is therefore recommended before restoring the factory settings.



System Settings



DATE AND TIME

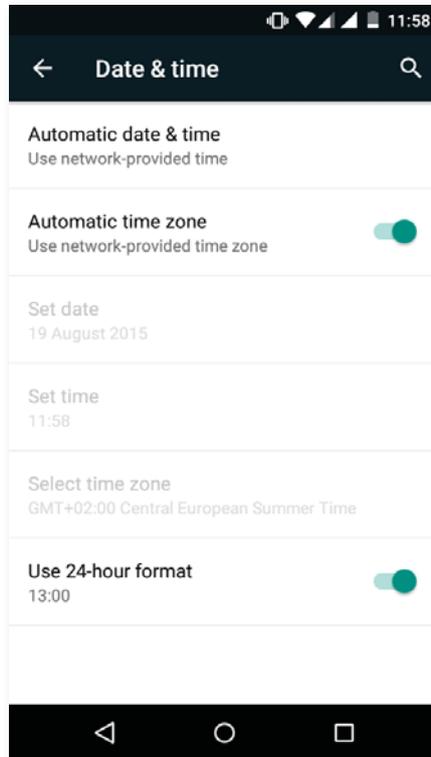

Automatic date and time: Adjust the time automatically based on location information or mobile network. Disabling this option will activate manual date and time configuration.

Automatic time zone: This option lets you enable/disable the automatic time zone provided by the network. Disabling this option will automatically activate the Select time zone option for manual configuration.

Use 24-hour format: Enable/disable the 24-hour time display format.





SCHEDULED POWER ON AND OFF

Enables you to set times to automatically switch your device on or off.



ACCESSIBILITY

Here you can access certain system services to facilitate access to the device, such as large text, spoken word, physical buttons and virtual buttons, spoken passwords, quick boot, etc.

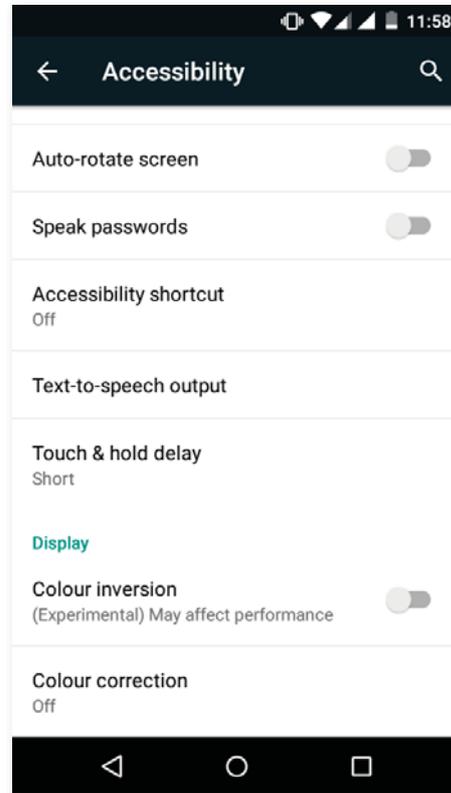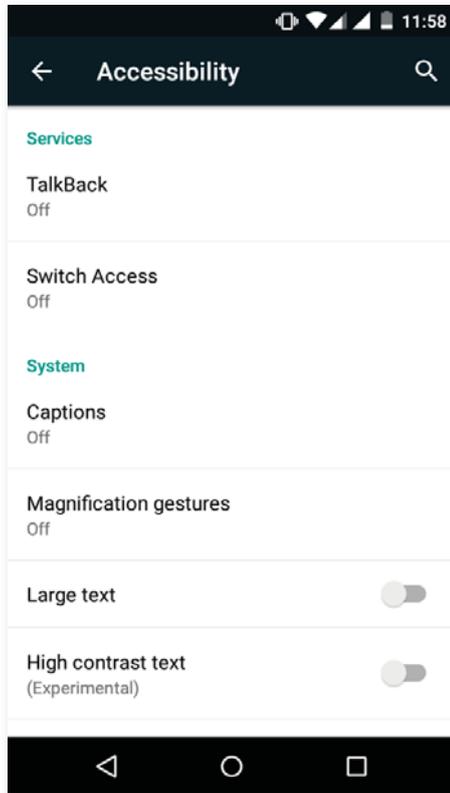

Services

Talkback


Your smartphone also includes the TalkBack app, which offers spoken feedback and visual settings specially designed for visually impaired users.

When you open the app for the first time, a tutorial will guide you through the basic settings:

Speech volume: Adjusts the volume of speech in relation to multimedia volume.

Use pitch changes: Enables/disables the use of lower tones when a key is pressed.

Keyboard echo: This option speaks typed keys aloud. Speech is enabled/disabled when the screen is switched off.

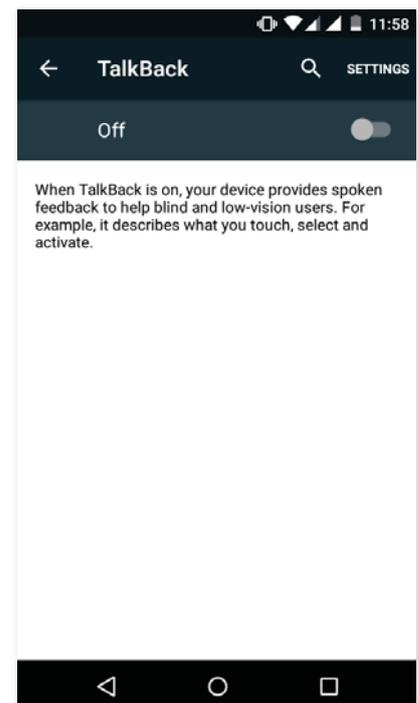



Speak when screen is off: This option enables/disables voice notifications when the screen is off.

Use proximity sensor: Enables/disables the proximity sensor to turn off speech whenever you want.

Shake to start continuous reading: Enable the continuous reading function by shaking your device.

Speak caller ID: Enables/disables the option to say the name of the person calling.

Vibration feedback: Enables/disables vibration feedback when an option is selected.

Sound: Enables/disables sound feedback when an option is selected.

Focus speech audio: Enables/disables the option to reduce multimedia volume during a conversation.

Sound volume: Adjust the sound volume in relation to multimedia volume.

Explore by touch: Enables/disables the touch navigation feature which allows you to browse your smartphone using gestures, pressing once to select and twice to accept.

Automatically scroll list: Enables/disables automatic scrolling of lists.

Single-tap selection: Enables/disables the option to select with a single tap, when the option has been selected beforehand.

Launch 'Explore by touch' tutorial: Launches the tutorial for touch navigation.

Manage gestures: Modify and configure a range of gestures in order access various accessibility options.

Manage customised labels: Edit the contents of your custom labels.

Resume from suspend: You can specify whether the program resumes when the screen is activated, when the screen is locked or only via the Notifications bar.

Developer settings: Settings for developers and advanced users.

System

Captions: Enables you to configure the captions. Standard options are:

Language: You can specify the language you want to view them in.

Text size: enables you to increase or decrease the font size.

Caption style: You can select the default style or you can customise them.



Magnification gestures: This function enables you to zoom in or out of the screen. The following gestures are available:

To zoom in, triple-tap the area you want to magnify.

To zoom out, triple-tap the magnified area.

To scroll freely, slide two or more fingers left, right, up or down.

To decrease the zoom, pinch the screen with two fingers or spread them apart to increase it.

To expand the content temporarily, triple-tap the area you want to expand and move around the page without lifting your finger off the screen.

Zoom does not affect the keypad or the navigation bar.

Large text: Enables/disables magnification of the system font size and the font size for apps to facilitate viewing of content.

High contrast text: An experimental feature that changes the text displayed on the device to black or white (depending on the colour of the original text) for easier reading.

Power button ends call: Enables/disables the option to hang up by pressing the power button.

Auto-rotate screen: Enables/disables automatic screen rotation when the screen is placed in a horizontal position. This option is not activated via the Home screen and the native Apps menu.

Speak passwords: Enables/disables the option to speak passwords when the TalkBack service is activated.

Accessibility shortcut: Using YES/NO commands, you can enable or disable direct access to accessibility features by pressing the power button until you hear a sound or feel a vibration. Then touch and hold the screen with two fingers until a confirmation is received.

Text-to-speech output: Direct access to options for text-to-speech output. To adjust these options, go to *Settings > Language and input > Text-to-speech output*.

Touch & hold delay: Configure the time delay between pressing and holding an option and displaying the corresponding options. You can choose Short (default), Medium or Long.

Enable QuickBoot mode: A partial power off that leaves the system on hibernate, enabling you to start up the system even faster.

Display

Invert colours: Inverts the colour values. Changes text displayed in black on a white screen to white text on a black screen. This is an experimental feature.

Colour correction: Enables colour blindness compensation.



PRINTING

Android 5.1.1 comes with wireless printing included as standard and the application also allows you to connect your printer to the internet (check compatibility with your printer manufacturer). This feature lets you wirelessly sync the printer with your smartphone, tablet or computer and print your documents from any location.



ABOUT PHONE

This section displays the status of the device (battery, network, serial number, etc.), legal information, Android version, model number, baseband, kernel versions and the build number. You can search manually for updates (for more information on firmware updates, see APPENDIX A at the end of this manual).






{ } DEVELOPER OPTIONS

This section is intended for advanced users only, as it contains settings that are useful for app developers. These settings should not be modified if you are not an advanced user.

The menu includes various options, such as:

- Take bug report.
- Stay awake.
- Process stats.
- USB debugging.
- Allow mock locations.
- Force GPU rendering.
- Show CPU usage.
- Background process limit.

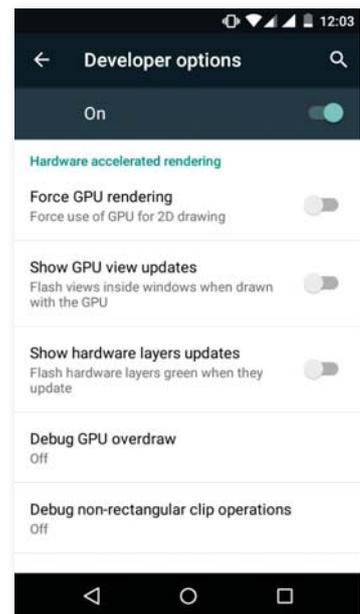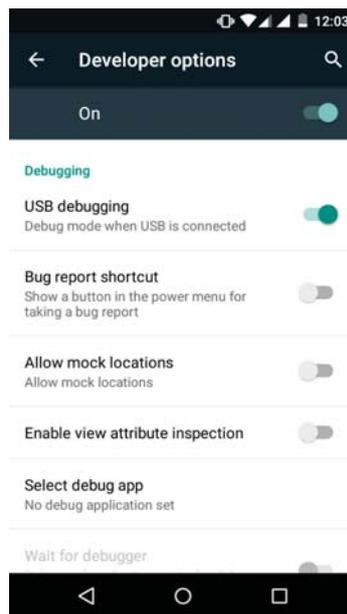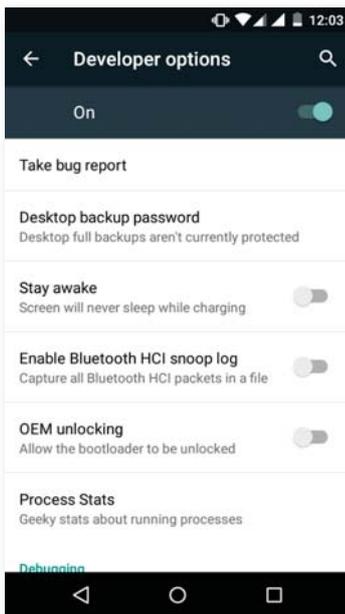

The **Developer options** menu is hidden in Android by default. To enable it, go to **Settings > About phone** and press the last option (Build number) repeatedly until a message appears to say that you have correctly enabled it. You will then be able to access these options via the main **Settings** menu.



Performance Settings

Optimising Battery Life

You can prolong the life of your battery by disabling features you don't need. You can also control how the application and system resources consume battery power. To optimise the configuration, press the **Apps menu**  and go to **Settings**.

- If you are not using Wi-Fi, Bluetooth or GPS, you can configure it under **Settings**, as explained earlier.
- Any **maps** and **navigation** apps that you are not using should be closed, as they require GPS access and consume more power.
- Optimise the brightness level to the ambient light available under Adaptive brightness. You can adjust it by going to **Settings > Display > Adaptive brightness**.
- Select a short screen timeout interval, by going to **Settings > Display > Sleep**.
- Disable the auto-sync feature for certain apps, by going to **Settings > Accounts**. Note that you need to sync your email accounts manually, and you will not receive any notification when updates becoming available.
- Switch to **Aeroplane mode** by holding down the power button until a window displaying this option appears, or go to Settings then Network to select it.

Monitoring Battery Usage Information


To optimise your battery configuration, go to **Settings > Battery**. The list at the bottom of the screen shows battery use for the various apps and services on your device. Press the graph to access more detailed information. The screen showing use details for some apps also has buttons with recommendations on how to adjust your settings for maximum energy saving..

To access **Battery saver mode**, which reduces power consumption at system level, press the  icon in the top right corner.



Email address

Setting Up a Gmail Account

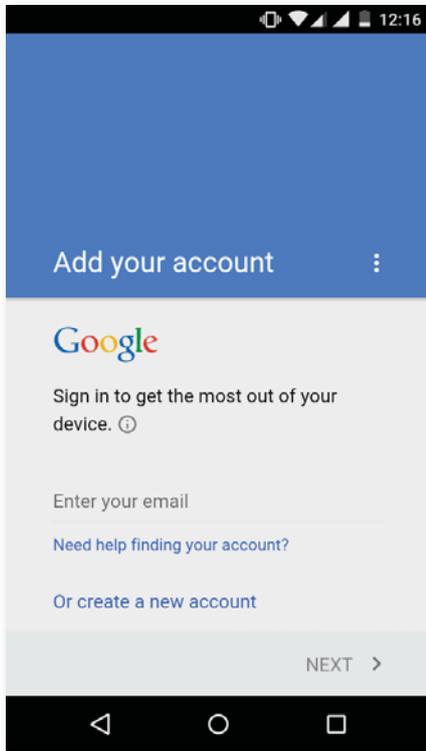

You will need to set up a Gmail account the first time you switch your device on or whenever you carry out a factory reset (deleting all data).

If you don't have an account already, the system will ask you to set one up to access certain features of the device. If you already have an account, you can use it for this initial setup process.

Some apps will not be available until you have correctly configured an account. Make sure that Gmail is always updated to avoid any issues.

From within Gmail (which can be accessed via the Apps menu) you can access your inbox and adjust various settings, such as how emails are displayed, how you can read and reply to them, and notifications. You can also group several accounts together, so that you receive emails from different addresses at the same time.

Any account is accountable with the Gmail app.

Sending an Email

1. Open the **Email** app and press **Compose** .
2. Enter the recipient's email address, add a subject heading and then write your message.
3. Press **Send** .

Add attachments by pressing the  icon.

Replying to an Email

You can reply to an email using one of the following three options:


- **Reply**: Only the person that sent the last message will receive your reply.
- **Reply all**: All the users listed as recipients of the last email will receive a copy of the answer.
- **Forward**: You can send a copy of an email to a different user.

The forward option on some email clients only allows the attached files of the previous email to be sent.



Multimedia

Your smartphone has both front and rear cameras. To enable them go to **Apps menu > Camera**. To switch from one to other, press on the **☰**, icon at the bottom right of the screen and then press **📷**. Both cameras can be used to take pictures and record videos. The rear camera also has autofocus and flash.

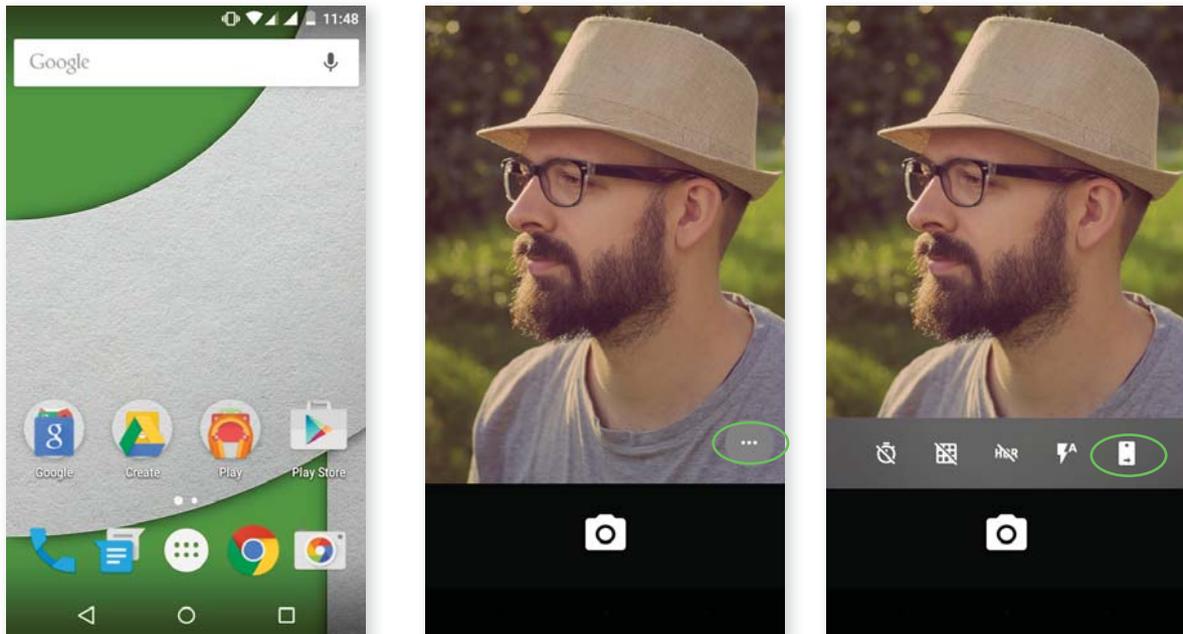

Swipe gently from left to right to access these options: **Photo Sphere, Panorama, Lens Blur, Camera or Video**.

To shoot, press the icons that appear at the top bottom of the screen, which will vary depending on the option selected. You can also press any of the volume keys.

To use the **zoom** function while taking photos or recording video, use the pinch gesture on the screen before pressing the shutter release or commencing recording.

To access the gallery after taking a photo or recording a video, press the circle in the bottom right corner or swipe gently to the left.



Camera Mode

You can access the settings by pressing the **•••** icon in the bottom right corner.



Here is a brief explanation of the icons:

 : Enables or disables the countdown timer. You can select an interval of 3 or 10 seconds.

 : Creates a grid to make it easier to frame photos.

HDR : High Dynamic Range is a photo mode that increases the contrast of images without losing any detail, by taking 3 shots with different exposures and superposing them onto one image. The HDR option is not compatible with the continuous shot mode or the flash.



 : You can select automatic flash mode or to enable and disable it manually.

 : Switches between the front and rear cameras.



Video Mode

You can access the settings by pressing the **⋮** icon in the bottom right corner. Here is a brief explanation of the icons of the menu:

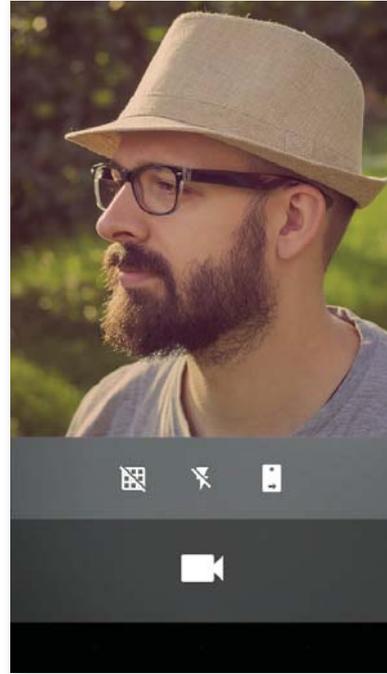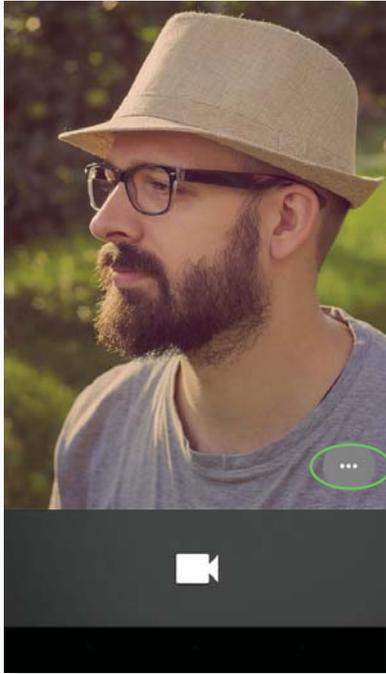

 : Creates a grid to make it easier to frame the video.


 : You can select automatic flash mode or to enable and disable it manually.

 : Switches between the front and rear cameras.



SETTINGS

You can access the settings by swiping gently to the left to right.

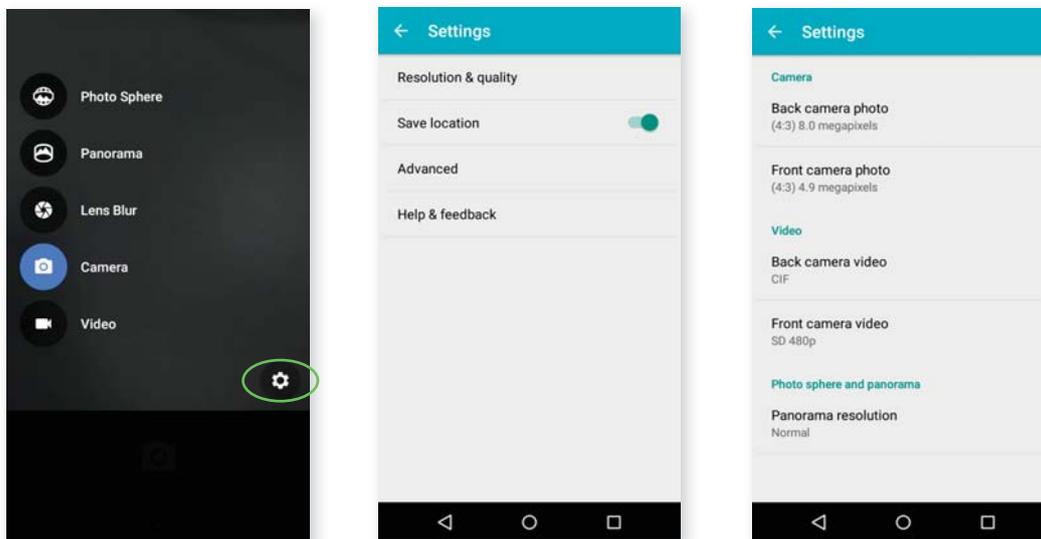

On swiping to the right, a **Settings**  icon and a menu to adjust the Photo Sphere, Panorama, Lens Blur, Camera and Video settings will appear.

Resolution & quality

- Camera
 - **Rear camera photos:** Set the resolution for photos taken with the rear camera.
 - **Front camera photos:** Set the resolution for photos taken with the front camera.
- Video
 - **Rear camera videos:** Set the resolution for videos taken with the rear camera.
 - **Front camera videos:** Set the resolution for videos taken with the front camera.
- Photo Sphere and panoramic images
 - **Panoramic image resolution:** Select High, Normal or Low quality.
- Lens Blur
 - **Picture quality:** Select Normal or Low quality.

Save location

Enable this option to add information on where your photos or videos were taken.

Advanced

Manual exposure: Enable or disable the option to adjust the exposure manually.



Help and feedback

Access instructions and tips on how to use the camera.

Panoramic Mode

To access the settings, press the ●●● icon in the bottom right corner, which will enable you to select the panoramic mode from these options: horizontal, vertical, wide angle and fish eye.

Try to keep the movement as straight as possible to capture the best shots. A number of white circles will guide you through the process, which turn blue as you start to capture the image.

Once you have completed the process, the frames will be saved automatically.

You can also interrupt the panorama by pressing the ✓ button half-way through the process.

Photo Sphere mode

This feature enables you to take spherical photos in any direction with an angle of up to 360°.

A number of white circles will guide you through the process, which turn blue as you start to capture the image.

Press the ✓ icon to finish the capture.

Lens Blur mode

This feature enables you to take pictures with one or various objects in focus and the rest out of focus.

Try to hold it as straight as possible and follow the white arrow to achieve optimum results.

You can access the settings menu by pressing the ●●● icon in the bottom right corner, where you will see the following icons:

: Creates a grid to make it easier to frame photos.

: Switches between the front and rear cameras.




Photos

To view the images and videos stored on your device, go to the **Photos** app located on the **Home screen**.

The main screen of the **Photos** app allows you to browse the images and videos stored in various different locations on your device.

Press a folder to access its content. Press on an image to view it. To view a video, press on it and the **Video player** will open.

To access the gallery after taking a photo or recording a video, press the circle in the bottom right corner or swipe gently to the left.

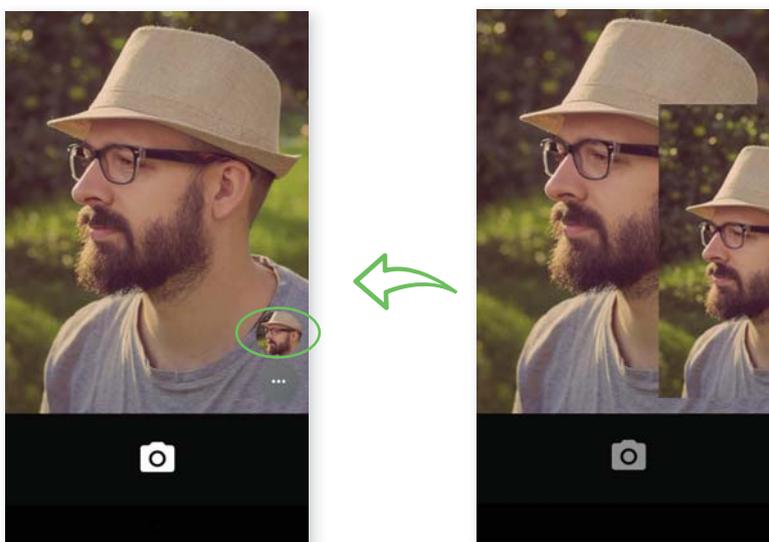

While you are viewing an image you can also access the following options:

- Press the Menu button or the  icon to display the following options: **Slideshow, Set as, Delete device copy** and **Print**.
- Press the  icon to display a list of various compatible apps and social networks for sharing the photo or video.
- Press the  icon to open the image editor to add filters, frames, special effects, contrast, etc.
- Press the  icon to access information on the photo or video.
- Press the  icon to delete the photo or video.

To zoom in on an image, simply double-tap the screen to magnify it and double-tap again to return to its original size. You can also pinch to zoom by spreading your fingers apart to zoom in, and moving them together to zoom out.



By default, Android does not allow new folders to be created within the Gallery or files to be moved from one folder to another. However, there are some free third-party apps that allow this, as well as other features. The file manager preinstalled on your BQ smartphone is an example of such apps.



Play Music

Your smartphone comes with a preinstalled audio player, which allows you to play your favourite music and audio tracks and is also integrated with the app store, enabling you to purchase and download music.

There are two ways you can load music onto your device:

- Connect your phone to your computer in Mass storage mode and transfer the music to the internal memory. To do this, simply connect the phone to the computer using the USB cable provided, copy the files from your computer and paste them into the Music folder in your phone's internal memory or onto the MicroSD card, if one is in use.
- Open the Play Music app and go to the Play Store via the icon in the main menu, where you can search for and browse a large quantity of artists and songs, purchase them and add them to your own music collection.

Once you have downloaded the music onto your phone, you can find it by going to the main menu in the Play Music app and selecting the **My Library** option. You can organise your music by genre, artist, album or song list.



The artist, album and other information used by the app to create the playlists can also be modified using your computer. Right-click on the file you wish to edit, then select **Properties > Details** in the pull-down and pop-up menus, respectively.

You can also conduct a keyword search within your music library in order to locate all the albums, songs, etc. that match the description you have entered.

Once you have selected a song, simply press it and a bar will scroll across the screen displaying information on the song currently playing. To open the panel of player options, press the bar located at the bottom of the screen. This panel gives you options such as continuous playback (press the icon on the left to play the list of selected songs again when it has finished), repeat the last song, pause, skip and random.

On this screen, you can also use the  and  icons to rate the song. You can also press the  icon located in the top right corner to access more options, such as adding the current song to an existing playlist or creating a new one.

The main screen of the Play Music app also contains the Playlists option, where you can find all the playlists previously created, and the  icon to show a list of the songs you have liked.

Play Movies

Your smartphone comes with a **Play Movies** app by default, enabling you to buy films from the app store and play them on your device.

After opening the app, you can browse the collection of movies and shows, as well as the list of recommendations from Play. Go to the main menu and press on **My Library**, where your purchases will be listed under My Movies or My Shows. Press **Add to wishlist** if you want to save anything for viewing later.



Apps

Play Store

The App store gives you access to a huge range of programs, games, music, movies, books, and more. Each category contains further sub-categories to help you find exactly what you are looking for.




Important: Be aware that not all downloads are free, and additional costs may be incurred. For paid downloads, the price will appear next to app description, and you will be asked to confirm before downloading to avoid being charged unintentionally.

Apps from Unknown Sources

To order to download apps from another app store or a website, you will first need to configure the system to accept apps installed from unknown sources. Go to **Settings > Security** and move the **Unknown sources** slider to the right. Remember to only install apps from trusted sources.

To install apps from outside a website, you must be able to access the *.apk file on your device. These apps are usually compressed using a program such as WinRAR, which means the downloaded file is a *.rar file and will need to be unzipped using a computer..

On opening the *.apk file, the system will ask you to confirm installation of the app. After pressing Accept, the app will be installed.

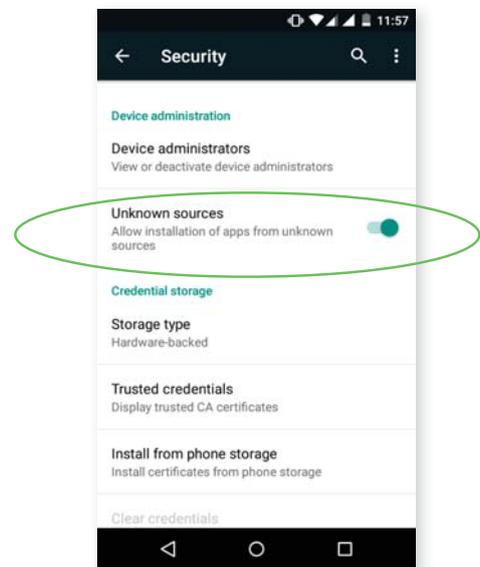

Preinstalled Apps

To access the list of preinstalled apps, press the  icon on the **Home screen**. You will then see all the apps installed on your device.

Internet Browser

You can browse the internet opening multiple tabs and accessing several websites at the same time. To do this, open the browser and press  then **Settings > Merges tabs** and apps and disable the option. A square icon with a number inside will then appear in the top right corner of the screen indicating how many tabs are currently open. Pressing the icon enables you to view an active tab or you can create a new one. After you have created a new one, enter the website address manually in the white text field at the top of the screen, or press one of the suggested websites displayed in the centre of the screen (suggestions are based on the websites you visit most frequently).

To close a tab, simply press the tab icon (the square with the number inside in the top right corner) and press the **X** or you can hold and drag the tab you want to close to the left or right.



Press the **Menu** button  to access the following options:

- **Go back/forward**  : This option enables you return to websites you have recently visited, and move forward again to the most recently viewed page.
- **Add bookmark** : This option enables you save a page so that you can easily return to it later. Bookmarks can be grouped into folders.
- **Reload page** : Update the current page to refresh its content.
- **New tab**: Opens a new tab so you can browse different websites at the same time.
- **New incognito tab**: browse in a private tab that is not stored in the browser history.
- **Bookmarks**: Lets you access the list of saved bookmarks.
- **Recent tabs**: Access the list of recently-closed tabs and restore them if desired.
- **History**: Provides a chronological list of the websites you have recently visited.
- **Share**: Enables you to share a website with other users.
- **Print**: Enables you to print the current page to a compatible wireless printer.
- **Find in page**: Search for a specific word or phrase on the current page.
- **Add to home screen**: Select a website to appear as your home page on opening the browser.
- **Request desktop site**: By ticking this box, you will be able to view a website exactly as you would on a computer and eliminate special versions for mobile devices.
- **Settings**: Gives you access to the basic and advanced browser settings.
- **Help & feedback**: This option allows you to view feedback from other users, give your own opinion and access the Help section.

Hangouts

The instant messaging app allows you to configure your email address and telephone number so that you can chat with your contacts. You can also set this app as the default choice for sending SMS.

Calendar

With the Calendar tool you can manage your daily tasks and sync them with your email account so that you can share appointments, meetings and events with your contacts. It also enables you to set up reminder alerts and notifications so that you never miss an appointment. The app also allows you to sync your calendar so you can view it from any other mobile device.

You can create a new event by pressing the  icon in the bottom right corner. You can specify the date and time of the event, its location, the people invited, enable and disable alerts, add a description of the event and even configure the availability status that will be shown while you are attending the event.



Maps and GPS Navigation

Your smartphone comes with a preinstalled **Maps** application which enables you to find your current location on the map (for greater accuracy, enable the GPS), view satellite images or even an actual view of a given location. You can also select the Navigation option to enable your device to give you instructions on how to reach your destination from your current position, whether travelling on foot or by car. It also provides a location service to identify affiliated companies and establishments.

Bear in mind that none of the above information (including the maps) is preloaded onto your device; therefore, whenever you use the navigation feature, it will need to access your data connection, which could have cost implications depending on your network operator's mobile price plan and tariffs.

Dolby Audio

To access the Dolby app and adjust the audio on your device, go to **Apps menu > Dolby**. You can also access it via **Settings > Sound and notifications > Dolby Audio > Launch app**.

You can choose any of the four preset modes from within the app or select them directly by going to **Settings > Audio profiles > Profile** and choosing from **Video, Music, Game or Voice**.

When enabled, the Dolby icon will be displayed on any video or music players you have installed, improving the sound quality of audio and video files. You can deactivate the app by pressing .



If you use any other apps that have their own equaliser, the Dolby app will be automatically deactivated in order to prevent any conflict between the two equalisers.

News & Weather (Genie Widget)


This app offers services such as real-time weather information, international news headlines, etc. Your Home screen can hold up to three different widgets, allowing you to access information quickly and easily. These three widgets include both weather and news; you can choose to display them both simultaneously if you want.

For more information on how to add widgets to your phone, see the section on customising your **Home screen** in this manual.



Tools

Calculator

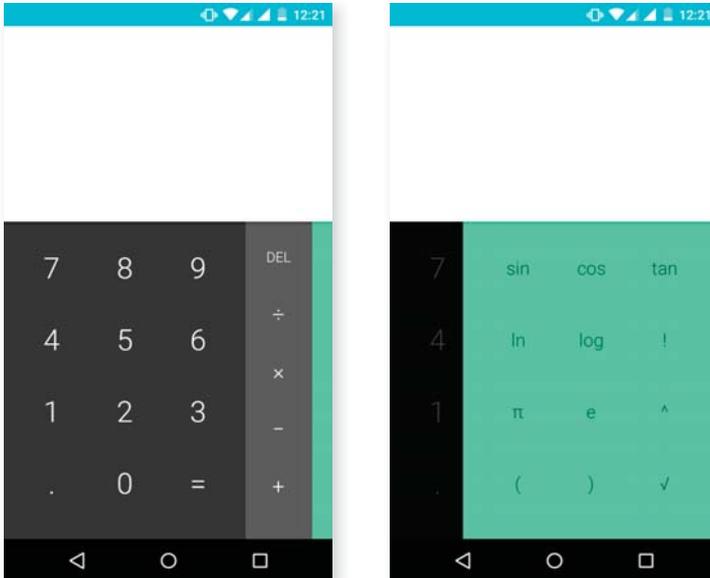

You will find various tools on your smartphone, such as a practical calculator, which allows you to make basic as well as scientific or advanced calculations. When you launch the app, only the basic options are shown. To access the advanced calculations, simply swipe the screen to the left or you can also rotate the screen.


Clock

Go to the **Apps menu > Clock** and you will find the **Alarms** option, where you can manage all your alarms with ease.

You can set up different alarms at the same time and select the name of the alarm, the number of times it sounds, which days of the week it is repeated, the alarm tone and enable vibrate.

Create new alarms and delete them as often as you want. To temporarily enable or disable an alarm (without deleting it), simply move the slider next to the alarm time to the left.

The **Clock** app also allows you to view the local time in any location around the world, and contains other useful functions such as a fully configurable timer and a stopwatch with interval feature.

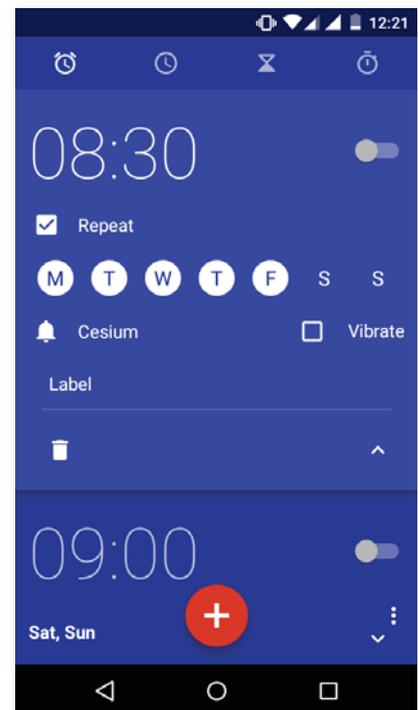

Voice Search

On the **Home screen** you will find the microphone icon to launch the **Voice Search** app. This app allows you to quickly find information on any subject you search for, and gives you quick access to other apps, such as maps.



Appendices

Appendix A: OTA Updates.

OTA stands for “Over the Air”, which refers to the way that firmware updates are sent to your device; i.e. via your data connection, with minimal intervention required on the part of the user and without the need for complex update procedures.

Your device will periodically check for new updates to the operating system, which generally include performance improvements or additional features for your smartphone. When the system detects that an update is available, a pop-up window will notify you of this and will request confirmation to install it. We recommend using a Wi-Fi connection to download the update package.

The system will guide you through the installation process, to ensure that it is completed as quickly and conveniently as possible.

You can also check for updates manually by going to **Settings > About phone > System updates > Update**. A message will appear to tell you that the system is searching for available updates. If an update is found, the installation process is the same as described above.

Appendix B: Technical Specifications.

You can find all the technical information for your device by visiting this link and selecting the corresponding model: <http://www.bq.com/gb/smartphones>

If you click on Specifications you will find information such as:

- Dimensions and weight.
- Screen.
- Internal memory.
- Processor.
- Battery.
- Operating system.
- Connectivity.
- System functions.



Appendix C: Cleaning and Safety.

CLEANING

Before cleaning your device, make sure you have switched it off and disconnected all cables. After cleaning, make sure the screen is completely dry before reconnecting any cables and switching the device back on. Do not pour or spray any liquids directly onto the device.

Screen: Use a clean, soft, lint-free cloth to remove dust and dirt from the screen. To remove fingerprints and marks, you may apply a small amount of mild cleaning product to the cloth.

Casing: Use a soft cloth with a small amount of mild cleaning product. After cleaning, rinse the cloth in clean water, wring it out thoroughly and wipe the casing to remove any leftover cleaning product.

SECURITY

To reduce the risk of an accident, follow these safety instructions:

- Do not use power cables, connectors or plugs that are damaged or contain loose wiring. Do not bend or damage the power cable. Do not touch the power cable with wet hands. Do not pull on the cable to unplug the charger.
- Do not use the device while it is charging. Do not touch it with wet hands.
- Do not hit the charger or cause it to fall. Do not charge the battery using chargers that have not been approved by the manufacturer.
- Do not use the device during electrical storms. Handle and dispose of the battery and charger with caution.
- Do not handle Li-ion batteries that are damaged or leaking.
- Do not use the device in the vicinity of a pacemaker. If possible, try to use it at a distance of at least 15 cm from the pacemaker, as it could interfere with the pacemaker's operation.
- Do not use the device in a hospital or in the vicinity of any medical equipment that may be susceptible to radio frequency interference.
- If you regularly use medical equipment, make sure it is protected against radio frequency interference. If you wear a hearing aid, consult the manufacturer with regard to potential interference.
- In potentially explosive environments, switch the device off. Always observe regulations, instructions and warning signs .
- Do not use the device in refuelling areas (e.g. petrol stations), underground parking zones or in the vicinity of flammable and/or explosive chemical products .
- Do not store or transport flammable liquids, gases or explosive materials in the same compartment as the device or any of its parts or accessories .



- Switch off the device upon boarding an aeroplane. The electronic components of a motor vehicle may malfunction as a result of radio frequency interference from the device.
- Prolonged exposure to high levels of sound pressure may cause permanent damage to hearing. It is recommended that you do not wear headphones while cycling, running or walking through areas with heavy traffic or excessive noise.
- Use of the device while driving: Some car manufacturers prohibit the use of mobile devices in their vehicles unless they are equipped with a hands-free kit and external antenna. Ask the vendor of your vehicle whether your mobile device or hands-free Bluetooth kit will interfere with your car's electrical systems. Always devote your full attention to the road while driving and respect the local regulations and laws on the use of wireless devices while at the wheel.
- Location/GPS-based functions: Location-based functions are offered "as is" and "for all corresponding effects". Mundo Reader, S.L. does not claim or in any way guarantee the accuracy of any location-based information.
- When the device is using location-based information, it may suffer from interruptions or failures and its dependence on network availability will increase. Note that functionality may be reduced or obstructed in certain areas, such as inside buildings or in areas close to buildings.
- Always devote your full attention to the road while driving and respect the local regulations and laws on the use of wireless devices while at the wheel.
- Emergency calls: Being able to make calls cannot be guaranteed under all conditions. Never place your trust solely in mobile phones for making emergency calls. With certain mobile networks, certain network services or certain functions enabled and in certain areas, it may not be possible to make a call.
- Antenna: Use of the device with an antenna other than that supplied by Mundo Reader, S.L. may damage the phone, impair its performance and generate SAR levels (see Appendix D below) which exceed the limits established by law. Do not cover the antenna with your hand, as this may affect call quality and energy consumption and may shorten the talk time and standby availability.
- Aeroplane mode. Use of Bluetooth and WLAN functions may be prohibited on aeroplanes and in other places where radio transmissions are not permitted. Ask for permission before enabling the Bluetooth or WLAN functions, including in Aeroplane mode.

 
Warning!

This product must be used with a power supply with the following specifications:

INPUT: 100-240 V ~ 50/60 Hz 0.3 A máx.

OUTPUT: 5.0 V  1.0 A

Polarity must be as indicated as follows:



Micro-USB

Pin 1 "+"

Pin 5 "-"

The use of power sources other than the ones indicated may damage your device and pose a risk to the safety of people and property.



APPENDIX D: Information on Exposure to Radio Waves and SAR (Specific Absorption Rate).

The design of this smartphone complies with the current regulations governing exposure to radio waves. These regulations are based on scientific guidelines that include safety margins designed to ensure the safety of everyone, regardless of age or state of health.

The guidelines on exposure to radio waves use a unit of measurement known as the SAR (Specific Absorption Rate). SAR tests are carried out using standardised methods, with the phone transmitting at the highest certified level of power on all the frequency bands it uses.

The maximum SAR levels recommended by the ICNIRP (International Commission on Non Ionizing Radiation Protection) is 2 W/kg, measured on 10 g of tissue.

The highest SAR levels recorded for this phone are as follows:

	Aquaris A4.5
Auditory use	0,315 W/Kg (10 g)
When used in direct contact with the body	0,590 W/Kg (10 g)

This device complies with the guidelines on exposure to radio frequency both when it is used in the normal position next to the ear and when it is positioned at least 1.5 cm from the body. In order to send data files or messages, this device requires an adequate network connection. On certain occasions, the transmission of data files or messages may be delayed until an adequate connection becomes available. Until the transmission has been completed, make sure you follow the instructions on the separation distance mentioned above.

Appendix E: Disposing of this Product Correctly.



(Electrical and electronic waste).
(Applies within the European Union and in European countries with selective waste collection systems).

To prevent any damage to the environment or human health, separate these products from other types of waste and recycle them correctly. This will help promote the sustainable use of material resources.

Household users should contact the vendor that sold them the product or the relevant local authorities to find out how and where to recycle it safely, without harming the environment.

Business users should contact their supplier and consult the terms and conditions of the purchase agreement. This product and its electronic accessories should not be disposed of with other waste materials such as the box and non-electronic materials.



Appendix F: Declaration of Conformity.

Mundo Reader, S.L.
Pol. Ind. Európolis
Calle Sofía, 10
28232 - Las Rozas - Madrid (Spain)
Tel. +34 91 787 58 59
Corporate tax ID: B85991941
Made in China

Declares that this smartphone:

Aquaris A4.5

complies with the provisions of Directive 1999/5/EC on Radio and Telecommunications Terminal Equipment (R&TTE), Directive 2006/95/EC on Electrical Safety for Low Voltage Equipment, and Directive 2004/108/EC on Electromagnetic Compatibility, in addition to the following harmonised standards:

EN 60950-1: 2006 +A11:2009+A1:2010+A12:2011+A2:2013, EN 62479: 2010, EN 50360: 2001/A1:2012, EN 50566: 2013, EN 62209-1: 2006, EN 62209-2: 2010, EN 301 489-1 V 1.9.2, EN 301 489-3 V 1.6.1, EN 301 489-7 V 1.3.1, EN 301 489-17 V2.2.1, EN 301 489-24 V1.5.1, EN 55022:2010, EN 55024:2010, EN 55013:2013, EN 55020:2007/A11:2011, EN 300 328 V1.8.1, EN 301 511 V9.0.2, EN 301 908-1 V6.2.1, EN 301 908-2 V6.2.1, EN 300 440-2 V1.4.1, EN301908-13 V6.2.1.

You can request a copy of the Declaration of Conformity by writing to the above address.

Madrid, September 2015.

Alberto Méndez Peydró
CEO

CE 0168

Firmware version

BQ Aquaris A4.5:1.0.0.12_20150817-1144

androidone