

Contents

CONTENTS.....	1
THE ANDROID ADVANTAGE.....	3
READ ME FIRST	3
DISCLAIMER.....	3
UNDERSTAND YOUR PHONE	5
GETTING STARTED	5
SIM CARD INSERTION.....	5
MEMORY CARD INSERTION.....	8
HANDSET KEYS	9
CHARGING THE BATTERY	10
BASIC PHONE FEATURES.....	11
SIGNING IN WITH YOUR GOOGLE ACCOUNT	11
HOME SCREEN	12
APP LAUNCHER.....	14
NOTIFICATIONS.....	15
GRAVITY SENSOR.....	16
PHONE LOCKING AND UNLOCKING TECHNIQUES.....	17
USE GOOGLE SEARCH	19
USING THE TOUCH SCREEN.....	20
TAP AND HOLD.....	20
DRAG AN ITEM	20
SCROLL.....	20
SWIPE.....	21
USING THE PINCH ZOOM.....	21
DOUBLE-TAP	21
USING THE ONSCREEN KEYBOARD.....	22

RECENT APPS.....	23
CALLING AND MESSAGING.....	24
MAKE A CALL.....	24
CONTACTS.....	24
AIRPLANE MODE.....	25
SEND MESSAGE.....	26
MULTIMEDIA.....	27
CAMERA.....	27
GALLERY.....	27
MUSIC PLAYER.....	28
FM RADIO.....	29
VIDEO PLAYER.....	30
.....	30
SETTINGS, NETWORKS, AND APPS.....	31
CONNECT TO THE INTERNET.....	31
TETHERING & PORTABILITY.....	32
PAIR WITH BLUETOOTH DEVICES.....	32
CONFIGURING E-MAIL.....	33
GOOGLE MAPS.....	35
MANAGE APPS.....	35
SAFETY PRECAUTIONS.....	37
TAKING CARE OF YOUR DEVICE.....	39
BATTERY RECOMMENDATIONS.....	39
RECYCLE YOUR PHONE.....	40
COPYRIGHT.....	40

The Android Advantage

Micromax Q335 comes with KitKat 4.4.2 that offers optimized system performance resulting in a faster, simpler and smoother Android experience. At the Google Play Store, you can download from millions of apps, games, movies, and books and can be sure that they will run fast. Q335 also has the best of Google built-in, including your favorite apps like Google Search, Maps, Drive, and YouTube, as well as exciting new apps like Google Now, Voice Search, and Google Translate.

Read Me First

- Please read all safety precautions and this manual carefully before using your device to ensure safe and proper use.
- The descriptions in this manual are based on the default settings of your device.
- Available features and additional services may vary by device, software, or service provider.
- Apps and their functions may vary based on the country, region, software or hardware specifications. Micromax is not liable for performance issues caused by third-party apps.

Disclaimer

 
- The colors, specifications, functions and graphics shown/mentioned in the user manual may differ from the actual product. In such a case, the latter shall govern. Images shown are for representation purpose only. Specifications are subject to change without prior notice. Micromax keeps the right to modify the content in this user guide without prior notice.

- Upon first use of your device, your device will send information related to your mobile, IMEI numbers, location details and other software details through SMS* automatically. This information may be used as further specified in Micromax privacy policy**.
- Talk and standby times are affected by network preferences, type of SIM cards, connected accessories and individual usage patterns. Services and some features may be dependent on the network, service/content providers, SIM cards, compatibility of the devices used and the content formats supported.
- Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.

*Operator tariff shall be applicable for SMS.

**Micromax privacy policy is available at www.micromaxinfo.com.

Understand Your Phone

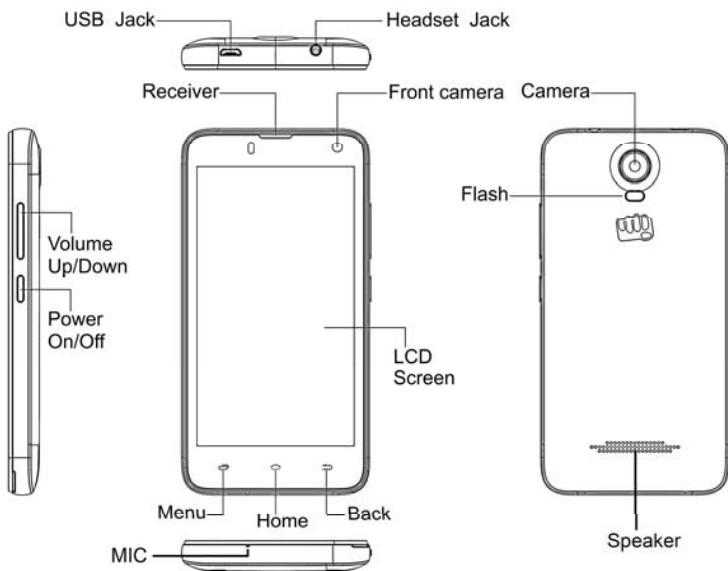


Getting Started

SIM Card Insertion


Your Q335 is a dual-SIM phone. Switch off your phone before SIM insertion/removal and insert the SIM card in the SIM slots correctly.

To insert the SIM card:

 1. Switch off your phone and remove the rear cover and battery as shown in the following images:

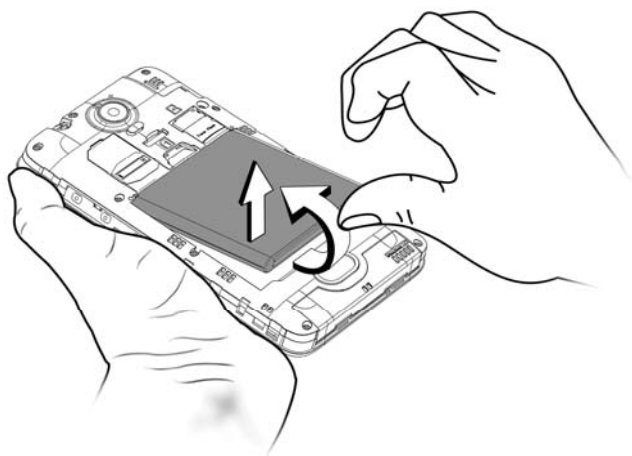

 2. Insert the SIM card correctly in the card slot(s), as shown in the following image:

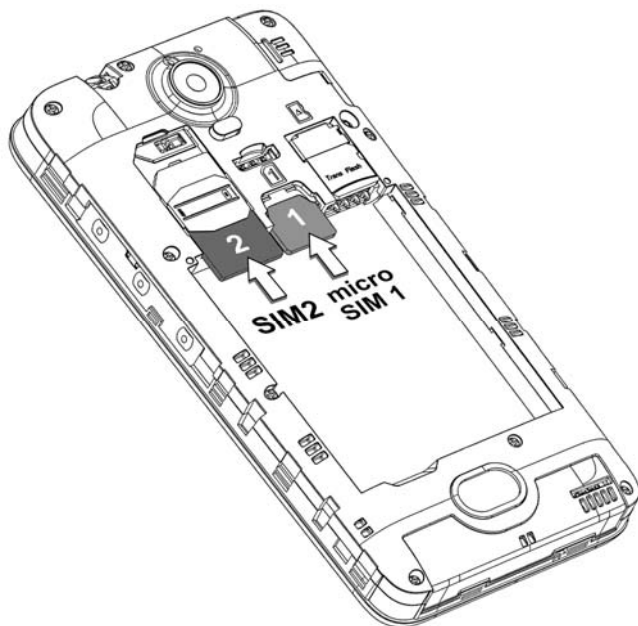

3. Place back the battery and rear cover.



Please keep the SIM card out of the reach of children.



 
The card and the contacts are vulnerable to damage due to scratching or bending. Therefore, be careful when using, inserting or removing the cards.

Memory Card Insertion

To store additional multimedia files, you must insert a memory card.

To insert memory card:

1. Switch off the mobile phone, and then remove the rear cover and battery.
2. Insert the memory card in the memory card slot.

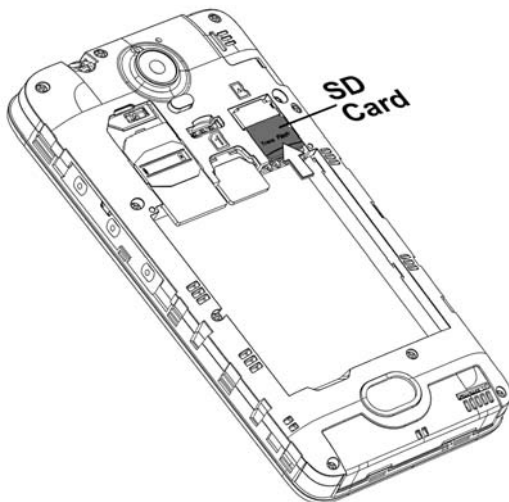
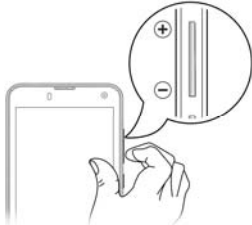 




3. After inserting the memory card, place back the battery and rear cover of the mobile phone.



Use only compatible memory cards with this device. Incompatible memory cards may damage the device and corrupt the data stored in the card.

Handset Keys


Keys	Functions
	<ul style="list-style-type: none">• Long press to switch on or switch off the phone.• Press once to turn off the screen or to wake up the screen.• Press for 2 seconds to view quick options to turn off the phone, reboot the device, switch to airplane mode, or adjust the sound profiles.
	<ul style="list-style-type: none">• Adjust the phone volume from the volume keys available on the right side of the device.
	<ul style="list-style-type: none">• Opens a menu with items that affect the current screen or app.• If tapped when on the home screen, opens options to personalize the home screen.• On long tap, opens the most recently used apps.
	<ul style="list-style-type: none">• Opens the Home screen.• On long tap, opens Google Now.



- Opens the previous screen you were working on.
 - If the onscreen keyboard is open, closes the keyboard.
-

Charging the Battery

 Before using the device for the first time, you must charge the battery. You can charge the device with a travel adapter or connecting the device to a PC with a USB cable.

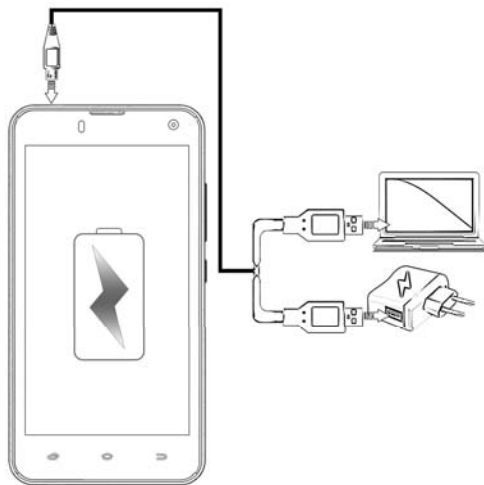

You can also use a compatible USB charger to charge your battery.



We suggest you charge the battery for 4 hours continuously for the first time.

Basic Phone Features



Signing in with your Google Account

Your Google Account lets you take full advantage of apps and services offered by Google Android market. Configure your Google account on this handset to get access to your Gmail, Google Play Store, Google Maps, and much more.

The phone will prompt you to sign in to your Google Account when you turn on your handset for the first time.



Network connection will be required for the Google account setup step to appear.

To sign in to your Google Account at a later time, go to  →  → Add account → Google. Follow the registration steps to successfully configure your mail account on the device.




If you do not have a Google Account, you can easily create one.



 
You may also add other accounts associated with individual apps.

Home Screen

You can personalize your home screen with shortcuts, widgets, wallpapers and other items. To view quick options to change wallpaper, add widgets, or open settings section, tap the  key. You can add extensions to the home screen by placing widgets or app shortcuts on the extended home screen. Your Q335 will show only those extended home screens which have some shortcut/widget placed on them. Swipe left or right on the home screen to view the next extended home screen.


In the bottom pane, there will be five launcher icons for you to open different sections in the phone. Except the app launcher in the middle of the pane, you can rearrange and manage the other four icons. Tap and hold to select a launcher icon and then you can rearrange, change, or remove them with ease.

Widgets

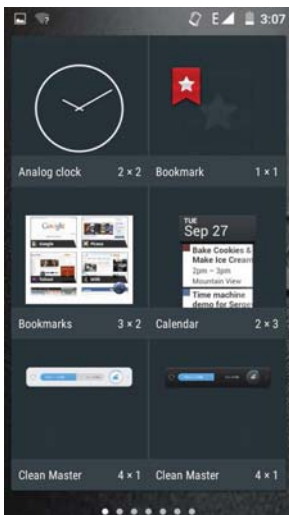

Widgets is an application which gives fast access to a set of apps in your phone.


Widgets allow you to place app shortcuts on your home screen and access them directly. Many of these apps provide live content such as news and clock.

View all available widgets by tapping the  key on the home screen and then tapping WIDGETS.

App Launcher

App launcher or App menu is available right in the middle of the home screen bottom pane.



Tap  to view all inbuilt and installed apps. In the app menu, tap and hold any app to take it to the home screen; release the hold to place at any desired location on the home screen.

Notifications

Notification icons inform you of new messages and events as and when it appears in the device.

 
Open Notification Panel




Close Notification Panel



Open the Toolkit

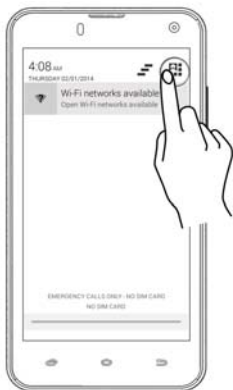

Clear all Notifications

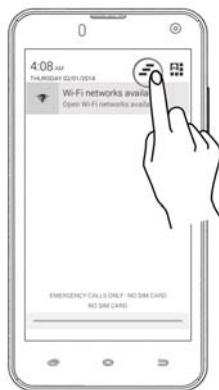 


When you receive a notification, its icon appears in the status bar,

along with a brief summary. You may clear each notification separately by swiping it towards left or right.



Toolkit provides you shortcuts to manage basic phone features, such as Airplane Mode, Wi-Fi, Display Brightness, and many more.

 
Gravity Sensor

Your phone has gravity sensor to detect gravity and display correct orientation based on the motion.

You can enable/disable the auto-rotate feature by dragging down the notification panel, tapping , and then select AUTO ROTATION.

Or

You can enable/disable the auto-rotate feature from  →  → Display → Auto-rotate screen.

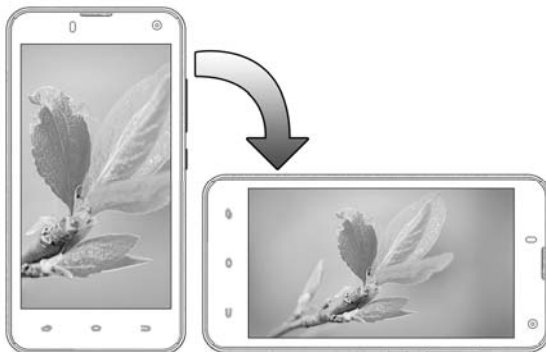

Phone Locking and Unlocking Techniques

You may need to provide PIN, password, draw a pattern, or simply slide to unlock your phone.

Slide unlock will be the default unlocking method in the phone. To unlock the screen:

1. Press the power key to wake up the phone.
2. Hold and drag the lock icon towards the unlock icon.

 
PIN



You may enter a PIN and set it as your screen unlocking password.

Enter your PIN to unlock your phone!

Pattern

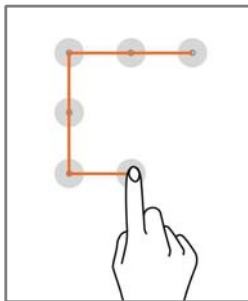

You can set your own pattern by connecting the dots to prevent your phone from unauthorized access.

Set and draw your desired pattern!

 
Password



You may enter any desired password and set it as your screen unlocking password.

Enter your password to unlock!

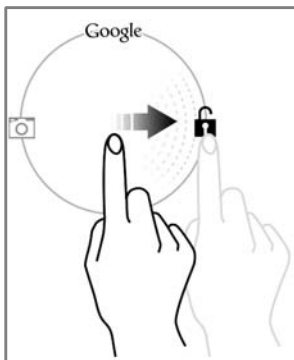

Slide



Just wake up the screen and slide the lock icon towards the unlock icon to unlock your phone.

Slide from lock icon to unlock icon!



You may set any desired locking technique from  →  → Security → Screen lock.



It is important to remember your screen lock password/pattern/PIN.

 
You can disable all unlocking methods from your handset by selecting the None option.

Use Google Search

Search for anything on your phone or on the Internet using the Google search bar at the top of your home screen. Type your search words into the box or press the microphone icon and use your voice to speak your search query. From the search box, you can also use voice commands to perform various actions on your phone. In addition to the search box on your home screen, Google Search is available in the apps menu, too.

Using the Touch Screen

Tap and Hold

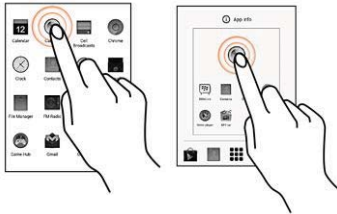

Tap and hold an item to view the list of actions based on the selected item and condition. Also, you can move an item from the Apps screen to the home screen using this method.

 
Drag an Item

Tap and hold an item and move your finger on the screen until you reach the target position. The item follows your finger.

You can generally drag items from one location to another on the home screen. Also, you can delete items from the home screen by holding the item and dragging it to the Remove label that becomes available only when you hold the item on the Home screen.



Scroll

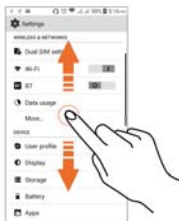

To scroll a list, slide your finger across the surface of the screen upwards or downwards (without dragging an item).

 
Swipe

Place a finger on the screen and steadily slide your finger in the desired direction.

For example, when you are viewing a picture, to view the next picture, swipe left.



Using the Pinch Zoom

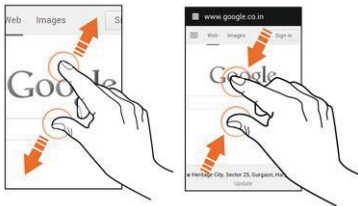

You can open any image or web page and then use your thumb and index finger to zoom the display through the pinch gesture.

Double-tap

Tap quickly twice on a webpage, map, or other screen to zoom. For example, double-tap a section of a webpage in the browser to zoom that section.

